

**FISHER & PAYKEL**

**HEAT PUMP CLOTHES DRYER**

---

DH1060T5 & DH1060TG5 models

**USER GUIDE**  
**NZ AU**



## CONTENTS

---

Safety and warnings	4
Product overview	8
Control panel	9
Menu	10
Get the best results from your dryer	11
Understanding fibre types	12
Sort your items	13
Load the dryer	14
Set a cycle	15
Drying options	18
Set delayed start	19
Fit drying rack	20
Adjust settings	21
Save favourite cycles	23
Cycle selections	25
Wi-Fi connection and remote mode	29
Clean and maintain the dryer	32
Empty the water tank	33
Clean the lint filter	34
Clean the lower filter	35
Troubleshooting	36
Fault codes	39
Compliance information	40
Manufacturer's Warranty and Service Guide	41

---

### Registration

To register your product visit our website: [fisherpaykel.com/register](http://fisherpaykel.com/register)

### ⚠ WARNING!



#### Electric Shock Hazard

Failure to follow this advice may result in electric shock or death.

- If you are using an extension cord or a portable electrical outlet device (eg multi-socket outlet box), ensure that it is positioned so that it does not come into contact with water or moisture.

### ⚠ WARNING!



#### Fire Hazard

- Only dry fabrics that have been washed with water.
- Do not use heat to dry articles containing foam rubber or similarly textured rubber-like materials.
- Never stop a tumble clothes dryer before the end of the drying cycle unless all items are removed and spread out in order to dissipate the heat.
- A clothes dryer produces combustible lint; the lint filter must be cleaned before each drying cycle.
- Failure to follow the warnings outlined in these user instructions can cause a fire hazard.
- Failure to follow these instructions can result in death or personal injury.

### ⚠ WARNING!



**R290**

**This appliance contains flammable refrigerant isobutane (R290).**



### Read the instructions

#### **WARNING!**

**Read Safety Guide.** Failure to follow all guides and rules could cause personal injury or property damage. Use this appliance only for the intended purpose as described in the user guide and installation guide of this appliance. When using this appliance, always exercise basic safety precautions including the following:

##### **General**

- Do not touch or operate the appliance with wet hands or with bare feet.
- A damaged power cord must be replaced by a Fisher & Paykel trained and supported service technician or similarly qualified person in order to avoid a hazard. Do not use the machine until it has been repaired to avoid a risk of electric shock.
- Do not operate this appliance if it has been damaged during transport. Contact your Fisher & Paykel dealer or Fisher & Paykel trained and supported service technician.
- This product has been designed for personal, family or household use. This product is not designed for any commercial use. Any commercial use will terminate this products manufacturer's warranty.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or given instructions on how to use the appliance by someone responsible for their safety.
- Supervise children to ensure they do not play with the appliance or climb inside the drum.
- Do not swing on or put weight on the door.
- Undergarments that contain metal reinforcements should not be placed in the dryer. Damage to the dryer can result if the metal reinforcements come loose during drying. If you wish to dry these items use a drying rack or place in a garment bag.
- Check and remove all objects from pockets, eg lighters and matches.
- Items should go through the cooling phase in the final part of the cycle. This ensures items are left at a temperature where they will not be damaged. If for any reason the cycle is stopped before it has finished, dry clothes should be removed immediately and not left in the appliance. Items should be quickly spread out flat to cool so heat can dissipate, not left bunched up, eg in a clothes basket or in a pile.
- In the event of a power outage the cycle will be paused when power is restored. Press Confirm, then Start/Pause to resume the cycle.
- The only user-removable parts of the dryer are the filters, water tank and drying rack. No other parts are designed to be removed by anyone other than a Fisher & Paykel trained and supported service technician.
- For problems that cannot be solved from information in the user guide, turn off and unplug your appliance and contact a Fisher & Paykel trained and supported service technician.
- Never attempt to repair the appliance yourself.
- Never put dripping wet clothes in or on top of the dryer as excess water may cause an electrical hazard.
- Do not under any circumstances place an electric blanket or any other electrical, plastic or rubber items in the appliance, unless the care label specifically states it is safe to do so.
- Do not overload your dryer beyond its rated capacity.

## SAFETY AND WARNINGS

MODEL	MAXIMUM CAPACITY* (KG)
DH1060T5, DH1060TG5	10

\*Capacity refers to the maximum dry weight of items the dryer can dry at any one time.

- A module may separate from its housing (located at the top-right of the door opening) upon removal of the tape used to secure it for transport. Dislodging of the module might sometimes occur in use. If so, return it to its housing, ensuring it snaps back into place securely.
- Do not dry curtains in your dryer.
- For models with a water tank, never run the dryer without the water tank in place unless drain hose is connected. For models without a water tank, the drain hose must be connected.
- Do not use the water collected in the water tank for drinking or food processing.
- If the water tank becomes full, the appliance will pause and sound an alarm. You must empty the water tank before the appliance can continue running.

### Lint

- Do not operate this appliance without the lint filters in place, or allow lint to accumulate in or around the appliance.
- Accumulated lint in the appliance can become a fire hazard; it also reduces the efficiency of the appliance by causing longer drying times and increased power consumption.
- Clean the lint filter before every load.
- Ensure the area around the appliance is clear of lint.
- If the lint filter becomes damaged, contact your Fisher & Paykel trained and supported service technician to arrange getting a new filter. Do not operate your appliance with a damaged lint filter or without the filter in place, as this will cause damage to your appliance.

### Spontaneous combustion

To reduce the risk of fire the following should be observed:

- Items that have been spotted or soaked with vegetable oil or cooking oil are a fire hazard and should not be placed in the appliance.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as this appliance. The items become warm causing an oxidation reaction in the oil. This oxidation creates heat. If the heat cannot escape the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping creating a fire hazard.
- If it is unavoidable that fabrics that contain vegetable oil, cooking oil or have been contaminated by hair care products be placed in this appliance, they should first be washed in hot water with extra detergent – this will reduce, but not eliminate the fire hazard. The cooling cycle should be used to reduce the temperature of these items. They should not be removed from the appliance and piled or stacked while hot.
- Items that have previously been cleaned in, washed in, soaked in or spotted with flammable liquids or solids, eg petrol/gasoline, kerosene, dry cleaning solvents, vegetable or cooking oil, acetone, denatured alcohol, some brands of spot removers, turpentine, waxes and wax removers or other flammable or explosive substances should not be placed in the appliance.
- The appliance is not to be used if industrial chemicals have been used for cleaning.
- Fabric softeners or similar products should not be used in the appliance to eliminate the effects of static electricity, unless this practice is specifically

## SAFETY AND WARNINGS

---

- recommended by the manufacturer of the fabric softener product.
- Items such as foam rubber (latex foam), shower caps, rubber backed articles, clothes or pillows fitted with foam rubber pads, waterproof textiles, shoes containing rubber or plastic items should not be placed in the appliance. These materials can spontaneously combust when heated.
- Do not dry unwashed items in the appliance.
- When using REFRESH cycles on unwashed clothing ensure there are no flammable substances on them.

### Installation

- This appliance is heavy. We recommend two persons to move and install the appliance.
- The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- We do not recommend the use of extension cords or portable electrical outlet devices for safety reasons.
- Install the appliance on a solid and level floor surface.
- The appliance must be installed in a well-ventilated, dust-free environment.
- The appliance must not be installed on any textured floor coverings (eg carpet, rugs). Ensure that openings at the base of the appliance are not obstructed.
- The appliance must not be installed behind a lockable door, a sliding door or a door with the hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.
- If installing behind a cabinetry door, it must be hinged on the same side as the dryer and there must be a minimum clearance of 40mm from the front of the dryer door to the internal face of the cabinetry door for the product to operate safely. The enclosed space must be provided with sufficient ventilation to meet local building code requirements or the door must be open while the product is operating.
- This appliance can be installed on a compatible Fisher & Paykel plinth or a washer with a stacking kit. To ensure stability, the plinth or stacking kit must be fitted correctly with the appliance. For installation instructions and compatible washer, plinth and stacking kit models, refer to [fisherpaykel.com](http://fisherpaykel.com) and the Side by Side Installation guide or Stacked Installation guide.
- Do not install or operate this appliance on any other plinth or structure.
- For more information refer to the installation guide. To access, go to [fisherpaykel.com/](http://fisherpaykel.com/) specify and search by appliance type, product name or model.


### Water supply requirements

- Inlet water pressure: Max. 1MPa (145psi), Min. 30kPa (4.5psi)
- Inlet water flow rate: Min. 6 litres/minute
- The cold water temperature should not exceed 35°C. Temperatures above these may cause the appliance to fault or cause damage to it.
- A pressure-reducing valve must be installed if pressure is higher than 1Mpa.
- New hose sets provided should be used to connect the appliance to the water mains. Old hose sets should not be re-used.
- We recommend the inlet hose(s) are changed every 5 years. **WARNING:** Failure to do so may result in a flood and damage to property.

### Disposal

- When disposing of this appliance, it is recommended that the door is removed to avoid children getting trapped inside and that the electrical cable is cut off close to the dryer.


## PRODUCT OVERVIEW

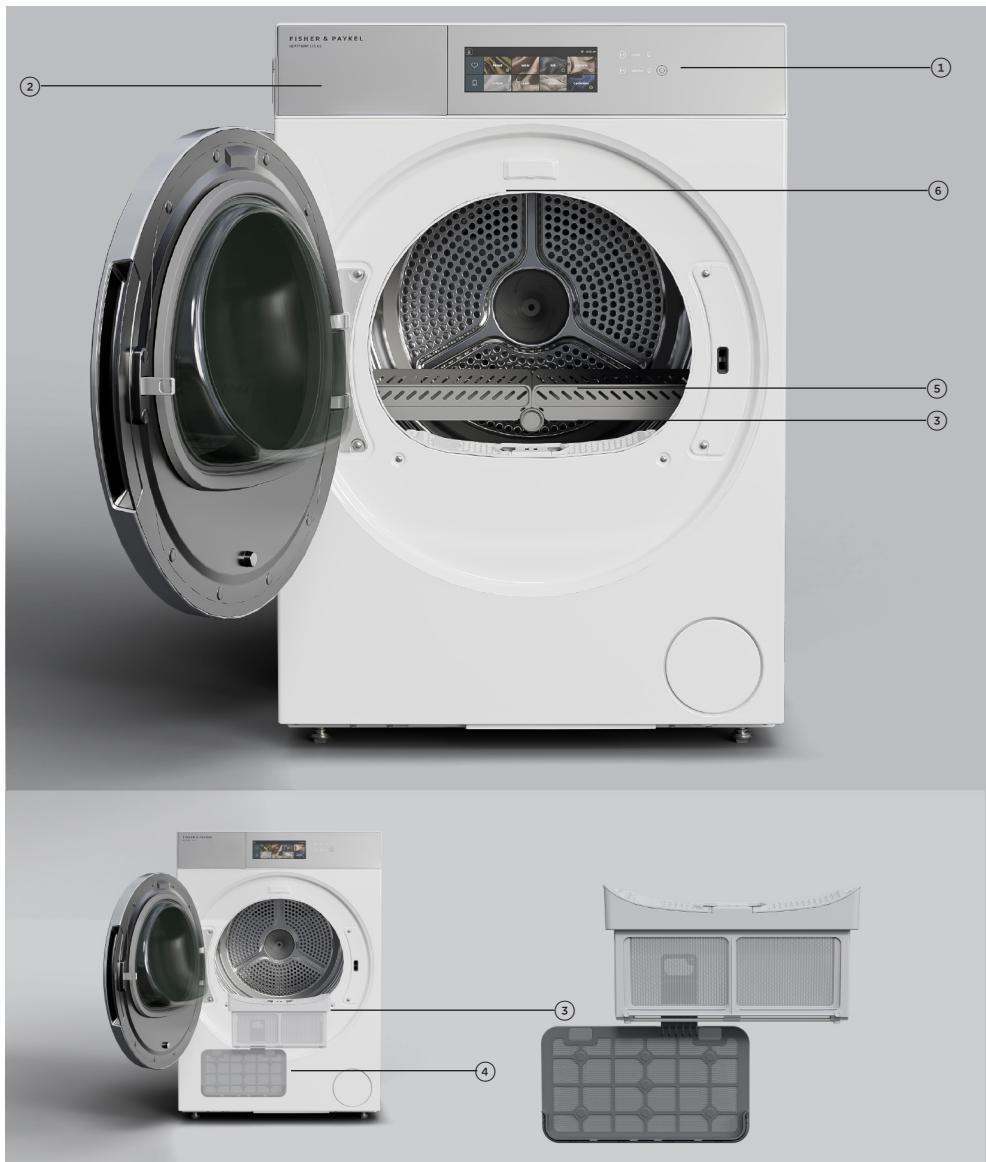

## FEATURES AND ACCESSORIES

① Control panel	④ Lower lint filter (under lint filter)
② Water tank	⑤ Drying rack
③ Lint filter	⑥ Drum light (inside drum)

## CONTROL PANEL

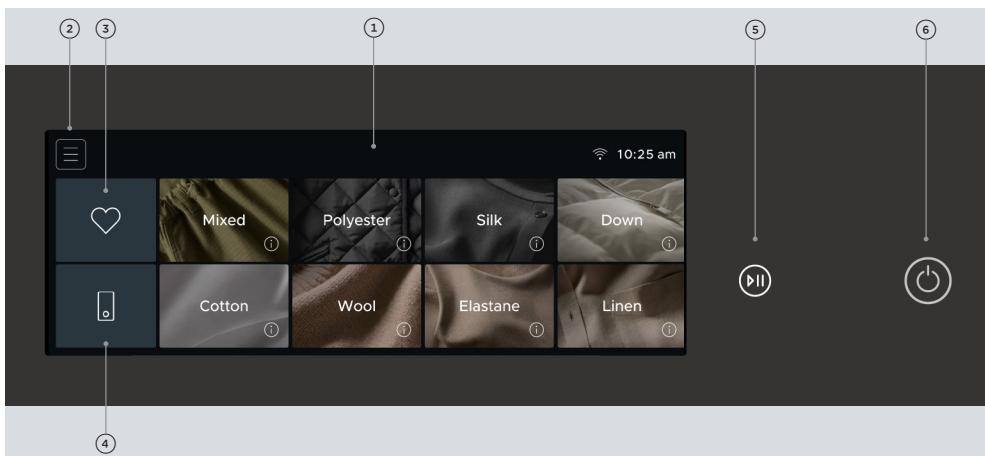

**① Touchscreen display** Use to navigate and select cycles, features and settings.

**② Menu** Press  **MENU**  to access additional features and settings.


**③ Favourites** Press **FAVOURITES**  to access saved favourite cycles.

**④ Remote** Press **REMOTE**  to connect appliance to your mobile device and operate it via the app.

**⑤ Start/Pause** Press to start or pause a cycle or enable Remote mode.

**⑥ Power** Press and hold to turn the appliance **ON/OFF**.

## MENU

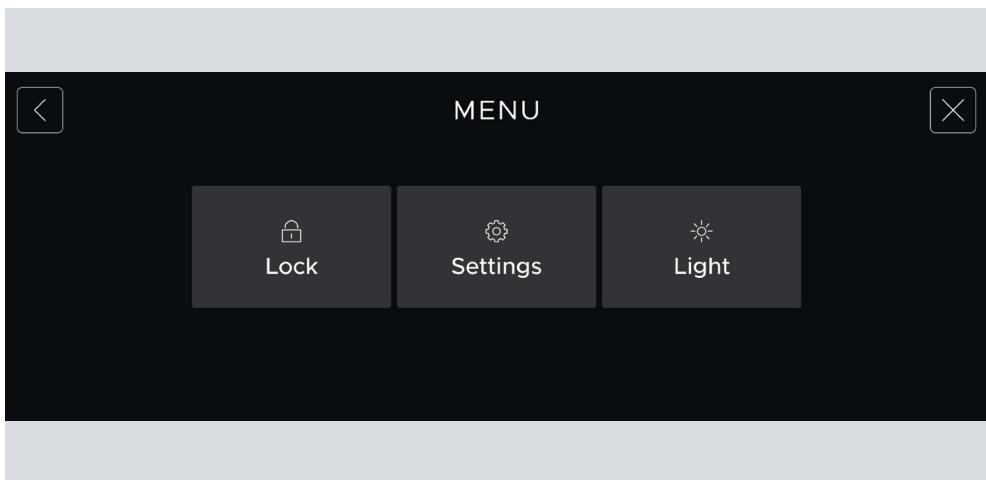

---

	<b>LOCK</b>	Lock the controls and prevent accidental use.
	<b>SETTINGS</b>	Set and adjust the clock, display, volume and other settings to suit your preferences. See 'Adjust settings'.
	<b>LIGHT</b>	Turn the drum light off or set it to turn on automatically.
	<b>BACK</b>	Go back one level.
	<b>EXIT</b>	Return to the home screen.

---

## GET THE BEST RESULTS FROM YOUR DRYER



### Get the app for a smarter experience

- Access extra features and information
- Track and run cycles from your phone
- Customise your favourite cycles
- Get the latest software updates
- Register your product for streamlined support

### Heat pump versus vented dryer

Your heat pump dryer is different to a traditional vented dryer. Heat pump technology dries your items at a lower temperature than a vented dryer to ensure gentle, energy-efficient fabric care without overdrying your items.

 
### Get to know your dryer

Take the time to become familiar with cycle selections and how they suit your items. Save your favourite cycles for quick and easy access on the product or in the app, and clean and maintain your dryer to keep it performing at its best.



### Recognising post-dryer feel

Items may feel slightly damp when first removed from a heat pump dryer, but they will feel completely dry within a few minutes and are ready to wear immediately. If you prefer your items to feel completely dry as soon as the drying cycle ends, you can adjust the dryness level. See 'Select Dryness'.



### Finishing air-dried items in the dryer

Use a **TIME DRY** cycle for at least 30 minutes to finish partially dry items. This allows time for the dryer to reach temperature.



### Loading items directly from the washing machine

Make sure items have been through a spin cycle to remove excess water before placing them in the dryer. Overly wet items will extend the drying cycle and may affect drying performance.

## UNDERSTANDING FIBRE TYPES

---

### Every cycle starts with fibre type

Each fibre type responds differently to washing and drying. This appliance uses a fibre-led system and precision sensing to dry your items, so selecting the right fibre type for each load is key to setting the best cycle each time.

### Treat for the most delicate fibre

Items may be a blend of multiple fibres — some more delicate than others. The care label on an item will tell you what fibre or fibres the item is made of and how to care for it.

Select the fibre type on your dryer that applies to the most sensitive or delicate fibre in the blend, even if it is only a small percentage.

### Identify delicate fibres

This table helps identify the most delicate or sensitive fibres commonly found on care labels. It also offers alternative cycle suggestions for most specialist fibres. Recommendations may not suit all items — always check your care label first.

---

SENSITIVITY	COMMON FIBRES	FIBRE TYPE	ITEM TYPE
High	Cashmere, Angora, Mohair	Not suited for machine drying in this model	
	Down	Down	
	Silk	Silk	
	Wool, Merino, Lambswool	Wool	
	Elastane, Spandex, Lycra	Elastane	
	Viscose, Bamboo, Rayon, Modal	Cotton	Ultra delicate
	Lyocell, Tencel™	Cotton	Ultra delicate
	Acrylic	Polyester	Ultra delicate
	Linen	Linen	
	Hemp	Linen	Delicate
	Ramie	Linen	Delicate
	Nylon, Polyamide	Polyester	Ultra delicate
	Polyester	Polyester, Mixed	
	Cotton	Cotton, Mixed	



## SORT YOUR ITEMS

---

Sorting your items well is essential for taking care of your clothes and getting the best results from your dryer. Follow these steps every time you use the dryer:



1. Check each care label to see the fibre composition and how each garment should be dried. Always follow the care label advice.



2. Sort items into loads of similar fibre, durability and item type.



3. Check pockets, secure fasteners and untangle items before loading. Allow enough room for items to tumble freely.

## LOAD THE DRYER

### Maximum load size

The maximum load size changes based on the type of items in a load. Follow the guide below to avoid overfilling the dryer and to maintain good drying performance.




ITEM TYPES		MAX LOAD SIZE
Mixed, Cotton, Polyester	Ultra delicate	Extra small
	Delicate	Small
	Moderate, Durable	Large
	Outdoors	Small
	Sheets, Towels, Denim, Sports, Bulky	Medium
Wool	Ultra delicate, Delicate	Extra small
Elastane	Ultra delicate	Extra small
	Delicate	Small
	Moderate	Medium
Down	Ultra delicate	Extra small
	Delicate	Small
	Bulky	Medium
	Quilts & duvets	1 item
Silk	Ultra delicate	Extra small
Linen	Ultra delicate	Extra small
	Delicate	Small
	Moderate	Medium
Other Treatments	Rack dry	1 or 2 items
	Steam refresh	1, 2 or 3 items
	Sanitise dry	Medium
	Allergy care	Medium to large

## SET A CYCLE


Your dryer has specialised cycles for specific fibre types. Start by selecting a fibre type, then select an item type based on durability or specific items, such as sheets or towels, and the required treatment. You can also adjust additional settings for dryness and time. The available cycle options may vary depending on the fibre type you select.

See 'Cycle selections' for details.

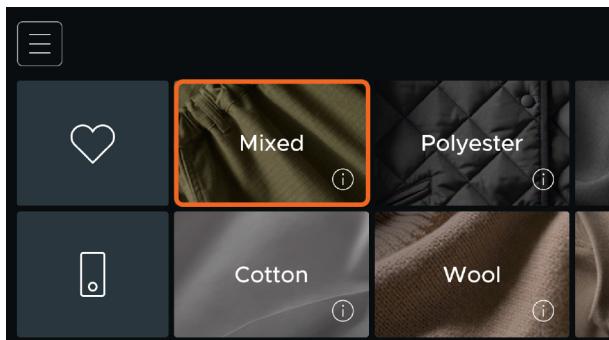


1. Press and hold **POWER**  to turn the dryer on, then select a fibre type.

Press **INFORMATION**  for a description of each fibre.

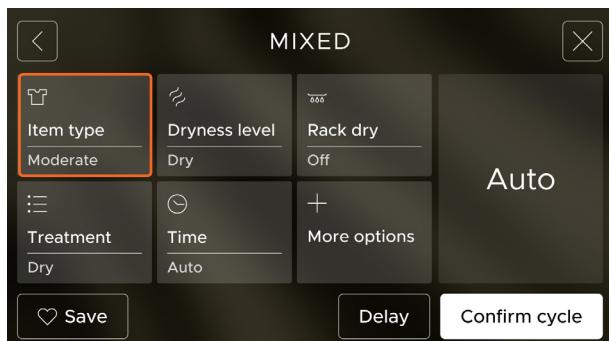

2. Press **ITEM TYPE** to access the options and see a description and examples for each type.


Scroll to select an item type.

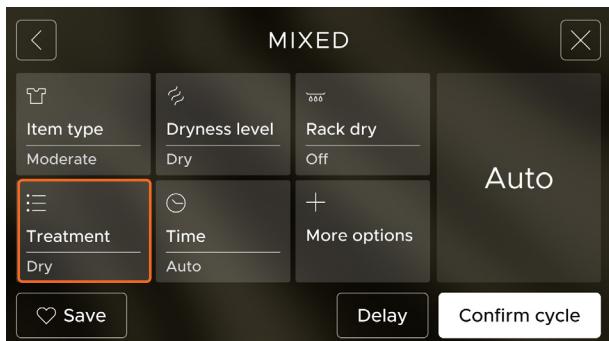

3. Press **TREATMENT** to access the options and descriptions.


Scroll to select a treatment.

## SET A CYCLE

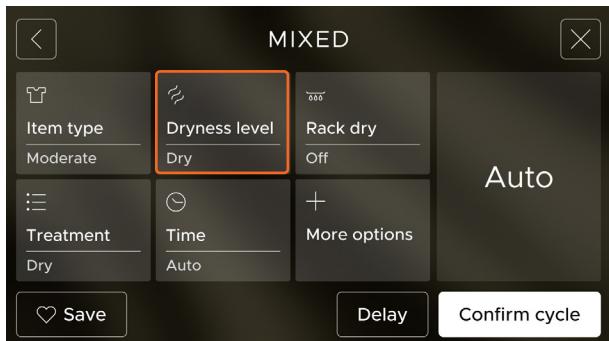


4. Select a **DRYNESS LEVEL** or select **RACK DRY** for items that cannot be tumbled.

See 'Fit drying rack' for how to fit the rack.

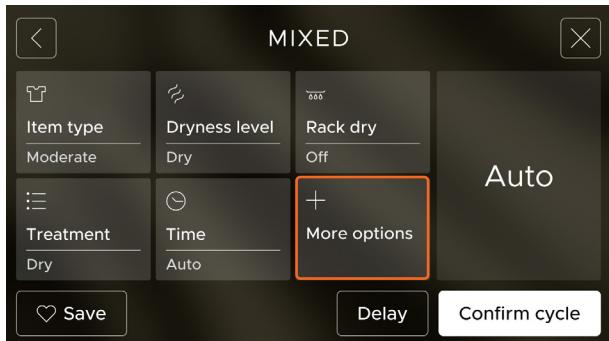


5. Set a drying duration or Auto.

Press **MORE OPTIONS** to access additional drying options. See 'Drying options' for details.

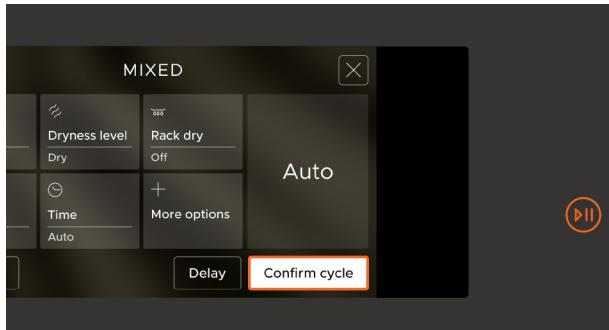

6. Press **CONFIRM CYCLE**, then press the **START/PAUSE ▶||** button to begin the cycle.

## SET A CYCLE

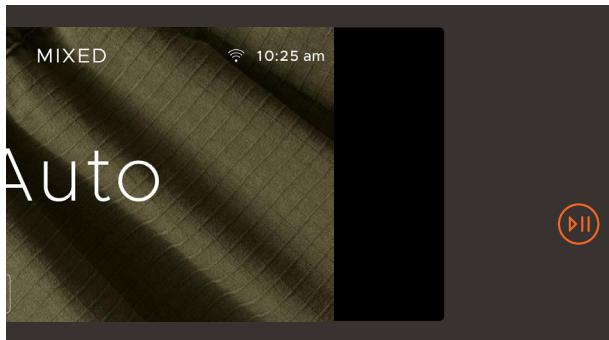

### Pausing the cycle

Press the **START/PAUSE** ▶|| button to pause the cycle if you want to add or remove an item.

Press **RESUME**, then the **START/PAUSE** ▶|| button, to resume the cycle.



### Cancelling the cycle

Press **CANCEL** to cancel the cycle.


Remove items immediately and spread them out to cool. Take care as the drum and items may be hot.

## DRYING OPTIONS


---

<b>Crease free</b>	After the cycle is complete the load will continue to tumble periodically to help reduce creases. Crease free will remain active for up to 8 hours or until cancelled. To cancel, touch the screen or open the door.
<b>Iron ready alert</b>	Set an alert for when the load reaches the iron ready dryness stage. Pause the cycle to remove items that do not need further drying. Resume the cycle to continue drying the remaining load.

---

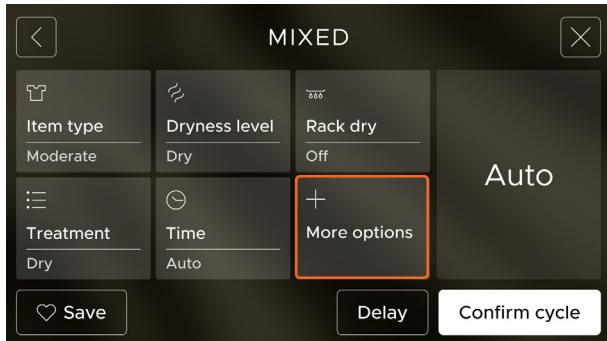

1. Press **MORE OPTIONS** to access additional cycle options.

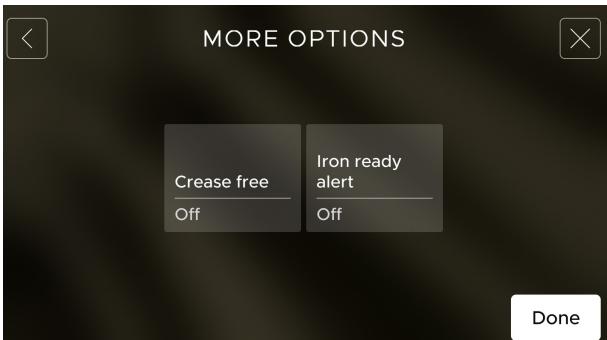


2. Select an option and follow the onscreen instructions to set it.


Press **DONE** to confirm.

## SET DELAYED START


DELAY allows you to schedule a cycle to begin at a later time. You can set a time on the dryer or start a cycle remotely through the app.

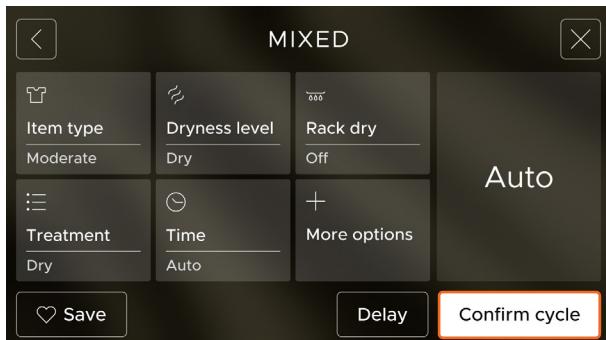

1. After setting the drying cycle, press **DELAY** to open the Delay screen, then press **SET START TIME** and set a start time.

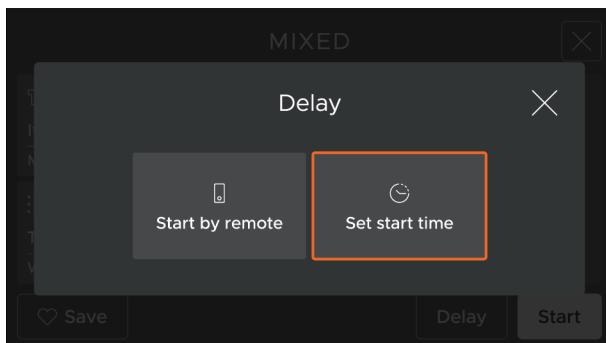

2. Press **SET START TIME** and follow the onscreen instructions to set a delayed start time.

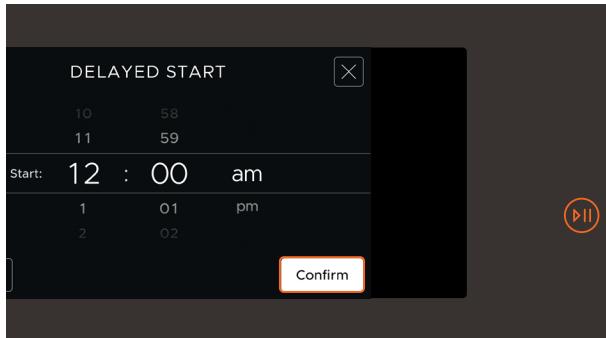

3. Press **confirm** to save the new start time, then press the **START/PAUSE**  button.

## FIT DRYING RACK

Fit the drying rack when you use the **RACK DRY** option. The rack is designed for items that cannot be tumbled. When **RACK DRY** is selected, you have to set a cycle duration, so **DRYNESS** is not available.



1. Insert the rack legs into the slots in the lint filter, then lower into place.




2. Place the item onto the drying rack, then close the dryer door.

Follow the onscreen instructions to confirm the rest of the settings and begin the cycle.


For sneakers, check them throughout the cycle. Save as a Favourite if intending to use this cycle regularly.

## ADJUST SETTINGS

Adjust the appliance settings to suit your preferences.

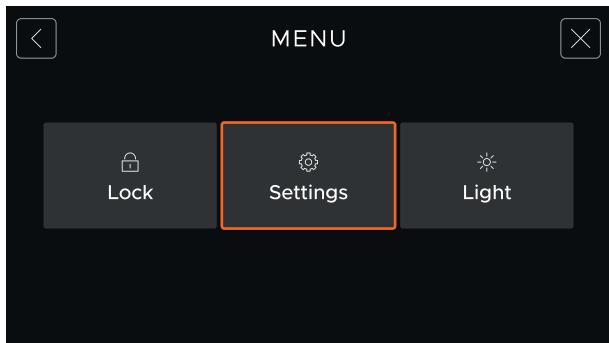


Go to  **MENU** and select  **SETTINGS**.

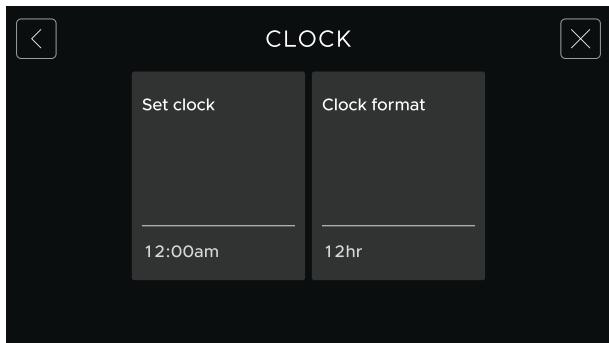

### Clock


Set time, format and time zone.  
Time updates automatically  
when connected to Wi-Fi.

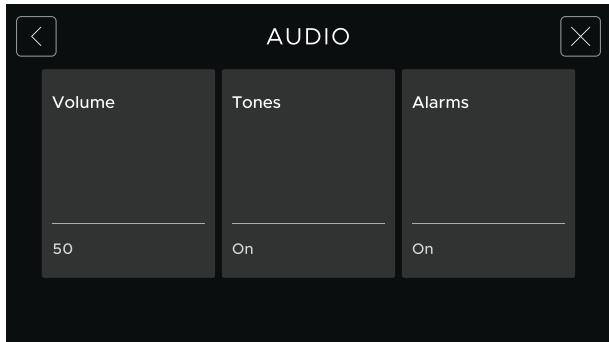

### Audio


Set volume or turn sounds  
on or off.

## ADJUST SETTINGS

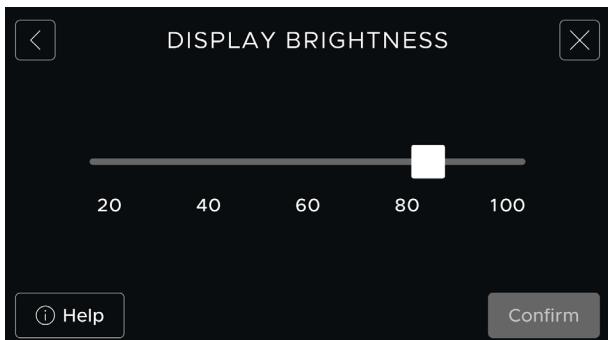


### Display

Adjust the brightness of the display screen. Set a lower brightness to improve energy efficiency.

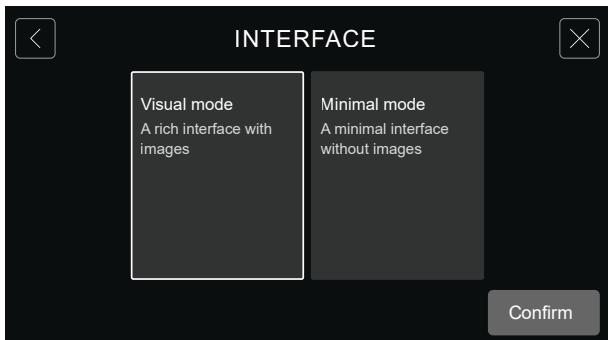

### Interface

Set visual or minimal modes on the display.

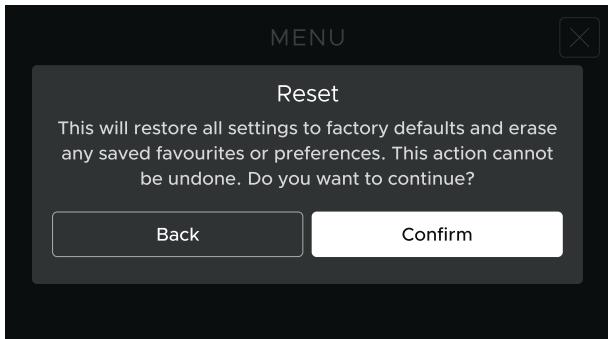


### Factory default reset

Restore all settings to factory defaults.

This action cannot be undone.

## SAVE FAVOURITE CYCLES


Save your favourite cycles for a quick start to your dry cycle. Favourites comes with a preset **DELICATE REFRESH COTTON** cycle, and you can save up to 14 more on the appliance and manage them in the app.

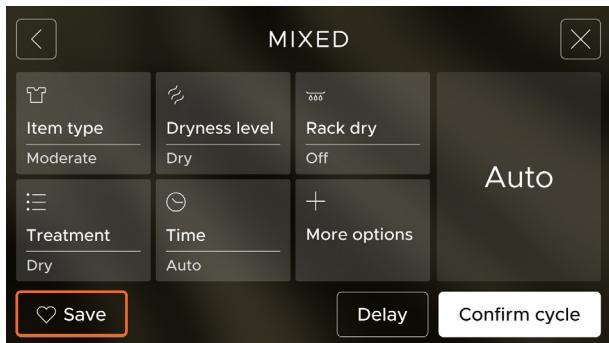

1. Press **SAVE**  from the cycle settings screen, from the Options menu or at the end of a cycle to add the cycle to Favourite.




2. Create a custom name for your cycle, or skip that step and save it with a default name.

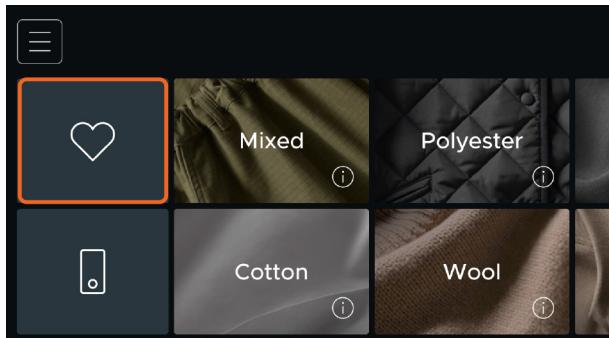


3. Press **FAVOURITE**  on the home screen to access your saved favourite cycles.

## SAVE FAVOURITE CYCLES

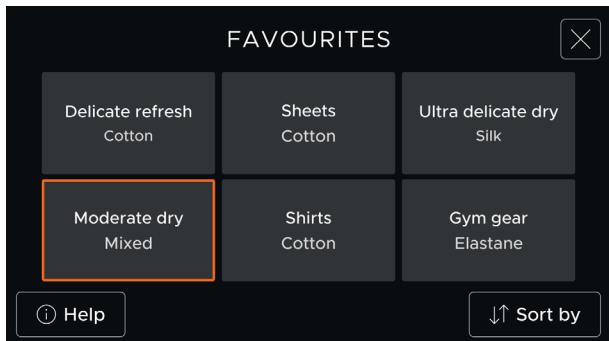

4. Select a favourite cycle from the Favourites menu.

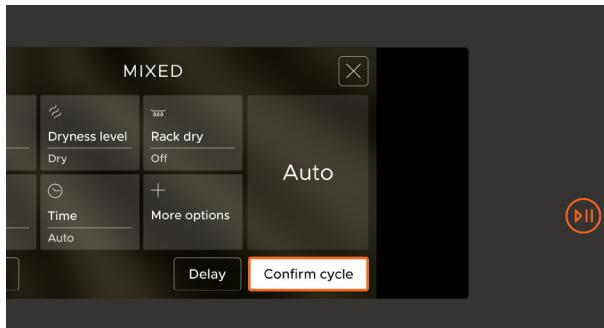

5. Press **CONFIRM CYCLE** to, then press the **START/PAUSE**  button to start the wash cycle.

## CYCLE SELECTIONS

---

### FIBRE TYPE

Select the specific fibre type that matches the load or choose the fibre type that applies to the most delicate fibre. The drying cycle will adjust to suit. See 'Understanding fibre types' for guidance about which fibre types are the most delicate.

#### **Mixed**

For everyday mixed loads with a variety of fibres, and for cotton-polyester blends.

#### **Cotton**

For 100% cotton items.

#### **Polyester**

For 100% polyester items.

#### **Wool**

For 100% woollen items and wool blends. Wool is a natural fibre that comes from sheep, goats and other mammals, and is warm, insulating and moisture wicking. It is commonly found in suits, sweaters and winter clothing for its warmth and comfort.

#### **Woolmark Black**

This cycle meets the Woolmark requirements for drying items labelled 'machine washable'.

#### **Woolmark Blue**

This cycle meets the Woolmark requirements for drying woollen items labelled 'hand wash only'.

#### **Elastane**

For items containing 10-50% elastane fibre, also known as spandex. A stretchy and resilient fibre, elastane provides ease of movement in close-fitting items and is often found in activewear and leggings.

#### **Down**

For items containing down fill. Down is soft and insulating and is harvested from the undercoat of ducks or geese.

#### **Silk**

For 100% silk items and silk blends. Silk is a natural fibre produced by silkworms that is soft, smooth and luxurious, and requires specialised care.

#### **Linen**

For items containing linen fibre. Linen is a natural fibre made from the flax plant and is strong, breathable and moisture wicking.

## CYCLE SELECTIONS

---

### ITEM TYPE

Item type relates to the durability of items in your load in terms of fabric thickness. Dry garments and items of similar thickness together to prevent some items becoming over-dried while others are still damp.

#### **Durable**

Strong and resilient everyday items like workwear and outerwear.

#### **Moderate**

Everyday items like t-shirts, shirts, lined dresses, shorts, pants and denim.

#### **Delicate**

Light and easily damaged or torn items like blouses, dresses and other items.

#### **Ultra delicate**

For items that are very fragile, needing extra gentle care. Ideal for lace, lingerie and fine knitwear.

#### **Sheets**

Items such as bed sheets, pillow cases and duvet covers.

#### **Towels**

High absorbency towelling fabric items like bath, beach and hand towels.

#### **Sportswear**

Durable sportswear items made from synthetic fibre blends.

#### **Denim**

Items made of denim or stretch denim such as jeans, jackets and skirts.

#### **Bulky**

**Cotton/Mixed/Polyester** - For items that are thick and insulating, such as blankets, quilts, comforters, and duvet or doona inners.

**Down** - For smaller thick and insulating items like jackets and sleeping bags.

#### **Quilts and duvets**

For larger thick and insulating items like quilts, comforters and duvet inners.

## CYCLE SELECTIONS

---

### TREATMENT

#### Dry

Designed for everyday drying.

#### Rack dry

For items that cannot be tumbled. This option requires the drying rack to be fitted.

#### Steam refresh

A steam treatment to refresh 1 to 3 dry items.

#### Sanitise dry

High temperature drying to reduce bacteria. Ideal for towels and sheets, but unsuitable for delicate items.

#### Allergy care

Uses sustained higher temperatures to reduce allergens like dust mites and pollen. Ideal for helping to manage allergies or sensitive skin.

---

### METHOD

You can select a drying method that automatically ends the cycle when the load reaches the selected dryness level or after a set duration.

#### Auto

Ends the cycle automatically when the load reaches the selected dryness level. You will be prompted to select a dryness level for the next step.

Not available for Wool cycle.

#### Time

Ends the cycle after a set duration. You will be prompted to set a drying duration for the next step. Dryness level is not available with this option.

---

## CYCLE SELECTIONS

---

### DRYNESS LEVEL

Dryness options let you select a dryness level that prepares items for storing, wearing or ironing. Sensors in the dryer can detect remaining moisture in the load and will end the cycle when the load reaches your preferred dryness level.

Not available if drying method is set as Time.

#### **Iron ready**

Leaves some moisture in the load to help reduce wrinkles and prepare items for ironing.

#### **Dry**

Dries the load thoroughly leaving items ready to wear.

#### **Dry plus**


Dry plus is ideal for thicker fabrics or absorbent items that might need extra drying time.

#### **Extra dry**

An ultra-dry option for thick or heavy items. Ideal for thick or heavy items, or items that are going to be placed in storage.


## WI-FI CONNECTION AND REMOTE MODE

Connect your appliance to your home wireless network to receive updates and to operate the appliance remotely using the app.

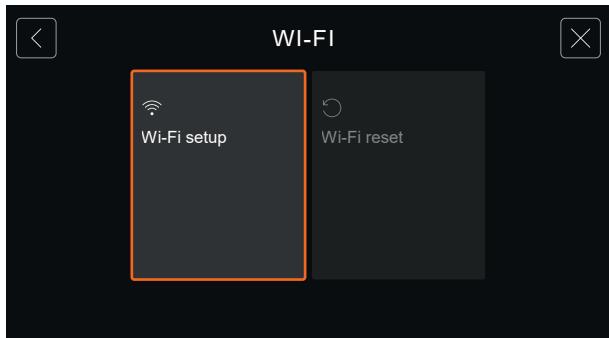


### Connect to Wi-Fi

1. Go to the menu and select **SETTINGS**, **WI-FI**, then **WI-FI SETUP**.

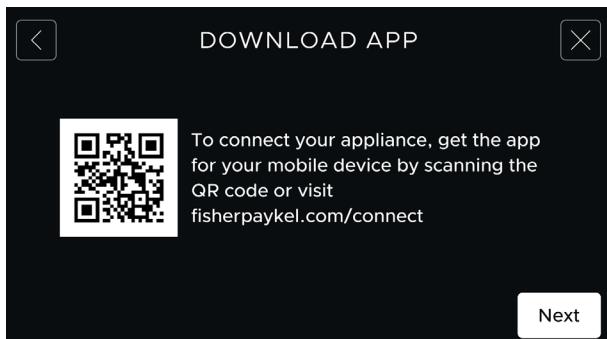

2. Download the app, and follow the app instructions.

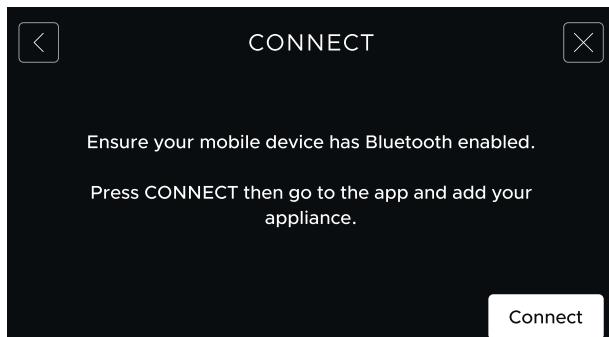

3. Enable Bluetooth on your mobile device, then press **CONNECT**.

Go to the app to complete the connection.

## WI-FI CONNECTION AND REMOTE MODE




4. On your appliance, select the relevant time zone.



### Disconnect Wi-Fi

Go to **SETTINGS** and select **WI-FI**, then **RESET** to disconnect.

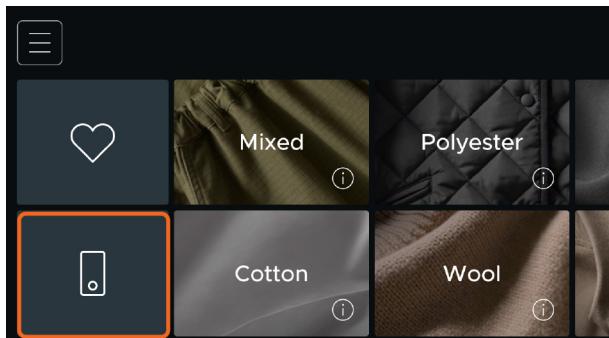


### Enable Remote mode from the home screen

Press **REMOTE** , then **ENABLE**.


Press the **START/PAUSE**  button to enable Remote mode and manage cycles in the app.

## WI-FI CONNECTION AND REMOTE MODE

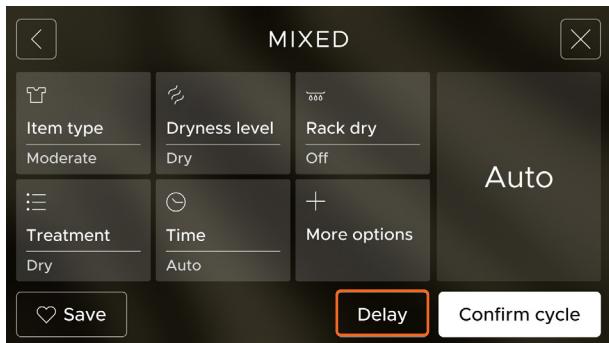


### Enable Remote mode during cycle setup

1. Press **DELAY** in the cycle setting screen.

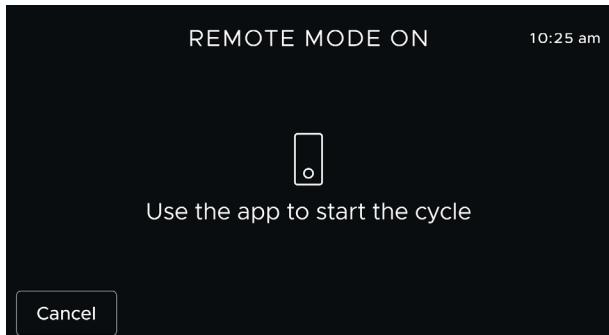

2. Press **START BY REMOTE**, then press the **START/PAUSE** to enable Remote mode and manage cycles in the app.

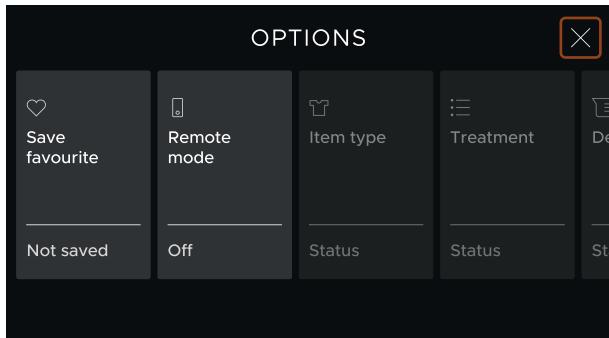

### Turn Remote mode off

On the cycle screen, press **OPTIONS**, then **REMOTE MODE** to turn off, or open the dryer door.

## CLEAN AND MAINTAIN THE DRYER

### Surfaces and accessories

Wipe with a damp cloth and mild detergent, then dry with a clean, lint-free cloth. We do not recommend using the following cleaning products as they may cause damage:

- Plastic or stainless steel scouring pads
- Abrasive, solvent, household cleaners
- Acid or alkaline cleaners
- Hand washing liquids or soap
- Stainless steel cleaners or polishes
- Laundry detergents or disinfectants

### Inside the dryer

Check and clean the inside of the drum regularly with a damp cloth to remove any dirt or lint. Do not leave any metal objects in the drum as these may cause rust.

### Sensors

The sensors are located behind the lint filter and detect whether the laundry is dry or not. Clean the sensors regularly to maintain drying performance.



### Cleaning the sensors

Wipe clean with a soft, damp cloth.

## EMPTY THE WATER TANK


Water collects in the water tank at the top left of the dryer during a drying cycle, unless the drain hose is set up to drain water automatically.

Empty the water tank before or after every load. Never run the dryer without the water tank in place unless the drain hose is installed. Refer to the installation guide for instructions if you want to install the drain hose.



1. Push the water tank to open it, then pull it out.

The tank can be heavy when full. Support the tank and keep it level to avoid spilling water.

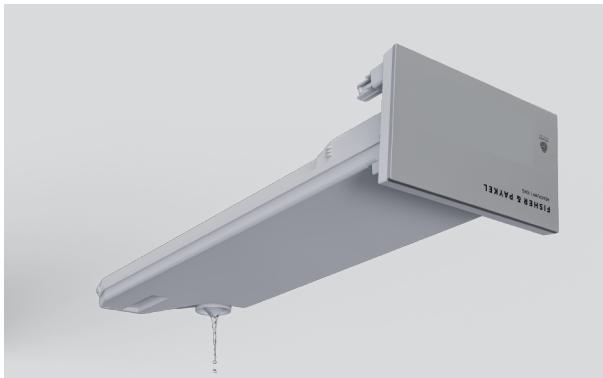

3. Empty the water tank, then place it back in the dryer.

## CLEAN THE LINT FILTER

The **CLEAN LINT FILTER** reminder will pop up at the end of a cycle. Remove and clean the filter each time you use the dryer as blocked filters will reduce drying performance, and lint can become a fire hazard if it builds up in or around your dryer.



1. Open the dryer door and remove the lint filter.



2. Open the filter and separate the parts. Use your hand or a soft cloth to remove the lint from both parts.



3. Refit the internal filter part to the outer part, then close the filter and place it back in the dryer.

## CLEAN THE LOWER FILTER


The lower lint filter sits below the lint filter. The **CLEAN LOWER LINT FILTER** reminder will pop up after every 10 cycles to prompt you to remove and clean the lower filter. Clean it when the reminder pops up, or when you notice the drying cycle is taking longer than usual. This will help to maintain drying performance.



1. Remove the lint filter to access the lower lint filter.



2. Remove the lower lint filter, open it and take out the foam.

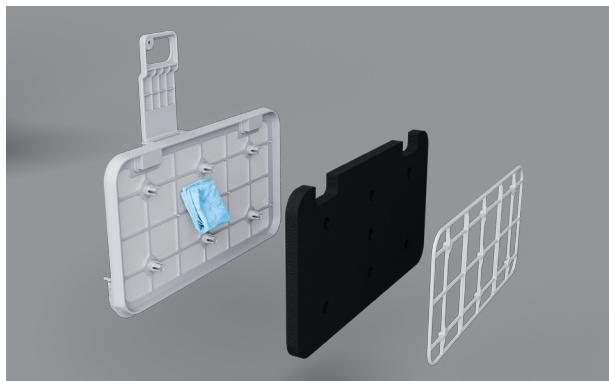

3. Use a cloth or vacuum cleaner to remove lint, then refit the foam to the mesh. Place lower filter back into the dryer, and refit the lint filter.

## TROUBLESHOOTING

---

### General use

---

#### Why will the dryer not turn on?

No power. Check the dryer is connected to the power supply.

---

#### Why is the display not responding?

- Dryer needs to be reset. Press and hold **POWER**  to turn the dryer off. Wait a few seconds, then turn the dryer back on. If the problem persists, disconnect the dryer from the power supply, wait a few seconds, then reconnect and press and hold **POWER**  to turn the dryer on.
- Dryer may require a software update. Connect dryer to Wi-Fi and check for updates in the app.

---

#### Why is the dryer not starting?

- Dryer door not closed. Check nothing is obstructing the door, and close it firmly.
- Water tank is full or not correctly in place. Empty the water tank and refit it.
- Dryer is overloaded. Remove some items and restart the cycle.
- Delayed start is set. See 'Setting Delayed start'.
- The controls are locked. Press and hold the screen to unlock.
- There is a fault. See 'Fault codes'.

---

#### Why is the dryer stopping and starting?

The crease free setting is turned on. Turn off in Options. See 'Drying options'.

---

#### Why did the dryer stop mid-cycle?

- Water tank is full. Empty the water tank.
- Drying cycle has been paused. Press **RESUME**, then **START/PAUSE**  to resume.
- The door is open. Close the door and press **RESUME**, then **START/PAUSE**  to resume.

---

#### Why is the dryer vibrating or making noises?

- Dryer is overloaded. Press **START/PAUSE**  to pause the cycle and remove some items.
- Dryer is not level. Refer to installation guide for instructions about levelling the dryer.
- The cycle has ended. Items can be removed.
- The module has fallen into the load. Pause the dryer and find the module. Refit it inside top-right of the drum so it snaps into place. Resume the cycle.
- Dryer has a fault. See 'Fault codes'.

---

#### Why do the items feel damp after a drying cycle?

- Items are just warm and will feel dry once they have cooled down.
- Incorrect drying settings for the load. Check settings and adjust if required.

---

## TROUBLESHOOTING

---

### Why is the drying cycle taking so long?

- Dryer is overloaded. Pause the cycle and remove some items.
- Items are tangled. Untangle the items and resume the cycle.
- Lint filters need to be cleaned. Remove and clean the lint filters.
- Incorrect drying settings for the load. Check the selected fibre type, item type, treatment, method and dryness, and adjust if required.
- Load was overly wet at the start of the cycle. Remove from dryer and run on a spin cycle in the washing machine to remove excess water.
- Water tank is full. Empty the water tank.
- Items are very large. Large items, like duvets, require longer drying times.
- Dryer is not draining. (Plumbed set-up only.) Check the drain hose for blockages and correct if possible. If the problem persists contact Customer Care.
- Air intake is blocked. Check that nothing is covering the air intake.
- Air temperature in the space surrounding the dryer is too hot, humid or cold. The dryer is less efficient in very hot or cold conditions. Ensure the dryer is installed in a well-ventilated space. Do not operate this dryer inside a cupboard.

---

### Why is there lint on the load after a drying cycle?

- The lint filters need to be cleaned. Remove and clean the lint filters.
- Lint-shedding items are mixed in a load with lint-collecting items. See 'Sort your load'.
- Clothes are over-dried and attracting lint. Use **AUTO** method to sense when items are at the appropriate dryness level.

---

### Why is the fabric damaged after a drying cycle?

- Cycle settings not appropriate for the load type. Follow instructions on care labels and sort items accordingly. See 'Sort your load'.
- Metal parts on the items or in the load may catch on fabric. Always fasten zips and other clasps before placing items in the dryer.

---

### Why do items in the dryer keep getting tangled?

- Loads not separated before going in the dryer. Load items individually and try separating larger items from smaller items.
- Load size is too large. Try drying smaller loads. See 'Sort your load'.
- Cycle settings not the best option for the load type. Try **SHEETS** for sheets, duvet/doona covers and **TOWELS** for towels.
- Delicate items not separated. Dry pantyhose, bras and stockings in a mesh bag.

---

### Why do items in the dryer keep getting creased?

- Items have been left in the dryer after the cycle ended. Select options, and turn **CREASE FREE** on at the start of the cycle to minimise creasing.
- Dryer is overloaded. Pause the cycle and remove some items.
- Dryness level is not appropriate for the load. Select a lower dryness level.

---

## TROUBLESHOOTING

---

### Why is dye transferring onto my clothes?

- Items not sorted before going in the dryer. Separate white and coloured items into separate loads.
- Wet items left sitting in the dryer before the drying cycle.

---

### Why is the dryer not draining?

- Water tank is not correctly fitted. Check it is firmly in place.
- Drain hose or drain is blocked. (Plumbed set-up only.) Check the drain hose and drain for blockages and correct if possible. If the problem persists contact Customer Care.
- Drain hose not connected correctly. See the installation guide for instructions.

---

### Why is the dryer beeping?

- The cycle has ended. Items can be removed.
- Dryer has a fault. See 'Fault codes'.

---

### Why is water coming from under the dryer?

- Water tank is full. Empty the water tank.
- Water tank is not correctly fitted. Check it is firmly in place.
- Dryer door not closed. Check nothing is obstructing the door, and close it firmly.
- Drain hose or drain is blocked. (Plumbed set-up only.) Check the drain hose and drain for blockages and correct if possible. If the problem persists contact Customer Care.
- Drain hose not connected correctly. See the installation guide for instructions.

---

### Why is there water in the dryer drum after a cycle?

- Water tank is full. Empty the water tank.
- Air temperature in the space surrounding the dryer is too hot, humid or cold, and water may be recondensing in the dryer. Ensure the dryer is installed in a well-ventilated space. Do not operate this dryer inside a cupboard.

---

### Can I dry my sneakers in the dryer?

Yes, sneakers can be dried using the drying rack and **RACK DRY**. See 'Fit drying rack'.

---

### How do I refresh my shirts?

Select the relevant fibre type, and set the item type to **MODERATE** and the treatment to **REFRESH**. Suitable for up to 2 items at a time.

---

### Do I need to use the Sanitise cycle on my dryer if I used the Sanitise cycle on my washer?

No. You only need to use the **SANITISE** cycle on one of your products to sanitise a load.

---

## FAULT CODES

### How do I know if there is a problem?

Your dryer will beep and an alert will show in the display.

### What to do

First try to fix the issue and clear the alert according to the onscreen instructions or the steps in the table below.

### If the problem persists

- ① Note down the fault code.
- ② Contact Customer Care or a Fisher & Paykel trained and supported service technician. Refer to the Service and Warranty booklet for contact details.

ALERT	WHAT TO DO
LOCKED	Press and hold the screen to unlock the controls.
CHECK FILTERS	<p>Clean both lint filters and check they are not damaged.</p> <p>Check there is nothing else trapped in the filters that may be blocking the air flow.</p>
WATER TANK FULL	<p>Check if the water tank is full.</p> <p>Empty the water tank.</p> <p>If using the drain hose, check whether the water tank or drain hose is blocked.</p> <p>Check the drain hose is still attached at the back of the machine, and is not kinked or squashed.</p>
CLOSE DOOR	<p>Ensure the door is firmly shut, then press ►II to resume the cycle.</p> <p>Try opening and closing the door again.</p> <p>Reposition the load, ensuring items are not in the way of the door.</p>
COOLING DOWN	Wait for the dryer to cool. The cycle will resume once the drum has cooled.
ROOM TEMP LOW	The room temperature is too low for the dryer to work effectively. Ensure that the room temperature is above 5°C to avoid loss of efficiency.
ROOM TEMP HIGH	The room temperature is too hot for the dryer to work effectively. Wait for environment to cool before resuming.
MAX TIME REACHED	There are a number of reasons the maximum cycle time might be reached. Refer to 'Troubleshooting'.

## COMPLIANCE INFORMATION

---

### Energy label cycle

The energy label cycle, in accordance with AS/NZS 2442.1 and AS/NZS 2442.2 is as follows: Cotton, Item Type: Durable, Dryness: Dry. This cycle is the recommended energy saving cycle for everyday drying, at the rated capacity.

### Woolmark Wool Care

#### Woolmark Black

The wool drying cycle of this machine has been tested and approved by The Woolmark Company for the drying of machine washable wool products provided that the products are washed and dried according to the instructions on the garment label and those issued by the manufacturer of this machine. M2445.

The maximum capacity of the Woolmark Wool Care cycle is 1kg.

Approved cycle: WOOL, Item Type: DELICATE, Treatment: DRY, Method: TIMED.



#### Woolmark Blue

The wool drying cycle of this machine has been tested and approved by The Woolmark Company. The cycle is suitable to dry wool garments which are labelled "hand wash" provided that the garments are washed in a Woolmark endorsed hand washing cycle and dried according to the instructions issued by the manufacturer of this machine. M2443.

The maximum capacity of the Woolmark Wool Care cycle is 1kg.

Approved cycle: WOOL, Item Type: ULTRA DELICATE, Treatment: DRY, Method: TIMED.



# MANUFACTURER'S WARRANTY AND SERVICE GUIDE

---

**NZ**



## To access your Warranty and Service Guide

Scan the QR code with your smartphone to access your warranty and book a service, or view online at <https://www.fisherpaykel.com/nz/help-and-support/warranty-information>

**AU**



## To access your Warranty and Service Guide

Scan the QR code with your smartphone to access your warranty and book a service, refer to your separate warranty and service book or view online at <https://www.fisherpaykel.com/au/help-and-support/warranty-information>

This product has been designed for use in a domestic (residential) environment. This product is not designed for any commercial use. Any commercial use by the customer will affect this product's Manufacturer's Warranty.

Complete and keep for safe reference:

Model	<hr/>
Serial No.	<hr/>
Purchase Date	<hr/>
Purchaser	<hr/>
Dealer	<hr/>
Suburb	<hr/>
Town	<hr/>
Country	<hr/>

**FISHERPAYKEL.COM**

© Fisher & Paykel Appliances 2026. All rights reserved.

The models shown in this guide may not be available in all markets  
and are subject to change at any time.

The product specifications in this guide apply to the specific products and  
models described at the date of issue. Under our policy of continuous product  
improvement, these specifications may change at any time.

For current details about model and specification availability in your country,  
please go to our website or contact your local Fisher & Paykel dealer.

**433047A 02.26**