



FUKASAWA OUTLET WITH BENCHMOUNT

329548 — Chrome

5 finishes available

NOTE

- Connect hot and cold flexible hoses to isolation taps, a 3/8 to 1/2 BSP adapter is supplied
- Do not twist, kink or stretch flexible hoses (minimum bend radius 45mm). Hand tighten flexible hose connecting nuts, then apply quarter turn with a spanner.
- Maximum working pressure 1000kpa. Minimum working pressure 100kpa. Recommended working pressure 200 – 500kpa.
- Supply pipe work must be flushed clean before installation.
- Full installation instructions come with the product.

