

- This storage plinth can only be installed with a compatible Fisher & Paykel appliance. To ensure stability, the plinth must be fitted correctly with the appliance.
- Ensure the drawer is closed while the appliance is running.
- Do not stand on the drawer, slam shut, or overload. Maximum capacity: 15kg.
- If you notice excessive vibrating while the appliance is running, ensure the products are level and the plinth is sitting on its feet.
- For installation instructions and compatible appliance models, go to fisherpaykel.com/ specify and search by product name or model. Refer to the Pairing Guide for compatible appliance models.

Product overview



Features	
① Drawer	Push the centre of the drawer to open or close.
② Adjustable divider	Adjust the divider as needed to store items.
③ Drawer latch	Engage the latch to prevent unintended access when storing detergent or cleaning products.

STORAGE PLINTH

FM2060S2, FM2060SG2 & FM2060SZB2 models

FISHER & PAYKEL

Engaging the latch




Slide the lever back to engage the latch.

Disengaging the latch



Slide the lever forward to disengage the latch.

Opening the drawer with the latch engaged

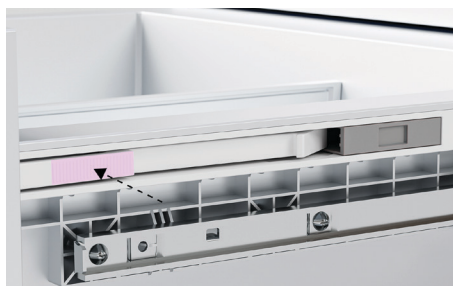

Press the button and push the drawer in slightly to release the latch.