

duraprès

+ CURTIS STONE



BEAT BLITZ

Hand Mixer Set

Blend • Whisk • Beat

DSM550

THANK YOU!

We hope you enjoy your new
Duraprès Beat Blitz Hand Mixer Set

dp.

CONTENTS

- 4** IMPORTANT SAFEGUARDS
- 6** PARTS & ACCESSORIES
- 7** BEFORE FIRST USE
- 8** HOW TO USE
- 12** QUICK GUIDE
- 13** TIPS
- 14** CARE & CLEANING
- 15** WARRANTY

IMPORTANT SAFEGUARDS


Like any electrical appliance, the Duraprès Beat Blitz Hand Mixer Set must be handled with care at all times. To ensure your own safety, the following precautions should be followed:

- 1.** Ensure the Power Cord is unplugged from the outlet in the following situations:
 - When appliance is not being used.
 - Before parts are being assembled/disassembled.
 - Before cleaning.
- 2.** The appliance is intended for home use. It is not intended for commercial use.
- 3.** This appliance is not intended for people (including children) with reduced physical, sensory or mental capabilities, or those who lack relevant experience and knowledge, unless someone responsible for their safety supervises or directs use of the appliance.
- 4.** Keep this appliance and its Power Cord out of the reach of children.
- 5.** If the Power Cord is damaged, it must be replaced before further use by the manufacturer or its service agent.
- 6.** Keep Power Cord away from hot surfaces, sharp objects or open fire.
- 7.** Do not submerge the Power Cord in water.
- 8.** Do not let Power Cord hang over the edge of a table or counter, touch hot surfaces or become knotted, trapped or pinched.
- 9.** Pulling or stumbling over the Power Cord can result in the appliance tilting over or falling, causing serious injury.
- 10.** If this appliance begins to malfunction during use, immediately switch power off, and unplug the cord.
- 11.** Always insert the attachment first, then plug cord into the outlet. To disconnect, switch the appliance off, then remove plug from the outlet.

- 12.** Always unplug the appliance from power supply if you leave it unattended. After use and before cleaning, always switch off the appliance and disconnect it from power supply by removing the plug from the electric socket.
- 13.** Do not immerse the Main Body in water. To protect against electrical shock, do not immerse the Power Cord, plug or appliance in any liquid; do not rinse under the tap.
- 14.** For indoor use only. Not intended for outdoor use.
- 15.** This appliance must be allowed to cool before cleaning.
- 16.** Be careful when handling and cleaning the blades. They are very sharp. We recommend using a bottle brush.
- 17.** If the processed food starts to stick to the appliance (e.g. on blade, whisk), switch off the appliance and unplug the Power Cord and remove the attachment before cleaning the accessory carefully.
- 18.** Never insert fingers, fork, knife, spatula, or spoon into rotating parts of the appliance or the accessories, especially when it's plugged in.
- 20.** Make sure that your hair, clothes and accessories do not get into close vicinity of rotating parts.
- 21.** Make sure that the Power Cord does not get between the rotating parts of the accessories.
- 22.** Do not process food at temperatures of 80°C or above. Ingredients should not be too hot, as splattering contents may cause scalding.
- 23.** Do not wind the Power Cord around the appliance, this will reduce its life.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

PARTS & ACCESSORIES

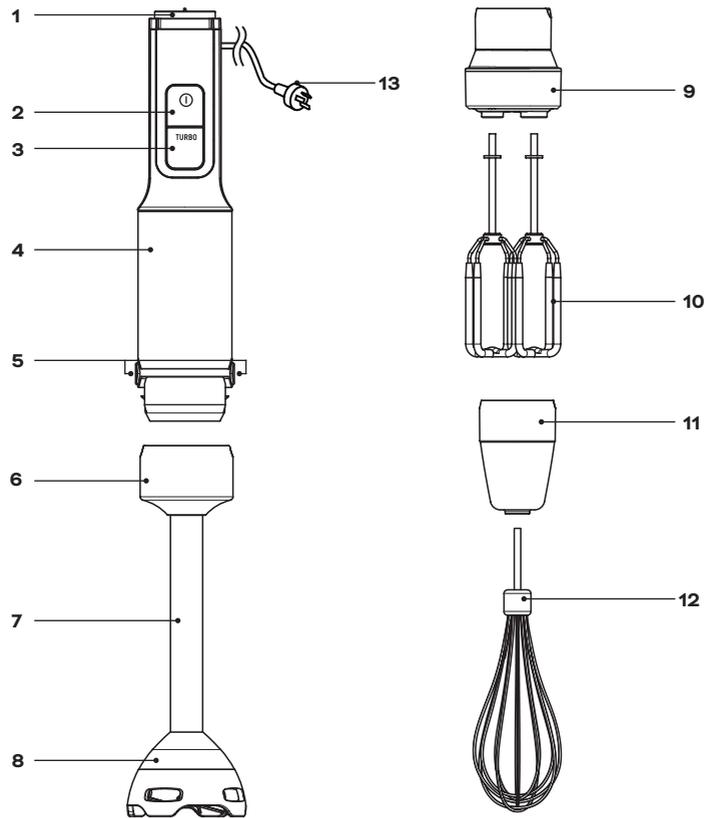

- | | | | |
|---|----------------------|----|----------------------|
| 1 | SPEED DIAL | 8 | BLENDER HEAD |
| 2 | POWER BUTTON | 9 | DOUBLE BEATER COLLAR |
| 3 | TURBO BUTTON | 10 | DOUBLE BEATERS |
| 4 | MAIN BODY | 11 | WHISK COLLAR |
| 5 | RELEASE BUTTONS | 12 | WHISK |
| 6 | BLENDER STICK COLLAR | 13 | POWER CORD |
| 7 | BLENDER STICK | | |

BEFORE FIRST USE

To get the most value from your new appliance, please read these instructions carefully.

CLEANING

Remove all packaging from the Beat Blitz and clean all parts before use. Refer to the cleaning guide on page 14 for detailed instructions.

SAFETY

After unpacking and cleaning the Beat Blitz and before any use, make sure to check all parts for any visible damage. Ensure you have read through all important safeguards on page 4 and 5.



IMPORTANT:

The blades in your Beat Blitz are very sharp. Always handle them with care, keeping sharp edges away from your hands, hair and body.


HOW TO USE

ATTACHING AND REMOVING THE BLENDER STICK

The Blender stick is the most versatile attachment to your Beat Blitz. It is suitable for making soups, smoothies, milkshakes and more.

STEP 1. Align divots on Blender Stick Collar with Release Buttons, then attach. Press firmly until you hear a “click.” Check that Blender Stick is locked into place.

STEP 2. To remove, press and hold both Release Buttons. Then pull out Blender Stick.

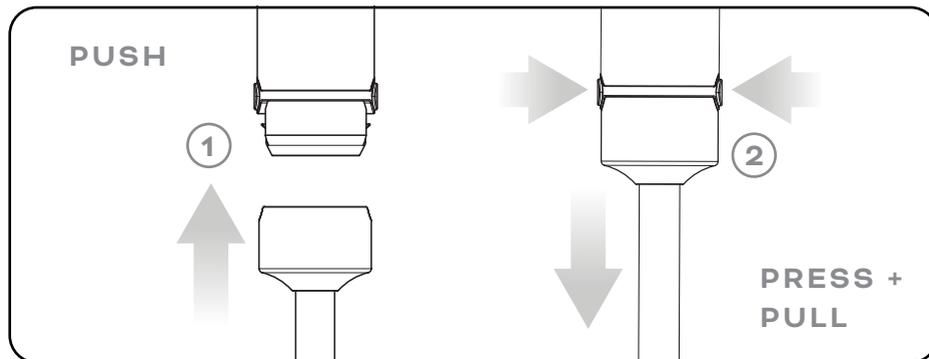

IMPORTANT:

The titanium coated blades in your Beat Blitz are very sharp. Always handle them with care, keeping sharp edges away from your hands, hair and body.


ATTACHING AND REMOVING THE WHISK

The Whisk attachment is great for whipping cream and forming perfect peaks with egg white. It can also be used on light batters.

STEP 1. Align the ribs on the Whisk post with the slots in the base of the Whisk Collar. Press firmly until you hear a “click.” Check Whisk is locked into place.

STEP 2. Align divots on Whisk Collar with Release Buttons, then attach. Press firmly until you hear a “click.” Check Whisk Collar is locked into place.

STEP 3. To remove Whisk, while holding Whisk Collar, press both Release Buttons and pull Whisk Collar out to remove. Then pull out Whisk from Whisk Collar.

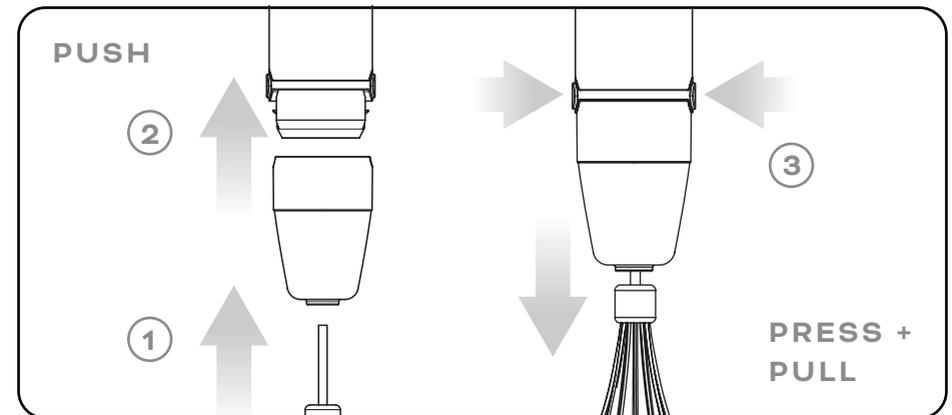

HOW TO USE


ATTACHING AND REMOVING THE DOUBLE BEATERS

The Double Beater attachment is perfect for mixing together ingredients, such as cake batter, cookie dough, frosting, and creaming butter.

STEP 1. Align the ribs on the Beater posts with the slots in the base of the Double Beater Collar. Press firmly until you hear a “click.” Check Beaters are locked into place.

STEP 2. Align divots on Double Beater Collar with Release Buttons, then attach. Press firmly until you hear a “click.” Check Double Beater Collar is locked into place.

STEP 3. To remove Double Beaters, while holding Double Beater Collar, press both Release Buttons and pull Double Beater Collar out to remove. Then pull out Double Beaters from Double Beater Collar.

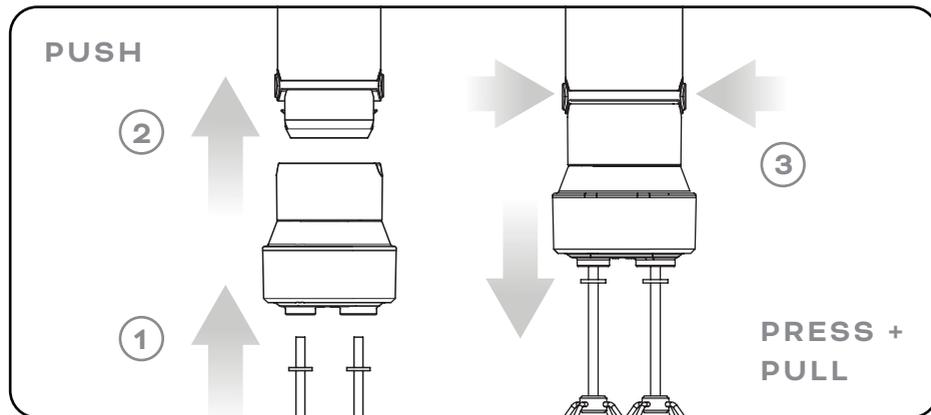

OPERATING THE BEAT BLITZ

Once the Beat Blitz has been assembled with the chosen accessory, plug Power Cord into power outlet. Insert the Beat Blitz into a suitable container with food or liquid and follow the steps below.


STEP 1. Adjust Speed Dial to desired speed setting.

STEP 2. Press the Power Button to start. Alternatively, you can press Turbo Button if highest speed setting is desired. By releasing the Power or Turbo Button you will switch off the appliance.



IMPORTANT:

Only operate Beat Blitz in 60-second intervals. Stop blending after 60 seconds and allow the appliance to cool down for 30 seconds before continuing. If operating time is exceeded, the device can overheat.

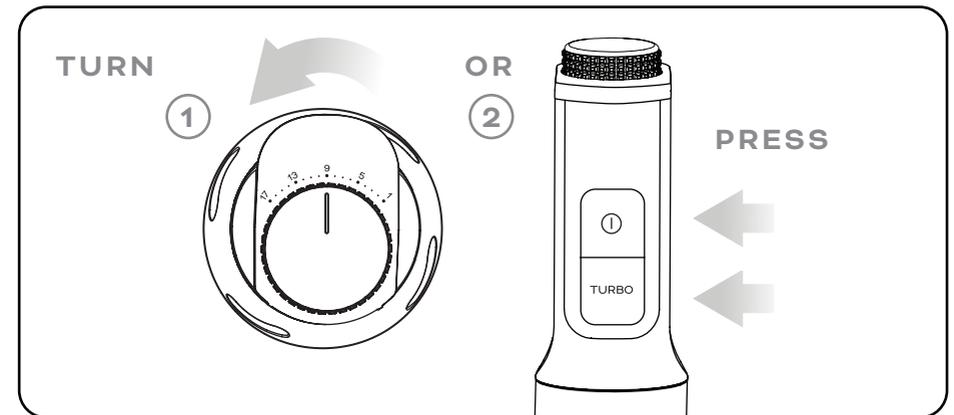

QUICK GUIDES

Use the table below for quick reference on the intended use for each of the Beat Blitz attachments, as well as the speed guide below.

ATTACHMENT	INTENDED USE
Blender Stick	Soups Sauces Mayonnaise Smoothies Milkshakes Baby Food
Whisk	Whipped Cream Whipped Egg Whites Vinaigrettes Light Batters
Double Beater	Cookie Dough Cake Batter Icing

SPEED	NUMBER SETTING
Low Speed	1 - 3
Medium-Low Speed	4 - 6
Medium Speed	7 - 10
Medium-High Speed	11 - 13
High Speed	14 - 17

TIPS

BLENDING

- If blending in a saucepan or pot, remove the cookware from the heat source first. All Beat Blitz attachments are coated with a non-scratch coating, protecting your cookware when it is used.
- Do not let the Beat Blitz sit in hot cookware on the stovetop when not in use.
- To help prevent splatters, ensure the head of the Beat Blitz is fully submerged in ingredients.
- Make sure that the liquid does not reach the Blender Stick Collar and Main Body. If it does, blend the liquid in batches.
- Liquid helps blend ingredients easier.
- If blending food in a jug or tall container, do not fill the jug more than halfway, so as to allow the Beat Blitz to move up and down without food spilling over.
- The longer you process the food with the Blender Stick, the smoother the food will become.
- If food is not smooth enough, turn off the Beat Blitz and mix the ingredients around with a spoon or spatula. If necessary, add some liquid.

WHISKING/BEATING

- Use a tall bowl when using Whisk and Double Beater attachments to prevent food splatters.
- Before whisking egg whites, make sure that the Whisk and the container are clean and dry, without any oil residue.
- Separate egg yolks from whites when cold; then let egg whites come to room temperature for faster whipping.
- Use chilled cream for whipping.

CARE & CLEANING

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Contact the Customer Service Department for any unusual issues you may experience

To clean your Beat Blitz follow the instructions below.

1. Always unplug the Beat Blitz before cleaning.
2. Ensure the Beat Blitz has cooled down before cleaning.
3. Be very careful when cleaning Blender Stick. Blades are very sharp.
4. To clean Main Body, wipe down with a clean, damp cloth and dry thoroughly after every use.



IMPORTANT:

Do not place Main Body, Blender Stick, Whisk Collar or Double Beater Collar in or under water or any liquid, as this will damage internal components.

5. Never use harsh chemical detergents, powder or scouring pads on any of the parts.
6. To clean Whisk, Double Beaters, wash in warm, soapy water, or place on top rack of dishwasher, then dry thoroughly before storing.



IMPORTANT:

The titanium coated blades in your Beat Blitz are very sharp. Always handle them with care, keeping sharp edges away from your hands, hair and body.

WARRANTY

This warranty covers all defects in workmanship or materials in the mechanical and electrical parts, arising under normal usage and care, for this product for a period of 24 months from the date of purchase provided you are able to present a valid proof-of-purchase. A valid proof of purchase is a receipt specifying item, date purchased, and cost of item. Product is intended for household use only. Any commercial use voids the warranty.

This warranty covers the original retail purchase. During the applicable warranty period within normal household use, we will repair or replace, at our discretion, any mechanical or electrical part which proves defective, or replace unit with a comparable model.

THIS LIMITED WARRANTY COVERS UNITS PURCHASED AND USED WITHIN AUSTRALIA DOES NOT COVER:

- Damages from improper installation.
- Defects other than manufacturing defects.
- Damages from misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
- Damage from service by other than an authorised dealer or service center.
- Shipping and handling charges may apply.
- Proof of purchase is required to confirm the warranty.
- This warranty does not exclude, restrict or modify any state or federal legislation applicable to the supply of goods and services.

To register your warranty, please visit www.durapres.com/warranty

DURAPRÈS PRODUCTS CUSTOMER SERVICE INFORMATION

Should you have any concerns, issues or questions regarding your Duraprès product please visit www.durapres.com/contact

Food Fight Australia Pty Ltd. • Made in China

dp.