



1000N • 1200N • 2000N • 2200N
2600N+ • 2800N+
3100N+ • 3200N+

ULPG OWNER'S MANUAL



USER INFORMATION - SCAN THE QR CODE

Thank you for purchasing a Weber barbecue. Scan here to access the full user and recipe guide, barbecuing tips, cleaning and maintenance advice, cooking inspiration and recipes. You can also sign up to receive product news, special offers, upcoming events, and more.

Important Safety Information

DANGER, WARNING, and CAUTION statements are used throughout this Owner's Manual to emphasise critical and important information. Read and follow these statements to help ensure safety and prevent property damage. The statements are defined below.

⚠ **DANGER:** Indicates a hazardous situation which, if not avoided, *will result in death or serious injury.*

⚠ **WARNING:** Indicates a hazardous situation which, if not avoided, *could result in death or serious injury.*

⚠ **CAUTION:** Indicates a hazardous situation which, if not avoided, *could result in minor or moderate injury.*

USE OUTDOORS ONLY.

READ THE INSTRUCTIONS BEFORE USING THE APPLIANCE.

NOTICE TO INSTALLER: These instructions must be left with the consumer.

NOTICE TO CONSUMER: Retain these instructions for future reference.

Important: Read these instructions for use carefully. Familiarise yourself with the appliance before connecting it to its gas container. Keep these instructions for future reference.

Installation and Assembly

⚠ **DANGER:** This barbecue is not intended to be installed in or on recreational vehicles or boats.

⚠ **WARNING:** Do not use this barbecue unless all parts are in place and the barbecue was properly assembled according to the assembly instructions.

⚠ **WARNING:** Do not build this model of barbecue in any built-in or slide-in construction.

⚠ **WARNING:** Do not modify the appliance. ULPG gas is not natural gas. The conversion or attempted use of natural gas in a ULPG gas unit or ULPG gas in a natural gas unit is unsafe and will void your warranty.

⚠ **Remove all packaging materials and protective film before operating your barbecue.**

• The installation of the barbecue must conform with the requirements of AS/NZS 5601 and the local authority – gas or electricity, etc.

• Do not install in, or connect to the consumer piping or gas supply of a boat or caravan.

• Any parts sealed by the manufacturer must not be altered by the user.

⚠ DANGER

If you smell gas:

- Shut off gas to the appliance.
- Extinguish any open flame.
- Open lid.
- If odour continues, keep away from the appliance and immediately call your gas supplier or the emergency fire services.

⚠ WARNING

- Do not store or use petrol or other flammable liquids or vapours in the vicinity of this or any other appliance.
- A cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.

Operation

ONLY USE IN WELL-VENTILATED AREAS.

CARBON MONOXIDE HAZARD—USING THIS APPLIANCE IN AN ENCLOSED SPACE MAY CAUSE DEATH. DO NOT USE IN CARAVANS, TENTS, MARINE CRAFT, CARS, MOBILE HOMES OR SIMILAR LOCATIONS.

⚠ **DANGER:** Only use the barbecue outdoors in a well-ventilated area. Do not use in a garage, building, breezeway, tent, any other enclosed area, or beneath overhead combustible construction.

⚠ **DANGER:** Do not use the barbecue in any vehicle or in any storage or cargo area of any vehicle. This includes, but is not limited to, cars, trucks, station wagons, mini-vans, sport utility vehicles, recreational vehicles, and boats.

⚠ **DANGER:** Do not use the barbecue within 61 cm (24 inches) of combustible materials. This includes the top, bottom, back and sides of the barbecue.

⚠ **DANGER:** Keep the cooking area clear of flammable vapours and liquids such as petrol, alcohol, etc., and combustible materials.

⚠ **DANGER:** This appliance must be kept away from flammable materials during use. Do not spray aerosols in the vicinity of this barbecue while it is in operation.

⚠ **DANGER:** Do not put a barbecue cover or anything flammable on, or in the storage area under the barbecue while it is in operation or is hot.

⚠ **DANGER:** Should a grease fire occur, turn off all burners and leave lid closed until fire is out.

⚠ **WARNING:** Accessible parts may be very hot. Keep young children away.

⚠ **WARNING:** The use of alcohol, prescription drugs, non-prescription drugs, or illegal drugs may impair the consumer's ability to properly and safely assemble, move, store, or operate the barbecue.

⚠ **WARNING:** Never leave the barbecue unattended during pre-heating or use. Exercise caution when using this barbecue. The entire cookbox gets hot when in use.

⚠ **WARNING:** Do not move the appliance during use.

⚠ **WARNING:** Keep any electrical supply cord and the fuel supply hose away from any heated surfaces.

⚠ **WARNING:** Do not place articles on or against this barbecue.

⚠ **WARNING:** Do not use a gas barbecue for deep frying.

⚠ **CAUTION:** This product has been safety-tested and is only certified for use in a specific country. Refer to country designation located on outside of box.

• Do not use charcoal, briquettes or lava rock in the barbecue.

• The appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

Storage and/or Nonuse

⚠ **WARNING:** Turn off the gas supply at the cylinder after use.

⚠ **WARNING:** Cylinders must be stored outdoors out of the reach of children and must not be stored in a building, garage or any other enclosed space.

⚠ **WARNING:** After a period of storage and/or nonuse, the barbecue should be checked for gas leaks and burner obstructions before use.

• Storage of the barbecue indoors is permissible only if the cylinder is disconnected and removed from the barbecue.



REGISTER YOUR BARBECUE
weber.com/register-grill

Register your barbecue to join the Weber family. Registration is quick and simple, and we only ask a few questions. By registering, we can access your barbecue information if you need assistance in the future, such as warranty support, replacement parts, or cooking advice.

Serial Number

Write your barbecue's serial number in the box above for future reference. The serial number is on the barbecue's data label.



30859_062426 enAUNZ



WARRANTY

Limited Warranty

Thank you for purchasing a WEBER product. Weber-Stephen Products LLC, 1415 S. Roselle Road, Palatine, Illinois 60067 ("WEBER") prides itself on delivering a safe, durable, and reliable product.

This is WEBER's Limited Warranty ("Warranty") provided to you at no extra charge. It contains the information you will need to have your WEBER product repaired in the unlikely event of a failure or defect.

Pursuant to the Australia Consumer Law, the Owner has several rights in case the product is defective. Those rights include that the product is fit for purpose, acceptable in appearance and finish, free from defects and is safe and durable. These and other statutory rights remain unaffected by this warranty provision. In fact, this warranty grants additional rights to the Owner that are independent from statutory warranty provisions.

WEBER'S LIMITED WARRANTY

WEBER warrants, to the purchaser of the WEBER product (or in the case of a gift or promotional situation, the person for whom it was purchased as a gift or promotional item) ("Owner"), that the WEBER product is free from defects in material and workmanship for the period(s) of time specified below when assembled and operated in accordance with the accompanying Owner's Manual, normal wear and tear excluded. (Note: If you lose or misplace your WEBER Owner's Manual, a replacement is available online at www.weber.com.) WEBER agrees within the framework of this warranty to repair or replace the part that is defective in material or workmanship subject to the limitations, and exclusions listed below. TO THE EXTENT ALLOWABLE BY APPLICABLE LAW, THIS WARRANTY IS EXTENDED ONLY TO THE ORIGINAL PURCHASER AND IS NOT TRANSFERABLE TO SUBSEQUENT OWNERS, EXCEPT IN THE CASE OF GIFTS AND PROMOTIONAL ITEMS AS NOTED ABOVE.

WEBER stands by its products and is happy to provide you with the Warranty described for material defects in the barbecue or its relevant components, normal wear and tear excepted.

- 'Normal wear and tear' includes cosmetic and other immaterial deterioration that may come with ownership of your barbecue over time, such as surface rust, dents / scratches, etc.

However, WEBER will honor this Warranty for the barbecue or its relevant components where damage or dysfunction results from a material defect.

- 'Material defect' includes rust through or burn through of certain parts, or other damage or failure inhibiting your ability to safely / properly use your barbecue.

OWNER'S RESPONSIBILITIES UNDER THIS WARRANTY

To ensure trouble-free warranty coverage, it is important (but it is not required) that you register your WEBER product online at www.weber.com. Please also retain your original sales receipt and/or invoice. Registering your WEBER product confirms your warranty coverage and provides a direct link between you and WEBER in case we need to contact you. If you have not had time to register your barbecue before calling for Warranty service, please have the following information available when you do call:

Name – Address – Phone Number – Email – Serial Number – Purchase Date – Purchase Dealer – Model – Color – Primary Issue
The above warranty only applies if the Owner takes reasonable care of the WEBER product by following all assembly instructions, usage instructions, and preventative maintenance as outlined in the accompanying Owner's Manual, unless the Owner can prove that the defect or failure is independent of non-compliance with the above mentioned obligations. If you live in a coastal area, or have your product located near a pool, maintenance includes regular washing and rinsing of the exterior surfaces as outlined in the accompanying Owner's Manual.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits given under this Limited Warranty are in addition to other rights and remedies you have under the Australian Consumer Law in relation to this WEBER gas barbecue.

WARRANTY HANDLING / EXCLUSION OF WARRANTY

If you believe that you have a part which is covered by this Warranty, please contact WEBER Customer Service using the contact information on our website (www.weber.com), or such country-specific website to which Owner may be redirected). WEBER will, upon investigation, repair or replace (at its option) a defective part that is covered by this Warranty. In the event that repair or replacement are not possible, WEBER may choose (at its option) to replace the barbecue in question with a new barbecue of equal or greater value. WEBER may ask you to return parts for inspection, shipping charges to be pre-paid by owner.



FOR THE FULL WEBER BARBECUE EXPERIENCE

REGISTER YOUR PRODUCT

Scan the QR Code



OR register at
weber.com/register-grill/

VIEW YOUR USER AND RECIPE GUIDE



Scan the QR Code

When you contact Customer Service, please have the following information available:

Name – Address – Phone Number – Email – Serial Number – Purchase Date – Purchase Dealer – Model – Color – Primary Issue

This WARRANTY lapses if there are damages, deteriorations, discolorations, and/or rust for which WEBER is not responsible caused by:

- Abuse, misuse, alteration, modification, misapplication, vandalism, neglect, improper assembly or installation, and failure to properly perform normal and routine maintenance;
- Insects (such as spiders) and rodents (such as squirrels), including but not limited to damage to burner tubes and/or gas hoses;
- Exposure to salt air and/or chlorine sources such as swimming pools and hot tubs/spas;
- Severe weather conditions such as hail, hurricanes, earthquakes, tsunamis or surges, tornadoes or severe storms.
- Acid rain and other environmental factors.

Using third party parts will not void this Warranty. However, any parts that are used and/or installed on your WEBER product that are not genuine WEBER parts are not covered by this Warranty. In addition, any damages that result from the use and/or installation of parts on your WEBER product that are not genuine WEBER parts are not covered by this Warranty. Any conversion of a gas barbecue not authorised by WEBER and performed by a WEBER authorised service technician will void this Warranty.

PRODUCT WARRANTY PERIODS

Cookbox:
5 years, no rust through/burn through
(2 years paint, excluding fading or discoloration)

Lid assembly:
5 years, no rust through/burn through
(2 years paint, excluding fading or discoloration)

Stainless steel burner tubes:
5 years, no rust through/burn through

Porcelain-enamelled cast iron cooking grills:
5 years, no rust through/burn through

Plastic components:
5 years, excluding fading or discoloration

All remaining parts:
2 years

DISCLAIMERS

APART FROM THE WARRANTY AND DISCLAIMERS AS DESCRIBED IN THIS WARRANTY STATEMENT, THERE ARE EXPLICITLY NO FURTHER WARRANTY OR VOLUNTARY DECLARATIONS OF LIABILITY GIVEN HERE WHICH GO BEYOND THE STATUTORY LIABILITY APPLYING TO WEBER. THE PRESENT WARRANTY STATEMENT ALSO DOES NOT LIMIT OR EXCLUDE SITUATIONS OR CLAIMS WHERE WEBER HAS MANDATORY LIABILITY AS PRESCRIBED BY STATUTE.

NO WARRANTIES SHALL APPLY AFTER THE APPLICABLE PERIODS OF THIS WARRANTY. NO OTHER WARRANTIES GIVEN BY ANY PERSON, INCLUDING A DEALER OR RETAILER, WITH RESPECT TO ANY PRODUCT (SUCH AS ANY "EXTENDED WARRANTIES"), SHALL BIND WEBER. THE EXCLUSIVE REMEDY OF THIS WARRANTY IS REPAIR OR REPLACEMENT OF THE PART OR PRODUCT. IN NO EVENT UNDER THIS WARRANTY SHALL RECOVERY OF ANY KIND BE GREATER THAN THE AMOUNT OF THE PURCHASE PRICE OF THE WEBER PRODUCT SOLD.

YOU ASSUME THE RISK AND LIABILITY FOR LOSS, DAMAGE, OR INJURY TO YOU AND YOUR PROPERTY AND/OR TO OTHERS AND THEIR PROPERTY ARISING OUT OF THE MISUSE OR ABUSE OF THE PRODUCT OR FAILURE TO FOLLOW INSTRUCTIONS PROVIDED BY WEBER IN THE ACCOMPANYING OWNER'S MANUAL. PARTS AND ACCESSORIES REPLACED UNDER THIS WARRANTY ARE WARRANTED ONLY FOR THE BALANCE OF THE ABOVE MENTIONED ORIGINAL WARRANTY PERIOD(S).

THIS WARRANTY APPLIES TO PRIVATE SINGLE FAMILY HOME OR APARTMENT USE ONLY AND DOES NOT APPLY TO WEBER BARBECUES USED IN COMMERCIAL, COMMUNAL OR MULTI-UNIT SETTINGS SUCH AS RESTAURANTS, HOTELS, RESORTS, OR RENTAL PROPERTIES.

 

WEBER MAY FROM TIME TO TIME CHANGE THE DESIGN OF ITS PRODUCTS. NOTHING CONTAINED IN THIS WARRANTY SHALL BE CONSTRUED AS OBLIGATING WEBER TO INCORPORATE SUCH DESIGN CHANGES INTO PREVIOUSLY MANUFACTURED PRODUCTS, NOR SHALL SUCH CHANGES BE CONSTRUED AS AN ADMISSION THAT PREVIOUS DESIGNS WERE DEFECTIVE.

Weber-Stephen Products Co. (Australia) Pty Ltd.
Level 1, 142-144 Fullarton Road
ROSE PARK SA 5067 AUSTRALIA
TEL: 1300 301 290





Weber-Stephen Products New Zealand
25B O'Rorke Road
Penrose, Auckland 1061 NEW ZEALAND
TEL: 0800 493 237





A

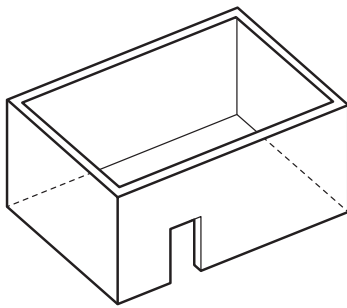

B

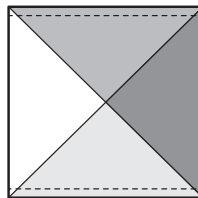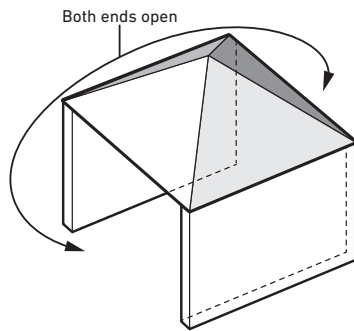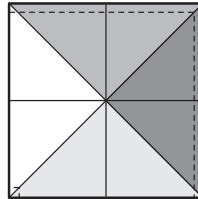
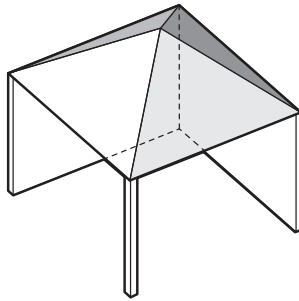


C

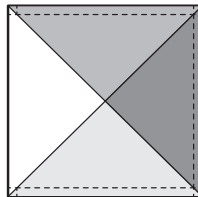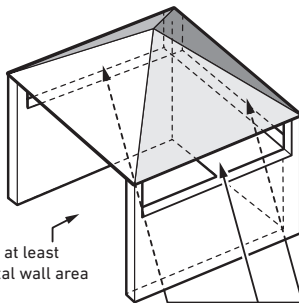

Open side at least 25% of total wall area

30% or more in total of the remaining wall area is open and unrestricted

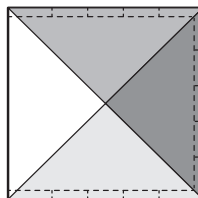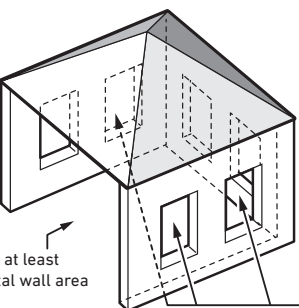

Open side at least 25% of total wall area

30% or more in total of the remaining wall area is open and unrestricted

Considerations for Locating your Barbecue

Any enclosure in which the appliance is used shall comply with one of the following:

- An enclosure with walls on all sides, but at least one permanent opening at ground level and no overhead cover (**A**).
- Within a partial enclosure that includes an overhead cover and no more than two walls (**B**).
- Within a partial enclosure that includes an overhead cover and more than two walls, the following shall apply (**C**):
 - (i) at least 25% of the total wall area is completely open; and
 - (ii) at least 30% of the remaining wall area is open and unrestricted.
- In the case of balconies, at least 20% of the total of the side, back and front wall areas shall be and remain open and unrestricted.

Important Information About ULPG & Gas Connections

Universal liquefied petroleum gas, also called ULPG, LP gas, liquid propane, or simply propane or butane, is the flammable, petroleum-based fuel used in your barbecue. It is a gas at moderate temperatures and pressure when it is not contained. However, under moderate pressure inside a container, such as a tank, LP is a liquid. As pressure is released from the tank, the liquid readily vapourises and becomes gas.

Safe handling tips for ULPG cylinders

There are important guidelines and safety considerations to follow when using propane gas. Read and follow these instructions before using your gas barbecue.

- Do not use a damaged cylinder. A dented or rusty cylinder, or a cylinder with a damaged valve, may be hazardous and must be replaced immediately.
- Handle empty cylinders with the same care as you would full ones. Even when empty of liquid, they may still contain gas under pressure.
- Do not drop or handle cartridges or cylinders roughly.
- Never store or transport the cylinder where temperatures may reach 51°C (the cylinder will become too hot to hold by hand). For example, do not leave the cylinder in a vehicle on a hot day.
- Check that seals between the appliance and the gas container are in place and in good condition before connecting the gas container.
- Do not use this appliance if it has damaged or worn seals.
- Do not use this appliance if it is leaking, damaged or not operating properly.
- Perform a leak test at the connection between the regulator and the cylinder each time it is reconnected. For example, test each time the cylinder is reinstalled.
- Store cylinders outdoors in a well-ventilated area out of the reach of children. Any indoor storage must comply with AS/NZS 1596.
- Do not connect to natural gas supply. The valves and orifices are designed exclusively for ULPG.
- Keep the area around the cylinder clear and free from debris.
- The cylinder must be changed in a well-ventilated location, preferably outdoors and away from people and sources of ignition, such as naked flames, pilot lights, electric heaters/equipment.
- To check for gas in the cylinder, gently shake the container. The presence of liquid fuel may be heard or felt.

Additional tips for cylinders

- Always close the cylinder valve before disconnecting the cylinder from the adapter hose.
- Cylinders must be installed, transported, and stored in an upright position.
- Routinely check the cylinder to ensure the test date has not expired. Do not use a cylinder which has an expired test date.

What is a regulator?

Your gas barbecue is equipped with a pressure regulator. This device controls and maintains a consistent gas pressure as gas is released from the gas cylinder.

△ IMPORTANT: This appliance shall only be used in an above ground open-air situation with natural ventilation, without stagnant areas, where gas leakage and products of combustion are rapidly dispersed by wind and natural convection.



GETTING STARTED

Regulator connections

Requirements for cylinders

- Any parts sealed by the manufacturer must not be altered by the user.
- Any modification of the appliance may be dangerous.

Additional requirements for cylinders

- Avoid kinking the hose.
- Replace the flexible hose in accordance with national regulations.
- Only a nationally approved low-pressure hose and regulator must be used.
- Replacement regulator and hose assemblies must be as specified by Weber-Stephen Products LLC.

ULPG Cylinder Installation

When using the gas hose, ensure it is routed away from the cookbox and other hot surfaces.

Only use the hose assembly as supplied with this appliance for connection to the cylinder - DO NOT USE ADAPTORS.

Cylinder requirements

- Use cylinders with a maximum capacity of 9 kg.

Inspect the cylinder

Before use, check the ULPG cylinder to ensure a proper gas connection.

- Confirm that the ULPG cylinder valve is fully closed by turning valve clockwise.
- Inspect the ULPG cylinder valve for damage or debris. Pay particular attention to the condition of the internal O-ring (A). If damaged, return ULPG cylinder to a local retailer.
- Confirm that the ULPG cylinder valve is the correct mating type for the gas hose (B).





Cylinder installation

- Place the ULPG cylinder on the ground behind the barbecue or on the barbecue stand.
- Position the ULPG cylinder so that the valve opening faces the side or back of the barbecue.

Connect the gas hose to the cylinder

- Ensure all burner control knobs are in the off O position by pushing in and turning clockwise.
- Connect the gas hose coupling to the ULPG cylinder. Hand tighten only.
 - Tighten by turning the fitting clockwise (C).

Cylinder Connection

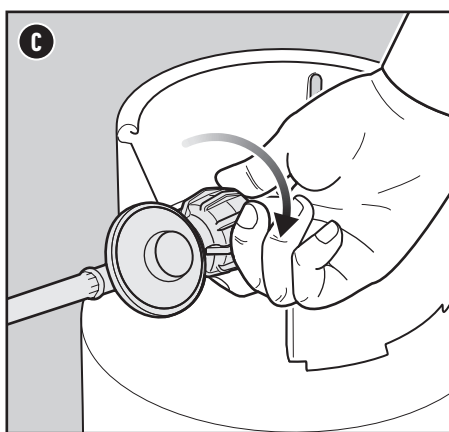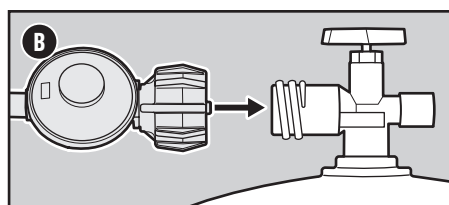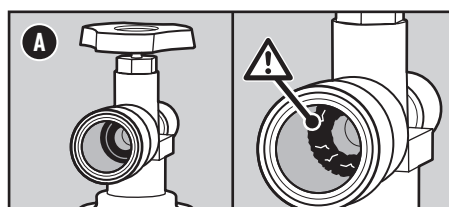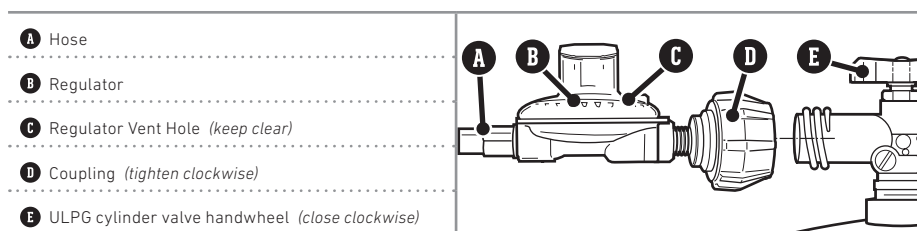

ULPG Cylinder Installation Using the Premium Cart

This feature is only available on select models.

⚠ While using the Premium Cart, the cylinder must be secured inside the cabinet.

Cylinder requirements



- Use cylinders with a maximum capacity of 9 kg.

Cylinder installation

- Open the door of the Premium Cart.
- Lift cylinder into position inside the cabinet (D).
- Position the ULPG cylinder so that the valve opening faces the inside of the barbecue cabinet.
- Secure the cylinder by tightening the hand wheel on the base of the cart (E).

Connect the gas hose to the cylinder

- Ensure the burner control knobs are in the off O position by pushing in and turning knobs clockwise.
- Connect the gas hose coupling to the ULPG cylinder. Hand tighten only.
 - Tighten by turning the fitting clockwise (C).

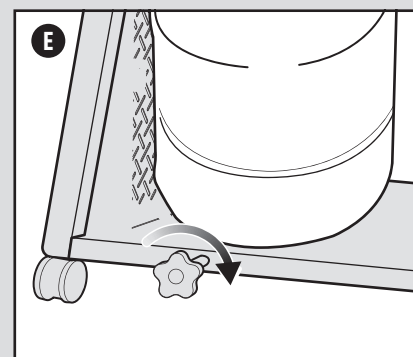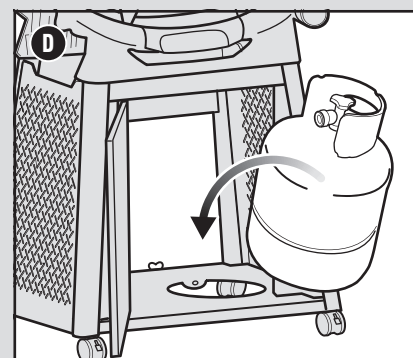

Burner Valve Orifice Sizes & Consumption Data

Gas Category	BURNER VALVE ORIFICE SIZES		
2.8 kPa	1000N/1200N	2000N/2200N	
	Main Burner 0.93 mm	Main Burner 1.07 mm	
	2600N+/2800N+	3100N+/3200N+	
	Main Burner 1.09 mm	Main Burner 1.23 mm	
	Sear Burner 0.58 mm	Sear Burner 0.58 mm	
	TOTAL CONSUMPTION DATA		
1000N/1200N	2000N/2200N	2600N+/2800N+	3100N+/3200N+
10.6 MJ/h	14.8 MJ/h	19.0 MJ/h	23.2 MJ/h

⚠ WARNING: It may be hazardous to attempt to fit other types of gas containers.

⚠ IMPORTANT: We recommend that you replace the gas hose assembly on your gas barbecue every five years. Some countries may have requirements that the gas hose be replaced within less than five years, in which case that country's requirement would take precedence.

For replacement hose, regulator, and valve assemblies, contact the Customer Service Representative in your area using the contact information on our web site. Visit weber.com.

⚠ This appliance is not suitable for installation or connection to a reticulated gas supply.



Conducting a Leak Check

Once the ULPG cylinder is properly installed, it is necessary to perform a leak check. A leak check is a reliable way to verify that gas is not escaping after you connect the ULPG cylinder. WEBER recommends performing a thorough leak check after assembly, as well as annually. The following fittings should be tested:

- Where the cylinder connects to the regulator.
- Where the regulator connects to the gas hose.
- Where the gas hose connects to the burner valve.

Checking for gas leaks

If there is a leak from your appliance (smell of gas) immediately attempt to turn off the cylinder valve. Move the appliance to a well-ventilated location away from any ignition sources. Check for leaks using soapy water. Do not try to detect leaks using a flame.

- 1) Ensure burner control knob/s are turned off by pushing in and turning clockwise to the off  position.
 - 2) Wet fittings (A) with a soap and water solution, using a spray bottle, brush, or rag. You can make your own soap and water solution by mixing 20% liquid soap with 80% water; or, you can purchase leak check solution in the plumbing section of any hardware store.
 - 3) Slowly open gas supply by turning cylinder valve anti-clockwise while checking for bubbles.
 - 4) If bubbles appear there is a leak:
 - a) If the leak is at the cylinder (B), turn off the gas. Disconnect the regulator, then reconnect and test. If the leak persists **DO NOT OPERATE THE BARBECUE**. Disconnect the ULPG cylinder. Contact the Customer Service Representative in your area using the contact information on our website.
 - b) If the leak is at regulator (C), or at the fitting indicated in illustration (D), **DO NOT OPERATE THE BARBECUE**. Contact the Customer Service Representative in your area using the contact information on our website.
- If a leak is present, contact the Customer Service Representative in your area using the contact information on our website.
- 5) If bubbles do not appear, leak checking is complete:
 - a) Turn gas supply off at the ULPG cylinder and rinse connections with water.

NOTE: Since some leak test solutions, including soap and water, may be slightly corrosive, all connections should be rinsed with water after checking for leaks.

Refilling or Replacing an ULPG Cylinder

Removing the ULPG cylinder

Every time your ULPG cylinder needs to be refilled or replaced, follow these instructions to remove it.





- 1) Confirm that the cylinder valve is fully closed. Close by turning valve clockwise.
- 2) Unscrew gas hose coupling from the cylinder.

Additional leak check precautions

The following fittings should be tested for gas leaks each time an ULPG cylinder is refilled and reinstalled:

- Where the regulator connects to the cylinder (B) and at the regulator (C).

Follow the instructions for "Checking for Gas Leaks".

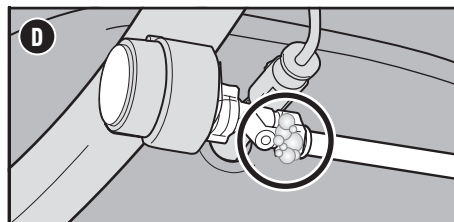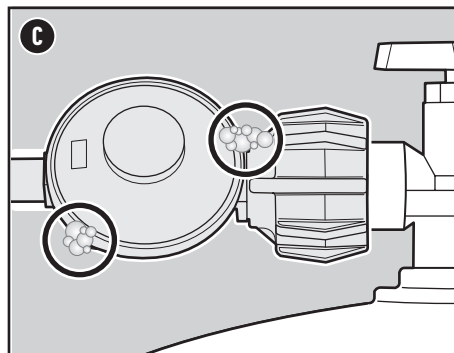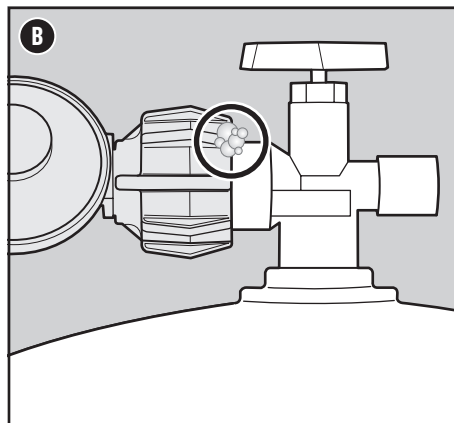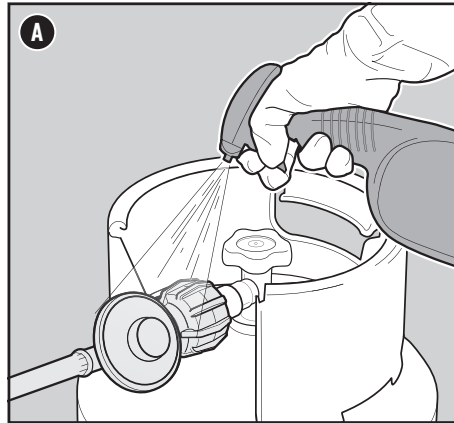

Regulator Flow Limiting Reset Guide.

The regulator is fitted with a flow limiting device.

How the flow limiting device works?

The gas must be pressurised prior to ignition. If the hose is not properly pressurised this may indicate a leak and the flow limiting device will activate. When activated, gas flow through the regulator is reduced resulting in a low flame or no flame.

Always ensure the control knobs are in the off position before turning on the gas cylinder. The flow limiting device will activate if the burner control knobs are in the ON position before the gas cylinder is turned on.

The flow limiting device may also activate if ignition is attempted too soon after opening the gas cylinder, before the gas hose has fully pressurised.

The flow limiting device will also activate if there is a gas leak in the hose. Follow the instructions for checking for a gas leak on page 5.

How to reset the regulator flow limiting device

- 1) Turn all burner control knob(s) to the OFF position. (There is no need to turn off the gas cylinder.)
- 2) Wait 30 seconds.
- 3) Open the barbecue lid.
- 4) Ignite the barbecue according to the lighting instructions on page 6.

If the flow limiting device does not reset, this may indicate a gas leak. Turn off the gas cylinder by turning valve anticlockwise. **DO NOT OPERATE THE BARBECUE**. Contact the Customer Service Representative in your area using the contact information on weber.com.

NOTE: Always turn the barbecue control knob(s) off before turning off the gas cylinder.

⚠ DANGER: Do not use a flame to check for gas leaks. Be sure there are no sparks or open flames in the area while you check for leaks.

⚠ DANGER: Leaking gas may cause a fire or explosion.

⚠ DANGER: Do not operate the barbecue if there is a gas leak present.

⚠ DANGER: If you see, smell, or hear the hiss of gas escaping from the cylinder:

1. Move away from cylinder.
2. Do not attempt to correct the problem yourself.
3. Call the emergency fire services.

⚠ DANGER: Always close the cylinder valve before disconnecting the regulator. Do not attempt to disconnect the gas regulator and hose assembly or any gas fitting while this barbecue is in operation.

⚠ DANGER: Do not store a spare cylinder under or near this barbecue. Never fill the cylinder beyond 80% full. Failure to follow these statements exactly may result in a fire causing death or serious injury.



OPERATION

Igniting the Barbecue

Using the ignition system to ignite the barbecue

The ignition system ignites the burner/s with a spark from the igniter electrode. You generate the energy for the spark by pushing the igniter button.

- 1) Open the barbecue lid (A).
- 2) Ensure the burner control knobs are in the off ○ position by pushing them in and turning clockwise (B).
- 3) Confirm that the cylinder is properly installed and gas is on. Refer to "ULPG Cylinder Installation."
- 4) Push the main burner control knob in and turn it counterclockwise to the start/high ⚡ position (C).
- 5A) Push the red igniter button several times, so it clicks each time (D).
- 5B) Push and hold the electronic igniter button (E). You will hear it ticking.
- 6) Check that the burner is lit by looking through the cooking grills. You should see a flame.
- 7) If the burner does not ignite within 5 seconds, turn burner control knob to the off ○ position and wait five minutes to allow the gas to clear before attempting to light the burner again.

Should the burner fail to ignite using the ignition system, refer to the TROUBLESHOOTING section. There you will find instructions on igniting the barbecue with a match to help determine the exact problem.






Preheating the barbecue

Preheating the barbecue is essential to successful barbecuing. It helps to prevent food from sticking to the grills, heats the grills enough for proper searing, and burns off any residue from the previous meal.


- 1) Open the barbecue lid.
- 2) Ignite your barbecue according to the ignition instructions above.
- 3) Close lid.
- 4) Preheat the barbecue with the burner/s on the start/high ⚡ position for 10 to 15 minutes or until thermometer registers 260°C (500°F) (C).
- 5) After preheating on high is complete, you may adjust the burner control knob to your desired setting for barbecuing.

To extinguish burner

- 1) Push the burner control knob in and then turn clockwise all the way to the off ○ position.
- 2) Turn gas supply off.

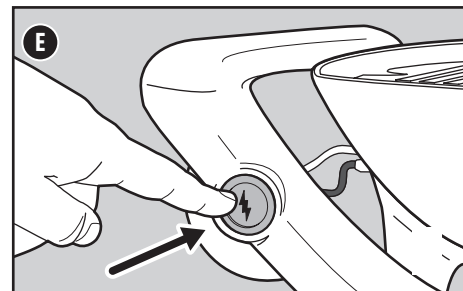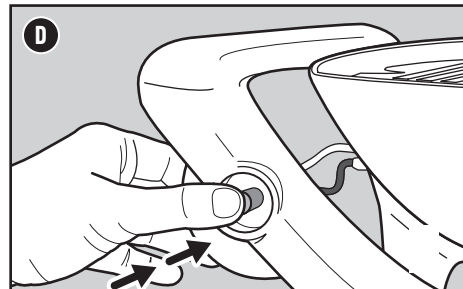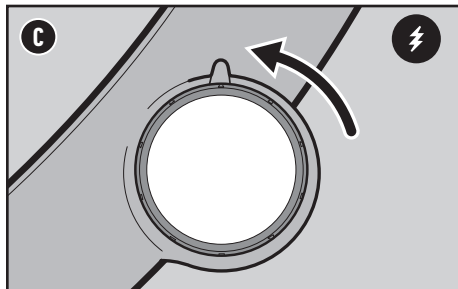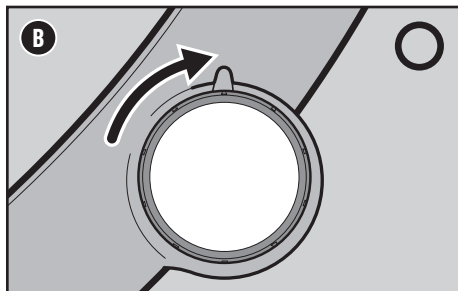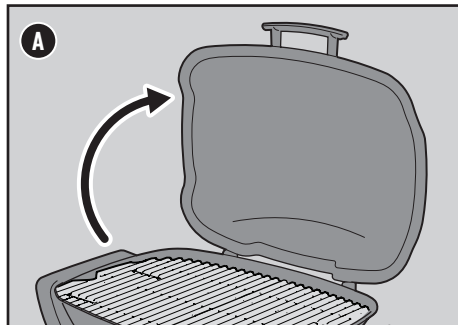

Burner Control Knob Settings

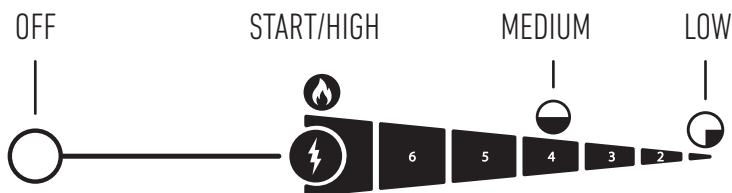

⚠ WARNING: Open lid during ignition.

⚠ WARNING: Do not lean over open barbecue while igniting or cooking.

⚠ WARNING: If ignition does not occur within five seconds, turn the burner control knob to the off position. Wait five minutes to allow accumulated gas to dissipate, and then repeat the lighting procedure.



Using the + burner

This feature is only available on select models.

The + burner provides the versatility of searing food at a high temperature when combined with the main burner, or low and slow cooking when used on its own.

Lid-down cooking on HIGH not to exceed 20 minutes or 288°C.

SEARING

- 1) Open the lid and ignite both burners, including the + burner (A). Begin by igniting the main burner first

IMPORTANT: Always ignite the main burner first. The + burner ignites from the main burner.

Refer to "Igniting the Barbecue".

- 2) Preheat the barbecue with the lid closed and with all burners on the high 🔥 position for 10 to 15 minutes, or until the thermometer registers 260°C (500°F).
- 3) After preheating, leave the + burner control knob and the main burner control knob in the high 🔥 position. The + burner works in tandem with the main burner (B).
- 4) Place food directly over the + burner and close lid. Refer to the cooking instructions provided in the User and Recipe Guide for your barbecue.

LOW AND SLOW

- 1) Open the lid and ignite both burners, including the + burner. Begin by igniting the main burner first

IMPORTANT: Always ignite the main burner first. The + burner ignites from the main burner.


Refer to "Igniting the Barbecue".

- 2) Refer to the cooking instructions provided in the User and Recipe Guide for your barbecue, found on weber.com.

Note: Always cook with the lid closed to achieve maximum heat and to avoid flare-ups.

To extinguish burner/s

- 1) Push the burner control knob/s in and then turn clockwise all the way to the off ○ position.
- 2) Turn gas supply off.

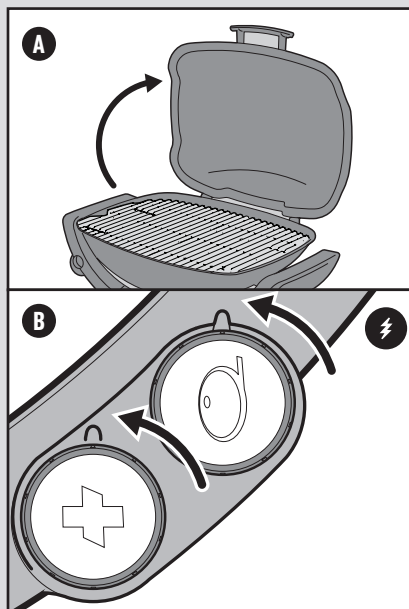



FEATURES

Complete List of Features

The features listed below are only available on select models.



Side Tables

Use the side tables to keep platters, seasonings, and tools within arm's reach. Hang essential barbecuing tools on the hooks for easy access and organization of your outdoor workspace. Stow the tables for convenience.

+ Burner

The + Burner is designed for dual cooking modes: Create an intense heat zone to quickly add sear marks to your food when used in conjunction with the main burner, or use the + Burner on its own for low and slow cooks.

Front-Facing Grease Tray

Provides easy access and cleanup.

Porcelain-enamelled, Cast Iron Cooking Grills

Allows for even heat distribution and superior heat retention.

WEBER CONNECT Compatible

Provides space for the WEBER CONNECT Smart Barbecue Hub, allowing you to monitor food from beginning to end and view real-time temperature on your mobile device. (Accessory sold separately.)

Premium Cart

The sleek premium cart provides easy access to your barbecuing tools and accessories. Hang cooking grills and accessories conveniently on the rear storage hooks for organised storage.

High-Domed Lid

Provides ample space to cook bigger roasts and meals.


WEBER CONNECT compatible

This feature is only available on select models.

These integrated design features support an additional compatible WEBER CONNECT Smart Barbecue Hub thermometer device. (Accessory sold separately.)


Ambient probe location

Clip an ambient temperature probe onto the integrated supports inside the lid to measure the barbecue's temperature during cooking.

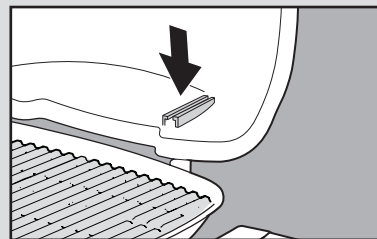

Probe holders

Convenient storage on the rear frame for holding compatible thermometer probe wraps.

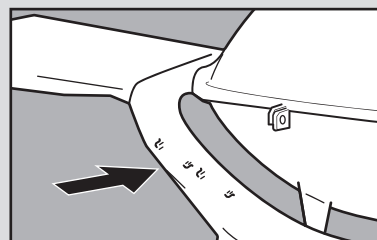



Cooking grill storage

This feature is only available on select models.

Safely stow cooking grills on the back of the premium cart to free up space in the cookbox for WEBER Q accessories (Accessories sold separately).

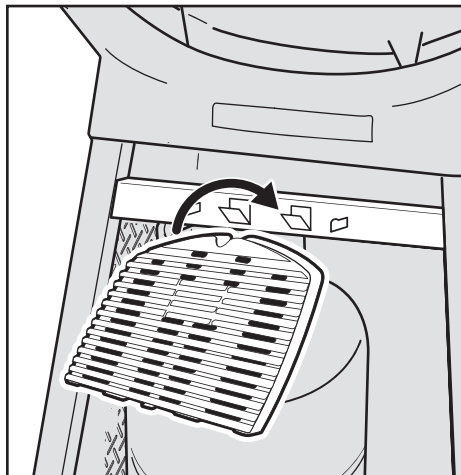


Table storage

Stow both side tables for convenient transport and space saving when not in use. Depending on the model, the side tables can either be removed and stored beneath the cookbox or folded down along the side of the barbecue stand.

Removable tables

This feature is only available on select models.


Pull side tables from mounted position and store them beneath cookbox.



Fold-down tables

This feature is only available on select models.

Pull side tables out to unlock and fold them down to the side.

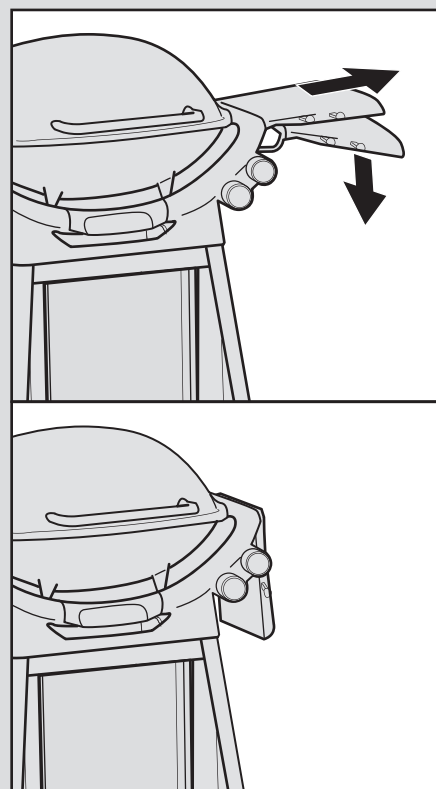



PRODUCT CARE

Cleaning and Maintenance

Cleaning the inside of the barbecue

Over time, the performance of your barbecue can diminish if it has not been maintained properly. Low temperatures, uneven heat, and food sticking to cooking grills are all signs that cleaning and maintenance are overdue.

A thorough cleaning is recommended before storing the barbecue, or at least twice a year. Consistent use may require quarterly cleanings. When your barbecue is off and cool, start by cleaning the inside, from the top down.

Cleaning the lid

From time to time you may notice "paint-like" flakes on the inside of the lid. During use, grease and smoke vapours slowly convert into carbon and deposit on the inside of the lid. These deposits may eventually peel, and resemble paint. They are non-toxic, but the flakes could fall onto your food if the lid is not cleaned regularly.

- 1) Brush the carbonised grease from the inside of the lid with a Weber Grill Brush (A). To minimise further build-up, wipe the inside of the lid with paper towel after barbecuing while the barbecue is still warm (not hot).

Cleaning the cooking grills

If you have been cleaning your cooking grills, as recommended, debris should be minimal.

- 1) With cooking grills installed, brush the debris off using a Weber Grill Brush (B).

Cleaning the burner






Two areas on the burner/s that are key to optimum performance: the ports (small openings running along the length of the burner/s) and the spider/insect screens on the ends of the burner/s. Keeping these areas clean is essential for safe operation.

Cleaning the burner ports

- 1) Remove the cooking grills and set aside.
- 2) Use a clean Weber Grill Brush to clean the outside of the burners by brushing across the top of the burner ports (C). Do not brush lengthwise along the tube, as this will only move debris from one port to another.
- 3) When cleaning, avoid damaging the ignition electrode by carefully brushing around it.

Cleaning the spider screens

- 1) Locate the end of the burner/s behind the control panel, where it meets the valve.
- 2) Remove the screw from the top of the rain shield. Then remove the rain shield from the burner tube (on select models only) (D).
- 3) Clean the spider/insect screen on the burner using a soft-bristle brush (E).
- 4) Reinstall the rain shield over the end of the burner tube and secure it with screw.

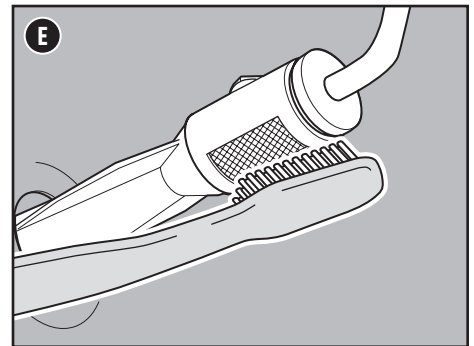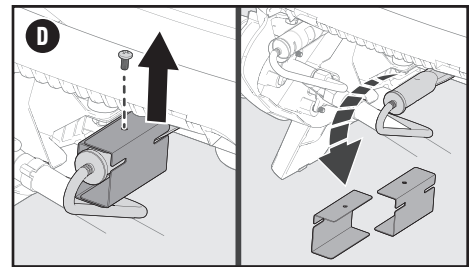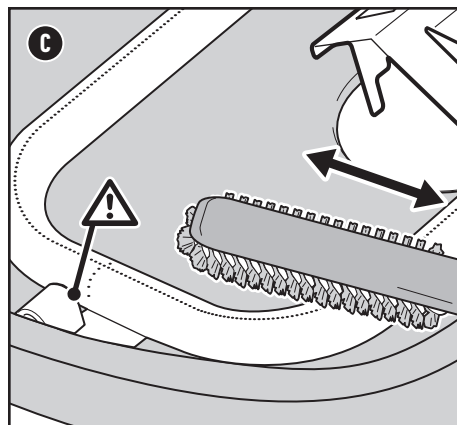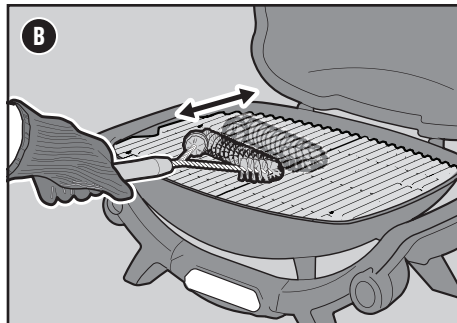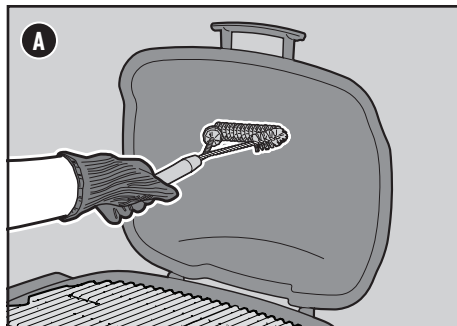


- ⚠ **DANGER:** Do not line the slide-out catch pan or cookbox with aluminum foil.
- ⚠ **DANGER:** Check the slide-out catch pan for grease build-up before each use. Remove excess grease to avoid a grease fire.
- ⚠ **WARNING:** Use caution when removing slide-out catch pan and disposing of hot grease.
- ⚠ **WARNING:** Use heat-resistant barbecue mitts or gloves when operating barbecue.
- ⚠ **WARNING:** Barbecue brushes should be checked for loose bristles and excessive wear on a regular basis. Replace brush if any loose bristles are found on cooking grills or brush. WEBER recommends purchasing a new Weber Grill Brush regularly.
- ⚠ **WARNING:** Keep ventilation openings around cylinder clear and free of debris.



Cleaning the cookbox

Check the inside of the cookbox for any grease accumulation or leftover food particles. Excessive build-up can cause a fire.

- 1) Remove the cooking grills and set aside.
- 2) Use a plastic cookbox scraper to remove debris from the sides and bottom of the cookbox, directing it into the opening at the bottom of the cookbox (F). This opening leads debris to the slide-out catch pan.
- 3) Some models include a heat deflector that sits in the bottom of the cookbox. Clean it using a plastic scraper, or remove it for washing with hot, soapy water. After cleaning, ensure the heat deflector is properly seated over the opening in the bottom of the cookbox.

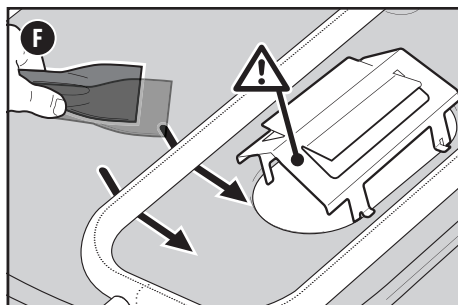

Cleaning the grease management system

The grease management system consists of a slide-out catch pan and a disposable drip tray (G). These components are designed to be easily removed, cleaned, and replaced - an essential step before each use.

Cleaning the outside of the barbecue


The exterior of your barbecue may include stainless steel, painted aluminium, and plastic surfaces. WEBER recommends the following methods based on the surface type.

Cleaning painted aluminium surfaces and plastic components

Clean painted aluminium and plastic components with warm, soapy water using a cloth or paper towels. After cleaning, rinse and dry thoroughly.

Cleaning the outside of barbecues that are in unique environments

If your barbecue is exposed to harsh conditions, more frequent cleaning is recommended. Acid rain, pool chemicals, and salt water can cause surface rusting to form. Clean the exterior with warm, soapy water, then rinse and dry thoroughly.

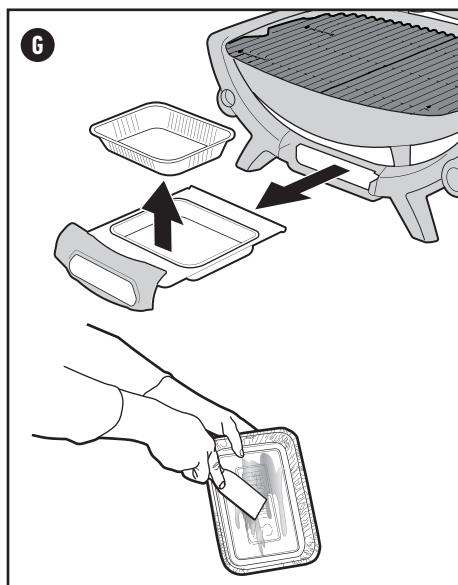

⚠ **WARNING:** Turn your barbecue off and wait for it to cool before thoroughly cleaning.




⚠ **WARNING:** When cleaning the burners, never use a brush that has already been used to clean the cooking grills. Never put sharp objects into the burner port holes.

⚠ **CAUTION:** Do not use any of the following to clean your barbecue: abrasive stainless steel polishes or paints, cleaners that contain acid, mineral spirits or xylene, oven cleaner, abrasive cleansers (kitchen cleansers), or abrasive cleaning pads.

Proper burner flame pattern


The burner in your barbecue is factory set for the correct air and gas mixture. When the burner is operating correctly, a specific flame pattern will be visible. The flame tips may occasionally flicker yellow (A), with a descending light blue (B) to dark blue flame (C).

⚠ **WARNING:** Blocked or dirty ports can restrict full gas flow, resulting in a fire (D) in and around the gas valves, causing serious damage to your barbecue.

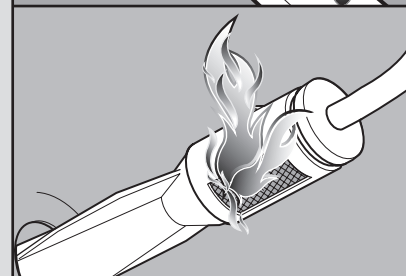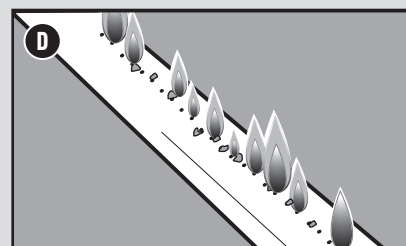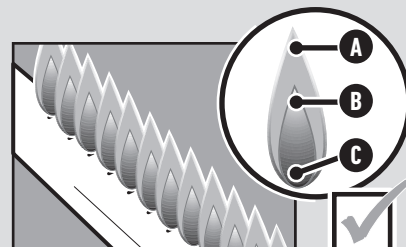

Spider screens

The combustion air openings of the burners (E) are fitted with stainless steel screens to prevent spiders and other insects from spinning webs and building nests inside the burners. Dust and debris can also accumulate on the outside of the spider/insect screen/s, restricting airflow to the burners.

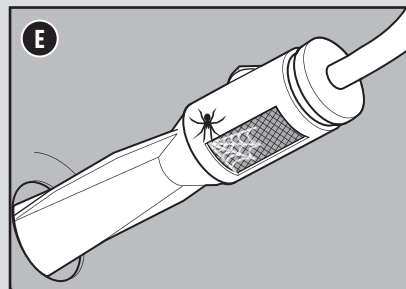

⚠ **WARNING:** Do not attempt to make any repair to gas carrying, gas burning, ignition components or structural components without contacting Weber-Stephen Products LLC, Customer Service Department.


⚠ **CAUTION:** The burner tube openings must be positioned properly over the valve orifices.

Inspect the hose

Routine inspection of the hose is necessary.

- 1) Confirm that the barbecue is off and cool.
- 2) Check the hose for any signs of cracking, abrasions, or cuts (H). If the hose is damaged in any way, do not use the barbecue.

⚠ **WARNING:** If the hose is found to be damaged in any way, do not use the barbecue. Replace using only WEBER authorised replacement hose.

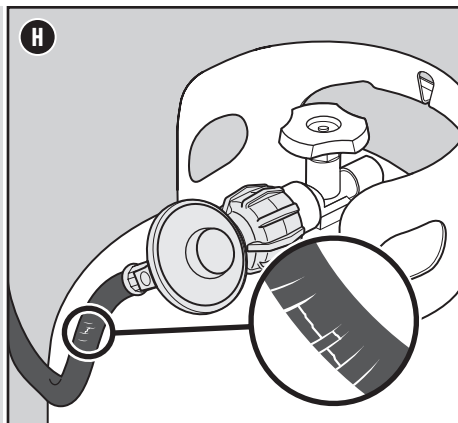



TROUBLESHOOTING

Barbecue Will Not Ignite



SYMPTOM

- Burner/s do/es not ignite when following the ignition instructions in the “Operation” section of this Owner's Manual.

CAUSE	SOLUTION
There is a problem with gas flow.	If the barbecue does not ignite, first determine whether gas is flowing to the burner/s. To check this, follow the instructions below for “Using a match to determine if there is gas flow to the burner/s.” If match lighting IS NOT successful , follow the instructions for disconnecting and reconnecting the ULPG cylinder.
There is a problem with the ignition system.	If the barbecue does not ignite, first determine whether gas is flowing to the burner/s. To check this, follow the instructions below for “Using a match to determine if there is gas flow to the burner/s.” If match lighting IS successful , check the condition of the battery (electronic ignition systems only) and check the wire connections of the Ignition System.

Using a match to determine if there is gas flow to the burner/s

- 1) Open the barbecue lid.
- 2) Ensure the burner control knob is/are in the off $\bigcirc$ position by pushing in and turning clockwise.
- 3) Confirm that the cylinder is properly installed and gas is on. Refer to “ULPG Cylinder Installation.”
- 4) Strike a match and place the flame under the matchlight hole (A).
- 5) While holding the lit match, push the main burner control knob in and turn it counterclockwise to the start/high I position.
- 6) Check that the burner is lit by looking through the cooking grills.
- 7) If the burner does not ignite within 5 seconds, turn the burner control knob to the off $\bigcirc$ position and wait five minutes to allow the gas to clear before attempting to light the burner again.
- 8) If the burner ignites, the problem is with the ignition system. For piezo igniters, check the wire connections of the ignition system (B). For electronic ignition systems, check the condition of the battery and the wire connections of the ignition system (C). Verify that the AAA battery (alkaline only) is in good condition and installed correctly. Some batteries have a plastic protective wrap that must be removed before installation. Do not confuse this plastic with the battery label.

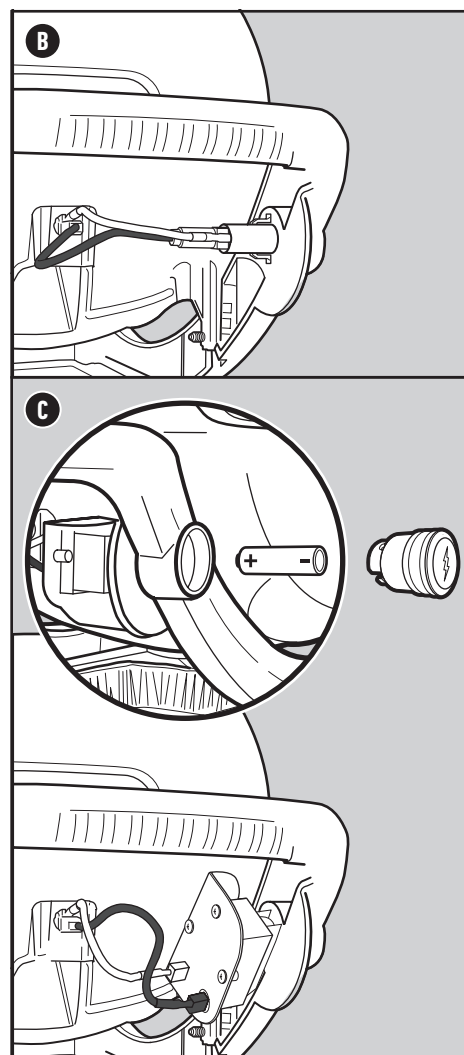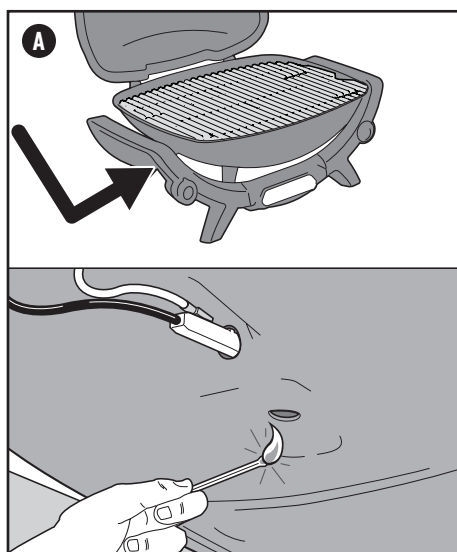

REPLACEMENT PARTS

To obtain replacement parts,
contact Weber ANZ customer service
or visit weber.com.

Australia: 1300 301 290
New Zealand: 0800 493 237

CALL CUSTOMER SERVICE


If you are still experiencing any problems,
contact Weber ANZ customer service
or visit weber.com.

Australia: 1300 301 290
New Zealand: 0800 493 237


REPLACEMENT PARTS



01000N LP-G - AU/NZ - 122822

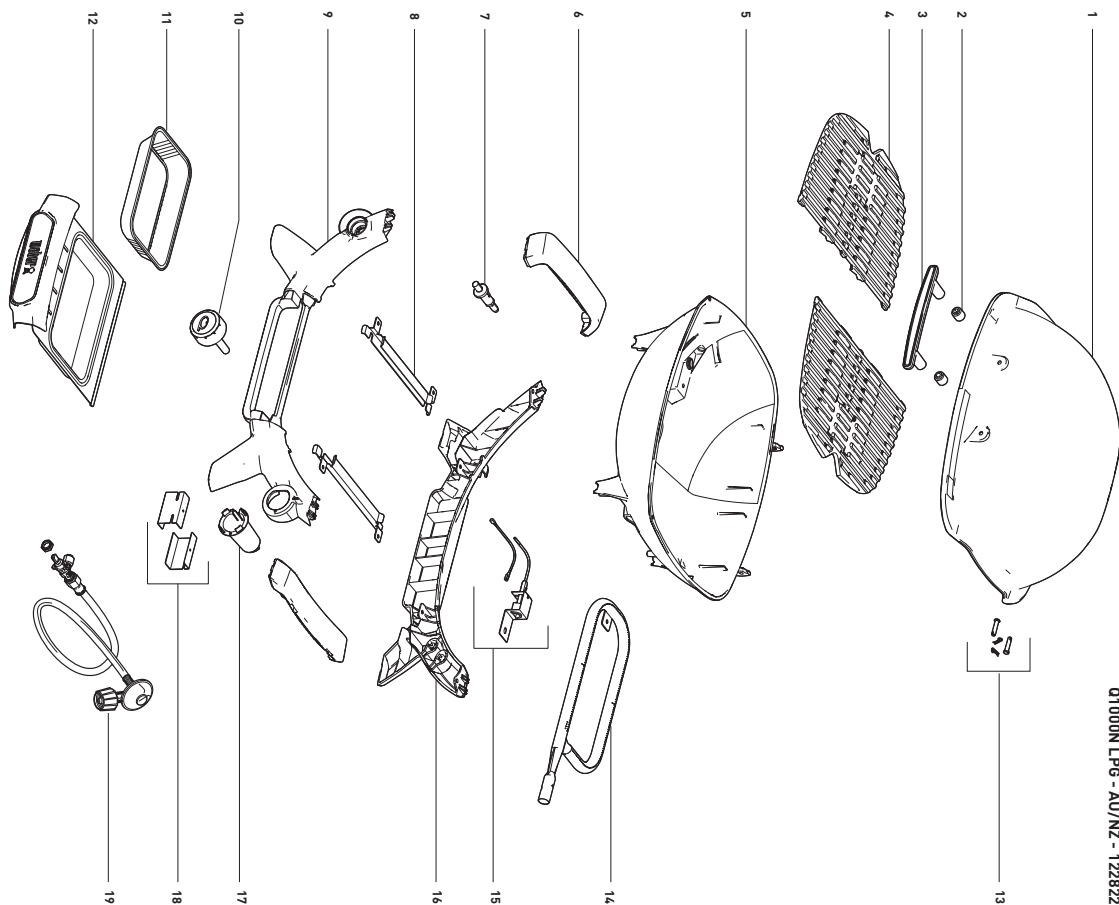


01 200N LP-G - AU/NZ - 122822


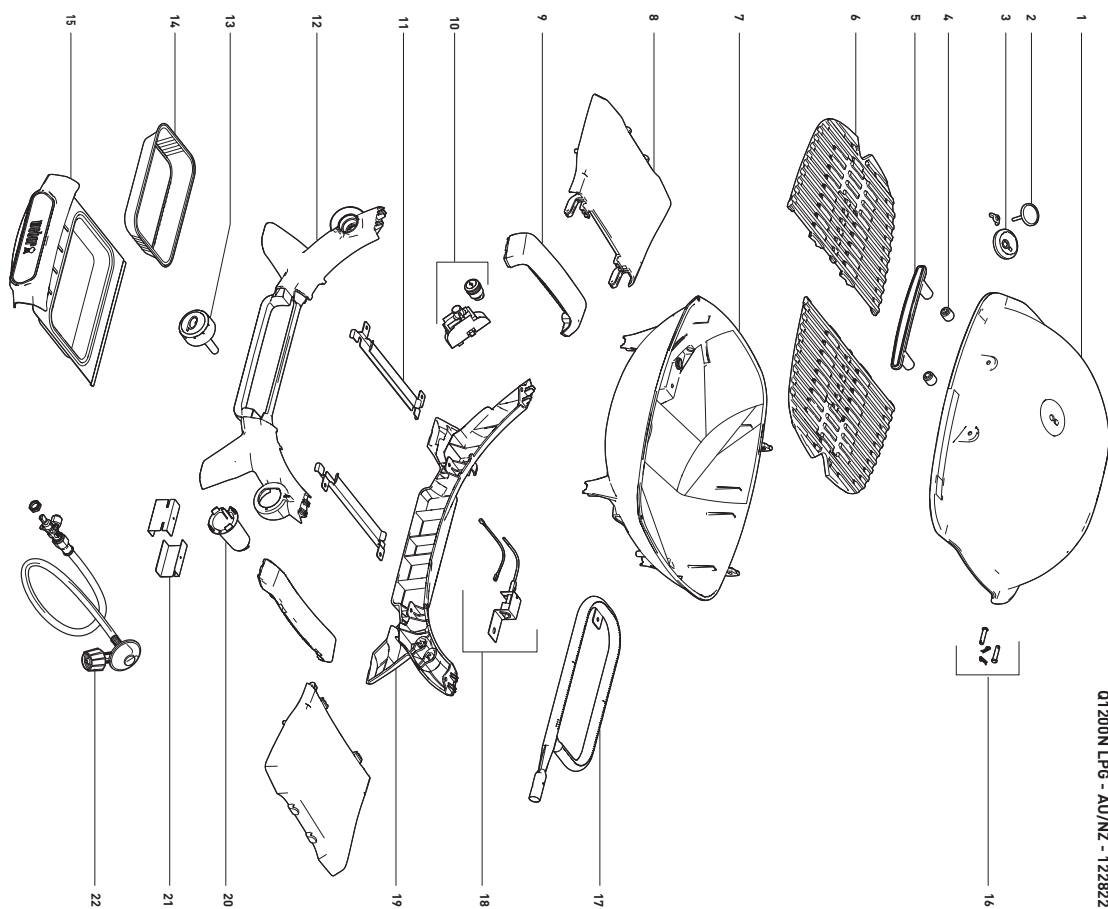




Q2000N LPG - AU/NZ - 122822

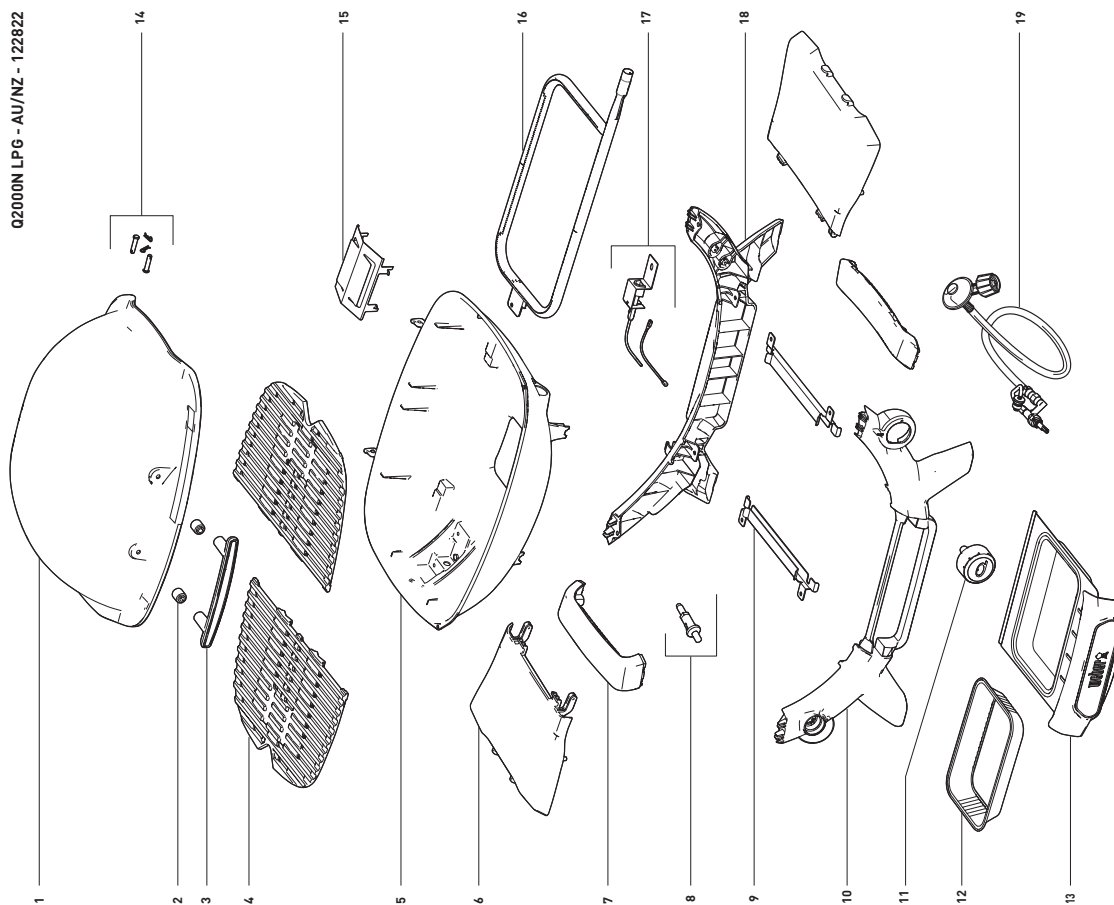


REPLACEMENT PARTS

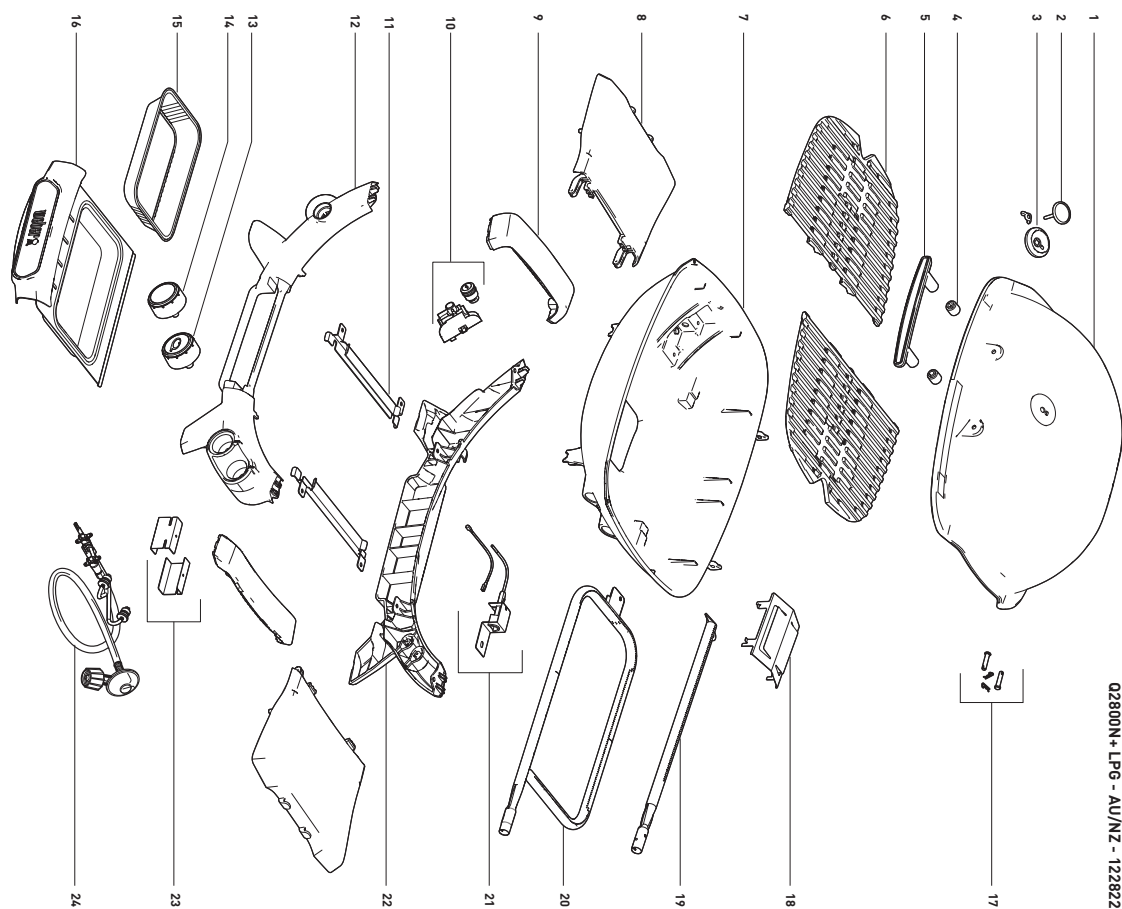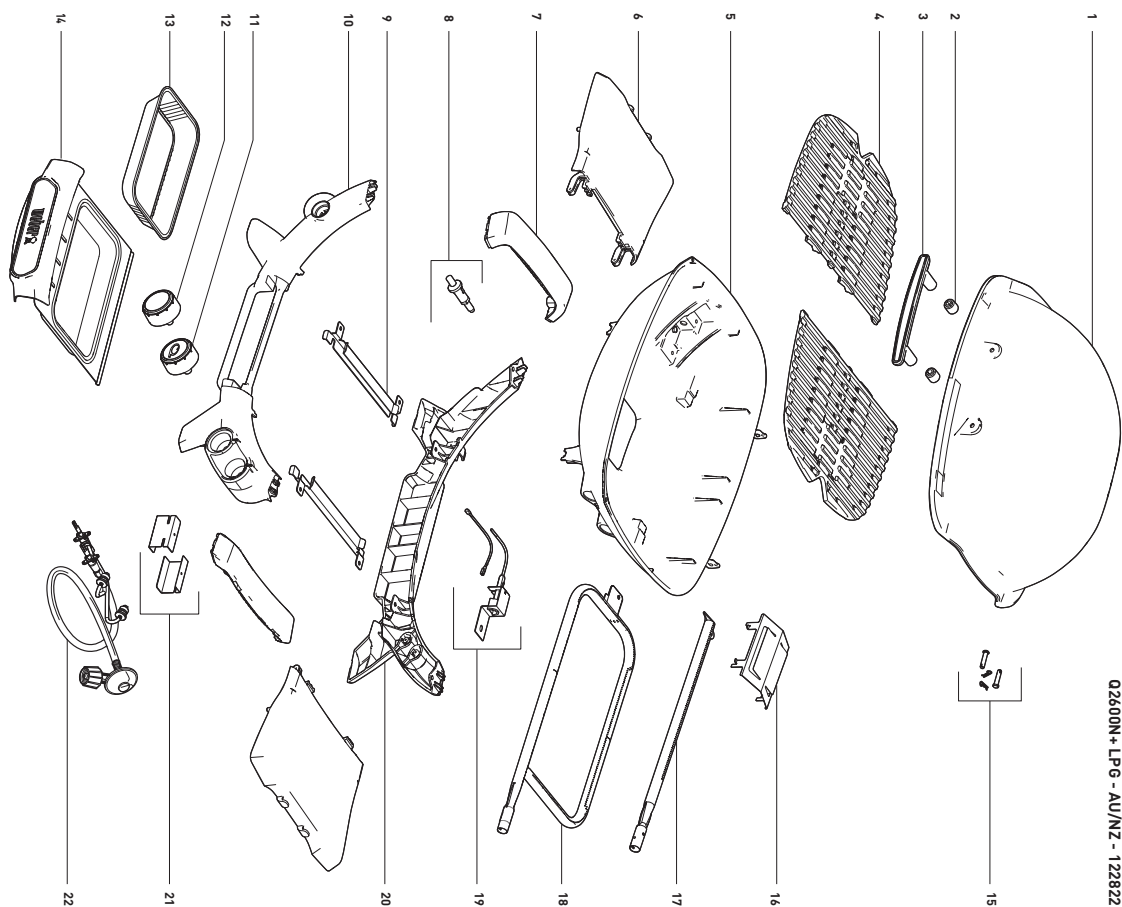



REPLACEMENT PARTS

Q3100N+ LPG - AU/NZ - 122025

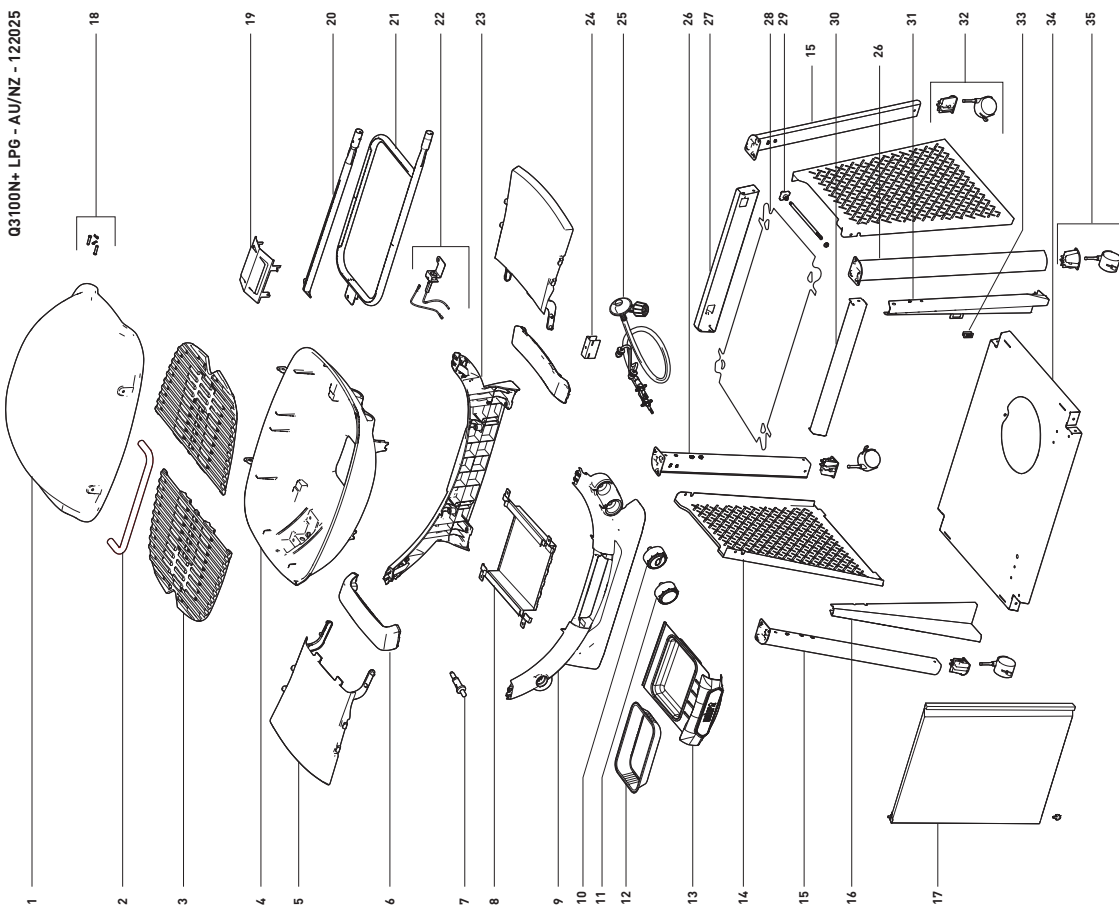

Weber-Stephen Products Co (Australia) Pty Ltd.
Level 1, 142-144 Fullarton Road
ROSE PARK SA 5067 AUSTRALIA
1300 301 290 | www.weber.com

Weber-Stephen Products New Zealand
25B O'Rourke Road
Penrose, Auckland 1061 NEW ZEALAND
0800 493 237 | www.weber.com