



Congratulations on your purchase!
Thank you for choosing a Sirius product.

SL906 OFFBOARD series

UNDERMOUNT RANGEHOOD INSTALLATION INSTRUCTIONS

SL906EM-L 520
SL906EM-L 850
SL906EM-L 1000
SL906EM-L 1200

EAN #9351116000646
EAN #9351116000691
EAN #9351116000769
EAN #9351116000790





BEFORE YOU INSTALL – please read

Sirius warranty covers only Sirius product. If you choose to install a non-Sirius branded accessory such as flexible ducting, Sirius will only warrant the hood and motor. If installation is found to be the cause of failure or issue then charges will apply for service and parts.

Flexible ducting is not permitted under any circumstances. Flexible ducting has been found to increase noise levels, increase vibration and reduce airflow.

Sirius Semi-rigid or solid ducting can be used in lieu.

There is a range available to suit any application.



 
The appliance must be installed and connected to the power supply only by a qualified technician.

- There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels (not applicable to appliances that only discharge the air back into the room)
- The details concerning the method and frequency of cleaning
- There is a fire risk if cleaning is not carried out in accordance with the instructions;
- Do not flambé under the **range hood**;
- CAUTION: Accessible parts may become hot when used with cooking appliances.

Ducting available at www.siriusbrand.com

A reduction in the duct diameter from stated ducting size will void warranty.

If you are in doubt about the ducting, please contact Sirius on 1300 762 219 prior to installation

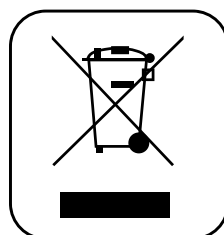


The symbol on the product or on its packaging indicates that this product may not be treated as house-hold waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. This appliance is marked according to the European directive 2002/96/EC on waste electrical and electronic equipment (WEEE).




Min. 600mm - Max. 700mm for electric cooktops.
Min. 650mm - Max. 750mm gas cooktops.

 
If the rangehood is positioned above the max height recommended, warranty may be compromised as performance of the rangehood will be affected. Measurement is taken from the top of the trivets to the underside of the hood. (Fig. 1)

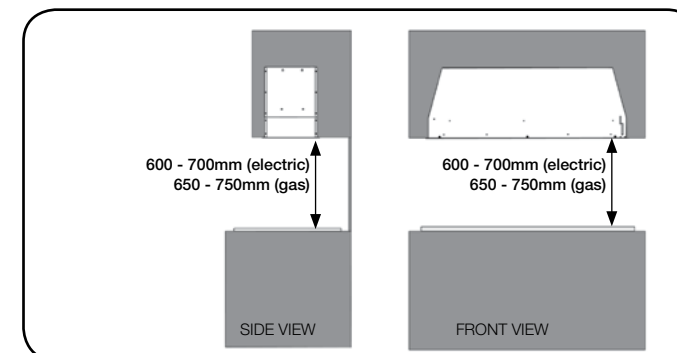

(Fig. 1)

- The air being drawn can't be conveyed through or into a duct used to let out fumes from appliances fed by energy other than electric power (eg. centralized heating, radiators, water heaters, etc.).
- Attention: remove any possible PVC film from the stainless steel, including the filters.
- To externally vent, please comply with the pertaining rules given by competent authorities.
- Provide the room with an adequate ventilation when a rangehood and appliances fed by energy other than electric power (gas, oil, or coal stoves, etc.) are used simultaneously. The rangehood, when evacuating the air, could generate a negative pressure in the room which can't exceed the limit of 0.04 mbar, in order to avoid the suck of exhausts deriving from the heat source. Therefore the room should be provided with air intakes to allow a constant flow of fresh air.

If the rating label in the rangehood shows the symbol , the appliance is built in class II° and it **does not need** any earth connection.

If the rating label in the rangehood does not show the symbol , the appliance is built in class I° and it **needs** the earth connection.

When performing the electrical connections on the appliance, please make sure that the current-tap is provided with earth connection and that voltage values correspond to those indicated on the label placed inside the appliance itself.

Before carrying out any cleaning or maintaining operations, the appliance needs to be switched off. If the appliance is not provided with a non-separable

flexible cable and plug, or with another device ensuring omnipolar disconnections from the grid, with an opening distance between the contacts of at least 3mm, then such disconnecting devices must be supplied within the fixed installation. If the fixed appliance is endowed with a supply cord and a plug, the appliance has to be put in a place where the plug can be reached easily.

The use of materials which can burst into flames should be avoided in close proximity of the appliance. When frying, please pay particular attention to fire risk due to oil grease. Being highly flammable, fried oil is especially dangerous. Do not use uncovered electric grills. In order to avoid possible fire risk, all instructions for grease-filter cleaning and for removing eventual grease deposits should be strictly followed.

When ducting rangehood, options are as follows:

- NOTE: For SEM 1: From motor to exit point, additional lengths of duct will be required from the rangehood to the SEM 1 motor.

**Roof vent - EASYROOF 150T/M
EASYROOF 200T/M**

*Kit includes roof flashing

[Download installation guide](#)

Eave vent - EASYEAVE 150/200

[Download installation guide](#)

Wall vent - EASYWALL 150/200

[Download installation guide](#)

Ducting kits are not needed for SEM 2 motors as not all components are required.

Individual Sirius Ducting components can be purchased at www.siriusbrand.com.au or one of our retail partners.

MOTOR INSTALLATION GUIDES

SEM 1, 2, 7, 8 MOTOR

[Download installation guide](#)

SEM 5 MOTOR

[Download installation guide](#)



Rangehood and SEM motor cannot be installed back-to-back. There must be a minimum of 2 metres between rangehood and motor for noise reduction reasons.

WARNING: Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards.


SL906-L series INSTALLATION - OFFBOARD




Before installing the appliance, make sure that none of the parts are damaged in any way. In case of damaged parts, contact your retailer and do not proceed with installation. Read all of the following instructions with care before installing the appliance.

- Use ducting within the min/max specifications
- Limit the number of ducting bends.
- Do not make any changes in ducting diameter (recommended constant diameter: Ø 150 mm)

 Before installing the appliance - in order not to damage the appliance itself - the metal grease filter should be removed. These filters could be removed by pushing the handles towards the back side of the rangehood and pulling it downwards to unfasten it from its slot. (Fig.2).

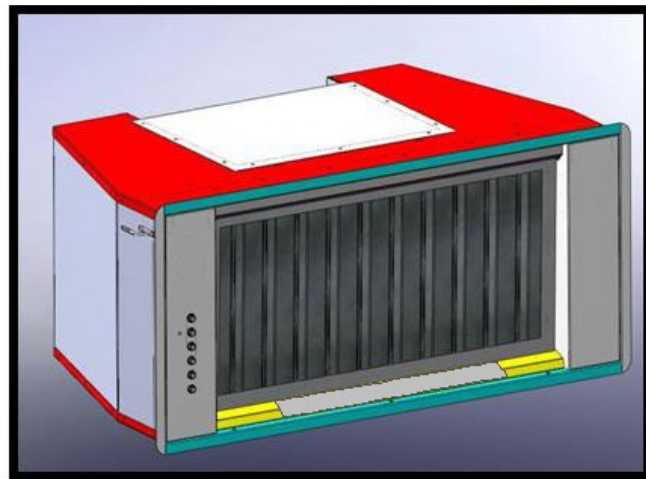


(Fig.2a)

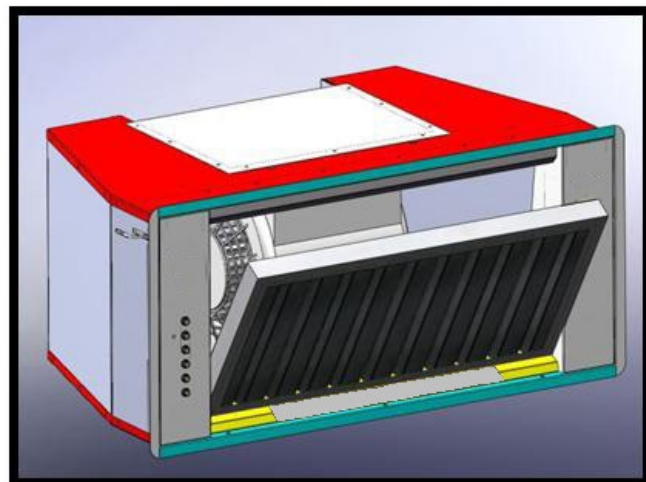 

(Fig.2b)

To install the appliance please follow these instructions:

 - The appliance must be installed by qualified technicians, or where possible use a Sirius recommended installer (see website for details). In order to avoid damage to the electronic parts of the appliance, please do not use additional screws.
- Essential precautions to respect before installing the appliance are the following:
To have made a cutout on the bottom of the cabinet which is suitable to hold the appliance in position (fig. 3):
SL906 EM-L 520 - 501 x 265mm
SL906 EM-L 850 - 835 x 265mm
SL906 EM-L 1000 - 985 x 265mm
SL906 EM-L 1200 - 1100 x 265mm

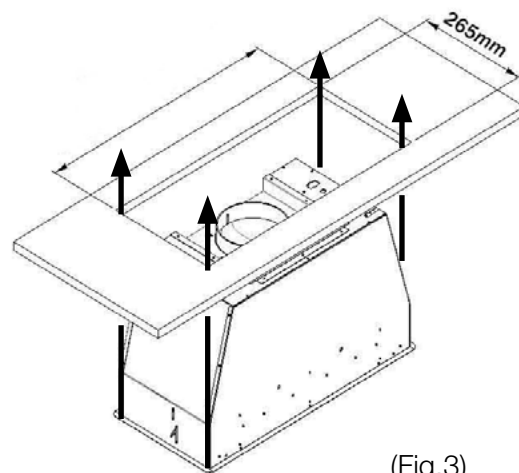

(Fig.3)

 
1. Prepare the power supply - 240 volt.
 2. Prepare a hole for the ducting - 160 mm diameter.
- Maximum length of ducting should not exceed 7 metres to motor - minimum 2 metres.
 - (SEM 1) Additional 5 metres from motor to atmosphere.
 - Do not use screws to fix the outlet pipe to the rangehoods as they will prevent the movement of non-return valves.
 - Limit the number of elbows in the ducting, since each elbow reduces the duct efficiency by 1 metre. (i.e. if you use two 90° elbows, the length of ducting must not exceed 5 metres.)
 - Avoid abrupt direction changes.
 - Use 150mm constant diameter ducting for the whole length.
 - **The use of Sirius ducting will increase the warranty of the unit to 6 years.**

Download motor installation manual at www.siriusbrand.com for SEM 1, 2, or 5




The rangehood is quite heavy, so two people will be needed for installation.

1. To install the appliance, adjust the position of the adjustable side-springs using the supplied screws (fig.4), according to the thickness of the board, in which the appliance will be fixed.

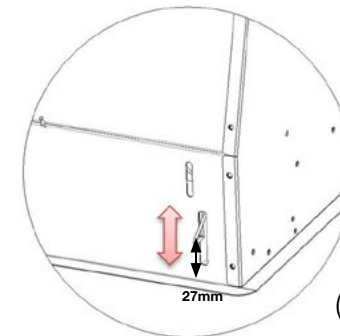

(Fig.4)

 2. Insert the rangehood into the cutout made in the cabinet until the stop click of the side-springs is heard and the rangehood is supported.
3. Insert the **15mm screws** provided into the holes inside the rangehood (Fig.5) to fix it to cabinetry.

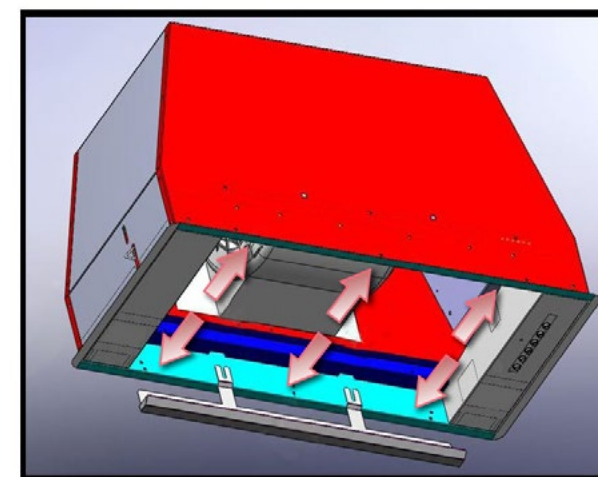


(Fig.5)

4. Insert the grease channel.
5. Insert the grease filter (Fig.2b)

OPERATION

SL906-L series

 - A: Light switch on/off
- B: Motor switch on speed 1/off - (low/simmer)
- C: Motor switch on speed 2 - (general cooking)
- D: Motor switch on speed 3 - (high power)
- E: Motor switch on speed 4 - (booster)
- F: 10 minute shut-off timer

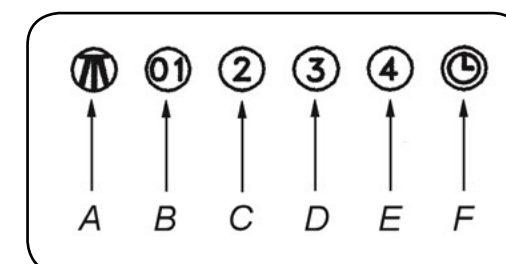

MAINTENANCE

- Accurate maintenance guarantees good functioning and long-lasting performance.
- Particular care is due to the grease filter panel. It can be removed by pushing its handle toward the back side of the rangehood and pulling the filter downwards so to unfasten it from its slot (Fig.2). To insert the filter just perform the opposite operation.
- After 30 hours of operation, the push button ⏸ control panel will flash, signaling the filters are due for cleaning. Press the timer button to reset. The grease filter needs cleaning by regular handwashing or in dishwashers every two months at least, depending on its use.
- **Filters may require cleaning sooner if frequent heavy frying is done.**
- To clean the appliance itself, water and detergent are recommended, while abrasive products should be avoided. For steel appliances specialized detergents are recommended (please follow the instructions indicated on the product itself to obtain the desired results).



If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

 
REPLACING THE LED LIGHT ON THE SL 906-L

1. Before replacing the LED light, switch off the rangehood, then - by using appropriate tools - remove the LED light from its slot (fig.6).
 2. Take out the LED light from its connector and replace.
- To find the correct LED light, please contact Sirius directly at **1300 762 216**.

NOTE: LED light bar is easier to remove from centre. Use a small, flathead screwdriver, palette knife or blunt butter knife.

WIRING DIAGRAM SL906 EM-L

ONLY FOR SEM7
EXTERNAL MOTOR

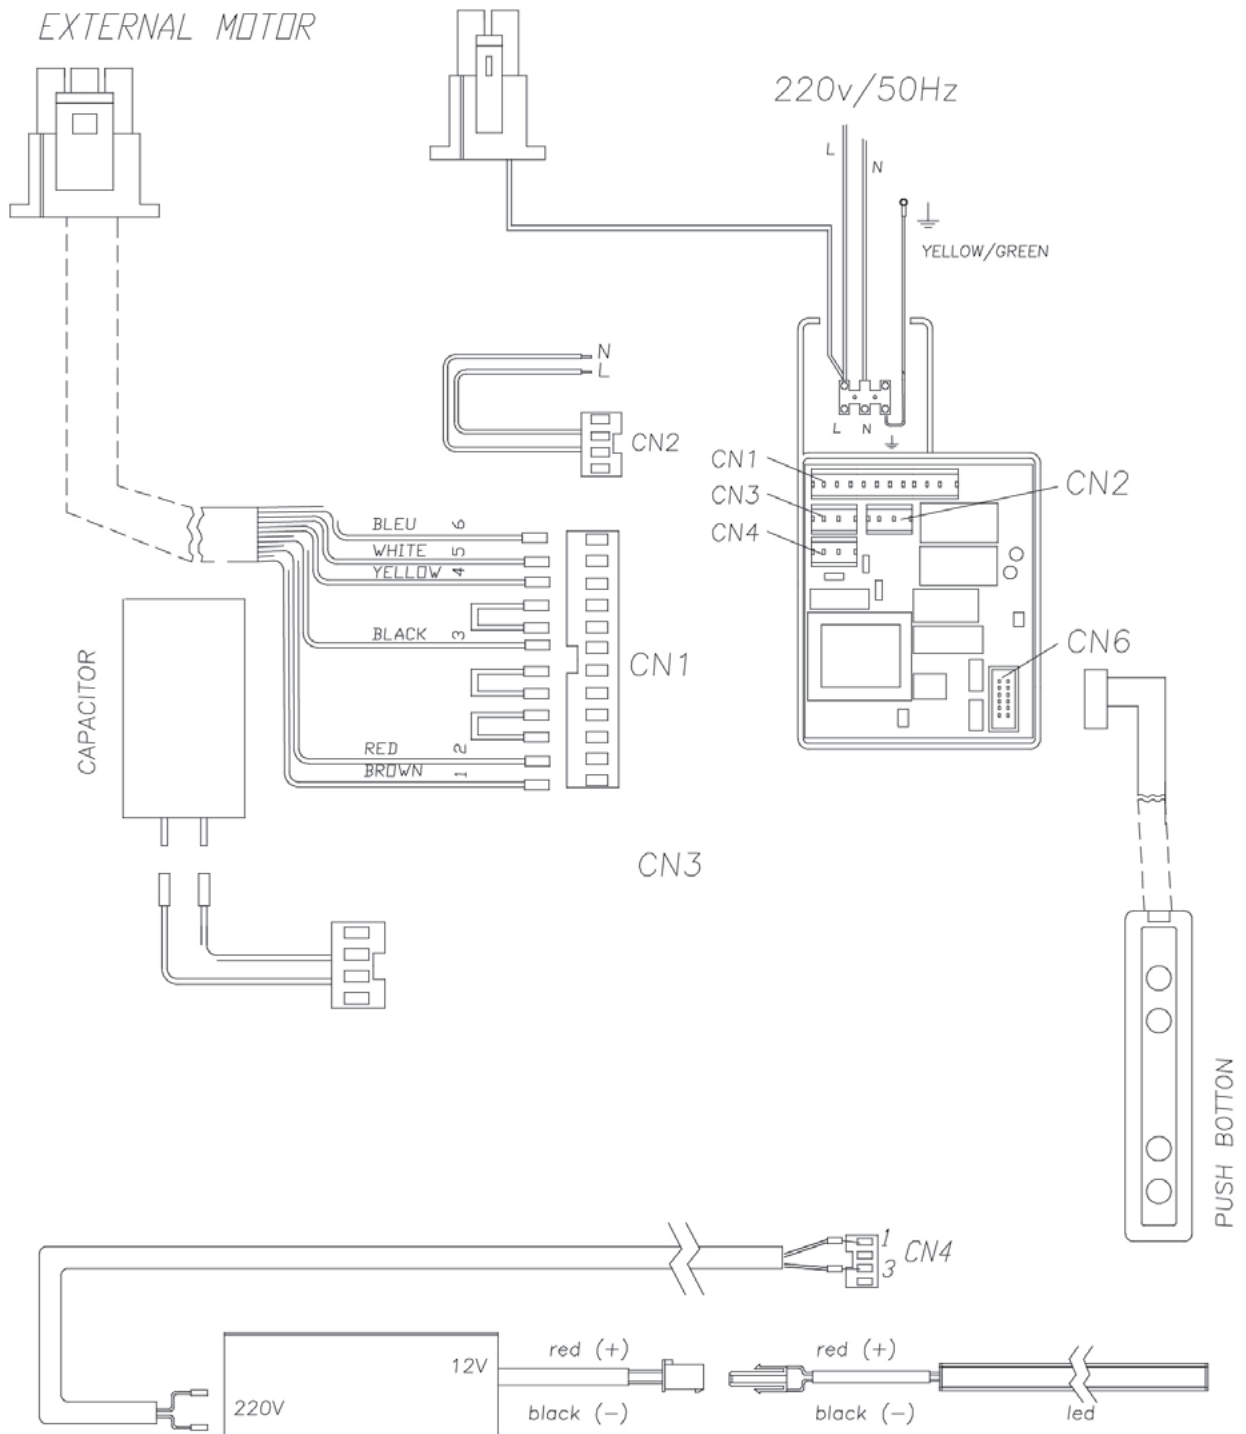

ARISIT PTY LIMITED (Australia)
ABN 23 091 515 294

40-44 Mark Anthony Drive
Dandenong South VIC 3175
P: Sales & Service: 1300 762 219
F: Sales & Service: (03) 9768 0838
E: arisit@arisit.com

ARISIT PTY LIMITED (New Zealand)
1A Howe Street Newton, Auckland 1145
PO Box 68-140 Newton, Auckland 1145
P: (09) 306 1020 - Fax: (09) 302 0077
E: sales2@aristonappliances.co.nz

www.arisit.com

www.arisitwarranties.com.au

www.siriusbrand.com

6 Year Warranty
when Sirius ducting is used.

Full replacement warranty on parts and labour. Check website for T&Cs.

Sirius Hoods and ducting products are only available from our select group of Sirius Professional Stockists nationwide. For the latest list of Sirius Stockists near you, please refer to www.siriusbrand.com

All efforts have been made to ensure that the information provided in this brochure is correct at the time of printing. Due to continuous product improvement and ongoing development, Sirius reserves the right to make changes to the products and technical data without prior notice. Some products appearing in this brochure may be for illustrative purposes only. Diagrams are indicative measures only. Prior to commencing cabinetry cutouts the operating/installation instructions accompanying the product must be referred to at www.siriusbrand.com