


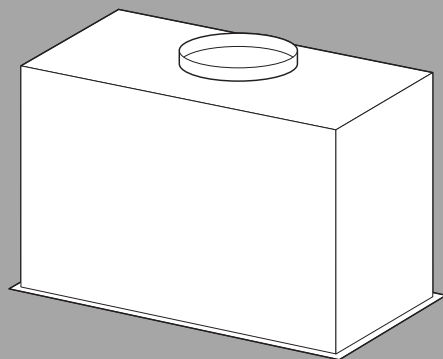

INSTRUCTIONS FOR USE

Cooker hood

CC4525SEU

CC4525SAU

Contents

Pictograms used	3	Installation	12
Safety	4	Safety instructions	12
Operation	8	Environmental aspects	23
Maintenance	10	Tips for energy-efficient cooking with	
Cleaning	10	hoods	23
		Disposal of the appliance and packaging	23

The following symbols are used throughout the manual, and they have the following meanings:

 INFORMATION!

Information, advice, tip or recommendation

 WARNING!

Warning – general danger

 ELECTRIC SHOCK!

Warning – danger of electric shock

 HOT SURFACE!

Warning – danger of hot surface

 DANGER OF FIRE!

Warning – danger of fire

It is important that you carefully read the instructions.

WARNING!

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND KEEP IT FOR FUTURE REFERENCE!

Safe use

- The manufacturer cannot be held liable for any damage resulting from failure to follow the safety instructions and warnings.
- Damage caused by incorrect connection, incorrect fitting, or incorrect use is not covered by the warranty.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- This appliance is only designed for household use.
- Always provide adequate ventilation!
- There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels.
- When the range hood and appliances supplied with energy other than electricity are simultaneously in operation, the negative pressure in the room must not exceed 4 Pa (4×10^{-5} bar).
- Local regulations concerning the discharge of air have to be fulfilled.
- Never use a steam cleaner for cleaning the appliance. Only clean the appliance when switched off. The steam of a steam cleaner could reach the conducting parts and cause an electrical short.

WARNING!

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance and the accessible parts will become hot during use. Do not touch hot parts. Keep children younger than 8 away from the appliance unless they are under continuous supervision.

For AU/NZ

WARNING!

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Accessible parts may become hot during use. Young children should be kept away.
- Children should be supervised to ensure that they do not play with the appliance.
Do not modify this appliance.
- Children are not to be allowed near the device unsupervised.
- Do not flambé under the range hood.

ELECTRIC SHOCK!

Avoid the risk of electric shock; make sure the appliance is switched off before cleaning the appliance.

- Only use the appliance inside the home.

Safety

- Do not use the cooker hood if the grease filter has not been fitted properly!
- Do not lean against the cooker hood.
- Never use the cooker hood as a working surface unless this is indicated explicitly.
- Grease and oil are inflammable when overheated. Remain in the cooking area when preparing meals.
- To prevent hot fat from catching fire, you should only deep-fry under continuous supervision.
- The cooker hood should be cleaned regularly both on the outside as well as the inside (at least 1 x per month). Insufficient cleaning or a delay in the replacement of filters can cause a fire hazard.
- Clean the filters on time.
- The grease filters can become hot during use. After cooking wait at least 30 minutes before cleaning.
- **Please note!** Intensive use can lead to condensation on the cooker hood. Condensation is simple to remove with a dry cloth.
- Follow the instructions in the manual for cleaning or replacing the grease filters and/or carbon filters!




DANGER OF FIRE!

- There is a risk of fire if the instructions for cleaning or replacing grease filters and/or carbon filters are not followed.
 - Through grease deposits in the metal grease filter. Never work with open flame under the appliance (eg. flambéing). Always use the appliance with the metal grease filter. Clean the grease filter regularly.
 - Through overheated fat or oil. Never extinguish a fire with water; always use a fire blanket, lid or plate.
- The appliance may have sharp edges; please be careful during cleaning.

- The light emitted by LED lights is very dazzling and can damage the eyes. Do not look directly into the switched on LED lights for longer than 100 seconds.
- When washing grease filters in the dishwasher it is recommended to use a short, non-intensive programme. Check the grease filter after washing in the dishwasher for wear (loose material). Wear can occur as a result of frequent washing. If loose material is visible, replace the filters in order to prevent this loose material from ending up in the food that is cooked.
- Do not use the appliance in temperatures below 5 °C.
- Keep a 20 cm separation distance to the appliance.

Operation

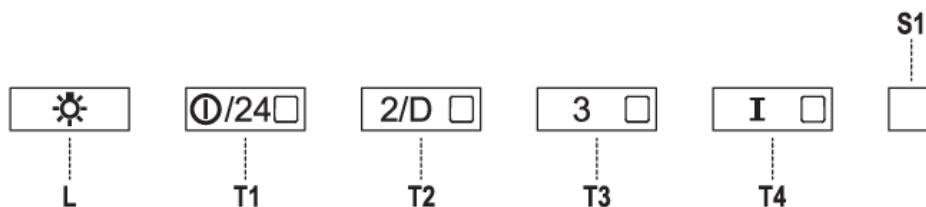

Button	Operate	Function	LED
L	SHORT PRESS	Switches the lights on or off at maximum brightness.	-
L	LONG PRESS	Switches the lights on or off at the average brightness.	-
T1	SHORT PRESS	The extraction starts at the lowest setting.	Lights up continuously
	LONG PRESS	Switching the Clean Air function on or off - The Clean Air function ensures that the air in the kitchen is refreshed every hour for 10 minutes. - The Clean Air function works for a maximum of 24 hours. - The Clean Air function cannot be activated when the intensive setting or the timer is switched on.	Flashing
T2	SHORT PRESS	The extraction starts on the second setting.	Lights up continuously
	LONG PRESS	Switching the timer on or off. - The timer automatically switches off extraction and lighting after 30 minutes. - The timer cannot be used when the intensive mode or Clean Air function is active.	The LED T1, T2 or T3 flashes
T3	SHORT PRESS	The extraction starts on the third setting.	Lights up continuously
	LONG PRESS with motor and lighting switched off	Reset the Activated Charcoal filter replacement indicator The 'Activated Charcoal filter replacement indicator' is reset.	LED S1 flashes 3 times.
T4	LONG PRESS with the motor or lights switched on	Switch on the intensive mode timer 'Intensive mode with timer' activates extraction for 6 minutes at the highest setting.	Flashing

Table continued from last page

Button	Operate	Function	LED
		After this period, the extraction switches off automatically.	
	LONG PRESS with motor and lighting switched off	Switching on 'Activated Charcoal filter replacement indicator' Turns on or off the Activated Charcoal filter replacement indicator.	The LED flashes twice: Filter indication is on. The LED flashes once: Filter indication is off.
S1	-	Grease filter cleaning indication After 100 hours of operation, the filter indicator lights up. Then, clean the metal grease filters.	Lights up continuously
	-	Activated Charcoal filter replacement indicator After 200 operating hours, the filter indicator begins to flash. Then, replace the Activated Charcoal filter.	Flashing

Maintenance

Cleaning

WARNING!

Important! For all maintenance, first, switch off the mains power to the cooker hood by pulling the plug out of the socket or by turning off the home's master switch. The hood needs to be cleaned regularly, both inside as well as outside (at least as often as the grease filter).

Do not use abrasive cleaning products. Do not use alcohol!

If the instructions regarding cleaning the appliance or replacing the filters are not followed, this can cause a fire. These instructions must be followed! The manufacturer is not liable for damage to the hood or fire damage resulting from incompetent maintenance or from non-adherence to the safety instruction above.

Cooker hood

Clean the cooker hood with soapy water and a soft cloth.

Then rinse with clean water. Do not use aggressive cleaning agents such as caustic soda. The cooker hood finish stays in good condition if it is buffed periodically following the application of wax.

NOTE!


Stainless steel cooker hoods

Do not use scouring pads or other abrasive cleaners on stainless steel cooker hoods. Finish with a non-abrasive, non-polishing agent and buff the stainless steel in the direction of the grain.

Metal grease filters


Metal grease filters should be cleaned once a month (or when indicated by the filter cleaning indicator – if present on the model) using a neutral cleaning agent, either by hand or in the dishwasher on a short, low-temperature programme. Place the grease filters with the openings facing downwards in the dishwasher so the water can drain out of the filter. Aluminium grease filters become dull as a result of dishwasher cleaning agents. This is normal and does not effect the working.

Cleaning grease filters

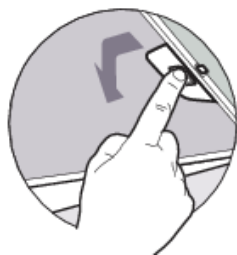

1. Open the panel.
2. Remove the grease filters from the hood by pulling the special handle.

Replacing the carbon filter

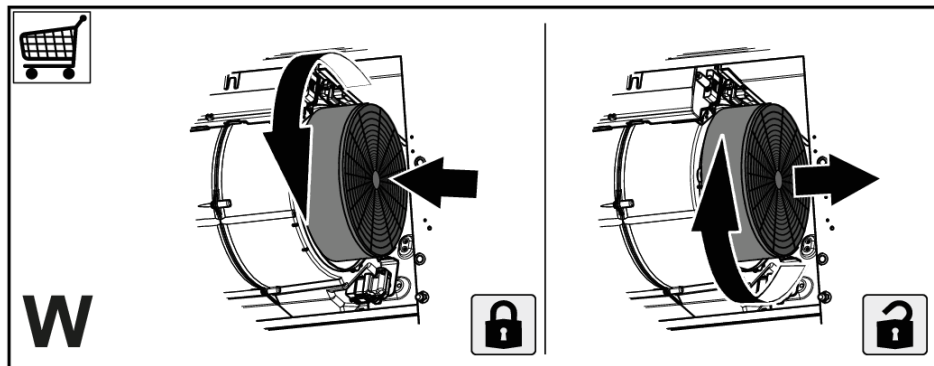

NOTE!

The carbon filter must always be used if the cooker hood does not have an outlet.

Using a carbon filter creates more sound than when using the cooker hood with an outlet.

The carbon filter's operation is optimal at a lower motor speed. You should, therefore, avoid using the boost function.

Saturation of the carbon filter will eventually occur after more or less prolonged use, depending on the type of cooking and how frequently the grease filter is cleaned.

It is necessary to replace the carbon filter when indicated by the filter indicator.

Do not wash or reuse the Activated Charcoal filter. Saturated Activated Charcoal is not environmentally friendly. Instead, replace it regularly, every four months.

Lighting

⚠ WARNING!

The hood is fitted with LED lights. An authorized technician must replace these. Do not attempt to replace the LED lights yourself.

Safety instructions

Faulty parts may only be replaced by original parts. The manufacturer can only guarantee that original parts meet safety requirements.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

WARNING!

This appliance should only be connected by a registered installer.

- Check the appliance for transport damage. Do not connect a damaged appliance.
- Always use the original Supply cord to connect the appliance.
- The electrical connection must comply with national and local regulations.
- The wall plug socket and plug should always be accessible.
- If a stationary appliance is not fitted with a supply cord and a plug, or with other means for disconnection from the supply mains having a contact separation in all poles that provide full disconnection under overvoltage category III conditions, the means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules. This is also applicable for appliances with a supply cord and plug when the plug is not accessible after installing the appliance. Using an omnipolar switch with a contact separation of at least 3 mm fitted in the fixed wiring will fulfil this requirement.
- For AU/NZ: Means providing full disconnection under overvoltage category III conditions must be incorporated in the fixed wiring in accordance with AS/NZS 3000.
- The appliance should not be connected to the mains via a multi-plug adapter or extension cable, as the safe use of the equipment cannot be guaranteed.
- For AU/NZ: The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.
- Disconnect the appliance from the mains supply before starting any repair work.
- We advise you to wear protective gloves when assembling the cooker hood because of the possible sharp edges.
- For AU/NZ: The distance between the lowest point of the cooker hood and the supporting surface for the cooking vessels gas hob should be at least 60 cm.
- If the instructions of the gas hob specify a greater distance, this has to be taken into account.

WARNING!

Extraction hoods and other appliances that extract cooking vapours can affect the safe operation of appliances that burn gas or other fuel (including those in other rooms) by backflowing combustion gases. These gases can potentially lead to carbon monoxide poisoning. After installing an extraction hood or other vapour extractor, the operation of appliances with flue gas extraction must be tested by a competent person to ensure that the combustion gases do not flow back.

Never open the casing of the appliance.

WARNING!


Failure to install screws or fixing devices in accordance with these instructions may result in an electrical hazard.

If the safety instructions and warnings are not followed, the manufacturer cannot be held responsible for any resulting damage.





If you decide to discontinue using the appliance because of a fault, we recommend you cut off the cable after removing the plug from the plug socket. Take the appliance to your municipality's waste disposal site.



Place the appliance in an environment that meets the following conditions:

- Ambient temperature range: +5....+40 °C;
- Humidity: 30....70% RH;
- Maximum altitude: 2000 meters above sea level.


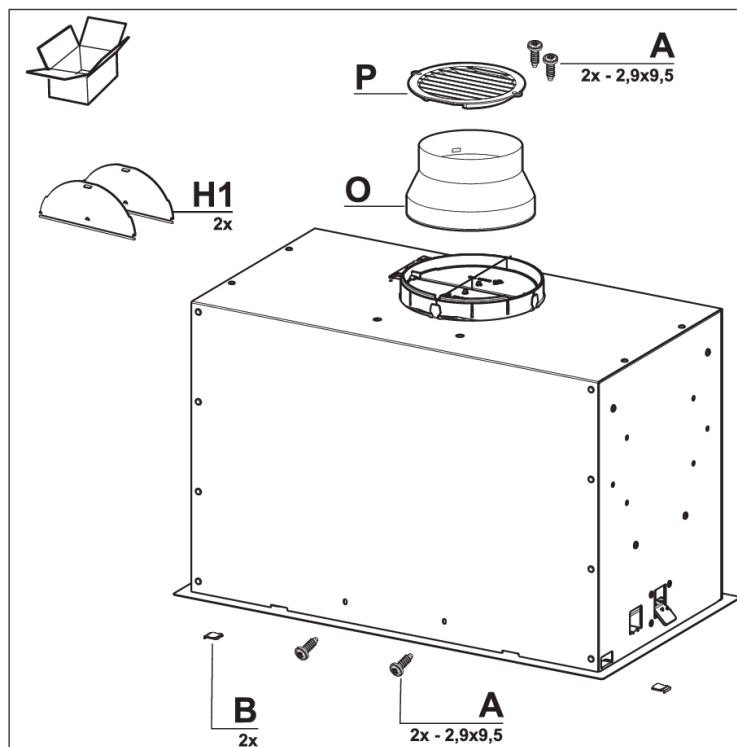


Installation

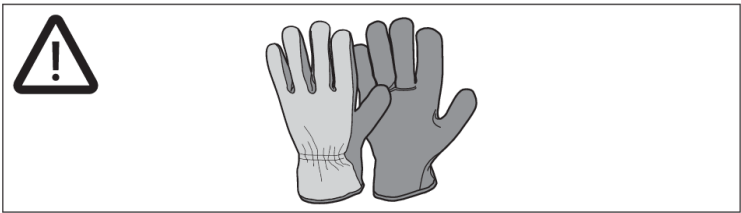
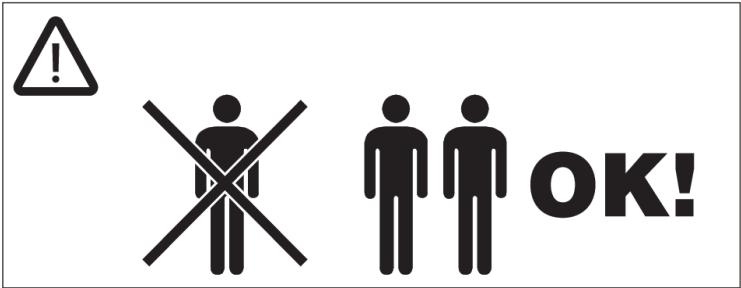
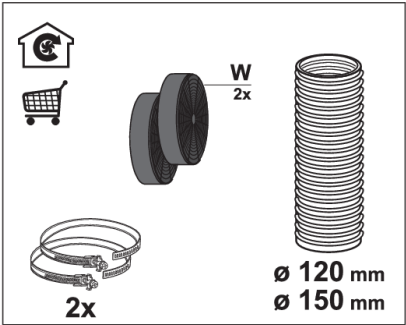
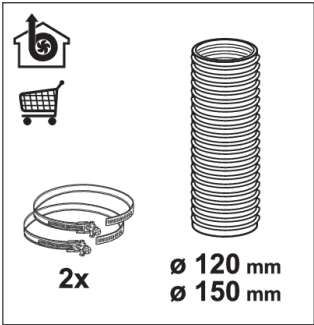


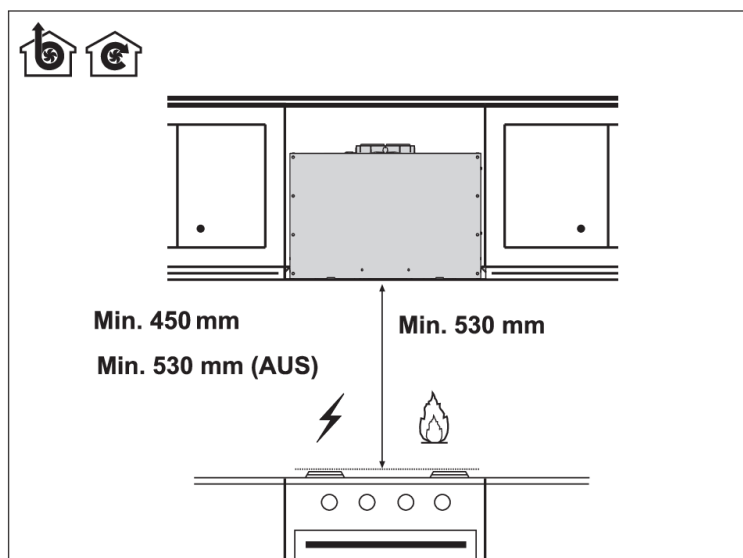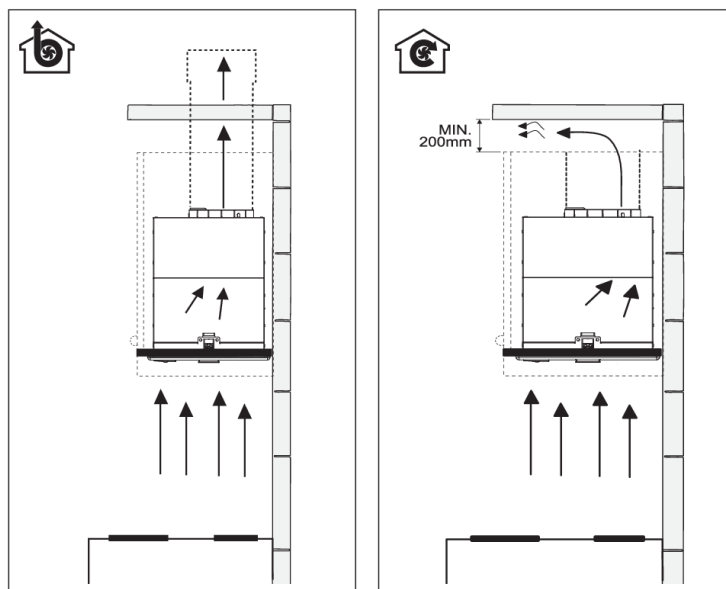

Installation

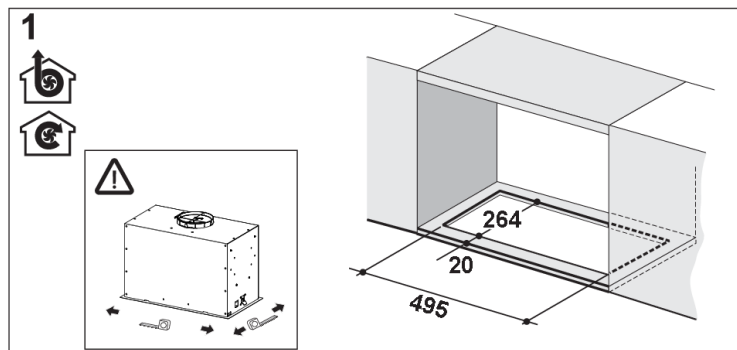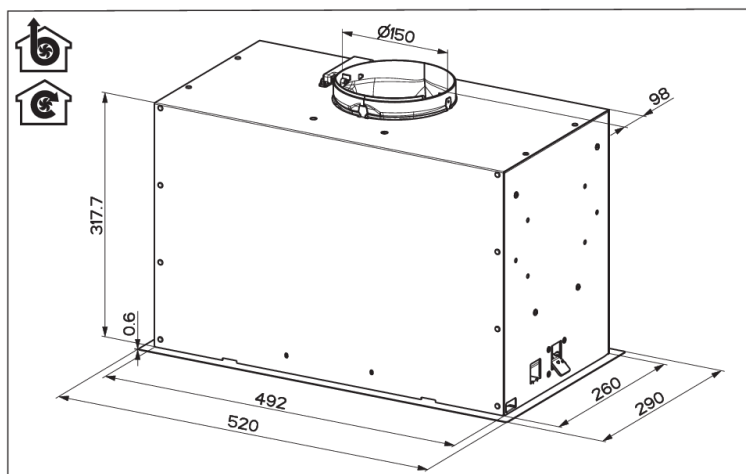


2




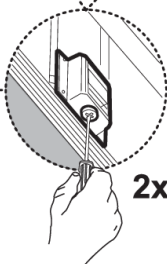
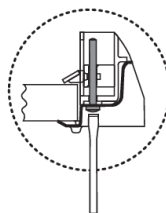
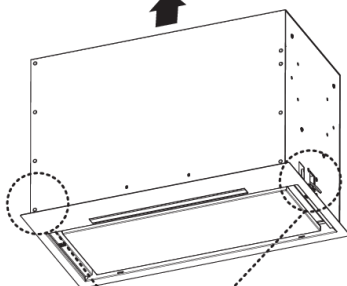
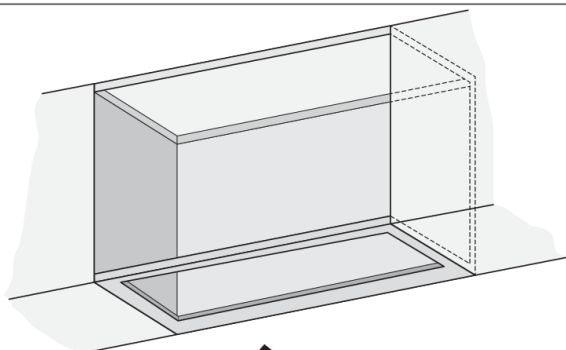


2x

Installation


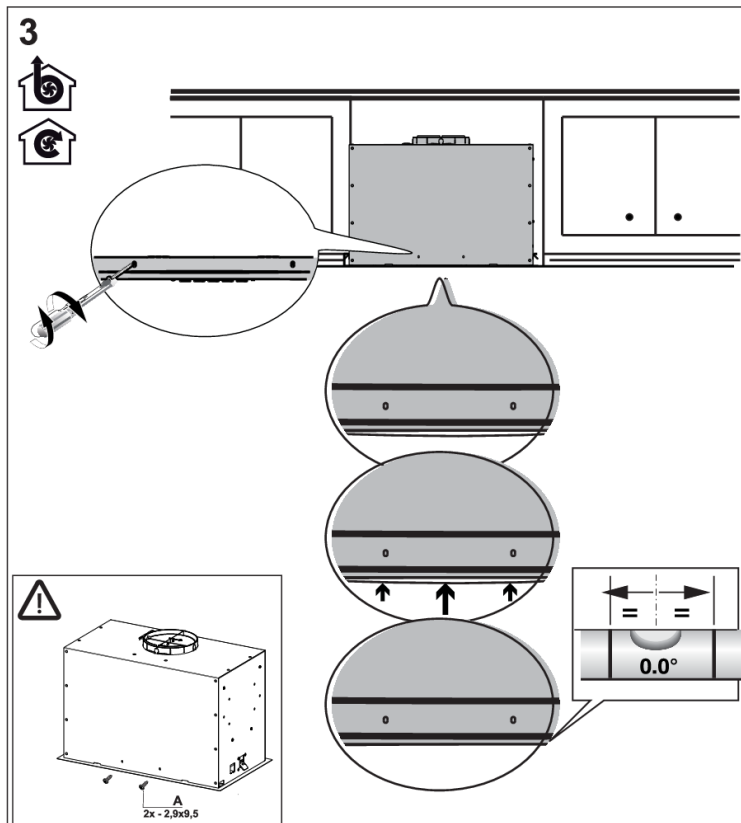


4

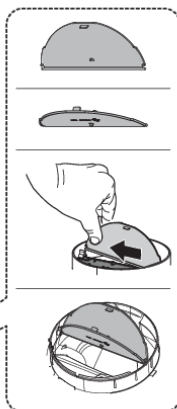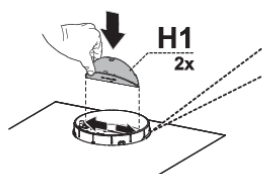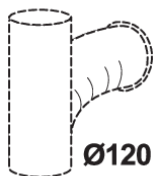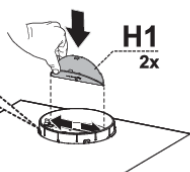
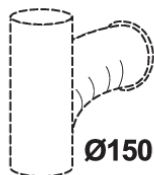
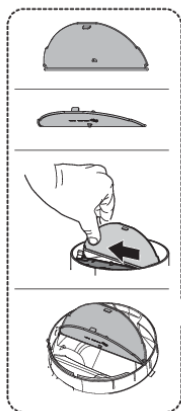
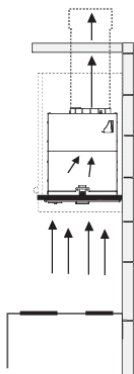



Installation

5

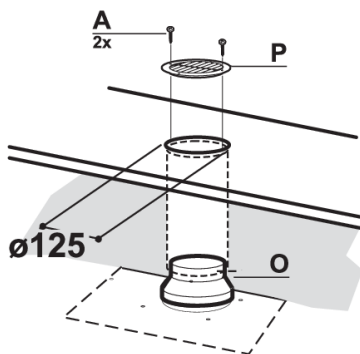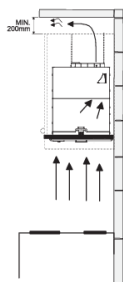


6

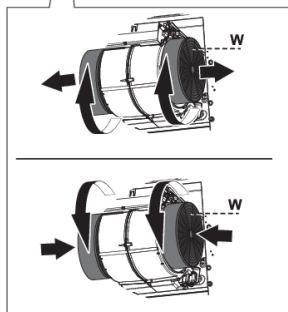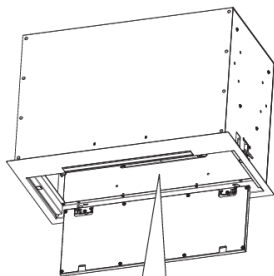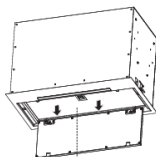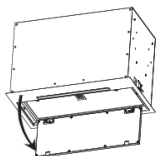

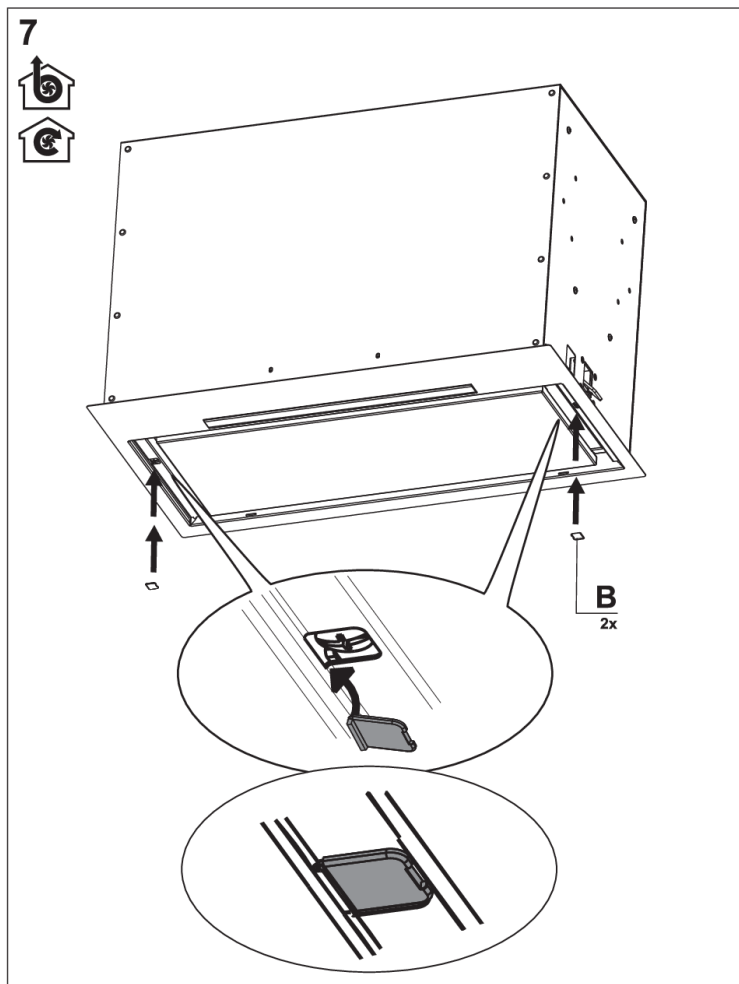

Installation

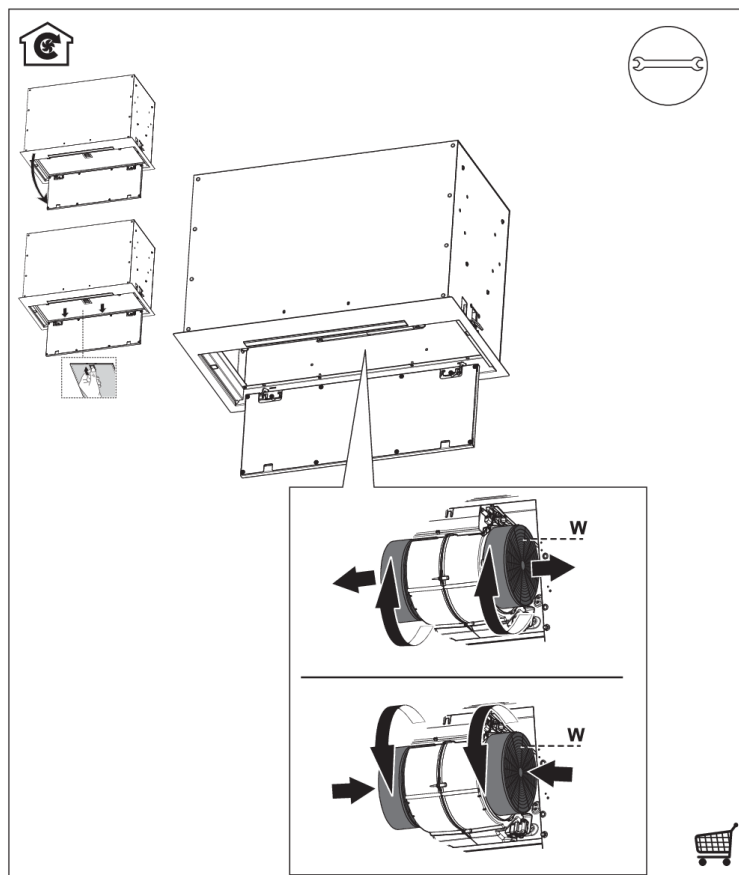

Tips for energy-efficient cooking with hoods

- Use a low extractor setting and use the highest setting (boost) only if necessary.
- A well-ventilated kitchen makes the range hood more efficient.
- Clean filters regularly and replace filters when needed to keep the filter efficiency high, as a saturated filter cannot perform and leads to longer usage times.


Disposal of the appliance and packaging

Sustainable materials have been used during the manufacture of this appliance. This appliance must be disposed of responsibly at the end of its service life. Ask your local authorities for more information about how to do this.

The appliance packaging is recyclable. The following may have been used:

- cardboard;
- polyethylene film (PE);
- CFC-free polystyrene (PS rigid foam).

Dispose of these materials in a responsible manner and in accordance with government regulations.

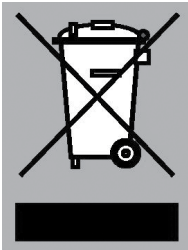

The product has been marked with a crossed-out dustbin symbol to remind you of the obligation to dispose of electrical household appliances separately. This means that the appliance may not be included with normal domestic refuse at the end of its service life. The appliance must be taken to a special municipal centre for separated waste collection or to a dealer providing this service.

A separate collection of household appliances helps to prevent any potential negative impact on the environment and on human health caused by improper disposal. It ensures that the materials of which the appliance is composed can be recovered to obtain significant savings in energy and raw materials.



Declaration of conformity

We hereby declare that our products satisfy the applicable European directives, orders and regulations, as well as the requirements stated in the referenced standards.



www.asko.com



956344-a1



We reserve the right to make changes.