



CHEF

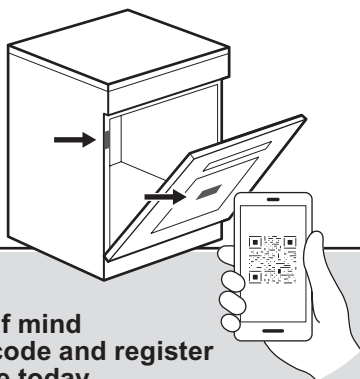

**Enjoy peace of mind
Scan the QR code and register
your appliance today**

Stay updated on better living services, safety notices and shop for accessories.

*Exact location of QR code may vary depending on appliance model

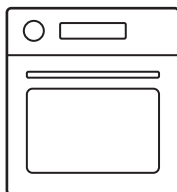

CVE6414DC
CVE6414SC

IMPORTANT INFORMATION THAT MAY IMPACT YOUR MANUFACTURER'S WARRANTY

Adherence to the directions for use in this manual is extremely important for health and safety. Failure to strictly adhere to the requirements in this manual may result in personal injury, property damage and affect your ability to make a claim under the Electrolux manufacturer's warranty provided with your product. Products must be used, installed and operated in accordance with this manual. You may not be able to claim on the Electrolux manufacturer's warranty in the event that your product fault is due to failure to adhere to this manual.

1. SAFETY INFORMATION.....	2	7. HINTS AND TIPS.....	8
2. SAFETY INSTRUCTIONS.....	4	8. CARE AND CLEANING.....	10
3. INSTALLATION.....	5	9. TROUBLESHOOTING.....	12
4. GENERAL OVERVIEW.....	6	10. WARRANTY - AUSTRALIA AND NEW ZEALAND.....	12
5. BEFORE FIRST USE.....	7	11. ENVIRONMENTAL CONCERNS.....	14
6. DAILY USE.....	7		

1. ⚠ SAFETY INFORMATION

Before the installation and use of the appliance read the supplied instructions carefully. The manufacturer is not responsible for any injuries or damage that result from incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

1.1 Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have

- been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children of less than 8 years of age and persons with very extensive and complex disabilities shall be kept away from the appliance unless continuously supervised.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep packaging away from children and dispose of it properly.
- **WARNING:** The appliance and its accessible parts become hot during use. Keep

children and pets away during use and cooling.

- Activate the child safety device, if available.
- Children must not clean or maintain the appliance without supervision.

1.2 General Safety

- This appliance is for cooking purposes only.
- This appliance is designed for single household domestic use in an indoor environment.
- This appliance may be used in offices, hotel guest rooms, bed & breakfast guest rooms, farm guest houses, and other similar accommodation where such use does not exceed average domestic usage levels.
- Do not use the appliance before installing it in the built-in structure.
- Disconnect the appliance from the power supply before carrying out any maintenance.
- If the supply cord is damaged, it must be replaced

by the manufacturer, its authorised service centre or similarly qualified persons to avoid an electrical hazard.

- **WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements or the surface of the appliance cavity.
- Always use oven gloves to remove or insert accessories or ovenware.
- Do not install the appliance behind a decorative door in order to avoid overheating.
- Do not use a steam cleaner to clean the appliance.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the glass door since they can scratch the surface, which may result in shattering of the glass.

2. SAFETY INSTRUCTIONS

2.1 Installation

WARNING!

Only a qualified person must install this appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Follow the installation instructions available on our website.
- Be careful when moving the appliance, as it is heavy. Use safety gloves and enclosed footwear.
- Do not pull the appliance by the handle.
- Install the appliance in a safe and suitable location that meets installation requirements.
- Keep the minimum distance from other appliances and units.
- Before mounting the appliance, ensure it is level and that the door opens without any restraint.
- The appliance is equipped with an electric cooling system. It must be operated with the electric power supply.

2.2 Electrical connection

WARNING!

Risk of fire and electric shock.

- All electrical connections should be made by a qualified electrician.
- Make sure the parameters on the rating plate are compatible with the electrical ratings of the mains.
- The appliance must be earthed. Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.
- Avoid damaging the mains cable and plug. If replacement is needed, it must be done by our Authorized Service Centre.
- Do not let mains cables touch or come near the appliance door or the niche below, especially when it operates or the door is hot.
- Shock protection of live and insulated parts must be fastened securely and should not be removable without tools.

- Connect the appliance only at the end of installation. Ensure access to the mains plug after installation.
- If the mains socket is loose, do not connect the mains plug.
- Do not disconnect the appliance by pulling on the mains cable. Always pull on the mains plug.
- Use only correct isolation devices: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors.
- The electrical installation must have an isolation device that disconnects the appliance from the mains at all poles, with a contact opening width of at least 3 mm.
- This appliance is supplied with a main plug and a main cable.

2.3 Use

WARNING!

Risk of injury, burns and electric shock or explosion.

- Do not modify this appliance.
- Ensure ventilation openings are not blocked.
- Do not let the appliance stay unattended during operation.
- Turn off the appliance after each use.
- Be careful when opening the appliance door during operation, as hot air and flammable vapors from ingredients can be released.
- Do not operate the appliance with wet hands or when it comes in contact with water.
- Do not apply pressure on the open door.
- Do not use the appliance as a work surface or as a storage surface.
- Keep sparks and open flames away from the appliance when the door is open.
- Do not place flammable products near the appliance.
- Do not use the appliance as a space heater.

WARNING!

Risk of damage to the appliance.

- To prevent damage or discoloration to the enamel:

- do not place ovenware or objects directly on the cavity bottom.
- do not place aluminum foil directly on the cavity bottom.
- do not put water directly into the hot appliance.
- do not leave moist dishes and food in the appliance after cooking.
- be careful when removing or installing accessories.
- Enamel or stainless steel discoloration does not affect performance of the appliance.
- Use a deep pan for moist cakes, as fruit juices can cause permanent stains.
- Always cook with the appliance door closed.
- If the appliance is installed behind a furniture panel, do not close the panel during use or until the appliance is fully cooled to prevent heat and moisture damage.
- Concerning the lamp(s) inside this product and spare part lamps sold separately: These lamps are intended to withstand extreme physical conditions in household appliances, such as temperature, vibration, humidity, or are intended to signal information about the operational status of the appliance. They are not intended to be used in other applications and are not suitable for household room illumination.
- Use only lamps with the same specifications.
- To repair the appliance contact the Authorised Service Centre. Use original spare parts only.

2.4 Care and cleaning

WARNING!

Risk of injury, fire, or damage to the appliance.

- Turn off and unplug the appliance before maintenance.
- Ensure the appliance is cold to avoid glass breakage. If the door glass panels are damaged, contact the authorized service centre for replacement.
- Clean and dry the appliance, its cavity, and accessories after each use to prevent steam condensation, corrosion, and surface deterioration.
- Check the product regularly for signs of deterioration that may make it unsuitable for food contact, such as cracks, blisters, delamination, shrinkage, stickiness, corrosion, or other visible changes in texture or appearance. Follow cleaning and care instructions to prevent deterioration.
- Use a microfibre cloth, warm water, and neutral detergents for cleaning the appliance and accessories. Do not use abrasive products, pads, solvents, sharp-edged or metal objects.
- Follow safety instructions on packaging when using an oven spray.

2.5 Disposal

WARNING!

Risk of injury or suffocation.

- Contact your municipal authority for information on how to dispose of the appliance.
- Disconnect the appliance from the mains, then cut off and dispose of the electrical cable.

3. INSTALLATION

WARNING!

Refer to Safety chapters.

3.1 General Information

CAUTION!

Follow local municipal building codes and all relevant statutory regulations, especially AS/NZS 3000.


- Use the level on the front and rear forms of the appliance to level it and prevent the telescopic runners from moving.
- Under the control panel, there are two mounting holes on each side. Fit the black screws with the plastic spacers provided.
- The surrounding kitchen cabinets must be able to withstand 70°C.
- This appliance is supplied with a 10 A power cord for 'Plug & Play' which must be connected to a 10 A powerpoint.

3.2 Technical data

Model	Product dimensions (h x w x d) (mm)	Electrical connection (V/Hz)	Min. fuse rating (A)	Max. power rating (kW)	Max. current rating (A)
CVE6414DC	597 x 596 x 568	220-240 / 50	16	2.3	9.6
CVE6414SC	597 x 596 x 568	220-240 / 50	16	2.3	9.6

3.3 Installing the appliance

Check if the dimensions of the furniture meet the installation requirements.

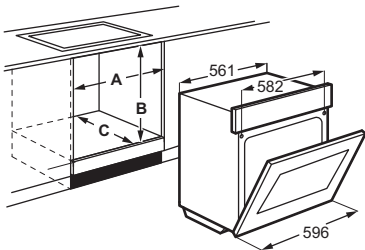


Installation requirements

A - width (mm), **B** - height (mm), **C** - depth (mm)

Type	A	B	C
Flush fit	600	600	min. 581
Proud fit	565	590	min. 560


4. GENERAL OVERVIEW

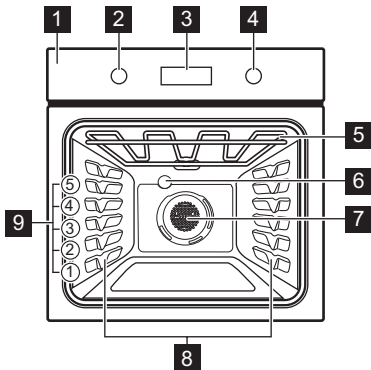

- 1 Control panel
- 2 Knob for the heating functions selection
- 3 Display

- 4 Knob for the oven temperature selection
- 5 Heating element
- 6 Oven lamp
- 7 Fan
- 8 Formed shelf supports
- 9 Shelf positions

4.1 Display

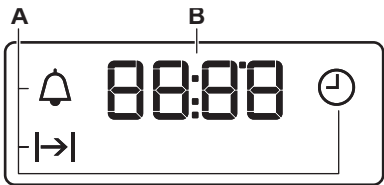

A. Clock functions

B. Timer

4.2 Clock functions

-  - Time of day
-  - Duration

-  - Timer

4.3 Buttons

-  - To set the time.
- **Mode** - To set a clock function.

5. BEFORE FIRST USE

5.1 Setting the time

You must set the time before you operate the oven.

When  flashes press the  or  to set the correct time.

5.2 Initial preheating and cleaning

1. Clean the appliance with a microfibre cloth, warm water, and mild detergent.

2. Remove all accessories from the appliance.
3. Preheat the empty appliance to remove any odours. Ventilate the room.
4. Set the function  and the temperature to 180°C, let the appliance operate for 30 min.
5. Turn off the appliance and let it cool.
6. Clean the appliance again. Replace accessories and shelf supports.

6. DAILY USE

6.1 Heating functions



Fan bake - Multi-shelf cooking, reheating cooked foods, pastries and complete oven meals.



Light only - To switch on the oven lamp without a heating function.



Grill - Grilling meat, toasting bread. Use with a deep pan under a wire shelf. Preheat for 3 min.



Fan grill - Roasting larger pieces of meat. Use with a deep pan under a wire shelf. Set temperature to 180°C.



Defrost - Defrosting, raising dough, drying fruit/vegetables/herbs.



AirFry - Frying food with less oil or without baking paper (e.g. for french fries, pizza).

6.2 Setting: Heating functions

1. Turn on the appliance.
2. Turn the function knob to select a heating function.
3. Turn the temperature knob in a clockwise direction to select a temperature. Using this knob the other way can result in damage of the thermostat.

4. To deactivate the appliance turn the function knob in any direction and the temperature knob anti-clockwise to the off position.

Operating the temperature knob

Set the temperature by turning the knob clockwise. The oven maintains the set temperature by switching the heating on and off. After cooking, turn the knob back anticlockwise, and never force it fully around clockwise to avoid damaging the thermostat.

IMPORTANT

The oven function must be selected before setting the temperature.

6.3 Setting a clock function

1. Press **Mode** to select a clock function:

 **Time of day**: To set, change, or check the time of day.

 **Duration**: To set operating time. Available after setting a heating function and temperature. The appliance turns off automatically when the set time ends.

 **Timer**: To set a countdown. This function has no effect on the operation of the oven. You can set the Timer at any time, also when the oven is off. Maximum countdown time is 23:59.

2. **+**, **-** - press to set the time. After 5 sec the function starts.
3. When the set time ends, a signal sounds. Press any button.
4. Turn the knobs to the off position, if needed.

To cancel a clock function, press **Mode** repeatedly until its symbol flashes. Press and hold **—** until the display shows **00:00**.

6.4 Accessories

Accessories available depending on model. Scan the QR code to check how to use accessories supplied with your appliance. You can order optional accessories separately. For more information, please contact your local supplier.



Insert the accessory (wire shelf / tray) between the guide bars of the shelf support. Make sure that the shelf touches the back of the oven interior.


If your tray has a slope, position it towards the back of the oven interior.

If there is an inscription on the accessory, make sure it is facing you.

If you are using a tray with holes place the tray / pan underneath, to collect dripping liquids.

Fitting trays to shelf supports:

With the front edge raised, slide the tray into the oven. Then lower it and push fully in so that it does not interfere with the closed oven door.

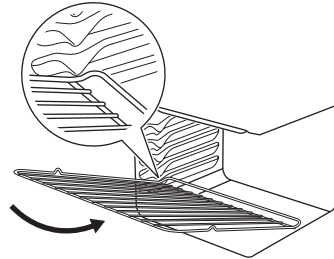

IMPORTANT

The top ledge is not a shelf position.

7. HINTS AND TIPS

7.1 Cooking recommendation

AirFry function

For best results preheat the appliance for 10 min and place the food on shelf position 3.

Food	Temperature (°C)	Time (min)	Accessory
Chicken nuggets	220	15 - 25	AirFry tray
Croquettes	220	15 - 25	AirFry tray
Crumbed fish	220	15 - 25	AirFry tray

Food	Temperature (°C)	Time (min)	Accessory
Chicken schnitzel	230	15 - 20	AirFry tray
French fries	220	25 - 30	AirFry tray
Frozen croissant	170	30 - 40	Grid and baking paper ¹⁾

¹⁾ Place the food on shelf position 2.

Bakery products

Food	Non fan mode		Fan mode ¹⁾	Time (min)
	Temperature (°C)	Shelf position (counted from bottom up)	Temperature (°C)	
Plain or fruit scones	220	2	210	10 - 15
Rolled biscuits	170	2	150	10 - 15

Food	Non fan mode		Fan mode ¹⁾	Time (min)
Spooned biscuits	190	2	180	12 - 15
Shortbread biscuits	160	1 or 2	150	30 - 35
Hard individual mer- ingues	110	2	100	90
Soft individual merin- gues	180	2	165	15 - 20
Pavlova - 6 eggs	110	1	100	75
Patty cakes	190	3	180	15 - 20
Sponge - 4 eggs	180	2	170	20 - 30
Shallow butter cake	180	2	170	25 - 40
Rich fruit cake	140	2	130	180
Shortcrust cornish pastry ²⁾	200	2	180	40 - 45
Shortcrust custard tart	200/180	1	180/160	10/35
Cream puffs	210	2	200	25 - 30
Yeast bread	210	1	200	25 - 30

¹⁾ Any shelf position.

²⁾ Turn down temperatures and times shown.

Meat/poultry/fish

Food	Temperature (°C)		Time (min per kg)
Beef	Rare	200	35 - 40
	Medium	200	45 - 50
	Well done	200	55 - 60
Lamb	Medium	200	40
	Well done		60
Veal	Well done	180	60
Pork	Well done	200	60
Chicken		180	45 - 50
Duck		180 - 200	60 - 70
Turkey		180	40 - 45 (<10kg) 35 - 40 (>10kg)
Fish		180	20

Guide to better grilling: steak - 15 - 20 min, chops - 20 - 30 min, fish - 8 - 10 min, bacon - 4 - 5 min.

Dealing with cooking problems

Problem	Main cause	Remedy
Uneven cooking	Incorrect shelf position or tray placement	Place food in the centre of the oven.
	Poor air circulation	Rotate food during cooking.
	Grill tray affecting thermostat	Remove the grill tray when using baking modes.
Baked products too brown on top	Oven not preheated	Preheat the oven.
	Tins too large or unevenly spaced	Use correct-size tins and space them evenly.
Baked products too brown on bottom	Temperature too high or food too low	Lower temperature or cook one shelf higher.
	Dark metal or glass tins	Use light-coloured tins or reduce temperature by 10°C.
	Oven door opened too often	Do not open the door until at least half the cooking time has passed.
Cakes with thick, cracked crust	Temperature too high or cake too high in oven	Lower the temperature or cook one shelf lower.
	Batter over-mixed or tin too deep	Mix only until combined and use the recommended tin size.
Baked products pale or undercooked	Temperature too low or cooking time too short	Increase the temperature or extend cooking time.
	Incorrect tin size or shelf position	Use correct tin size and cook one shelf higher.
Cakes fallen in the centre	Temperature too low or door opened too early	Raise temperature and keep door closed until the last quarter of cooking time.
	Incorrect ingredient proportions	Check the recipe.
Roast meat and potatoes not brown (fan mode)	Poor air circulation	Place food on a rack to allow air circulation.
Meat loses juices	Pierced during cooking	Turn meat with tongs, not a fork.
Grilled meat over-cooked outside, raw inside	Grill position too high	Grill at a lower insert position.
Grilled chops or steaks curl	Fat not cut	Cut fat every 2cm.
Pizza toppings burnt	Shelf position too high	Use a lower shelf.

8. CARE AND CLEANING

8.1 Notes on cleaning


- Clean the interior of the appliance and the accessories after each use with a microfibre cloth, warm water and a mild detergent.
- Clean stains with a mild detergent.

- Use a cleaning solution for metal surfaces.
- Clean and check the door gasket around the frame of the cavity.
- Dry the interior of the appliance only with a microfibre cloth after each use.


- Do not use abrasive cleaner or sharp-edged objects to clean the appliance or the accessories.

8.2 Removing grill

1. Turn off the appliance and wait until it is cold to clean it.
2. **For retaining clips models:** Push the edge of the grill clips towards back of the oven. The grill drops down freely.

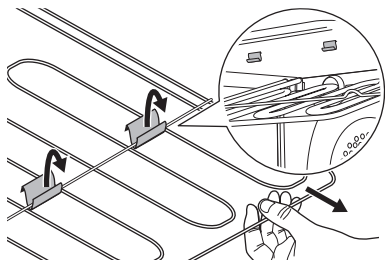

3. **For rotating latch models:** Rotate the grill latch 180°. The grill drops down freely.

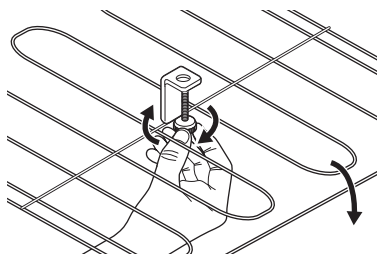


4. Clean the oven ceiling with warm water, a soft cloth and a mild detergent. Let it dry.
5. Install the grill in the opposite sequence.


8.3 Removing and installing door

The door is heavy.


1. Make sure the appliance is cold.
2. Fully open the door.
3. Press the hinge levers on both sides of the door.

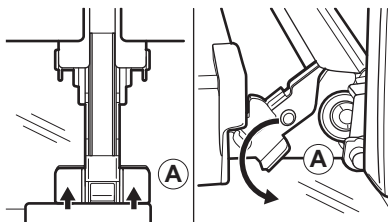

4. Close the door partially until it stops, then lift it off the hinges.
5. Place the door on a soft cloth on a stable surface.
6. Release two endcaps holding the glass panels in place.

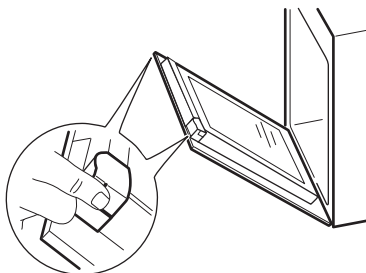

7. Remove the inner glass panel (C) and the middle glass panel (B) from the oven door. The outside glass (A) cannot be removed for cleaning. Clean the panels with water and soap using a non abrasive sponge and then dry them thoroughly. Do not clean the glass panels in the dishwasher.

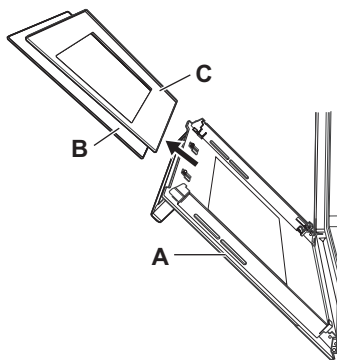

After cleaning, do the above steps in the opposite sequence.

During assembly, make sure the painted surface is facing down.

8.4 Replacing the lamp

Disconnect the appliance from the mains and wait until it is cold.

1. To replace the oven lamp, turn and remove the glass cover.
2. Clean the glass cover.
3. Insert a high temperature resistant lamp.
4. Install the glass cover.

9. TROUBLESHOOTING

9.1 Troubleshooting

If you cannot find a solution to the problem yourself, contact your dealer or an Authorised Service Centre. Service details are on the rating plate, located on the front frame. It is visible when you open the door. Do not remove the rating plate.

No display or timer flashing

- Power failure interruption.
- Reset Time of day and any cooking functions you were using (Refer to "Setting a clock function" chapter).

Oven or grill do not operate

- Set Time of day.
- Household fuse is blown or power supply is off.

The lamp is not working

- Lamp is blown or the power cord is loosen.
- Household fuse is blown.

Appliance problems

- **The door cannot be replaced after removal.** - Locate / position the hinge saddle bracket to its correct position.

- **The appliance seal is loose.** - Check that the oven door seal is attached at each corner. The seal on non-pyrolytic models may appear loose but the appliance operates properly when closed.
- **Steam and condensation collect on the food and in the appliance cavity.** - Do not leave dishes in the oven for more than 15-20 min after cooking.

9.2 Service data

If you cannot find a solution to the problem yourself, contact your dealer or an Authorised Service Centre.

The necessary data for the service centre is on the rating plate. The rating plate is located on the front frame of the appliance. It is visible when you open the door. Do not remove the rating plate from the appliance.

We recommend that you write the data here:

Model (MOD.):

Product number
(PNC):

Serial number (S.N.):

10. WARRANTY - AUSTRALIA AND NEW ZEALAND

FOR SALES IN AUSTRALIA AND NEW ZEALAND

APPLIANCE: CHEF BUILT-IN OVENS, COOKTOPS, FREESTANDING COOKER AND WARMING DRAWER

This document sets out the terms and conditions of the product warranties for Chef Appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should there be a manufacturing defect in your Appliance. This warranty is in addition to other rights you may have under the Australian Consumer Law.

1. In this warranty:

- a) 'ACL' or 'Australian Consumer Law' means Schedule 2 to the Competition and Consumer Act 2010;

- b) 'Appliance' means any Electrolux product purchased by you and accompanied by this document;
- c) 'ASC' means Electrolux's authorised serviced centres;
- d) 'Chef' is the brand controlled by Electrolux Home Products Pty Ltd of 163 O'Riordan Street, Mascot NSW 2020, ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited (collectively "Electrolux") of 3-5 Niall Burgess Road, Mount Wellington, in respect of Appliances purchased in New Zealand;
- e) 'Warranty Period' means the period specified in clause 3 of this warranty;
- f) 'you' means the purchaser of the Appliance not having purchased the

Appliance for re-sale, and 'your' has a corresponding meaning.

2. **Application:** This warranty only applies to new Appliances, purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) other rights and remedies under a law to which the Appliances or services relate, including any nonexcludable statutory guarantees in Australia and New Zealand.
3. **Warranty Period:** Subject to these terms and conditions, this warranty continues for in Australia for a period of 24 months and in New Zealand for a period of 24 months, following the date of original purchase of the Appliance.
4. **Repair or replace warranty:** During the Warranty Period, Electrolux or its ASC will, at no extra charge if your Appliance is readily accessible for service, without special equipment and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Electrolux may, in its absolute discretion, choose whether the remedy offered for a valid warranty claim is repair or replacement. Electrolux or its ASC may use refurbished parts to repair your Appliance. You agree that any replaced Appliances or parts become the property of Electrolux.
5. **Travel and transportation costs:** Subject to clause 7, Electrolux will bear the reasonable cost of transportation, travel and delivery of the Appliance to and from Electrolux or its ASC. Travel and transportation will be arranged by Electrolux as part of any valid warranty claim.
6. **Proof of purchase** is required before you can make a claim under this warranty.
7. **Exclusions:** You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. This warranty does not cover:
 - a) light globes, batteries, filters or similar perishable parts;
 - b) parts and Appliances not supplied by Electrolux;
 - c) cosmetic damage which does not affect the operation of the Appliance;
 - d) damage to the Appliance caused by:
 - negligence or accident;

- misuse or abuse, including failure to properly maintain or service;
- improper, negligent or faulty servicing or repair works done by anyone other than an Electrolux authorised repairer or ASC;
- normal wear and tear;
- power surges, electrical storm damage or incorrect power supply;
- incomplete or improper installation;
- incorrect, improper or inappropriate operation;
- insect or vermin infestation;
- failure to comply with any additional instructions supplied with the Appliance;

In addition, Electrolux is not liable under this warranty if:

- a. the Appliance has been, or Electrolux reasonably believes that the Appliance has been, used for purposes other than those for which the Appliance was intended, including where the Appliance has been used for any non-domestic purpose;
 - b. the Appliance is modified without authority from Electrolux in writing;
 - c. the Appliance's serial number or warranty seal has been removed or defaced
8. **How to claim under this warranty:** To enquire about claiming under this warranty, please follow these steps:
- a. carefully check the operating instructions, user manual and the terms of this warranty;
 - b. have the model and serial number of the Appliance available;
 - c. have the proof of purchase (e.g. an invoice) available;
 - d. telephone the numbers shown below.
9. **Australia:** For Appliances and services provided by Electrolux in Australia: Electrolux goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a

major failure. 'Acceptable quality' and 'major failure' have the same meaning as referred to in the ACL.

- 10. New Zealand:** For Appliances and services provided by Electrolux in New Zealand, the Appliances come with a guarantee by Electrolux pursuant to the provisions of the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act. Where the Appliance was

purchased in New Zealand for commercial purposes the Consumer Guarantee Act does not apply.

- 11. Confidentiality:** You accept that if you make a warranty claim, Electrolux and its agents including ASC may exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

Important Notice

Before calling for service, please ensure that the steps listed in clause 8 above have been followed.

AUSTRALIA

FOR SERVICE

or to find the address of your nearest authorised service centre in Australia
PLEASE CALL 13 13 49

For the cost of a local call

FOR SPARE PARTS

or to find the address of your nearest spare parts centre in Australia
PLEASE CALL 13 13 50

For the cost of a local call

NEW ZEALAND

FOR SERVICE

or to find the address of your nearest authorised service centre in New Zealand
PLEASE CALL 0800 10 66 10

FOR SPARE PARTS

or to find the address of your nearest state spare parts centre in New Zealand
PLEASE CALL 0800 10 66 20

ECook_Warr_Jul19

11. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of ap-

pliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

Customer Care Centre

Contact us if you need more help

Australia

phone:..... 13 13 49

email:..... customercare@electrolux.com.au

website:..... chefappliances.com.au

**WE ARE PART OF
THE ELECTROLUX FAMILY.
TO ADD A TOUCH OF PROFESSIONAL
INSPIRATION TO YOUR HOME,
VISIT ELECTROLUX.COM**

