

# duraprès

+ CURTIS STONE



## CORDLESS CARVE

Electric Knife Set

Carve • Slice • Serve

DCK550

# THANK YOU!

We hope you enjoy your new  
Duraprès Cordless Carve Electric Knife Set

dp.

## CONTENTS

- 4** IMPORTANT SAFEGUARDS
- 6** PARTS & ACCESSORIES
- 7** BEFORE FIRST USE
- 8** HOW TO USE
- 10** TIPS
- 11** CARE & CLEANING
- 12** WARRANTY
- 13** NOTES

## IMPORTANT SAFEGUARDS


Like any electrical appliance, the Duraprès Cordless Carve Electric Knife Set must be handled with care at all times. To ensure your own safety, the following precautions should be followed:

- 1.** Ensure the charging cord is unplugged from the outlet in the following situations:
  - When appliance is not being used.
  - Before parts are being assembled/disassembled.
  - Before cleaning.
- 2.** To avoid the risk of electric shock, never put your knife handle in water or other liquids and never operate under running water. If the handle falls into liquids with the charging cord plugged in, immediately unplug the cord from outlet and do not reach into the liquid.
- 3.** This appliance is not intended for people (including children) with reduced physical, sensory or mental capabilities, or those who lack relevant experience and knowledge, unless someone responsible for their safety supervises or directs use of the appliance.
- 4.** This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- 5.** Remove blades from handle when cleaning.
- 6.** To avoid injury, do not allow children to operate the knife. Keep away from children at all times.
- 7.** While the knife is turned on, never touch any of its moving parts. Keep hands, hair, clothing and other utensils away from the blade to avoid risk of injury to people and damage to the knife.
- 8.** If your knife appears to be damaged or malfunctioning, do not use it.

- 9.** Never use any third-party accessories not approved by the manufacturer.
- 10.** While the appliance is being charged, never let the charging cord hang over the edge of a table or counter. This reduces the risks of the knife being pulled off the area and resulting in injury to people and/or damage to the knife.
- 11.** Never allow the charging cord to contact hot surfaces, including a stove, to avoid damage to cord and potential fire or electrocution hazard.
- 12.** Be cautious when handling the sharp blades of your knife.
- 13.** To avoid any risk of fire, when storing the knife in a cabinet, always ensure the charging cord is unplugged from both the product and from the electrical outlet.
- 14.** Plug the charger directly into an electric outlet. Do not use an extension cord.
- 15.** Only use the charger supplied with the appliance and never use the charger with another appliance.
- 16.** The batteries in the Duraprès Cordless Carve electric knife can explode in a fire. Never incinerate this product.

**SAVE THESE INSTRUCTIONS  
FOR HOUSEHOLD USE ONLY**

## PARTS & ACCESSORIES

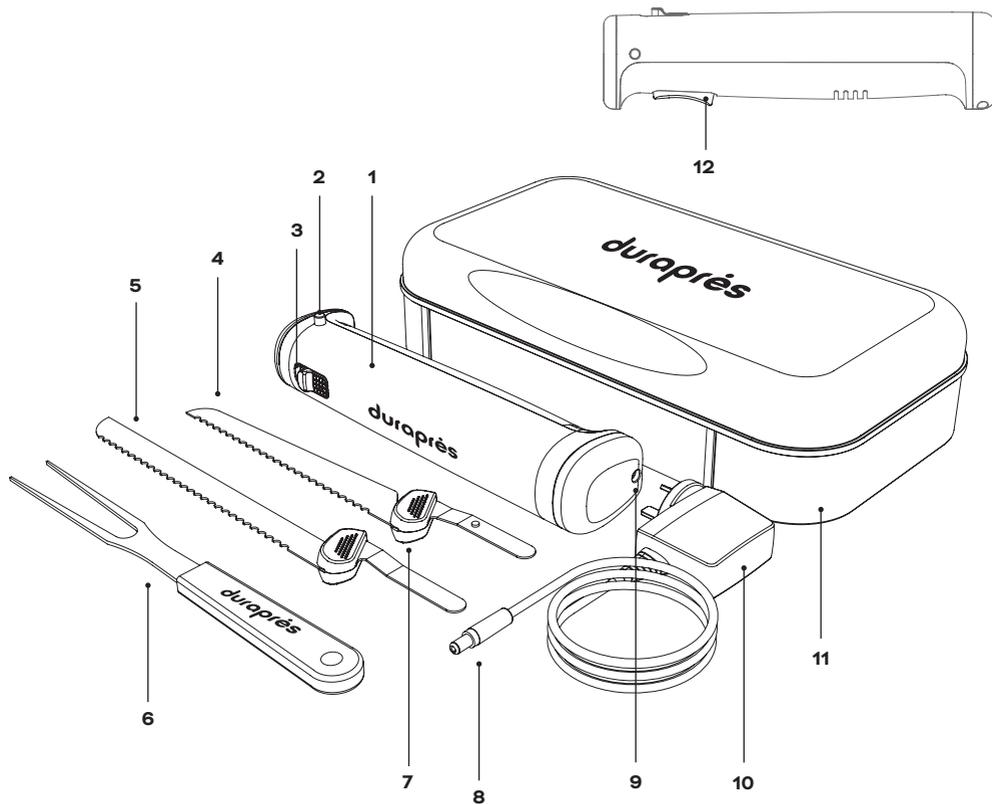

- |   |                              |    |                    |
|---|------------------------------|----|--------------------|
| 1 | HANDLE                       | 7  | BLADE RELEASE GRIP |
| 2 | BLADE RELEASE BUTTONS        | 8  | CHARGING CORD      |
| 3 | SAFETY SWITCH                | 9  | CHARGING PORT      |
| 4 | BREAD BLADE ASSEMBLY         | 10 | CHARGER            |
| 5 | CARVING BLADE ASSEMBLY       | 11 | CARRY CASE         |
| 6 | STAINLESS STEEL CARVING FORK | 12 | ON/OFF BUTTON      |

## BEFORE FIRST USE

To get the most value from your new appliance, please read these instructions carefully.

### CLEANING

Remove any dirt and dust from your knife before its first use. Clean the detachable handle with a damp cloth. Wash the blades separately in hot, soapy water. Ensure blades are not attached to handle when cleaning. Dry all parts thoroughly.



#### IMPORTANT:

**The blades on your knife are very sharp. Always handle them with care.**

### CHARGING

Your knife's battery is only partially charged. Charge the batteries completely before using the appliance. When charging, the indicator light will turn red. The knife cannot be used while connected to the charger. The batteries are completely charged when the battery indicator light turns green. It will take around 1.5 hours to fully charge from a dead battery. On a full charge, you can use your knife for approximately 60 minutes.



#### IMPORTANT:

**Only use the charger provided by the manufacturer. Do not leave your knife connected to the charger for longer than necessary, as this will reduce your battery life. Never use knife while charging.**

## HOW TO USE




### IMPORTANT:

The blades on your knife are very sharp. Always handle them with care, keeping sharp edges away from your hands, hair and body.


### ASSEMBLE YOUR BLADE

Your blade assembly consists of two pieces. Hold the end of one piece by its blade release grip. Insert its rivet into the keyhole of the other piece. Align the two pieces, ensuring the tips remain together.

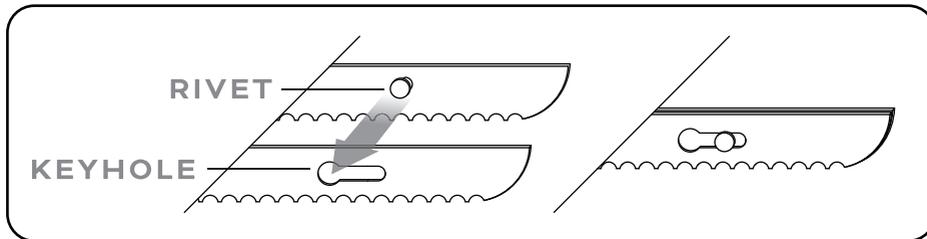

### CONNECT YOUR BLADE

Ensure your knife handle is not connected to the charger. Hold in the blade release buttons on either side of your handle. Hold blade release grip and push your blade assembly into the slots in the handle until they will go no further. Release the buttons to lock the blade assembly into place. After inserting blades, check they are secure before using.

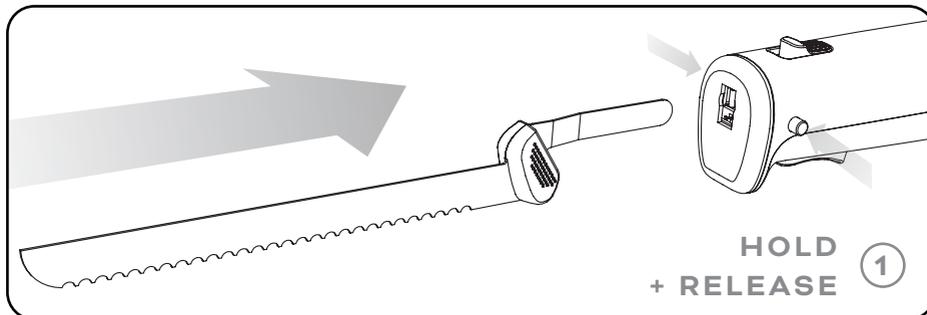

## OPERATING YOUR KNIFE


**STEP 1.** Unlock the ON/OFF button on the handle by pushing and holding the safety switch forward. Ensure you hold the knife firmly.

**STEP 2.** Hold the blade parallel to the cutting surface and while continuing to hold the safety switch forward press the ON/OFF button to begin cutting.

**NOTE:** Once electric knife is running you can release the safety switch.

**STEP 3.** Release the ON/OFF button to stop the blades moving. The safety switch will automatically return to the lock position when the ON/OFF button is released.

**NOTE:** Once electric knife is running you can release the safety switch.

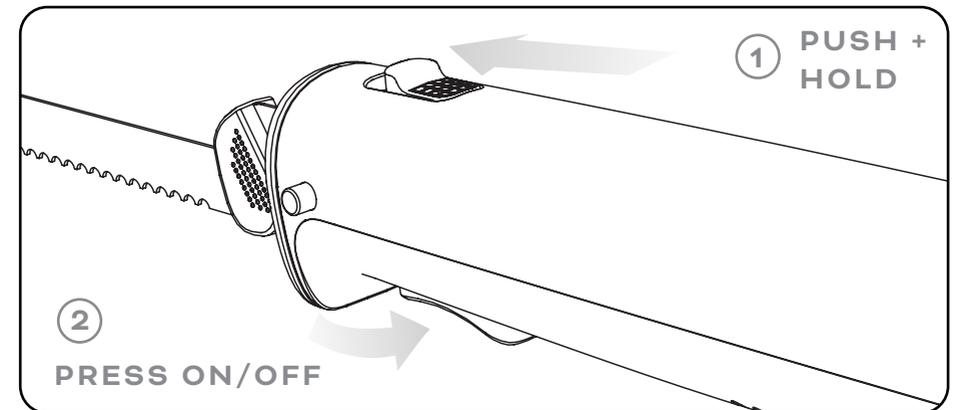

### REMOVE BLADE

Ensure your knife is turned off. Press and hold both blade release buttons with one hand. With your other hand, carefully remove the blade release grip from its slots. Separate the 2 blades with care and wash in hot soapy water and dry thoroughly.

## TIPS

1. Your knife can easily scratch your kitchen countertop. Always slice your food on a wooden or plastic cutting board.
2. Don't force your blades through the food. Let the knife cut gently at its own pace, and avoid sawing motions.
3. To keep your blades sharp, avoid cutting through hard food like bone and fruit pits.
4. After cooking your meat, let it sit for at least 10 minutes before you cut it. This gives the juices time to set and makes the meat easier to cut.
5. You can leave string on your meat, but remove any skewers before cutting.
6. Use the Duraprés Cordless Carve stainless steel carving fork to steady your meat while cutting.
7. Do not attempt to sharpen your knife's blades. This is unnecessary and may damage the appliance.
8. Your knife requires little to no maintenance. Do not attempt to service or repair this appliance yourself.
9. Should you experience any difficulty in using your knife, please contact our customer service team.

## SAFETY RELEASE

The Duraprés Cordless Carve electric knife only turns on if both the pressure-activated ON/OFF button along with the locking safety switch are enabled.

## BATTERY DISPOSAL

Always dispose of a product with a battery pack according to federal, state, and local regulations. Contact a recycling agency in your area for recycling locations. Even discharged battery packs contain some energy.

## CARE & CLEANING

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Contact the customer service team for any unusual issues you may experience.

1. The blades do not require any sharpening.
2. There is no service part inside the unit. No lubrication is needed.
3. Remove blades and wash in dishwasher, or in hot, soapy water. Dry thoroughly.
4. Clean the housing with damp cloth. Do not use abrasive cleaners.
5. Do not immerse the handle in water or other liquids, or place it under running water.
6. Store the cordless electric knife in a clean, dry place.
7. Maintenance: should be performed by an authorised service representative.
8. Wash stainless steel fork in dishwasher, or in hot, soapy water. Dry thoroughly.

## WARRANTY

This warranty covers all defects in workmanship or materials in the mechanical and electrical parts, arising under normal usage and care, for this product for a period of 24 months from the date of purchase provided you are able to present a valid proof-of-purchase. A valid proof of purchase is a receipt specifying item, date purchased, and cost of item. Product is intended for household use only. Any commercial use voids the warranty.

This warranty covers the original retail purchase. During the applicable warranty period within normal household use, we will repair or replace, at our discretion, any mechanical or electrical part which proves defective, or replace unit with a comparable model.

### **THIS LIMITED WARRANTY COVERS UNITS PURCHASED AND USED WITHIN AUSTRALIA DOES NOT COVER:**

- Damages from improper installation.
- Defects other than manufacturing defects.
- Damages from misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
- Damage from service by other than an authorised dealer or service center.
- Shipping and handling charges may apply.
- Proof of purchase is required to confirm the warranty.
- This warranty does not exclude, restrict or modify any state or federal legislation applicable to the supply of goods and services.

To register your warranty, please visit [www.durapres.com/warranty](http://www.durapres.com/warranty)

---

### **DURAPRÈS PRODUCTS CUSTOMER SERVICE INFORMATION**

Should you have any concerns, issues or questions regarding your Duraprès product please visit [www.durapres.com/contact](http://www.durapres.com/contact)

---

Food Fight Australia Pty Ltd. • Made in China

## NOTES

dp.