### Specifications

It is a requirement of State Plumbing Codes that licensed plumbers carry out all tapware installations.

All installations should comply with the relevant requirements of AS/NZS 3500 and local plumbing codes.

Pressure

[1] Maximum Hydrostatic Pressure: 1000kpa. This pressure may be exceeded only under test conditions as per AS/NZS 3500. Where hydrostatic pressure exceeds the maximum stated above, pressure-limiting valves should be installed.
[2] Recommended Maximum Hydrostatic Pressure: 500kpa (AS/NZS 3500). [3] Recommended Minimum Hydrostatic Pressure: 150kpa

Temperature:

Maximum Water Temperature: 80° C. For optimum performance, hot and cold inlet water pressure should be equal.

### Care and Maintenance

[1] Product should be inspected for surface damage prior to installation. [2] Cleaning and handling of all finishes must be performed carefully. [3] Clean products using a soft cloth with warm soapy water only. [4] Never use harsh detergents or abrasive cleaners as these will damage the product. [5] Water marks can be removed from Matt Finishes with an application of a carnauba wax based non-abrasive polish on a microfibre cloth. [6] Do not use undue pressure when cleaning and wipe in one direction only. [7] Contact with harsh chemicals such as hair dye, hair bleach etc with result in damage to the finish. [8] Tapware should never be installed using acetone silicones. [9] Avoid the use of wax based furniture creams as this can result in a build up of deposits which will detract from the appearance. [10] Rose Copper: A protective lacquer has been applied to this finish. This is required to maintain the stability of this finish and will be damaged if the above care and cleaning instructions are not followed. [11] Damage to finishes arising from improper installation or post installation use or failure to observe the above care and cleaning instructions will void all warranty agreements.

#### Warranty

Rogerseller tapware, bathroom fittings and sanitary ware are covered by a five (5) year warranty from date of purchase. For full terms and conditions please refer to rogerseller.com.au

### rogerseller

Rogerseller Showrooms -

Melbourne 173-177 Barkly Avenue Burnley VIC 3121 P 03 9429 8888

Sydney 18 Danks Street Waterloo NSW 2017

Brisbane

P 07 3251 4333

Waterloo NSW 2017 P 02 8396 8700

74-76 McLachlan Street Fortitude Valley QLD 4006 Concept Stores —

Southern Innovations (Fishwick ACT) P 02 6143 2666

Southern Innovations (Mitchell ACT) P 02 6129 7666

Southern Innovations (Albury NSW) P 02 6022 2777

Routleys Plumbing Innovations

(Malvern SA) P 08 8291 3000

rogerseller.com.au


# Arq ii by Rogerseller


Shower Mixer


Installation Instructions


rogerseller


## Arq ii by Rogerseller

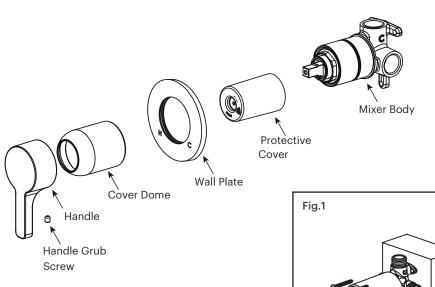

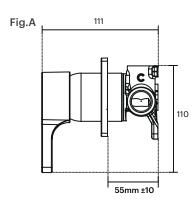

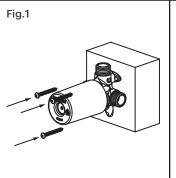

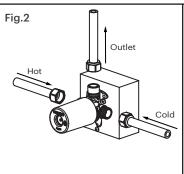

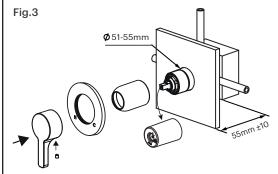

Arq ii by Rogerseller Wall Mixer

**3646000101** — Chrome

4 finishes available

### Installation

- 1. It is recommended to install in-line filters to ensure a cleaner flow of water to the mixer.
- 2. During installation and testing make sure the mixer is in the closed position and the protective cover is in place to prevent damage.
- 3. When mounting the mixer on the wall frame (as per Fig.1), take note of the dimensions shown in Fig. Aso that the finished wall is correctly positioned.
- 4. Connect water supply to the inlets as shown in the Fig.2. When connecting, USE UNION CONNECTORS OR BRAZED JOINTS CONSTRUCTED AWAY FROM THE TAP. Brazed joints ie. Heat, made at the inlets and outlets will result in damage to the ceramic cartridge and void the warranty.
- 5. The mixer must be installed in the vertical position to ensure correct handle orientation.
- 6.Do not high pressure test the supply system with the outlet blocked and the tap open, as this may damage the ceramic cartridge.
- 7.To complete the installation, as per Fig.3, remove the protective cover and screw on the cover dome. Then carefully guide the wall plate over the cover and press firmly against the wall. Fit the handle to the cartridge, securing it with the grub screw.
- 8. Prior to introducing the mains supply, open the lever handle in the mixed position, midway between full hot and full cold. Remove any aerators or restrictors from outlets. Then introduce the mains water to flush the supply lines. Reinstall the aerators or restrictors.

Please leave instructions with the product or home owner