


Cleaning and care

Cleaning the central spout with integrated cappuccinatore

If the central spout is in the uppermost position, it cannot be dismantled. The central spout must be moved into the maintenance position to do this.

- Touch ↪ for three seconds.

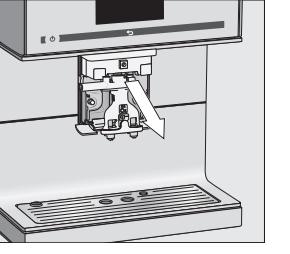


Make sure that all parts are tightly connected to one another.

- Push the dispensing unit back into the central spout and refit the stainless steel cover.
- Touch OK.


Cleaning the brew unit by hand

Clean the brew unit **by hand** only under warm running water. **Do not use washing-up liquid or any other cleaning agent.**

- Open the door.

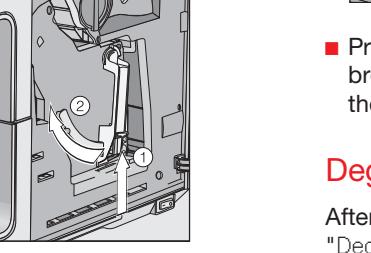

- Pull the stainless steel cover forwards and off and then pull the dispensing unit off.

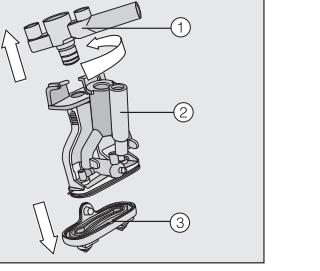

- Twist the upper section (1) with the holder for the milk pipework and pull it off. Then pull the Y-shaped piece (2) off. Remove the dispensing spouts (3).


■ Clean all parts thoroughly.

■ Clean the surfaces of the central spout with a damp cloth.

Tip: If necessary, clean the milk pipework under running water with the brush supplied.

■ Fit the dispensing unit back together. Push the spouts (3) firmly back onto the dispensing unit.

- Wipe any remaining coffee off the two filters. One filter is located in the funnel and the other to the left of the funnel.

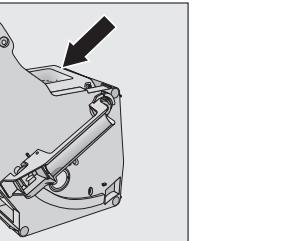


- Dry the funnel to prevent ground coffee sticking to it the next time a coffee is prepared.
- Carefully clean the inside of the coffee machine.
- Push the brew unit back into the coffee machine, making sure it is straight.
- Touch OK.

Cleaning the brew unit by hand

Clean the brew unit **by hand** only under warm running water. **Do not use washing-up liquid or any other cleaning agent.**

- Open the door.

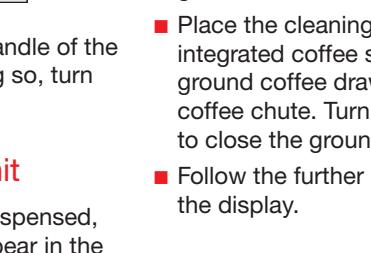

- Press the button under the handle of the brew unit (1) and, whilst doing so, turn the handle anti-clockwise (2).

Degreasing the brew unit

After 200 portions have been dispensed, "Degrease the brew unit" will appear in the display. This message will not go out until the brew unit has been degreased.

You need 1 Miele cleaning tablet to degrease the brew unit. The process takes approx. 12 minutes.

When you have removed the brew unit, do not change the position of the handle on the brew unit.

- Press the button under the handle of the brew unit (1) and, whilst doing so, turn the handle to the left (2).

■ Carefully pull the brew unit out of the coffee machine.

- Follow the further instructions given in the display.


- The cleaning process cannot be cancelled once it has started. It must be completed through to the end.
- Touch "Maintenance" in the main menu and then "Degrease the brew unit".

The maintenance programme will then start.

- Follow the instructions in the display.

When "Place a cleaning tablet in the ground coffee drawer and then close it" appears in the display:

- Open the door.

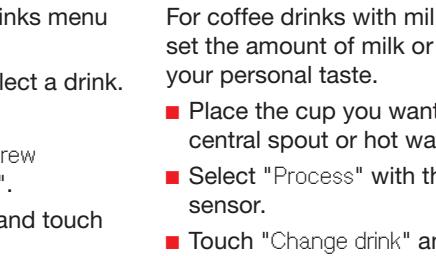

- Turn the handle to the left to remove the ground coffee drawer.

- Place the cleaning tablet in the integrated coffee scoop and push the ground coffee drawer into the ground coffee chute. Turn the handle to the right to close the ground coffee chute.
- Follow the further instructions given in the display.

- Touch OK again to save your changed settings.

Special instructions

Drink parameters

You can change the amount of coffee, brewing temperature and pre-brewing for each drink.

- Select "Process" from the drinks menu using the > arrow sensor.
- Touch "Change drink" and select a drink.

- Touch "Drink parameters".

- Select "Create Profile".
- Enter the name you want (max. 8 characters) and then touch "Save".

Creating a User profile

- Select "Process" with the > arrow sensor.
- Touch "Change drink" and select a drink.

- Touch "OK" again to save your changed settings.

The drink will be made and "Save" will appear in the display as soon as the minimum dispensing amount is reached.

- When the cup is filled to the level you want, touch "Save".

If you want to change the portion size for coffee drinks made with milk or hot water, the ingredients (components) which make up the drink will be saved one after the other while the drink is being made.

Creating and processing drinks in a profile

- Touch "Create drink" and select a drink.
- Change the portion size or drink parameters.

- Enter a name for the new drink (maximum 8 characters) and touch "Save".

When you have created at least one drink, you can choose from the following options under "Process drink":

- Change drink (portion size, drink parameters and name)
- Delete drink

The "Evaporate" function removes water from the system and should be used if the machine is not going to be used for a longer period of time or has to be moved.

Demo mode is intended for use in showrooms or at exhibitions. Do not activate this function for domestic use.

The following settings will not be lost: Language, Time, Date, Number of drinks dispensed or Descaling method.

Settings

Changing settings

- Touch ↪ to save the setting.
- Select "Settings" ↗.
- Select the option you want and change the setting as required.

Tip:

Touching ↪ takes you back to the previous menu.

User profiles

You can save frequently made drinks in a profile with your own individual settings (see "User profiles").

- Select "Profiles" from the main menu.

Expert mode

In Expert mode you can change the **amount of coffee** and the **portion size** while the drink is being made.

- Touch OK to save the setting.

Tip: Touching ↪ takes you back to the previous menu.

The setting will **not** be saved and will only apply for the current drink.

You can activate Expert mode from the "Settings" ↗ menu.

Processing profiles

When you have created at least one profile, you can choose from the following options under "Process":

- Change name
- Delete profile
- Change profile

Creating and processing drinks in a profile

- Touch the segments and adjust the indicator (small triangle) as you wish.

Descaling

Descaling method (automatic/manual)

- If you select "Automatic descaling", the "Start time" will be displayed.

Lighting

Brightness (Appliance switched on or switched off)

- Switch off after

Info

System lock

Water hardness

Display brightness

Volume

Buzzer tones

Cup heating

Keypad tone

Spout adjustment

On / Off

Service

Evaporating the coffee machine

Demo mode

The height of the central spout **cannot** be manually adjusted.

The "Evaporate" function removes water from the system and should be used if the machine is not going to be used for a longer period of time or has to be moved.

Demo mode is intended for use in showrooms or at exhibitions. Do not activate this function for domestic use.

The following settings will not be lost: Language, Time, Date, Number of drinks dispensed or Descaling method.

SPECIAL INSTRUCTIONS

CLEANING AND CARE

SPECIAL INSTRUCTIONS

SETTINGS

Quick Start Guide
Coffee machine

These short instructions are not a substitute for the operating instructions supplied with the appliance. Please read the Operating and Installation Instructions booklet supplied with your machine before using it for the first time and take note of the Warning and Safety instructions, as well as the full descriptions on how to use your machine.

