


Operating and installation instructions

Stainless steel TepanYaki

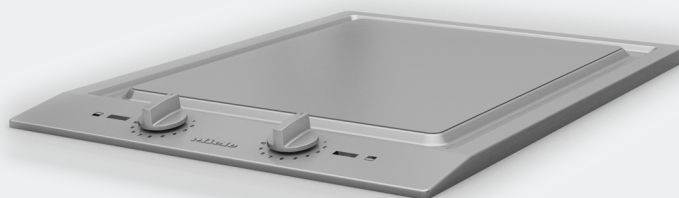

To prevent the risk of accidents or damage to the appliance, it is **essential** to read these instructions before it is installed and used for the first time.

Contents

Warning and Safety instructions	3
Caring for the environment	12
Overview	13
TepanYaki	13
Indicators	13
Using for the first time	14
Cleaning the CombiSet for the first time	14
Switching on the CombiSet for the first time	14
Power level range	15
Operation	16
Operating controls	16
Switching on	16
Switching off	16
Residual heat indicator	16
Useful tips	17
Cleaning and care	18
Frying surface	19
Stainless steel frame/control panel	19
Operating controls	19
Problem solving guide	20
Optional accessories	21
Safety instructions for installation	22
Safety distances	23
Installation notes	24
Building-in dimensions	25
Building-in several CombiSets	26
Installation	28
Electrical connection	32
After sales service, data plate, warranty	34

Warning and Safety instructions

This appliance complies with all relevant safety requirements. Inappropriate use can, however, lead to personal injury and damage to property.

To avoid the risk of accidents or damage to the appliance, please read these instructions carefully before installation and before using it for the first time. They contain important notes on installation, safety, use and maintenance.

Miele cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.

Keep these instructions in a safe place and ensure that new users are familiar with the content. Pass them on to any future owner.

Warning and Safety instructions

Correct application

- ▶ This Tepan plate is designed for domestic use and for use in similar environments by guests in hotel or motel rooms, bed & breakfasts and other typical living quarters. This does not include common/shared facilities or commercial facilities within hotels, motels or bed & breakfasts.
- ▶ This appliance is not suitable for outdoor use.
- ▶ It is intended to cook food and keep it warm. Any other use is not supported by the manufacturer and could be dangerous.
- ▶ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning its use by a person responsible for their safety, and are able to recognise the dangers of misuse.

Safety with children

- ▶ Young children must not be allowed to use this appliance.
- ▶ Older children may use the appliance only when its operation has been clearly explained to them and they are able to use it safely. They must be aware of the potential dangers caused by incorrect operation.
- ▶ Children must not be allowed to clean the appliance unsupervised.
- ▶ Please supervise children in the vicinity of the appliance, and do not let them play with it.
- ▶ The appliance gets hot when in use and remains hot for a while after being switched off. Keep children well away from the appliance until it has cooled down and there is no danger of burning.
- ▶ Danger of burning!
Do not store anything which might arouse a child's interest in storage areas above or next to the appliance. Otherwise they could be tempted into climbing onto the appliance.
- ▶ Danger of suffocation! Children may be able to wrap themselves in packing material or pull it over their heads with the risk of suffocation. Keep children away from any packing material.

Warning and Safety instructions

Technical safety

- ▶ Repairs and other work by unqualified persons could be dangerous. Installation, maintenance work and repairs to electrical appliances must only be carried out by a Miele approved service technician.
- ▶ A damaged appliance can be dangerous. Always check for visible signs of damage. Never use a damaged appliance.
- ▶ Reliable and safe operation of this appliance can only be assured if it has been connected to the mains electricity supply.
- ▶ The electrical safety of this appliance can only be guaranteed when continuity is complete between it and an effective earthing system. It is most important that this basic safety requirement is present and tested regularly and, where there is any doubt, the household wiring system should be inspected by a qualified electrician.
- ▶ Before connecting the appliance to the mains supply, ensure that the connection data on the data plate (voltage and frequency) match the mains electricity supply.
This data must correspond in order to avoid the risk of damage to the appliance. Consult a qualified electrician if in any doubt.
- ▶ Do not connect the appliance to the mains electrical supply by a multi-socket adapter or extension lead. These are a fire hazard and do not guarantee the required safety of the appliance.
- ▶ For safety reasons, this appliance may only be used when it has been built in.
- ▶ This appliance must not be installed and operated in mobile installations (e.g. on a ship).
- ▶ Never open the casing of the appliance.
Touching or tampering with electrical connections or components and mechanical parts is highly dangerous to the user and can cause operational faults.

Warning and Safety instructions

- ▶ The manufacturer's warranty will be invalidated if the appliance is not repaired by a Miele approved service technician.
- ▶ Faulty components must only be replaced by genuine Miele spare parts. The manufacturer can only guarantee the safety of the appliance when Miele replacement parts are used.
- ▶ The appliance is not intended for use with an external timer switch or a remote control system.
- ▶ If the plug has been removed or the connection cable is not supplied with a plug, the appliance must be connected to the mains supply by a suitably qualified electrician.
- ▶ If the mains connection cable is damaged, it must be replaced with a special connection cable type H 05 VV-F (PVC insulated), available from Miele, by a Miele approved service technician or suitably qualified electrician in order to avoid a hazard. See "Electrical connection".
- ▶ During installation, maintenance and repair work, the appliance must be disconnected from the mains electricity supply. It is only completely isolated from the electricity supply when:
 - the mains circuit breaker is switched off, or
 - it is switched off at the wall socket and the plug is withdrawn from the socket. Do not pull the mains connection cable but the mains plug to disconnect your appliance from the mains electricity supply.
- ▶ Danger of electric shock!
Do not use the appliance if it is faulty. Switch it off immediately, disconnect it from the mains electricity supply and contact Miele.

Warning and Safety instructions

► If the appliance is installed behind a furniture panel (e.g. a door), ensure that the door is never closed whilst the appliance is in use. Heat and moisture can build up behind a closed furniture panel and cause subsequent damage to the appliance, the housing unit and the floor. Do not close the door until the residual heat indicators have gone out.

Correct use

- ▶ The appliance gets hot when in use and remains hot for a while after being switched off. There is a danger of burning until the residual heat indicators go out.
- ▶ Due to the high temperatures radiated, objects left near the appliance when it is in use could catch fire.
Do not use the appliance to heat up the room.
- ▶ Oil and fat can overheat and catch fire. Do not leave the appliance unattended when cooking with oil and fat. If it does ignite, do not attempt to put the flames out with water.
Disconnect the appliance from the mains and use a suitable fire blanket, saucepan lid, damp towel or similar to smother the flames.
- ▶ Flames could set the grease filters of a rangehood on fire. Do not flambé under a rangehood.
- ▶ Spray canisters, aerosols and other inflammable substances can ignite when heated. Therefore do not store such items or substances in a drawer under the TepanYaki. Cutlery inserts must be heat-resistant.
- ▶ Do not heat up food in closed containers, e.g. tins or sealed jars, on the appliance, as pressure can build up in the containers, causing them to explode.
- ▶ Do not cover the appliance, e.g. with a cover, a cloth or protective foil. The material could catch fire, shatter or melt if the appliance is switched on by mistake or if residual heat is still present.
- ▶ When the appliance is switched on either deliberately or by mistake, or when there is residual heat present, there is the risk of any metal items left on the appliance heating up, with the danger of burning. Depending on the material, other items left on the appliance could also melt or catch fire. Do not use the appliance as a resting place. Switch the appliance off after use.

Warning and Safety instructions

- ▶ You could burn yourself on the hot Tepan plate. Protect your hands with heat-resistant pot holders or gloves when handling hot pots and pans. Do not let them get wet or damp, as this causes heat to transfer through the material more quickly with the risk of scalding or burning yourself.
- ▶ When using an electrical appliance, e.g. a hand-held mixer, near the TepanYaki, ensure that the cable of the electrical appliance cannot come into contact with the hot Tepan plate. The insulation on the cable could become damaged.
- ▶ The appliance becomes very hot. Do not use plastic utensils. Even heat-resistant plastic utensils are unsuitable.
- ▶ Where several CombiSets are installed side by side:
Hot objects can damage the seal of the cover strip between the appliances. Do not place hot pans near or on the cover strip.

Cleaning and care

- ▶ Do not use a steam cleaning appliance to clean the Tepan plate. The steam could reach electrical components and cause a short circuit.

Caring for the environment


Disposal of the packing material

The transport and protective packaging has been selected from materials which are environmentally friendly for disposal, and can normally be recycled.

Recycling the packaging reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites. Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation.

Disposing of your old appliance


Electrical and electronic appliances often contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance. Therefore, please do not dispose of your old appliance with your household waste.

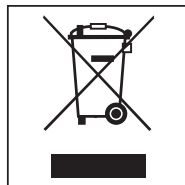

Please dispose of it at your local community waste collection / recycling centre.


Ensure that your old appliance presents no danger to children while being stored for disposal.

TepanYaki

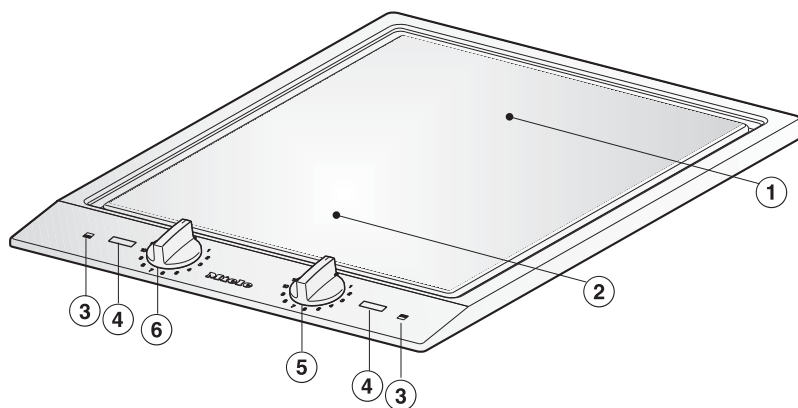

- ① Rear Tepan plate
- ② Front Tepan plate
- ③ Symbols to indicate which part of the Tepan plate the controls are for
- ④ Indicators
- ⑤ Control for rear Tepan plate
- ⑥ Control for front Tepan plate

 Indicators



- ⑦ In-operation indicator
- ⑧ Temperature indicator light
- ⑨ Residual heat indicator

Using for the first time

- Please stick the extra data plate for the appliance supplied with this documentation in the space provided in the "After sales service, data plate, warranty" section of this booklet. Alternatively, the additional label can be stuck near the appliance if the appliance markings are not visible after installation.
- Remove any protective wrapping and stickers (but not the data plate).

Cleaning the CombiSet for the first time

- Clean all surfaces with a damp cloth, and then wipe dry.

Switching on the CombiSet for the first time

The smell and any vapours given off do not indicate a faulty connection or appliance and they are not hazardous to health.

Power level range

Cooking process	Setting range
Keeping cooked food warm	1–2
Steaming fruit, e.g. apple slices, peach halves, sliced bananas, etc.	2–4
Gentle stir-frying of vegetables, e.g. leeks, sliced mushrooms, green/red capsicum strips, onion rings, etc.	5–7
Gentle frying of breaded or battered fish	7–9
Rapid frying in succession of meat, fish, fried eggs, pancakes etc.	9–11
Frying hashbrowns, prawns, corn-on-the-cob	11–12

These settings are only a guide. The actual cooking time will depend on the type of food, its texture and thickness.

Operation

The Tepan plate is divided into two separate cooking zones which can be switched on and regulated independently of one another. The entire area can be used when cooking large quantities of food. When cooking smaller quantities, the front zone can be used for cooking whilst the rear zone can be used to keep food warm using a lower power setting.

Operating controls

The controls must not be turned past 12 to 0.

Switching on



Fire hazard!

Do not leave the appliance unattended whilst it is being used.

- Turn the control clockwise to the required power level.

The in-operation indicator and the temperature indicator will light up. The residual heat indicator will light up after a certain temperature has been reached.

The temperature indicator light will switch on and off intermittently in conjunction with the heating element.

Switching off

- Turn the control anti-clockwise to 0.

Residual heat indicator

If the appliance is still hot, the residual heat indicator will light up after it has been switched off.

The residual heat indicator remains on until the Tepan plate is cool enough to touch.

Danger of burning!

Do not touch the Tepan plate while the residual heat indicator remains on.

Useful tips

Wipe the surface of the Tepan plate before each use with a damp cloth to remove any dust or other residue.

- Pre-heat the Tepan plate thoroughly for 8-10 minutes at the power level that you are going to be using for cooking. Pre-heat at power level 12 if you are going to be cooking at settings 9-12.
- It is important to get the Tepan plate sufficiently hot before use, particularly with meat. If it is not hot enough, the meat will lose too much juice.
- You only need to use the minimum amount of oil or fat when cooking on the Tepan plate. With marinated food, no fat or oil is needed. Wait until the temperature indicator light has gone out before adding cooking fat.
- Only use fats and oils which can be heated to high temperatures.
- Marinating often improves the flavour of food to be cooked.
- Pat wet food dry with kitchen paper before cooking to prevent it spitting.
- To prevent meat drying out, do not season with salt until after it has been cooked.

Cleaning and care



Danger of burning!

Before cleaning the appliance, make sure that you have switched it off and that it has cooled down.



Danger of injury!

The steam from a steam cleaning appliance could reach electrical components and cause a short circuit.

Do not use a steam cleaner to clean the appliance.

The use of unsuitable cleaning agents can cause the surfaces to discolour or alter.

The external surfaces of this appliance are all susceptible to scratching.

Remove any cleaning agent residues immediately.

Allow the CombiSet to cool down before cleaning.

- The CombiSet and accessories should be cleaned after each use.
- Dry the CombiSet after using water to clean it. This helps prevent lime deposits.

Unsuitable cleaning agents

To avoid damaging the surfaces of your appliance, do not use:

- cleaning agents containing soda, ammonia, acids or chlorides,
- cleaning agents containing descaling agents,
- stain or rust removers,
- abrasive cleaning agents, e.g. powder cleaners and cream cleaners,
- solvent-based cleaning agents,
- dishwasher cleaner,
- grill and oven cleaners,
- glass cleaning agents,
- hard, abrasive brushes or sponges, e.g. pot scourers, brushes or sponges which have been previously used with abrasive cleaning agents,
- dirt erasers.

Frying surface

- Use a spatula to remove any large particles immediately.
- Allow the appliance to cool down until it can be touched by hand, and then use a solution of hot water and washing-up liquid to soften the soiling. Clean the surface with the rough side of a non-scouring sponge and a few drops of Miele Ceramic and stainless steel cooktop cleaner (see "Optional accessories"). Finally wipe with a damp cloth and dry thoroughly.

Always use clean water to wipe the appliance to ensure that every trace of cleaning agent has been removed. Any remaining traces could affect food the next time you use the appliance.

Important - Conditioning agents for stainless steel must not be used on the frying surface.

Stainless steel frame/control panel

- Clean the frame and the control panel with a solution of warm water and a little washing-up liquid applied with a soft sponge.

You can also use a ceramic and stainless steel cleaning agent. We recommend using a stainless steel conditioning agent to help prevent resoiling (see "Optional accessories").

Do not use a ceramic and stainless steel cleaner or stainless steel conditioning agent on the **printing**. This would rub the printing off. These areas should only be cleaned with a solution of warm water and a little washing-up liquid applied with a soft sponge.


Operating controls

- Clean the control(s) with a solution of warm water and a little washing-up liquid applied with a soft sponge. Stubborn soiling should be soaked first.
- Dry the control(s) with a clean cloth.

Problem solving guide

With the aid of the following guide, minor problems can be easily corrected without contacting Miele. If, after reading this guide, you can't remedy the problem yourself, please call Miele (see back cover for details).

Please note, however, that a call-out charge will be applied to unnecessary service visits where the problem could have been rectified as described in these operating instructions.

 **Danger of injury!** Installation, maintenance and repairs may only be carried out by a suitably qualified and competent person authorised by Miele. Repairs and other work by unqualified persons could be dangerous.
Miele cannot be held liable for unauthorised work.
Do not attempt to open the casing of the appliance yourself.

Problem	Possible cause and remedy
The appliance does not heat up.	The appliance is not being supplied with electricity. ■ Check if the circuit breaker has tripped. Contact an electrician or Miele (for the minimum fuse rating, see data plate).

Miele offers a range of useful accessories, as well as cleaning and conditioning products for your appliance.

These products can be ordered from the Miele online shop.

 
They can also be ordered directly from Miele (see end of this booklet for contact details).

Original Miele ceramic and stainless steel cooktop cleaner 250 ml



Removes heavy soiling, limescale deposits and aluminium residues.

Original Miele all purpose microfibre cloth



Removes finger marks and light soiling.


Safety instructions for installation

Fit the wall units and rangehood before fitting the CombiSet to avoid damaging it.

- ▶ The veneer or laminate coatings of worktops (or adjacent kitchen units) must be treated with 100 °C heat-resistant adhesive which will not dissolve or distort. Any splashbacks must be of heat-resistant material as well.
- ▶ The TepanYaki must not be installed directly next to a salamander (CS 1421). It is essential to maintain a distance of at least 150 mm between these two appliances.
- ▶ The CombiSet must not be installed over a fridge, fridge-freezer, freezer, dishwasher, washing machine, washer-dryer or tumble dryer.
- ▶ When installing the CombiSet, make sure that the connection cable cannot come into contact with hot appliance parts.
- ▶ After installation, the connection cable must not come into contact with any moving kitchen component (e.g. a drawer) or be subject to mechanical obstruction which could damage it.
- ▶ Observe carefully the safety clearances listed on the following pages.

All dimensions in this instruction booklet are given in mm.

Safety distance above the CombiSet

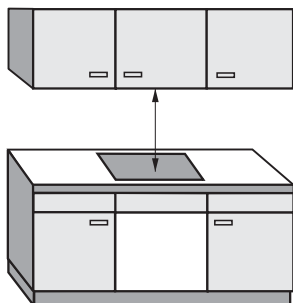

A minimum safety distance must be maintained between the CombiSet and the rangehood above it. See the rangehood manufacturer's operating and installation instructions for details.

If the manufacturer's instructions are not available for the rangehood, a minimum safety distance of 760 mm must be maintained.

For any flammable objects, e.g. utensil rails, wall units etc., a minimum safety distance of 760 mm must be maintained between these objects and the highest part of the CombiSet below.

When two or more appliances which have different safety distances are installed together below a rangehood, you should observe the greatest safety distance.

Safety distances to the sides and back of the appliance

Ideally the CombiSet should be installed with plenty of space on either side. There may be a wall at the rear or a tall unit or wall on one side (right or left), taking into account the distances below. On the other side, however, no tall unit or wall should stand closer than 300 mm to the edge of the CombiSet. Before installing the CombiSet, check that the below clearance requirements are met.


Minimum horizontal distance from the back edge of the CombiSet to a combustibile surface:
50 mm

Minimum horizontal distance from the right or left edge of the CombiSet to a combustibile surface::

40 mm	CS 1212-1
	CS 1221-1
	CS 1222
50 mm	CS 1112
	CS 1223
	CS 1234-1
	CS 1327
150 mm	CS 1312
	CS 1322

Installation notes


Seal between the CombiSet and the worktop

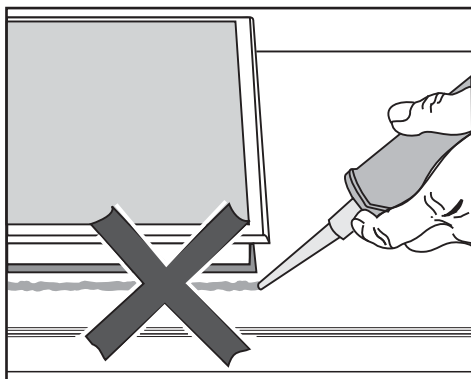


Do not use sealant between the CombiSet and the worktop. This could result in damage to the CombiSet or the worktop if the CombiSet ever needs to be removed for servicing.

The sealing strip under the edge of the top part of the appliance provides a sufficient seal for the worktop.

Tiled worktop

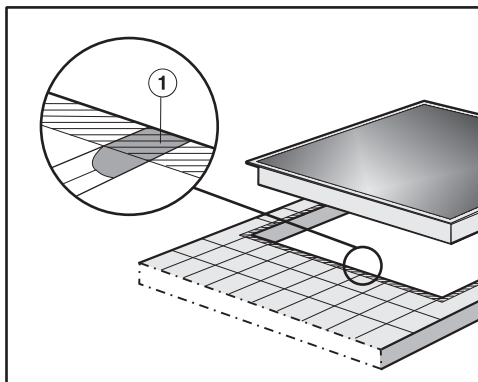


Grout lines ① and the hatched area underneath the CombiSet frame must be smooth and even. If they are not the CombiSet will not sit flush with the worktop and the sealing strip underneath the top part of the appliance will not provide a good seal between the appliance and the worktop.

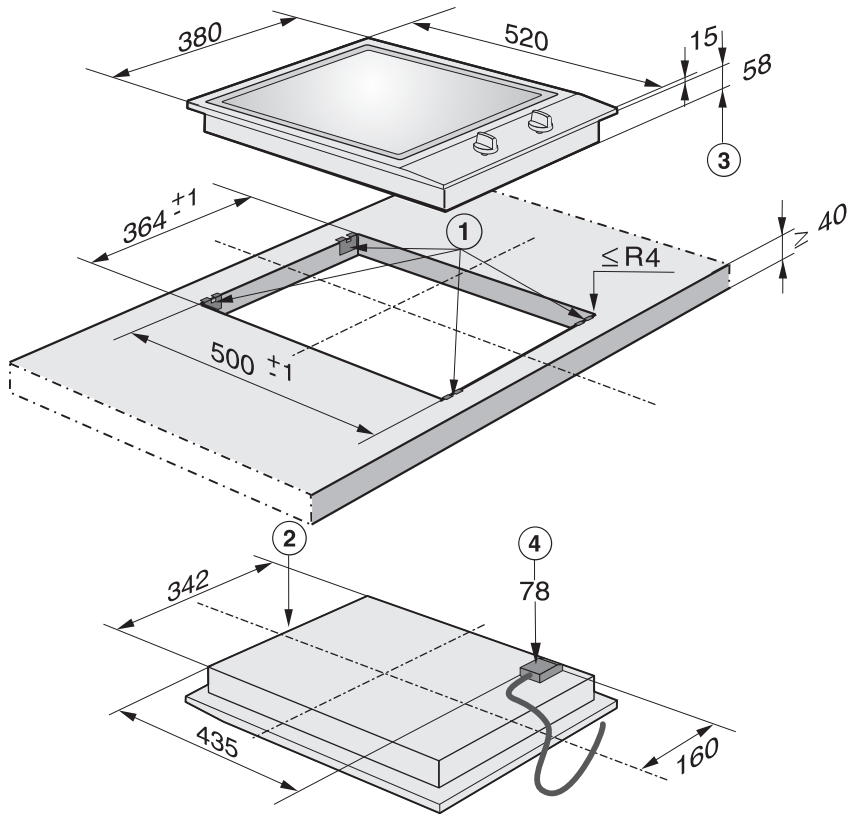

- ① Spring clamps
- ② Front
- ③ Installation height
- ④ Mains connection box with mains connection cable, L = 2000 mm

Building-in several CombiSets

Example: 3 CombiSets

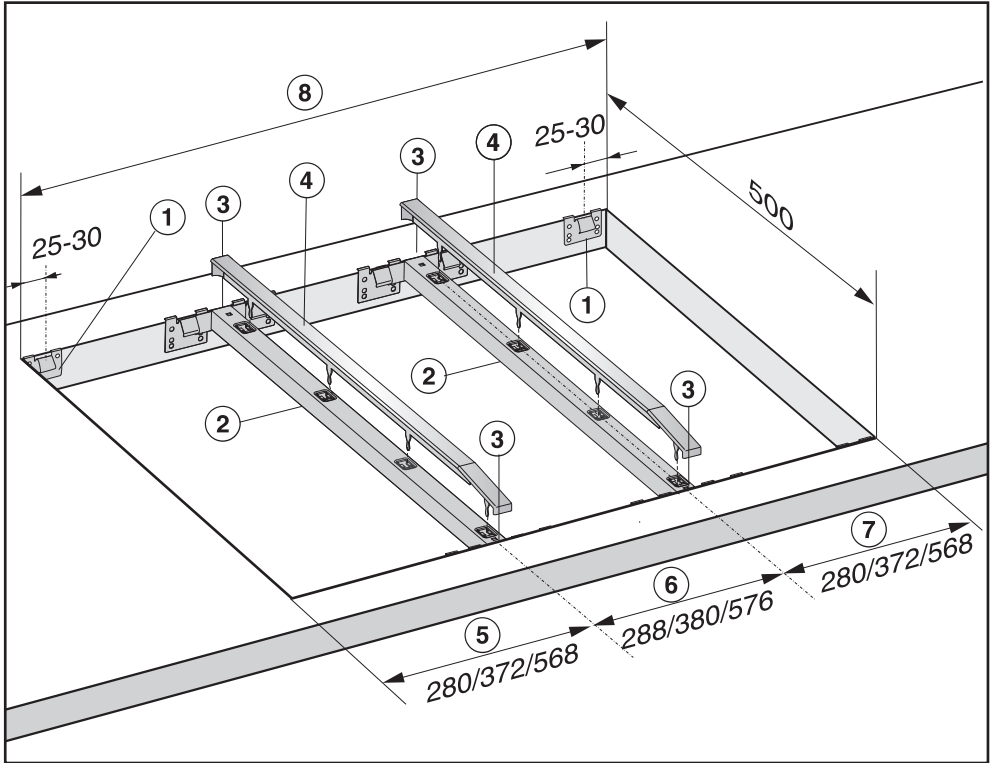

- ① Spring clamps
- ② Spacer bars
- ③ Gap between spacer bar and worktop
- ④ Cover strips
- ⑤ CombiSet width minus 8 mm
- ⑥ CombiSet width
- ⑦ CombiSet width minus 8 mm
- ⑧ Worktop cut-out

Calculating the worktop cut-out

The frames of the CombiSets overlap the worktop at the outside right and left by 8 mm on each side.

- Add up the widths of the CombiSets and subtract 16 mm from this figure.

Example:

$$288 \text{ mm} + 288 \text{ mm} + 380 \text{ mm} = 956 \text{ mm} - 16 \text{ mm} = 940 \text{ mm}$$

The CombiSets are 288 mm, 380 mm or 576 mm wide depending on model (see "Building-in dimensions").

Spacer bars

When building-in several CombiSets, an additional spacer bar must be fitted for each additional CombiSet. The position for securing the spacer bar will depend on the width of the CombiSet.

Installation with a downdraft extractor

Please refer to the separate "Downdraft extractor with CombiSet" instruction manual for details about worktop cut-out dimensions and fitting spacer bars.

Installation



Preparing the worktop

- Make the worktop cut-out as shown in "Building-in dimensions" or as calculated (see "Installation of several appliances"). Observe the safety distances (see "Safety distances").

Wooden worktops

- Seal the cut surfaces on wooden worktops with a suitable sealant to avoid swelling caused by moisture. The sealant must be heat-resistant.





Make sure the sealant does not come into contact with the top surface of the worktop.

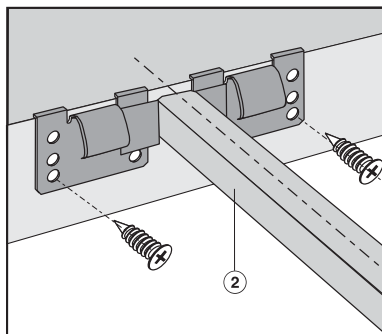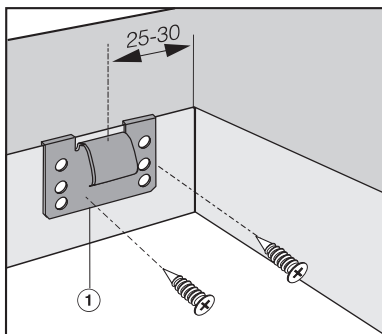

- Position the spring clamps ① and spacer bars ② on or at the top edge of the cut-out in the positions shown.
- Secure the spring clamps ① and spacer bars ② with the 3.5 x 25 mm wood screws supplied.

Granite and marble worktops

You will need heavy duty double-sided tape (not supplied) to secure the spring clamps and spacer bars.

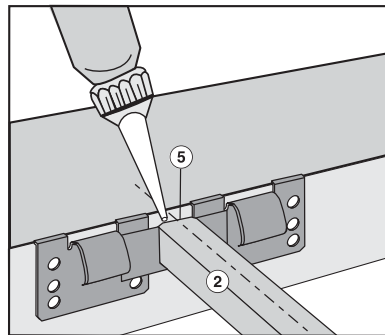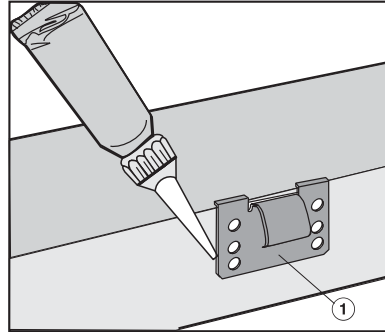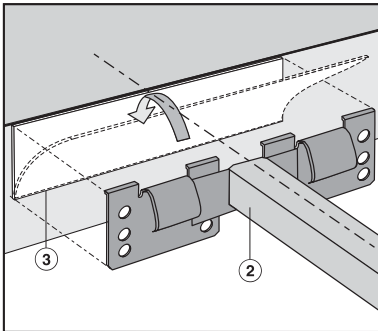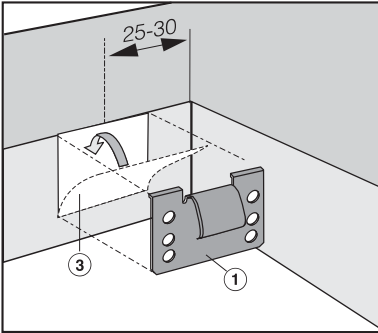

- Stick the tape ③ to the top edge of the cut-out in the positions shown in the diagram.
- Position the spring clamps ① and spacer bars ② on or at the top edge of the cut-out and press them firmly into place.

- Apply silicone to the side and lower edges of the spring clamps ① and the spacer bars ②.
- Then fill the gap ⑤ between the spacer bar ② and the worktop with silicone.

Installation

Installation with a downdraft extractor

Please refer to the separate "Downdraft extractor with CombiSet" instruction manual for details about installing a downdraft extractor with a CombiSet appliance.

Installing the CombiSet


- Feed the mains connection cable down through the cut-out.
- Starting at the front, position the CombiSet in the worktop cut-out.
- Using both hands, press down evenly on the edges of the CombiSet until it clicks into position. When doing this, make sure that the seal underneath the appliance sits flush with the worktop. This is important to ensure an effective seal with the worktop.

Do not use sealant (e.g. silicone).

If the seal does not meet the worktop correctly on the corners, the corner radii ($\leq R4$) can be carefully scribed to suit.

Installing several CombiSets

- Push the built-in CombiSet to the side until the holes in the spacer bar can be seen.

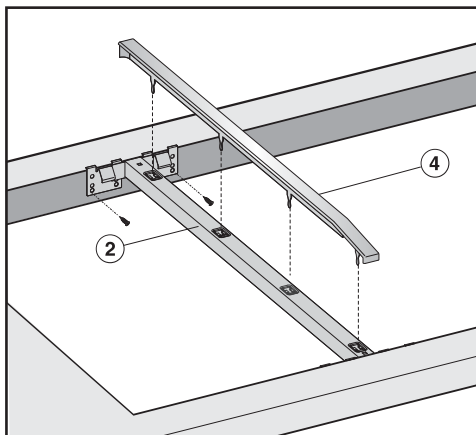

- Fit the cover strip ④ in the holes in the spacer bar ②.
- Starting at the front, position the next CombiSet in the worktop cut-out.
- Proceed as described previously.

Connecting the CombiSet

- Connect the CombiSet(s) to the mains electricity supply.
- Check that each CombiSet works.

Removing the CombiSet

If the CombiSet cannot be accessed from below, you will need a special tool to remove it.

- If the CombiSet can be accessed from below, push it out from below. Push the rear side out first.

Electrical connection

All electrical work must be carried out by a suitably qualified and competent person in strict accordance with current local and national safety regulations. Connection must be made via a switched socket. This will make it easier for service technicians should the appliance need to be repaired. The electrical socket must be easily accessible after installation.



Danger of injury!

Miele cannot be held liable for unauthorised installation, maintenance and repair work as this can be dangerous to users. Miele cannot be held liable for damage or injury caused by incorrect installation, maintenance or repair work, or by an inadequate or faulty earthing system (e.g. electric shock). If the plug has been removed or the connection cable is not supplied with a plug, the CombiSet must be connected to the mains supply by a suitably qualified electrician. If the appliance is to be hard-wired, an additional means of disconnection must be provided for all poles in accordance with the wiring rules. When switched off, there must be an all-pole contact gap of at least 3 mm in the switch (including switch, fuses and relays). Connection data is shown on the data plate. It must match the mains electrical supply. After installation, ensure that all electrical components are shielded and cannot be accessed by users.

Total power output

See data plate.

Connection

AC 230 V, 50 Hz

The voltage and rated load are given on the data plate. Please ensure these match the household mains supply.

Residual current device

For extra safety, it is advisable to protect the appliance with a suitable residual current device (RCD) with a trip range of 30 mA.

Replacing the mains connection cable



Danger of electrical shock!

The mains connection cable must be replaced by a suitably qualified and competent person in accordance with current local and national safety regulations.

If the mains cable needs to be replaced, it must be replaced with a special connection cable, type H 05 VV-F (PVC insulated), available from Miele, by a Miele approved service technician or suitably qualified electrician in order to avoid a hazard.

The connection data is given on the data plate.

After sales service, data plate, warranty

After sales service

In the event of any faults which you cannot easily remedy, please contact Miele.

See back of this booklet for contact details.

Please quote the model and serial number of your appliance when contacting Miele.

Data plate

Space in which to stick the extra data plate supplied with the appliance. Ensure that the model number is the same as the one on the back of these operating instructions.

Warranty

The manufacturer's warranty for this appliance is 2 years.

For further information, please refer to your warranty booklet.

Miele Australia Pty. Ltd.

ACN 005 635 398

ABN 96 005 635 398

**Miele Experience Centre and
Head Office Melbourne:**1 Gilbert Park Drive
Knoxfield, VIC 3180**Miele Experience Centre South Melbourne:**206-210 Coventry Street
South Melbourne, VIC 3205**Miele Experience Centre and Office Sydney:**3 Skyline Place
Frenchs Forest, NSW 2086**Miele Experience Centre and Office Brisbane:**39 Harvey Street North
Eagle Farm, QLD 4009**Miele Experience Centre Gold Coast:**131 Ferry Road
Southport, QLD 4215**Miele Experience Centre and Office Adelaide:**83-85 Sir Donald Bradman Drive
Hilton, SA 5033**Miele Experience Centre and Office Perth:**205-207 Stirling Highway
Claremont, WA 6010**Miele****Miele New Zealand Limited**

IRD 98 463 631

Head Office:Level 2, 10 College Hill
Freemans Bay, Auckland 1011**Miele Experience Centre
Auckland:**8 College Hill
Freemans Bay, Auckland 1011
Telephone:
0800 464 353 (0800 4 MIELE)
www.miele.co.nz**Miele Global Headquarters
Germany****Miele & Cie. KG**Carl-Miele-Straße 29
33332 Gütersloh
Federal Republic of Germanywww.miele.com.au

CS 1327



en-AU, NZ

M.-Nr. 09 054 600 / 04