

## Important information

### Using for the first time

⚠ The coffee machine must be built in and connected to the mains electricity supply before operating. Please refer to the separate Operating and installation instructions booklet.

■ Clean the appliance and the milk flask thoroughly before filling with water and coffee capsules.


■ See "Setting up and using the coffee machine" in the Operating and installation instructions.

### Water hardness

Programme the coffee machine to the water hardness level of your area so that it functions correctly and does not get damaged.

Please refer to the Operating and installation instructions for more detailed information.


## Controls and display

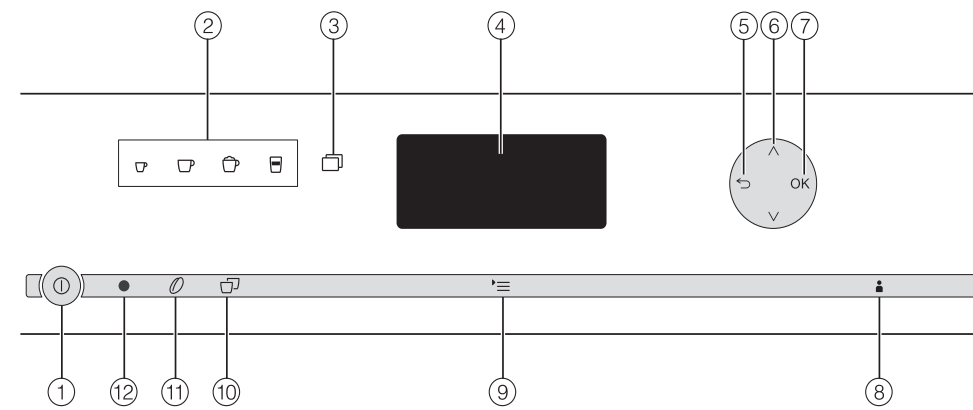

①	On/Off sensor ①	Switch appliance on and off
②	Drink sensors	Prepare ☐ Espresso ☐ Coffee ☐ Cappuccino ☐ Latte macchiato
③	Further programmes ☐	More drinks such as long coffee, caffè latte, hot milk, milk froth and hot water "Maintenance" menu
④	Display	Information on current activity or status
⑤	"Back" ⬅	Return to the previous menu, cancel unwanted actions
⑥	Arrow sensors ^ v	Show more selection options in the display and highlight a selection
⑦	OK sensor	Confirm display messages and save settings
⑧	User profiles 👤	Save and manage User profiles
⑨	Settings ≡	Change settings, show or check information, see which settings are currently active
⑩	Two portions ☑	Dispense two portions of a drink
⑪	Parameters ⌵	Check or change settings for preparing coffee
⑫	Optical interface	(for service technician use only)

### Operation

When the following appears in the display, you are in the drinks menu:

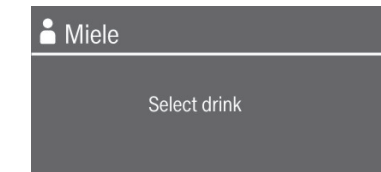

To prepare a drink, select a coffee blend and touch one of the drink sensors.

### Selecting a menu and navigating within a menu

To select a menu, touch the relevant sensor. The arrow sensors allow you to display and highlight further options.



Options which are currently selected will have a tick ✓ next to them. If you want to select an option, touch the arrow sensors until the option you want is highlighted. Touch the OK sensor to confirm your selection.

### Leaving the menu or cancelling an action

To leave the current menu, touch the "Back" ⬅ sensor. If you do not touch a sensor for a period of time, the machine returns to the drinks menu.



## Guide to the appliance

### Exterior view

- ① On-/Off sensor ①
- ② Controls and display
- ③ Door handle
- ④ Steam and hot water spout
- ⑤ Drip tray cover
- ⑥ Height-adjustable central spout with lighting
- ⑦ Milk flask with lid

### Interior view


- ⑧ Ground coffee chute cover
- ⑨ Brew unit
- ⑩ Ground coffee chute
- ⑪ Slide control for the grinder setting
- ⑫ Coffee bean container
- ⑬ Water container
- ⑭ Drip tray with grid
- ⑮ Waste container
- ⑯ Drip tray inside machine door
- ⑰ Central spout connector
- ⑱ Service flap

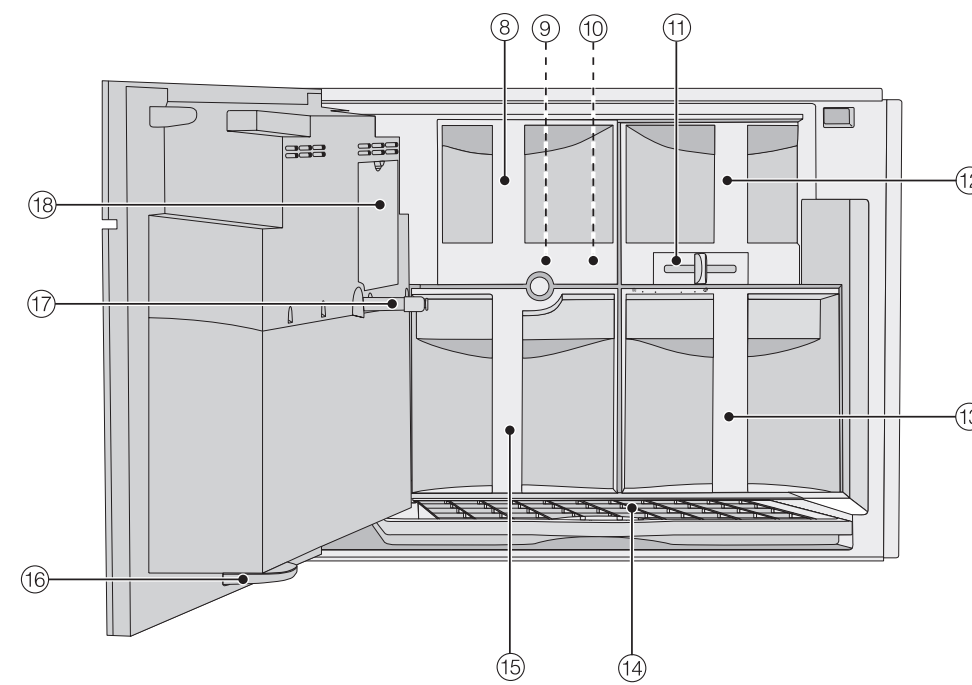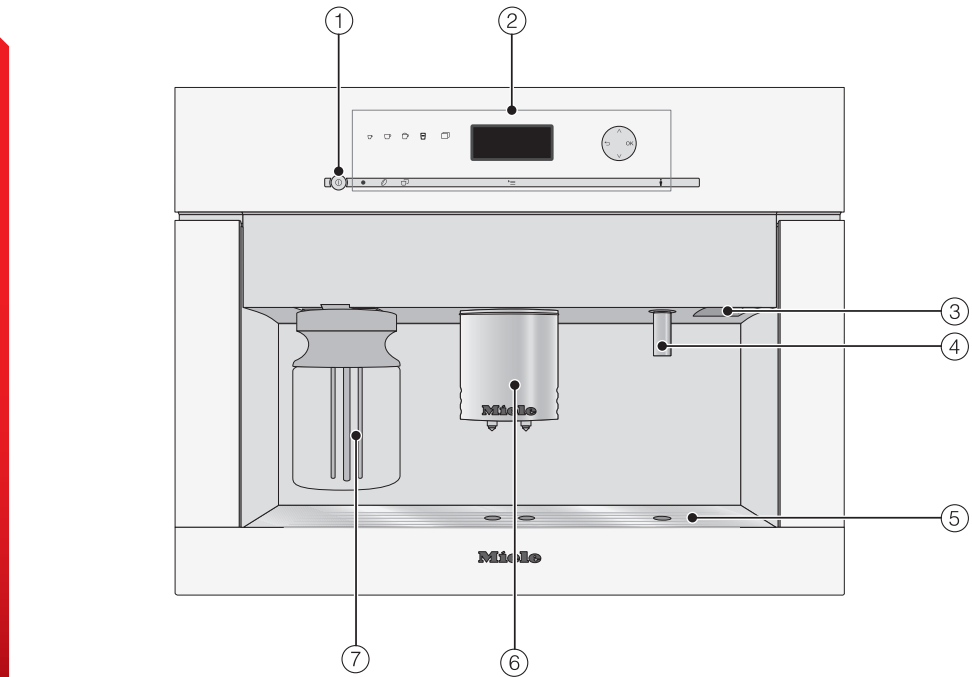

## Preparation

### Filling the water container


Change the water **every day** to prevent a build-up of bacteria.

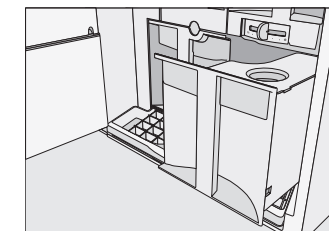

■ Fill the water container with fresh, cold tap water up to the "max." marker.

### Filling the coffee bean container

Important! Only fill the bean container with roasted espresso or coffee beans.

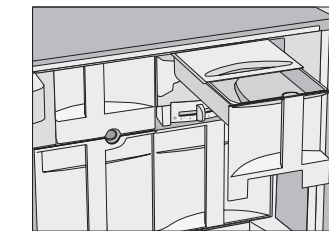

- Open the appliance door and remove the water container.
- Fill the container with roasted coffee beans.

## Making drinks

### Making espresso or coffee

- Place a cup under the central spout.
- Touch the sensor for the drink you want:
  - ☐ Espresso
  - ☐ Coffee
  - ☐ In "Further programmes": Long coffee

The coffee or espresso will be dispensed from the central spout into the cup.

### Preparing a double portion



- Touch ☑.
- Touch the sensor for the drink you want. Two portions of the desired drink will be dispensed from the central spout.

### Cancelling preparation

You can cancel preparation while "Stop" is visible in the display.


- Touch the OK sensor.

If a double portion is being prepared, a single touch of the OK sensor will only cancel the first portion.


### Drinks with milk

#### Notes on the milk flask

Milk is not cooled in the milk flask. Therefore, place the milk flask in the refrigerator if you are not going to use milk for a while. Good milk froth can only be achieved when cold milk (below 13 °C) is used.

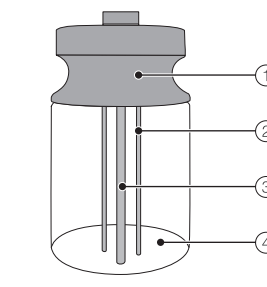

- ① Lid
- ② Milk sensor
- ③ Milk suction tube
- ④ Glass milk flask
- Fill the milk flask up to max. 2 cm below the rim. Seal the milk flask with the lid.

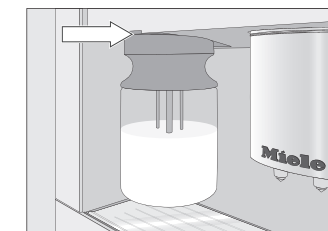

- Push the milk flask into the coffee machine.

### Preparing drinks with milk

- Place a suitable vessel underneath the central spout.
- Touch the sensor for the drink you want:
  - ☐ Cappuccino
  - ☐ Latte macchiato
  - ☐ In "Further programmes": Caffè latte, hot milk, milk froth

The coffee machine will now prepare the selected drink.

### Hot water

Please note that the water prepared by the machine is not boiling and is therefore not suitable for preparing tea. It is, however, useful for preheating crockery.

- Place a suitable vessel underneath the hot water spout.
- Touch ☐ and select "Hot water". Then touch the OK sensor.

Hot water will be dispensed into the vessel under the hot water spout.

- To cancel preparation:
- Touch the OK sensor.

## Cleaning and care

Please refer to the Operating and installation instructions for more detailed information on cleaning and care. Clean the coffee machine every day to avoid a build-up of bacteria.

Recommended time interval	What do I have to clean / maintain?
Every day (at the end of the day)	<ul style="list-style-type: none"><li>– Milk flask with lid</li><li>– Water container</li><li>– Waste container</li><li>– Drip tray and drip tray cover</li></ul>
Once a week (or more often if necessary)	<ul style="list-style-type: none"><li>– Central spout</li><li>– Central spout connector</li><li>– Clean the milk valve with the cleaning brush</li><li>– Interior</li><li>– Small drip tray inside the machine door</li><li>– Brew unit</li><li>– Appliance front (especially important straight after descaling)</li></ul>
Once a month	<ul style="list-style-type: none"><li>– Lubricate the cap on the central spout connector</li></ul>
When prompted	<ul style="list-style-type: none"><li>– Milk pipework (with the Original Miele cleaning agent for milk pipework)</li><li>– Brew unit (with cleaning tablets)</li><li>– Descale the machine when prompted to do so</li></ul>
As required	<ul style="list-style-type: none"><li>– Coffee bean container</li><li>– Clean the milk pipework of any blockages</li></ul>

The following parts must not be cleaned in a dishwasher:

 
- Central spout cover
- Brew unit
- Coffee bean container and lid
- Service flap

All other removable components of the coffee machine are dishwasher safe.

### Cleaning the milk pipework


The milk pipework **must** be cleaned with the Original Miele cleaning agent for milk pipework. Cleaning takes approx. 7 minutes. One sachet of the cleaning agent is required for cleaning the milk pipework.


The cleaning process cannot be cancelled once it has started. It must be completed through to the end.

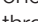
- Touch  and select "Maintenance" and then "Clean milk pipework". Then touch the OK sensor.

The process will start.

- Follow the instructions in the display.

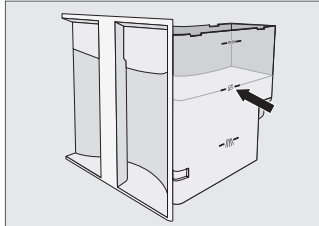

- Fill the water container with lukewarm water up to the level marker  and add 1 sachet of the Original Miele cleaning agent for milk pipework. Push the water container back into the machine.

When "Rinse the water container and fill with fresh tap water up to the  symbol" appears:


- Remove the water container and rinse it carefully with clean water.

Ensure that **no cleaning agent** is left in the water container.

### Degreasing the brew unit

After 200 portions have been dispensed, "Degrease the brew unit" will appear in the display. This message will not go out until the brew unit has been degreased. You need 1 Miele cleaning tablet to degrease the brew unit. The process takes approx. 10 minutes.


The cleaning process cannot be cancelled once it has started. It must be completed through to the end.

- Touch  and select "Maintenance" and then "Degrease the brew unit". Then touch the OK sensor.

The process will start.

- Follow the instructions in the display.


When "Place a cleaning tablet in the ground coffee chute and close the chute" appears in the display:

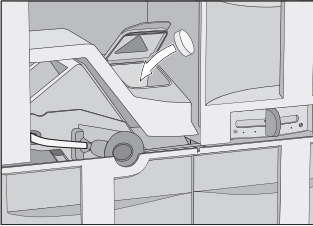

- Remove the coffee chute cover and open the lid of the coffee chute. Place a cleaning tablet in the coffee chute.

- Follow the further instructions given in the display.

The degreasing process is finished when "Process finished" appears in the display.


When "Rinse the water container and fill with fresh tap water up to the descaling symbol  appears in the display:

- Remove the water container and rinse it carefully with clean water.

Only use the Original Miele descaling tablets supplied with the appliance. Other descaling tablets may damage the appliance and affect the taste of the coffee.


Descaling **must be carried out** and takes approx. 20 minutes. You will need 2 Miele descaling tablets.


The descaling process cannot be cancelled once it has started. It must be completed through to the end.

- Touch  and select "Maintenance" and then "Descale the appliance". Touch the OK sensor.


The descaling programme will begin.

- Follow the instructions in the display.

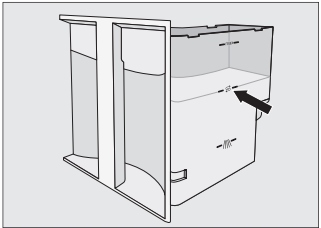

- Fill the water container to the marker  with lukewarm water and drop two Miele descaling tablets in the water. Push the water container back into the appliance.

Ensure that you adhere to the mixing ratio for the descaling tablets. It is important that you do not fill the water container with more or less water than prescribed. The descaling programme will otherwise be cancelled prematurely and will need to be repeated.

When "Rinse the water container and fill with fresh tap water up to the descaling symbol  appears in the display:

- Remove the water container and rinse it carefully with clean water.

Ensure that no descaling solution residue remains in the water container.

Descaling has finished when "Empty the drip tray and clean the contacts. Process finished" appears in the display.

CLEANING AND CARE / DESCALING

fold here

### Changing the portion size

The changed portion size is always saved in the current User profile. The name of the current User profile is shown in the top left of the display.

Tip: You can cancel portion size programming while "Stop" is visible in the display.

### Changing the portion size during drink preparation

- Place the desired cup under the central spout.
- Touch and hold the sensor for the desired drink until "Change" appears in the display.

If you want to change portion sizes for **Cappuccino**, **Latte macchiato** or **Caffè latte**, the components will be shown in the display.

Cappuccino	Milk froth, espresso
Latte macchiato	Hot milk, milk froth, espresso
Caffè latte	Hot milk, coffee


- Select all the components you want to change. Confirm these individually with the OK button.
- Use the arrow sensors to highlight "Yes". Touch the OK sensor.

The desired drink will be dispensed and "Save" will appear in the display.

- When the quantity for each component reaches the level you want, touch the OK sensor.
- Save the required portion size for the selected components.


The combination programmed in and the total portion size will now be dispensed every time that particular drink is selected.

### Calling up and changing portion sizes in the "Parameters" menu

- Touch .
- Select the drink you want and confirm with OK.
- Select 'Portion size' and touch the OK sensor.

From this point onwards the procedure is identical to programming the portion size during drink preparation.


### Setting the portion size for different User profiles

- Touch  and select the profile you want.

Now you can either set the portion size by selecting "Portion size" in the "Parameters" menu or set it while making a drink.


### User profiles


You can set up individual User profiles and save individual portion sizes for all drinks for each profile.

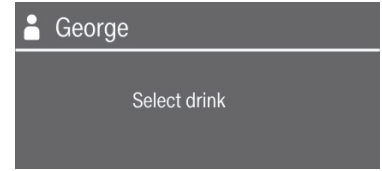


The name of the current User profile is shown in the top left of the display.

### Calling up User profiles

- Touch .

The  sensor will light up.

### Creating a User profile

Enter characters	Highlight with the arrow sensors + OK
Save your entry	Highlight with the arrow sensors + OK
Delete characters	 sensor


If you have allocated a profile in addition to the Miele standard profile, you have the option to:


- **Select profile**
- **Change name**
- **Delete profile**
- **Change profile**  
(You can choose whether User profiles are changed manually, after a drink is dispensed, or when the machine is switched on.)

SPECIAL INSTRUCTIONS

fold here


### Changing settings



 
- Touch .
- Select the required setting with the arrow sensors and confirm with OK.

The tick  indicates which setting is currently active.

- Change the setting using the arrow sensors.


- Touch the OK sensor to save the setting.

Touching  takes you back to the previous menu.

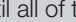Menu option	Available settings	Notes
Language	deutsch, and other languages	The "Language" option can be found via the flag symbol  .
Time of day	Display (Off / On / Night dimming) Clock format (12 h / 24 h) Set	Depending on which option you select, the machine may use more energy. A message appears in the display to inform you of this.
Date	Year / Month / Day	
Timer	Timer 1 (Switch on at / Switch off at / Switch off after) Timer 2 (Switch on at / Switch off at)	For "Switch on at" and "Switch off at" to be set, the timer must be activated and at least one day of the week must be allocated.
Eco mode	On / Off	
Lighting	Brightness (Appliance switched on or switched off) Switch off after	Touch the  arrow sensor until all of the segments are empty, and "Switched off" appears in the display.
Info		"Number of drinks", "No. of portions until descaling", and "No. of portions until brew unit needs degreasing" will appear in the display.
System lock	On / Off	When the system lock is activated, the "Switch on at" option for the timer cannot be selected.
Water hardness	Soft / Medium / Hard / Very hard	
Display brightness	Set	
Volume	Buzzer tones Keypad tone	To switch off the tones, touch the  arrow sensor until all of the segments are empty and "Switched off" appears in the display.
Showroom programme	Demo mode (On / Off)	This function is intended for presenting the appliance in Miele Centers or retail stores. Do not activate this function for domestic use.
Factory default settings	Reset Do not reset	
Plumbed water supply	On / Off	(Only for CVA 6405)

## Quick Start Guide

### Built-in coffee machine



These short instructions are not a substitute for the Operating and installation instructions booklet supplied with your coffee machine. Please read the Operating and installation instructions booklet supplied with your machine before using it for the first time and take note of the Warning and Safety instructions, as well as the full descriptions on how to use your machine.

en - AU, NZ

M.-Nr. 09 550 251

fold here