

Operating and installation instructions Oven



To prevent the risk of accidents or damage to the appliance, it is **essential** to read these instructions before it is installed and used for the first time.

en - AU, NZ M.-Nr. 10 188 130

Warning and Safety instructions	7
Caring for the environment	. 19
Oven overview	. 20
Oven controls	. 21
On/Off sensor ()	
Sensors	. 22
Display	. 23
Main menu	. 24
Symbols	. 24
Operating principles	. 26
Features	. 27
Model numbers	. 27
Data plate	. 27
Items supplied with delivery	. 27
Standard and optional accessories	. 27
Shelf runners	
Universal tray and rack with non-tip safety notches	
Rotisserie	
FlexiClip telescopic runners HFC92	
Fitting and removing the FlexiClip telescopic runners	
Oven controls	
Safety features	
System lock ⊕ for the oven	
Safety switch-off	
Cooling fan	
Vented oven door	
Door lock for Pyrolytic cleaning	
PerfectClean treated surfaces	
Pyrolytic accessories	
Using for the first time	
Basic settings	
Heating up the oven for the first time and rinsing the steam injection system	
Settings	
Settings overview	
Calling up the "Settings" menu	
Changing and saving settings	. 42

Language 🟲	
Time of day	
Display	
Clock display	
Clock format	
Set	
Date	
Lighting	
Start screen	
Brightness	
Volume	
Buzzer tones	
Keypad tone	
Welcome melody	
Units	
Weight	
Temperature	
Cooling fan run-on	
Pyrolytic cleaning	
Recommended temperatures	
Safety	
System lock ⊕	
Sensor lock	
Catalyser	
Showroom programme	
Demo mode	
Factory default settings	
MyMiele	
Adding an entry	
Editing MyMiele	
Deleting entries	
Sorting entries	
Minute minder + Alarm	50
Using the alarm 👸	50
Setting the alarm	50
Changing an alarm	51
Deleting an alarm	51

Using the minute minder 🗘	
To change the time set for the minute minder	
To cancel the time set for the minute minder	
Overview of functions	
Tips on saving energy	
Operation	
Simple operation	
Cooling fan	
Using the oven – further functions	
Changing the temperature	
Rapid Heat-up	
Pre-heating the oven	
Using the Crisp function (moisture reduction)	
Changing the oven function	
Setting a cooking duration	
Switching off automatically	
Switching on and off automatically6	
Sequence of a programme that switches on and off automatically 6	
Changing an entered cooking time6	
Cancelling cooking6	
Moisture Plus Officeron Control Contro	37
Cooking with the Moisture Plus (3111) function	
Setting the temperature6	39
Setting the number of bursts of steam	39
When to add the bursts of steam	39
Preparing and starting the water intake process	70
Changing the type of heating	71
Automatic burst of steam	72
1, 2 or 3 bursts of steam	72
Evaporating residual moisture	73
Starting residual moisture evaporation immediately	73
Skipping residual moisture evaporation	⁷ 4
Automatic programmes	75
List of food types	
Using Automatic programmes	
Notes on using these programmes	
Search	

User programmes	
Creating a User programme	. 78
Starting a User programme	
Changing User programmes	
Changing cooking stages	
Changing a name	
Deleting User programmes	
Baking	
Notes on the baking chart	
Baking chart	
Roasting	
Notes on the roasting chart	
Food probe	
When the food probe can be used	
Important notes about using the food probe	
Using the food probe	
Time remaining display	
Displaying the core temperature	
Using residual heat	
Roasting chart	
Low temperature cooking	. 98
Using the "Low temperature cooking" special application	. 99
Low temperature cooking – setting the temperature manually	100
Grilling	
Notes on the grilling chart	102
Grill chart	105
Fan Grilling guide (Fan Grill 🏋)	
Grilling guide (Full Grill "T/Economy Grill T)	
Special applications	
Defrost	
Drying	
Reheat	
Heat crockery	
Prove yeast dough	
Pizza	
Sabbath programme	112

Gentle Bake	
Bottling	
Frozen food / Ready-meals	115
Cleaning and care	116
Useful tips	117
Normal soiling	117
Food probe	117
Stubborn soiling (does not apply to the FlexiClip telescopic runners)	118
Pyrolytic cleaning 6 of the oven interior	119
Setting up for the Pyrolytic cleaning programme	119
Starting the Pyrolytic cleaning programme	120
At the end of the Pyrolytic cleaning programme	121
The Pyrolytic cleaning programme is cancelled	122
Removing the door	123
Dismantling the door	124
Fitting the door	128
Removing the shelf runners with FlexiClip telescopic runners	129
Lowering the top heat/grill element	130
Descaling the steam injection system \$	131
Descaling process sequence	131
Preparing the descaling process	132
Starting the descaling process	132
Problem solving guide	136
After sales service and warranty	143
Electrical connection	144
Building-in diagrams	146
Appliance dimensions and unit cut-out	
Front dimensions	
Installing the oven	
Miele@home	
Copyright and licences	
., ,	
Contact details	155

This appliance conforms to current safety requirements. Inappropriate use can, however, lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the appliance, please read these instructions carefully before using it for the first time.

They contain important notes on installation, safety, use and maintenance.

Miele cannot be held liable for non-compliance with these instructions.

Keep these instructions in a safe place and ensure that new users are familiar with the contents. Pass them on to any future owner.

Correct application

- This oven is designed for domestic use and for use in similar environments by guests in hotel or motel rooms, bed & breakfasts and other typical living quarters. This does not include common/shared facilities or commercial facilities within hotels, motels or bed & breakfasts.
- The oven is not suitable for outdoor use.
- The oven is intended only to cook, bake, roast, grill, defrost, bottle, dry fruit etc.

Any other usage is at the owner's risk.

This oven is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised whilst using it or have been given instruction concerning its use by a person responsible for their safety.

They must be able to recognise the dangers of misuse.

Safety with children

- Young children must not be allowed to use this appliance.
- Older children may only use the appliance when its operation has been clearly explained to them and they are able to use it safely, recognising the dangers of misuse.
- Cleaning work may only be carried out by older children under the supervision of an adult.
- Children should be supervised near the appliance. Ensure that they do not play with the appliance.
- Children may be able to wrap themselves in packing material or pull it over their heads with the risk of suffocation. Keep children away from any packing material.

Danger of burning!

Children's skin is far more sensitive to high temperatures than that of adults. Great care should be taken to ensure that children do not touch the appliance when it is being used. External parts of the oven such as the door glass, control panel and the vents become quite hot.

Danger of injury!

The maximum load capacity for the door is 15 kg. Children can hurt themselves on an open door.

Ensure that children do not sit on or swing on the door.

Danger of burning!

Children's skin is far more sensitive to high temperatures than that of adults. The oven becomes hotter during the Pyrolytic cleaning programme than it does in normal use. Do not let children touch the oven while the Pyrolytic cleaning programme is running.

Technical safety

- Repairs and other work by unqualified persons could be dangerous. Installation, maintenance work and repairs to electrical appliances must only be carried out by a Miele approved service technician.
- A damaged appliance is dangerous. Check it for any visible damage. Never install or attempt to use a damaged appliance.
- Reliable and safe operation of this oven can only be assured if it has been connected to the mains electricity supply.
- The electrical safety of this appliance can only be guaranteed when continuity is complete between it and an effective earthing system. It is most important that this basic safety requirement is present and tested regularly and, where there is any doubt, the household wiring system should be inspected by a qualified electrician.
- ▶ Before connecting the appliance to the mains supply, make sure that the rating on the data plate (voltage and frequency) corresponds to that of the household supply. This data must correspond in order to avoid risk of damage to the appliance. Consult a qualified electrician if in any doubt.
- Do not connect the appliance to the mains electricity supply by a multi-socket unit or an extension lead. These do not guarantee the required safety of the appliance (e.g. danger of overheating).
- For safety reasons, this appliance may only be used when it has been built in.
- This oven must not be installed and operated in mobile installations (e.g. on a ship).

Tampering with electrical connections or components and mechanical parts is highly dangerous to the user and can cause operational faults.

Do not open the outer casing of the appliance.

- The manufacturer's warranty will be invalidated if the appliance is not repaired by a Miele approved service technician.
- ► Faulty components must only be replaced by genuine Miele spare parts. The manufacturer can only guarantee the safety of the appliance when Miele replacement parts are used.
- If the oven is delivered without a connection cable, or if the connection cable supplied is damaged, a special connection cable must installed by a Miele approved service technician (see "Electrical connection"), in order to avoid a hazard.
- During installation, maintenance and repair work, the appliance must be disconnected from the mains electricity supply, e.g. if the oven lighting is faulty (see "Problem solving guide").
- It is only completely isolated from the electricity supply when:
- it is switched off at the mains circuit breaker, or
- it is switched off at the wall socket and the plug is withdrawn from the socket.
 - Do not pull the mains connection cable but the mains plug to disconnect your appliance from the mains electricity supply.

- For the oven to function correctly, it requires a sufficient intake of cool air. Ensure the intake of cool air to the oven is not impaired (e.g. due to the installation of insulation material inside the housing unit). Furthermore, the incoming cool air must not be excessively heated by other heat sources (e.g. fuel furnaces).
- If the oven is installed behind a furniture door, do not close the door while the oven is in operation. Heat and moisture would build up behind a closed furniture door, potentially causing damage to the oven, the furniture unit and the flooring. Wait until the oven has cooled down completely before closing the furniture door.

Correct use

<u> A</u> Danger of burning!

The oven becomes hot when in use.

Exercise care when handling food and trays so as not to burn yourself on heating elements, the walls of the oven, shelf runners, trays and hot food itself.

Use oven gloves when placing food in the oven, turning or removing it and when adjusting oven shelves etc. in a hot oven.

- Do not use the oven to heat up the room. Due to the high temperatures radiated, objects left near the appliance could catch fire.
- Never leave the appliance unattended when cooking with oil or fats as these are a fire hazard if allowed to overheat.

 Do not attempt to extinguish oil or fat fires with water.

 Switch off the oven and smother the flames by keeping the oven door closed.
- Make sure that you keep to the recommended grilling times when using grilling functions.

Excessively long grilling times can lead to food drying out and burning or could even cause the food to catch fire.

- Some foods dry out very quickly and can be ignited by high grilling temperatures. Do not use grilling functions for crisping rolls or bread or to dry flowers or herbs. Instead use Fan Plus (La) or Conventional Heat (...).
- If using alcohol in your recipes, please be aware that high temperatures can cause the alcohol to vaporise and even to ignite on the hot heating elements.
- When residual heat is used to keep food warm, the high level of humidity and condensation can cause corrosion in the oven. The control panel, worktop or furniture unit may also be damaged. Do not switch the oven off completely while food is inside it, but select the lowest possible temperature for the oven function you are using. This will ensure the fan will automatically continue to run.
- Cover any food which is left in the oven to be kept hot, as moisture in the food could lead to corrosion damage in the oven. This also prevents the food from drying out.
- Never cover the floor of the oven with aluminium foil, or place oven dishes, pans, saucepans or trays directly onto the floor of the oven.

This would cause concentrations of heat which could cause damage to the floor of the oven.

When storing pots or pans in the oven, do not slide them across the floor of the oven as this will damage the enamel coating.

- Never pour cold water onto hot surfaces in a hot oven.

 The steam created could cause serious burns or scalding and the sudden change in temperature can damage the enamel in the oven.
- During cooking processes using moisture and during the residual moisture evaporation process steam is produced which can cause serious injury by scalding.

Do not open the door whilst a burst of steam is being released or during the evaporation process.

- It is important that the heat is allowed to spread evenly throughout the food being cooked. This can be achieved by stirring and/or turning the food.
- Plastic containers, which are not heat-resistant, melt and may ignite at high temperatures and can damage the oven. Use only plastic containers that are indicated by the manufacturer as being suitable for use in ovens.
- Do not use the appliance to heat up or bottle food in sealed jars and tins.

Pressure will build up inside them and they can explode causing damage to the appliance, as well as the risk of injury and scalding.

- Do not leave the oven door open unnecessarily as someone may trip over it or be injured by it.
- The oven door can support a maximum load of 15 kg. Do not lean or sit on an open oven door, or place heavy items on it. Also make sure that nothing can get trapped between the door and the oven cavity. This could damage the oven.

Cleaning and care

- Do not use a steam cleaning appliance to clean this oven. Pressurised steam could reach the electrical components and cause a short circuit.
- Scratches on the door glass can result in the glass breaking. Do not use abrasive cleaners, hard sponges, brushes or sharp metal tools to clean the door glass.
- The shelf runners can be removed for cleaning purposes (see "Cleaning and care").

Ensure they are correctly fitted after cleaning and never operate the oven without the shelf runners fitted.

Accessories

- Use only genuine original Miele spare parts. If spare parts or accessories from other manufacturers are used, the warranty will be invalidated, and Miele cannot accept liability.
- The high temperatures used during pyrolytic cleaning will damage accessories that are not designed for cleaning in the Pyrolytic programme.

Please remove these accessories from the oven interior before starting the Pyrolytic cleaning programme. This also applies to non-pyrolytic accessories purchased separately to the oven (see "Cleaning and care").

- Only use the Miele food probe supplied with this oven. If it is faulty, it must only be replaced with a suitable original Miele food probe.
- At very high temperatures the food probe may be damaged, e.g. the plastic can melt.

If you are not using the food probe, store it in its place in the door. Do not use the food probe when grilling (Exception: Fan Grill).

Caring for the environment

Disposal of the packing material

The transport and protective packing has been selected from materials which are environmentally friendly for disposal and can normally be recycled. Recycling the packaging reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites.

Rather than just throwing these materials away, please ensure they are offered for recycling.

Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation!

Disposing of your old appliance


Electrical and electronic appliances often contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance. Therefore, please do not dispose of your old appliance with your household waste.




Please dispose of it at your local community waste collection / recycling centre.

Ensure that your old appliance presents no danger to children while being stored for disposal.

Oven overview

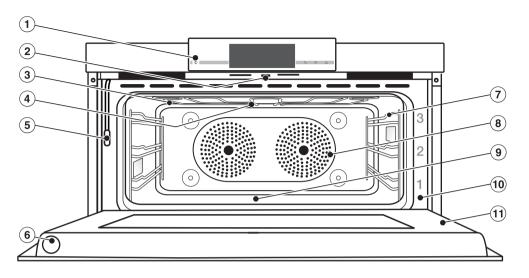

- 1) Oven controls
- 2 Door lock for Pyrolytic cleaning
- 3 Steam inlet openings
- 4 Top heat / grill element with wireless food probe antenna
- 5 Water intake pipe for the steam injection system
- **6** Wireless food probe holder
- 7) Shelf runners with 3 shelf levels
- (8) Air inlets for the fans with ring heating element behind them
- 9 Oven floor with bottom heat element underneath it
- 10 Front frame with data plate
- 11 Door

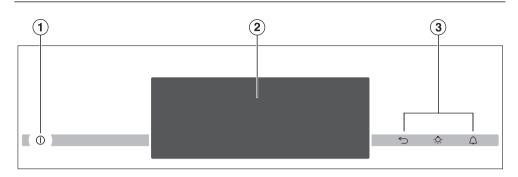

- ① On/Off sensor ①
- ② Display
- ③ ←, -♠, ♠ sensors

On/Off sensor ()

The On/Off sensor (1) is recessed and reacts to touch.

It is used for switching the oven on and off.

Sensors

The sensors react to touch. Each touch is confirmed with a keypad tone. This keypad tone can be switched off (see "Settings – Volume – Keypad tone").

Sensor	Function	Notes
<>	To go back a step	
- <u>Ó</u> -	For switching the oven interior lighting on and off	If a list of options is visible in the display or if a cooking process is running, touching 🌣 will switch the oven interior lighting on or off. If the display is dark, the 🌣 sensor will not react until the oven is switched on. The oven interior lighting switches off after 15 seconds during a cooking process or remains
		constantly switched on, depending on the setting selected.
Φ	For activating and deactivating minute minder / alarm	If a list of options is visible in the display or if a cooking process is running, you can enter a minute minder duration (e.g. when boiling eggs on the cooktop) or an alarm, i.e. a specific time, at any point (see "Alarm and minute minder").
		If the time of day display is switched off, the \triangle sensor will not react until the oven is switched on.

Display

The display is operated by fingertip contact and in contrast to the sensors, there is no audible tone when it is touched.

Do not use pointed or sharp objects e.g. pens to operate the Touch display as they can damage the surface.

The Touch display will also not react to being tapped by such objects.

The touch display is divided into three sections:



The menu path appears at the top left and shows you which menu or submenu vou are in.

Options within a menu are separated by a vertical line. If there is not enough space to show the whole path, additional options are indicated by ... I. The time of day, alarm \mathfrak{B} und minute minder Δ are shown in the top right-hand corner of the display.

The middle section shows the current menu and options. You can scroll to the right or left by swiping your finger across the display.

The < and > arrow sensors at the bottom of the screen are used for scrolling to the left or right. The number of small squares between the arrows indicates the number of pages available and your position within the current menu.

Main menu

- Oven functions
- Automatic programmes Auto
- Special applications
- MyMiele ♣¹≡
- User programmes
- Settings ====
- Maintenance

Symbols

The following symbols may also appear in the display in addition to the text:

Symbol	Meaning
	Some settings, e.g. display brightness and buzzer volume, are selected using a bar chart.
i	This symbol indicates that there is additional information and advice about using the oven. Select OK to access the information.
A	The system lock or sensor lock is active (see "Settings - Safety"). The oven cannot be used.
Ö	Alarm
\Diamond	Minute minder
1	This indicates that there are more options available, which are not visible because there is not enough space in the display.

When a function is selected, the following symbols may appear in the display, depending on the setting:

Symbol	Meaning
Image: Control of the	Fan Plus
	Conventional Heat
0111	Moisture Plus
<u> </u>	Intensive Bake
	Auto Roast
	Bottom Heat
	Top Heat
***	Full Grill
**	Economy Grill
T	Fan Grill
//!!!	Gentle Bake
Ø	Pyrolytic cleaning
×	Core temperature when using the food probe

Operating principles

Each time you touch a possible option the relevant field lights up orange.

Selecting or opening a menu

■ Touch the field you want to select it.

Scrolling through menus

You can scroll left or right.

■ Swipe the screen, i.e. place your finger on the touch display and swipe it in the direction you want, or touch the < and > sensors to scroll from left to right.

Exiting a menu

■ Touch or touch an option in the menu path at the top of the screen or touch ... I.

Depending on which menu you are in, this will take you back a level or back to the main menu.

Help function

The "Help" field appears with some functions and options.

Touch the field.

Helpful information will then appear in text and pictures.

Entering numbers

You can enter numbers by scrolling through and touching the roller, or by using the numerical keypad.

To enter numbers using the roller:

■ Swipe the roller up or down to select the number you want.

To enter numbers using the numerical keypad:

■ Touch in the bottom right of the input field.

The numerical keypad will appear.

■ Touch the required numbers.

Once you have entered a valid value, the OK sensor will light up green. The last figure entered can be deleted by using the arrow.

■ Touch OK.

Entering letters

You can enter names for your own User programmes using a keyboard. Try to use short, concise names.

- Touch the required letters or characters.
- Touch "Save".

Model numbers

A list of the ovens described in these operating instructions can be found on the back page.

Data plate

The data plate located on the front frame of the oven is visible when the door is open.

On the data plate are printed the model number, serial number and the connection data (voltage/frequency/ maximum rated load).

Have this information available if you need to contact Miele so that any issues can be rectified as quickly as possible.

Items supplied with delivery

The oven is supplied with:

- the operating and installation instructions for using the oven functions,
- a recipe booklet for Moisture Plus om and the Automatic programmes,
- screws for fixing the oven to the housing unit,
- descaling tablets and a plastic tube with suction cup for descaling,
- various accessories.

Standard and optional accessories

Depending on model! All ovens are supplied with shelf runners, a universal tray and baking and roasting rack (rack for short).

Depending on the model, Miele ovens may be supplied with the accessories listed below.

All accessories and cleaning and care products in these instructions are designed to be used with Miele ovens.

They can be ordered at www.mieleshop.com (depending on country) or from Miele.

Please state the model number of your oven and that of any accessories you wish to purchase.

Shelf runners

Shelf runners for accessories (trays, racks, FlexiClip telescopic runners etc.) are fitted on either side of the oven cavity for shelf levels ::

3.

The shelf level numbers are indicated on the front of the oven frame.

Fach shelf runner has two rails:

- Accessories are inserted between the two shelf runners.
- FlexiClip telescopic runners (if available) are fitted to the bottom rail of each shelf runner.

The shelf runners can be removed for cleaning purposes (see "Cleaning and care").

Universal tray and rack with non-tip safety notches

Universal tray HUBB92:




Rack HBBR92:




Insert these accessories into the shelf runners between the two rails of a shelf level

Always position the rack as illustrated above.

Non-tip safety notches are located on the shorter sides of these accessories. These prevent the trays being pulled out completely when you only wish to pull them out partially. They also prevent trays from tipping.

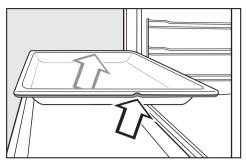

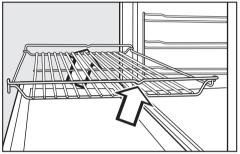


Always place the rack in the shelf runners with the non-tip safety notches towards the back.



If you are using the universal tray with the rack on top, insert the tray between the rails of a shelf runner and the rack will sit on top of it.

 
Rotisserie




The rotisserie is ideal for grilling thicker items such as stuffed meat, poultry and kebabs. Food is grilled evenly on all sides as it rotates.

The rotisserie can support a maximum weight of 5 kg.

 Optional accessories are available which attach to the rotisserie to grill poultry and kebabs.





FlexiClip telescopic runners HFC92

 

The FlexiClip telescopic runners can be attached to any shelf level.

  Push the FlexiClip telescopic runners right into the oven before placing accessories on them. The accessories will then automatically sit securely in between the stoppers at either end of each runner and be prevented from sliding off.





The maximum load for the FlexiClip telescopic runners is 15 kg.


Fitting and removing the FlexiClip telescopic runners

⚠ Danger of burning!
Make sure the oven heating elements are switched off and the oven interior is cool.


The FlexiClip telescopic runners are fitted in between the two rails that make up a shelf level.

The telescopic runner with the Miele logo must be fitted on the right.

When fitting or removing the telescopic runners, do **not** extend them.

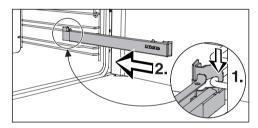

■ Hook the FlexiClip telescopic runner onto the bottom rail of a shelf level at the front (1.) and push it along the rail into the oven interior (2.).

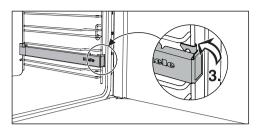


■ Then secure the telescopic runner to the bottom of the two rails as illustrated (3).

If the telescopic runners are difficult to pull out after fitting, you may need to pull firmly on them once to release them.

To remove a FlexiClip telescopic runner:

■ Push the FlexiClip telescopic runner all the way in.

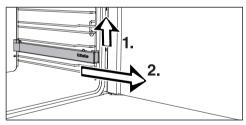

■ Remove the FlexiClip telescopic runner by raising it at the front (1) then pulling it forwards along the rail and out (2).

Grilling and roasting insert HGBB92



The grilling and roasting insert should be placed in the universal tray when grilling or roasting.

The juices from the food being cooked collect under the insert. This prevents them from spitting and making the oven dirty. The juices can then be used for making gravy and sauces.

The surface has been treated with PerfectClean ename!

Pizza tray HBF 27-1



This circular pan is suitable for cooking pizzas, flat cakes made with yeast or whisked mixtures, sweet and savoury tarts, baked desserts, and can also be used for frozen cakes

The surface has been treated with PerfectClean enamel.

Pizza stone HBS 60



The pizza stone is ideal for items which need a well-baked base such as pizza, quiche, bread, bread rolls and savoury snacks

The baking stone is made from heat retaining fire brick and is glazed. Place it directly on the rack.

A wooden paddle is supplied with it for placing food on the pizza stone and taking it off.

Gourmet oven dishes HUB and lids HRD

Miele Gourmet oven dishes can be placed on the rack. They have an antistick coating.

The oven dishes have depths of 22 cm. or 35 cm. They have the same width and height.

Suitable lids are available separately.

Please quote the model number of your Miele oven dish when ordering a lid.

Depth: 22 cm Depth: 35 cm HUB61-22 HUB61-35** HUB62-22*



HBD 60-35

HBD 60-22





- Suitable for induction cooktops
- ** The Gourmet oven dish HUB61-35 cannot be used in conjunction with its lid because the total height of these two items exceeds the height of the cavity.

Food probe



Using the wireless food probe supplied enables the temperature during the cooking process to be monitored simply and accurately (see "Roasting – Food probe").

The food probe is stored in a holder in the door when not in use.

Replace the probe in its holder after each use. Make sure that it is inserted into the holder correctly as otherwise it could be damaged when the door is closed.

Descaling tablets, plastic tube with suction cup



These are required for descaling the appliance.

Opener



This opener is used to remove the cover of the lighting in the sides of the oven.

Original Miele all purpose microfibre cloth

Light soiling and fingerprints can be easily removed with the microfibre cloth.

Original Miele oven cleaner

The Original Miele oven cleaner is suitable for removing very stubborn soiling from PerfectClean surfaces. It is not necessary to pre-heat the oven beforehand

Oven controls

In addition to operating the various cooking functions for baking, roasting and grilling, the oven controls are also used to operate

- the time of day display,
- a minute minder,
- a timer to automatically switch cooking programmes on and off,
- Moisture Plus cooking,
- Automatic programmes,
- the creation of User programmes,
- settings that can be customised.

Safety features

System lock for the oven

The system lock prevents the oven from being used unintentionally (see "Settings – System lock ⊕").

The system lock will remain activated even after an interruption to the power supply.

Safety switch-off

The oven switches itself off automatically if it is used for an exceedingly long period. The length of time depends on the oven function being used.

Cooling fan

The cooling fan comes on automatically when a cooking programme is started. The cooling fan mixes hot air from the oven cavity with cool room air before venting it out into the kitchen through vents located between the appliance door and the control panel.

The cooling fan will continue to run for a while after the oven has been switched off to prevent any humidity building up in the oven, on the control panel or in the oven housing unit.

When the temperature in the oven has fallen sufficiently, the cooling fan will switch off automatically.

Vented oven door

The door panes have a heat-reflective coating.

When the oven is operating, air is circulated through the door to keep the outer pane cool.

The door can be removed and disassembled for cleaning purposes (see "Cleaning and care").

Door lock for Pyrolytic cleaning

For safety reasons, the door is locked as soon as the Pyrolytic cleaning programme is started. After the Pyrolytic cleaning programme has finished, the door will remain locked until the temperature in the oven has fallen below 280 °C.

PerfectClean treated surfaces

Surfaces treated with PerfectClean enamel are characterised by their exceptional anti-stick properties and ease of cleaning.

Food can be taken off easily, and soiling from baking and roasting is simple to remove.

You can cut up food on surfaces treated with PerfectClean enamel.

However, do not use ceramic knives as these will scratch the PerfectClean surface.

Surfaces treated with PerfectClean enamel can be cleaned as you would clean glass.

Read the instructions in "Cleaning and care" so that the benefits of the antistick properties and easy cleaning are retained.

The following surfaces have been treated with PerfectClean enamel:

- Universal tray
- Grilling and roasting insert
- Pizza tray

Pyrolytic accessories

The following accessories can be left in the oven during the Pyrolytic cleaning programme:

- Shelf runners
- FlexiClip telescopic runners
- Rack

See "Cleaning and care" for more information.

Using for the first time

Basic settings

The oven must be built into its housing unit before it can be used.

The oven will switch on automatically when it is connected to the electricity supply.

Welcome screen

The greeting "Miele Willkommen" will appear in the display and you will hear the welcome melody.

You will then be requested to select some basic settings which are needed before the appliance can be used.

■ Follow the instructions in the display.

Set the language

■ Touch the language you want and select OK.

Select the country

■ Then touch the country you want and select OK.

Set the date

- Swipe the screen in the "Day" field until the current date appears.
- Do the same thing for the "Month" and "Year" to set the date.
- Touch OK.

The setting is now saved.

Set the time of day

- Swipe the screen in the left-hand field until the current hour appears.
- Do the same thing for the minutes in the right-hand field to set the time.

Alternatively, you can set the time using the numerical keypad **!!!**

■ Touch OK.

The setting is now saved.

The time of day can be displayed in the 12-hour format (see "Settings -Time of day - Clock format").

Using for the first time

Time of day display

You will then be asked when you want the time of day to appear in the display when the oven is switched off (see "Settings - Time of day - Display"):

- On
 The time is always visible in the display.
- Off
 The display appears dark to save energy. Some functions are limited.
- Night dimming
 The time only appears in the display between 5:00 and 23:00. It switches off at night to save energy.
- Select the option you want.
- Touch OK.

Some information about energy consumption will appear in the display.

- Touch OK.
- Follow any further instructions in the display.

The oven is ready for use once you have confirmed the message "Set up successfully completed" with OK.

If you have selected the wrong language by mistake, proceed as described in "Settings - Language "".

Using for the first time

Heating up the oven for the first time and rinsing the steam injection system

New ovens can give off an unpleasant smell on first use. Heating up the oven for at least 1 hour with nothing in it will get rid of this smell. It is a good idea to rinse the steam injection system at the same time.

Ensure that the kitchen is well ventilated while the appliance is being heated up for the first time. Close doors to other rooms to prevent the smell spreading throughout the house.

- Remove any protective wrapping and sticky labels from the oven.
- Before heating up the oven, it is a good idea to wipe the interior out with a damp cloth first. This way any dust or bits of packaging that may have accumulated in the oven compartment during storage and unpacking will be removed.
- Fit the FlexiClip telescopic runners (available to order) to the shelf runners and insert all trays and the rack.
- Switch the oven on.

The main menu will appear.

- Select "Oven functions []".
- Select the Moisture Plus 🖭 function.

The recommended temperature will appear (160 °C).

The oven heating, lighting and cooling fan will switch on.

- Use the roller or the numerical keypad to set the maximum possible temperature of 250 °C.
- Touch OK.
- Touch "Automatic burst of steam".

The prompt to draw in water then appears.

- Fill a suitable container with the required amount of fresh tap water.
- Open the door.
- Pull the water intake pipe forwards (located below the control panel on the left).



- Immerse the end of the water intake pipe in the container with tap water.
- Touch OK.

The water intake process will begin.

Using for the first time

The amount of water actually drawn up into the oven may be less than the amount specified as required, leaving a small amount in the container.

- Remove the water container after the water intake process.
- Confirm the message telling you that the process is complete with OK.
- Close the door.

The message will then disappear.

You will hear the pump briefly as the remaining water in the water intake pipe is drawn into the oven.

After a short time, a burst of steam is injected automatically.

⚠ Danger of injury! Steam can cause injury by scalding. Do not open the appliance door while a burst of steam is being injected.

Heat up the oven for at least 1 hour.

After at least an hour:

Switch the oven off

After heating up for the first time

⚠ Danger of burning! Allow the oven interior to cool down before cleaning by hand.

- Switch the oven on.
- Take all accessories out of the oven and clean them by hand (see "Cleaning and care").
- Clean the oven interior with a clean sponge and a solution of warm water and washing-up liquid or a damp microfibre cloth.
- Dry all surfaces with a soft cloth.
- Switch the oven off.

Leave the oven door open until the oven interior is completely dry.

Settings

Settings overview

Settings cannot be altered while a cooking programme is in progress.

Factory default settings are shown in **bold** in the chart.

Setting	Options		
Language F	[]		
	deutsch	/ Deutschland / Luxemburg /	
	english	/ Australia / United Kingdom /	
	[]		
Time of day	Display	On / Off / Night dimming	
	Clock display	Analogue / Digital	
	Clock format	24 h / 12 h	
	Set	You can set the time of day.	
Date	You can set the date.		
Lighting	On		
	"On" for 15 seconds		
Start screen	Main menu		
	Oven functions		
	Automatic programmes		
	Special applications		
	MyMiele		
	User programmes		
Brightness	Darker ■■■=== Lighter		
Volume	The volume can be adjusted for the welcome melody, buzzer and keypad tones or switched off altogether.		
	Buzzer tones	Quieter ■■■■■■ Louder	
		On / Off	
	Keypad tone	Quieter	
		On / Off	
	Welcome melody	On / Off	

Setting	Options		
Units	Weight	g	
		lb/oz	
	Temperature	°C	
		°F	
Cooling fan run-on	Temperature-controlled		
	Time-controlled		
Pyrolytic cleaning	With reminder		
	Without reminder		
Recommended	You can change the recommended temperatures.		
temperatures			
Safety	System lock	On	
		Off	
	Sensor lock	On	
		Off	
Catalyser	You can select the level of odour reduction.		
	Minimum ■■■=== Maximum		
	On / Off		
Showroom	Demo mode	On	
programme		Off	
Factory default	Settings		
	User programmes		
	Recommended temperatures		
	MyMiele		

Settings

Calling up the "Settings" menu

From the main menu:

You can check them or change them.

Changing and saving settings

- Swipe across the screen until the setting you want appears, then touch it to select.

The settings which are currently selected will have a coloured frame around them.

Swipe across the screen until the option you want appears, then touch it to select it.

The setting is now saved.

Language 🏲

You can set the language and the country you want for the display.

After selecting and confirming your choice, the language you have selected will appear in the display.

Tip: If you have selected the wrong language by mistake, select the symbol to get back to the "Language **č**".

Time of day

Display

Select how you want the time of day to appear in the display when the oven is switched off:

- On
 - The time of day always appears in the display. You can switch the lighting on and off or use the alarm + minute minder △ by touching the relevant sensor.
- Night dimming
 To save energy, the time is only visible in the display between 5:00 and 23:00. The rest of the time it is not visible.

Clock display

lighting . . .

You can choose from an analogue clock face or a digital (h:min) display.

The date will also appear in the digital clock display.

Clock format

You can select the clock format for the time of day:

- 24 h
 The time of day is shown in the 24-hour format
- 12 h
 The time of day is shown in the 12-hour format.

Set

Set the hours and the minutes.

If there is a power cut, the current time of day will reappear once power has been restored. The time is stored in memory for about 200 hours.

Date

Set the date.

When the oven is switched off, the date only appears if the oven is set to "Time of day – Clock type – Digital".

Lighting

- On
 The interior lighting is switched on during the entire cooking period.
- "On" for 15 seconds
 The oven lighting switches off
 15 seconds after a programme starts.
 Touching ∴ switches it on for another 15 seconds.

Start screen

The main menu will appear in the display when the oven is switched on. You can change this default setting so that, for instance, the oven functions or MyMiele settings appear in the display.

Brightness

The display brightness is represented by a bar with seven segments.



■ Use the segment bar to alter the brightness of the display.

Settings

Volume

Buzzer tones

The volume setting is represented by a bar with seven segments.



Use the segment bar to alter the volume.

Select "On" or "Off" to switch the buzzer tones on or off.

Maximum volume is selected when all segments are filled.

If none of the segments is filled, the volume is switched off.

Keypad tone

The keypad tone volume is represented by a bar with seven segments.

Use the segment bar to alter the volume.

Select "On" or "Off" to switch the keypad tone on or off.

Maximum volume is selected when all segments are filled.

If none of the segments is filled, the tone is switched off.

Welcome melody

The melody that sounds when you touch the On/Off sensor ① can be switched on or off.

Units

Weight

- g
 Weight in Automatic programmes is set using grams.
- Ib/oz
 Weight in Automatic programmes is set using pounds and ounces.

Temperature

- °C
 - The temperature is displayed in degrees Celsius.
- °F
 The temperature is displayed in degrees Fahrenheit.

Cooling fan run-on

The cooling fan will continue to run for a while after the oven has been switched off to prevent any humidity building up in the oven, on the control panel or in the oven housing unit.

- Temperature-controlled
 The cooling fan is switched off when the oven compartment temperature drops below 70 °C.
- Time-controlled
 The cooling fan switches off after a period of about 25 minutes.

Do not leave food in the oven to keep it warm if you have set the cooling fan to "Timed-controlled" operation.

Moisture levels in the oven could increase, leading to condensation forming on the control panel and surrounding kitchen furniture and drops of moisture collecting under the worktop.

Condensate can damage the oven housing unit, damage the worktop and lead to corrosion in the oven.

Pyrolytic cleaning

- With reminder
 A reminder to run the Pyrolytic cleaning programme will appear in the display.
- Without reminder
 You will not be reminded to run the
 Pyrolytic cleaning programme.

Recommended temperatures

If you cook with different temperatures a lot, it makes sense to change the recommended temperatures.

After selecting this option, a list of functions will appear in the display together with their recommended temperatures.

- Touch the oven function you want to select it.
- Change the recommended temperature.
- Touch OK.

Settings

Safety

System lock ⊕

The system lock prevents the oven being switched on by mistake.

The system lock will remain activated even after a power failure.

Select "On" to activate the system lock.

– On

The system lock is now active. If you want to use the oven, touch the ⊕ symbol for at least 6 seconds.

The alarm and minute minder can still be used when the system lock is active.

- Off

The system lock is not active. You can use the oven as normal.

Sensor lock

The sensor lock prevents the oven being switched off or settings being altered by accident whilst in use.

– On

The sensor lock is now active. If you want to use the sensors, touch the symbol for at least 6 seconds.

- Off

The sensors will now react to touch again.

Catalyser

The level of odour reduction is represented by a bar with seven segments.

_=====

■ Use the segment bar to alter the level of odour reduction.

Touch "On" or "Off" to switch the catalyser on or off.

Showroom programme

This function enables the oven to be demonstrated in showrooms without heating up. It should not be set for domestic use.

Demo mode

On
 Touch the OK sensor for at least
 4 seconds to activate Demo mode.

If activated, the message "Demo mode is switched on. The appliance will not heat up" will appear in the display when the oven is switched on.

Off
 Touch the OK sensor for at least
 4 seconds to deactivate Demo
 mode. The oven can then be used as normal.

Factory default settings

- Settings
 Any settings that you have altered will be reset to the factory default setting.
- User programmes
 All User programmes will be deleted.
- Recommended temperatures
 Recommended temperatures which have been changed will be reset to the factory default settings.
- MyMiele
 All MyMiele entries will be deleted.

MyMiele

You can personalise your oven using the MyMiele ♣ • ≡ function by inputting frequently used processes.

It is particularly useful with Automatic programmes as you do not need to work through every screen in order to start your programme.

You can also set processes that you have entered into MyMiele to appear in the Start screen (see "Settings – Start screen").

Adding an entry

You can add up to 20 entries.

- Select "MyMiele ♣•=".
- Select "Add entry".

You can select options listed in the following categories:

- Oven functions
- Automatic programmes Auto
- Special applications
- User programmes
- Confirm your choice with OK.

A box will appear in the list next to the selected option, together with a symbol to show which category it was selected from.

Proceed as above for further entries as required. You can only choose options that have not already been selected.

Editing MyMiele

First select "Edit", then

- add entries as long as MyMiele contains fewer than 20 entries,
- delete entries.
- sort entries as long as MyMiele contains more than 4 entries.

Deleting entries

- Select "MyMiele ♣•=".
- Select "Edit".
- Select "Delete entry".
- Select the entry that you want to delete.
- Confirm your choice with OK.

The entry will then be removed from the list.

Sorting entries

The order can be rearranged as long as there are more than 4 entries.

- Select "MyMiele ♣•=".
- Select "Edit".
- Select "Sort entry".
- Select the entry that you want to move.
- Select the position you want to move it to.
- Confirm your choice with OK.

The entry will now appear in the position you want it in.

Minute minder + Alarm

Using the \triangle sensor you can set a minute minder duration to time any activity in the kitchen, e.g. boiling eggs, or an alarm for a specific time.

Two alarms can be set simultaneously, two minute minder durations or an alarm and a minute minder duration.

Using the alarm 🖔

The alarm can be used to set a specific time at which a buzzer will sound on the oven.

Setting the alarm

If "Time – Display – Off" has been selected, you will need to switch the oven on before you can set the alarm. The time for the alarm will then appear in the display when the oven is switched off.

- Touch △.
- Touch "New alarm".
- Set the time for the alarm.
- Touch OK.

When the oven is switched off, the alarm time and \mathfrak{A} will appear in the display instead of the time of day.

If you are cooking at the same time or if you are in a different menu, the alarm time and 👸 will appear in the top right-hand corner of the display.

Minute minder + Alarm

At the set alarm time

- a buzzer will sound if the buzzer is switched on (see "Settings – Volume – Buzzer tones"),
- Will flash next to the time in the display.
- Touch \triangle or the alarm in the top right-hand corner of the display.

The buzzer will stop and the symbols in the display will go out.

Changing an alarm

■ Touch the alarm in the top right-hand corner of the display or touch the △ sensor and type in the relevant alarm.

The alarm selected appears.

- Set the new time for the alarm.
- Touch OK.

The altered alarm is now saved and will appear in the display.

Deleting an alarm

■ Touch the alarm in the top right-hand corner of the display or touch the △ sensor and type in the relevant alarm.

The alarm selected appears.

- Touch "Reset".
- Touch OK.

The alarm will be deleted.

Minute minder + Alarm

Using the minute minder \triangle

The minute minder can be used to time other activities in the kitchen, e.g. boiling eggs.

The minute minder can also be used at the same time as a cooking programme for which the start and finish times have been set, e.g. as a reminder to stir a dish or add seasoning etc.

A maximum minute minder duration of 9 hours, 59 minutes and 59 seconds can be set.

Tip: Use the minute minder in Moisture Plus of to remind you to inject the bursts of steam at the desired time.

Setting the minute minder

Example:

You want to boil some eggs and set a minute minder time.

If you want to use the minute minder and "Time – Display – Off" has been selected, you will need to switch the oven on before you can set the minute minder. The minute minder can then be seen counting down in the display when the oven is switched off.

- Touch △.
- Touch "New minute minder time".
- Set the minute minder time you require.
- Touch OK.

When the oven is switched off, the minute minder time counts down in the display and \triangle appears instead of the time of day.

If you are cooking at the same time or if you are in a different menu, the minute minder time and \triangle will appear in the top right-hand corner of the display.

At the end of the minute minder time

- a buzzer will sound if the buzzer volume has been set (see "Settings – Volume – Buzzer tones"),
- —
 — will flash and the display will show the time counting up.
- Touch or the minute minder time in the top right-hand corner of the display.

The buzzer will stop and the symbols in the display will go out.

To change the time set for the minute minder

■ Touch the minute minder time in the top right-hand corner of the display or touch \(\sigma\) and type in the relevant minute minder time.

The minute minder time selected appears.

- Set the new minute minder time you require.
- Touch OK.

The changed minute minder is saved and will count down in seconds.

To cancel the time set for the minute minder

■ Touch the minute minder time in the top right-hand corner of the display or touch \(\sigma\) and type in the relevant minute minder time.

The minute minder time selected appears.

- Touch "Reset".
- Touch OK.

The minute minder is now cancelled.

Overview of functions

Your oven has a range of functions for preparing a wide variety of recipes.

Depending on the function selected, different heating elements are switched on and sometimes combined with the fan (see details in parentheses).

The following can be selected in the "Oven functions" menu:

Fan Plus 👢

(Ring heat element + fan)

This function is used for baking and roasting on different levels at the same time.

A lower temperature can be selected than when using Conventional Heat as the fan distributes the heat to the food straight away.

Moisture Plus **OSS**

(Ring heat element + fan + steam injection system)

For baking and roasting with moisture injection.

The steam injection system can also be used with other types of heating

Intensive Bake 📥

(Ring heat element + fan + bottom heat element)

For baking cakes, tarts, pies, quiches and pizzas that require a crisper base or moist toppings.

Intensive Bake is not suitable for baking thin biscuits or for roasting as the juices will become too dark.

Auto Roast 🕞

(Ring heat element + fan)

This is used for roasting. The oven heats initially to a high temperature (230 °C) which seals the meat to keep it succulent and tasty. As soon as this temperature has been reached, the oven temperature automatically drops back down to the pre-selected temperature for continued roasting.

Conventional Heat

(Top heat/grill element + bottom heat element)

For baking and roasting traditional recipes, preparing soufflés and cooking at low temperatures.

If using an older recipe or cookbook, set the oven temperature 10 °C lower than that recommended. This will not change cooking times.

Overview of functions

Тор	Heat	
-----	------	--

(Top heat/grill element)

Use this function towards the end of cooking to brown the top of food.

Bottom Heat ___

(Bottom heat element)

Use this function towards the end of cooking to reheat or brown the base of a cake, quiche or pizza.

Full Grill ***

(Top heat/grill element)

For grilling and toasting bread, open sandwiches etc. and browning baked dishes.

The entire grill heating element is switched on and is ready for use when it glows red.

Economy Grill **

(Top heat/grill element)

For grilling thin cuts in small quantities and for browning small baked dishes.

The inner part of the grill heating element will get hot and glow red.

Fan Grill [X]

(Top heat/grill element + fan)

For grilling thicker cuts of meat (e.g. roulades, chicken). Lower temperatures can be used than when using the Grill from function, as the fan distributes the heat to the food straight away.

Gentle Bake

(Ring heat element + fan)

For cooking meat.

Tips on saving energy

Cooking

- Remove any accessories from the oven that you do not require for cooking.
- Pre-heat the oven only if instructed to do so in the recipe or the cooking chart.
- Avoid opening the door during cooking.
- In general, if a range of temperatures is given, it is best to select the lower temperature and to check the food after the shortest given time.
- It is best to use dark baking tins and containers with a matt finish made from non-reflective materials (enamelled steel, ovenproof glassware, non-stick coated cast aluminium). Shiny materials such as stainless steel or aluminium reflect heat, preventing it reaching the food efficiently. Do not cover the oven floor or the rack with heat-reflective aluminium foil.

- Observe cooking durations to avoid energy wastage when cooking food.
 - Wherever possible set the cooking duration, or use a food probe.

 Make use of the Automatic programmes if your oven has them.
- Fan Plus ♣ can be used for cooking many types of food. Because the fan distributes the heat to food straight away, it allows you to use a lower temperature than you would with Conventional Heat ☐. It also enables you to cook on several shelf levels at the same time.
- Fan Grill 🏋 can be used for a wide variety of food. With Fan Grill you can use lower temperatures than with other grill functions which use the maximum temperature setting.
- Whenever possible you should cook several dishes at the same time.

 Place them next to each other in the oven or on different shelf levels.
- Dishes which you are unable to prepare at the same time should, if possible, be cooked one after the other in order to make use of existing heat in the oven.

Tips on saving energy

Using residual heat

- The temperature in cooking programmes using temperatures above 140 °C which take longer than 30 minutes to cook can be turned down to the lowest possible temperature about 5 minutes before the end of cooking in order to make use of residual heat. The cooling fan and, depending on cooking function, the hot air fan will remain on. Do not switch the oven off (see "Warning and Safety instructions").
- If you have set a duration for a cooking programme, the oven heating elements will switch off automatically shortly before the end of cooking and "Energy saving phase" will appear in the display. The residual heat in the oven is sufficient to complete the cooking process. The cooling fan and, depending on the function, the hot air fan will remain switched on.
- If you are using the Miele food probe to cook food, the oven heating elements will switch off automatically shortly before the end of cooking. The residual heat in the oven is sufficient to complete cooking and "Energy saving phase" will appear in the display. The cooling fan and, depending on the function, the hot air fan will remain switched on.
- If you wish to run the Pyrolytic cleaning programme, it is best to start it immediately after a cooking programme. The residual heat in the oven will help reduce the amount of energy required to run the programme. To avoid soiling baking on the door, ensure you remove any soiling from it before running the Pyrolytic cleaning programme.

Tips on saving energy

Settings

- Switch the clock display off if you wish to reduce energy usage (see "Settings").
- Set the oven lighting so that it switches off automatically during a programme after 15 seconds. It can be switched on again at any time by touching ••.

Energy save mode

■ The oven will switch itself off automatically to save energy if a programme is not being run and controls have not been operated. The time of day will appear in the display or the display will remain dark (see "Settings").

Simple operation

■ Switch the oven on.

The main menu will appear.

- Unless the recipe requires a preheated oven, place the food in the oven.
- Select "Oven functions" .
- Touch the oven function you want to select it.

The oven function and recommended temperature will appear.

The oven heating, lighting and cooling fan will switch on.

■ Change the recommended temperature if necessary.

The temperature will be automatically accepted within a few seconds. If required, touch "Change" to go back to the temperature selection option (see "Using the oven – further functions – Changing the temperature").

■ Touch OK.

The required and the actual temperature will appear.

You will see the temperature increasing.

A buzzer will sound when the selected temperature is first reached (see "Settings – Volume – Buzzer tones").

After the cooking process:

- Remove the food from the oven.
- Switch the oven off.

Cooling fan

The cooling fan will continue to run for a while after the oven has been switched off to prevent any humidity building up in the oven, on the control panel or in the oven housing unit.

When the temperature in the oven has fallen sufficiently, the cooling fan will switch off automatically.

You can change this default setting if you wish (see "Settings – Cooling fan run-on").

Using the oven – further functions

You can select cooking durations and further settings for the cooking process from the Open further settings field.

You have placed the food in the oven, selected a function and set the temperature.

If you are using the food probe, the "Core temperature" field will also appear and you cannot set a cooking time (see "Roasting – Food probe").

- Select "Change".
- Touch "Open further settings".

Further options will appear in the display which you can select or change for your programme:

- Duration
- Finish at
- Start at (This will appear after a "Duration" or "Finish at" time has been set.)
- Rapid Heat-up
 (This only appears if a temperature
 of more than 100 °C has been set for
 Fan Plus 込, Auto Roast ①,
 Conventional Heat ② or Moisture
 Plus ፩Ⅷ.)

- Crisp function (Moisture reduction for making items crispy on the outside or baking deep filled fresh fruit cakes.)
- Change type of heating (This option only appears with Moisture Plus (355)). You can combine bursts of steam with another type of heating.)
- Change function
 (You can change the cooking function during operation.)

Using the oven - further functions

Changing the temperature

As soon as a cooking function is selected, a recommended temperature will appear in the display.

The following recommended temperatures are set at the factory:

Fan Plus 160 °C (30–250 °C) Intensive Bake 170 °C (50–250 °C) Moisture Plus 160 °C (130–250 °C) Auto Roast* 160 °C (100–230 °C) Conventional Heat . . 180 °C (30–280 °C) Top Heat 190 °C (100–250 °C) Bottom Heat 190 °C (100–250 °C) Full Grill 240 °C (200–300 °C) Economy Grill 240 °C (200–300 °C) Fan Grill 200 °C (100–260 °C) Gentle Bake 190 °C (100–250 °C)

- Initial searing phase temperature approx. 230 °C, continued roasting temperature 160 °C
- If the recommended temperature is suitable for your recipe, touch OK.
- If it is not suitable for your recipe, you can change it for this particular cooking programme.

You can also permanently reset the recommended temperature to suit your personal cooking practices (see "Settings – Recommended temperatures").

Example:

You have selected Fan Plus 🗘 and 170 °C and can see the temperature increasing.

You want to reduce the target temperature to 155 °C.

- Select "Change".
- Set the required temperature.
- Touch OK.

The altered target temperature is saved. The target and actual temperatures are displayed.

Using the oven - further functions

Rapid Heat-up

Rapid Heat-up can be used to speed up the heating-up phase.

The Rapid Heat-up function switches on automatically if you set a temperature of more than 100 °C for Fan Plus , Auto Roast , Conventional Heat and Moisture Plus .

Do not use Rapid Heat-up to preheat the oven when baking pizzas or delicate mixtures (e.g. small baked goods with a high sugar content, pizza, choux pastries, sponges). These will get brown too quickly onthe top.

You can switch-off "Rapid Heat-up" for a relevant cooking process.

Rapid Heat-up

To switch off the Rapid Heat-up function:

- Select "Change".
- Touch "Open further settings".
- Touch "Rapid Heat-up".

"Off" will appear in the "Rapid Heat-up" field.

■ Touch OK.

Rapid Heat-up has been deactivated.

Pre-heating the oven

It is only necessary to pre-heat the oven in a few instances.

Most dishes can be placed in a cold oven. They will then make use of the heat produced during the heating-up phase. If the recipe requires preheating, place the food in the oven once the temperature indicator light goes out.

Pre-heat the oven when using:

Fan Plus 👗

- dark bread doughs,
- beef sirloin joints and fillets.

Conventional Heat

- cakes or biscuits with a short baking time (up to 30 minutes),
- delicate mixtures (e.g. sponges),
- dark bread doughs,
- beef sirloin joints and fillets.
- Select the required oven function and the temperature.
- Rapid Heat-up should be switched off when baking pizza, biscuits and small cakes.
- Wait for the heating-up phase to finish.

A buzzer will sound when the set temperature is reached as long as the buzzer is set (see "Settings – Volume – Buzzer tones").

■ Place the food in the oven.

Using the oven – further functions

Using the Crisp function (moisture reduction)

It is a good idea to use this function when cooking items which are moist on the inside but which should be crispy on the outside, e.g. frozen chips, croquettes or pork with crackling.

It is also suitable for deep filled fresh fruit cakes, such as plum or apple cake.

You can activate the "Crisp function" with any function. It must be activated separately for a cooking process.

For best results, activate it at the beginning of the cooking process.

You have placed the food in the oven, selected a function and set the temperature.

- Select "Change".
- Touch "Open further settings".
- Touch "Crisp function".

"On" will appear in the "Crisp function" field

■ Touch OK.

Moisture reduction is now activated.

Changing the oven function

You can change the oven function during operation.

- Select "Change".
- Touch "Open further settings".
- Touch "Change function".
- Touch the oven function you want to select it.

The new function will appear in the display together with its recommended temperature.

- If necessary, set a temperature for the new function.
- Touch OK.

The oven function has been changed.

The times already entered will be kept.

Using the oven - further functions

Setting a cooking duration

You have placed the food in the oven, selected a function and set the temperature.

You can set the programme to switch on or on and off automatically by setting "Duration", "Finish at" or "Start at".

Duration
 Enter the cooking duration you require.

Once the duration set has elapsed, the heating will switch off automatically.

The maximum duration which can be set is 12:00 hours.

A cooking duration cannot be entered if you are using the food probe. When using the food probe, the cooking duration is determined by when the set core temperature is reached.

Finish at
 Set the time at which you want cooking to finish. The oven will switch off automatically at the time you have set.

A "Finish at" time cannot be entered if you are using the food probe. When using the food probe, the end of the cooking duration is determined by when the set core temperature is reached.

Start at
 Set the time at which you want
 cooking to start. The oven will switch
 on automatically at the time you have

set.

"Start at" can only be used together with "Duration" or "Finish at" (Exception: when using the food probe).

Using the oven - further functions

Switching off automatically

Example:

It is 11:45. Your food needs 30 minutes to cook and should be ready at 12:15.

Select "Duration" and set 0:30 h or select "Finish at" and set the time to 12:15.

The oven will switch off automatically after this duration has elapsed or when the time set has been reached.

Setting the "Duration"

- Select "Change".
- Touch "Open further settings".
- Set the cooking duration.
- Touch OK.

Setting the "Finish at" time

- Select "Change".
- Touch "Open further settings".
- In the "Finish at" field, set the time at which the food should be ready.
- Touch OK.

The cooking duration is saved and then counts down in minutes, with the last minute counting down in seconds.

Switching on and off automatically

We recommend using automatic switching on and off when roasting. However, do not delay the start for too long when baking as the cake mixture or dough will dry out, and the raising agents will lose their effectiveness.

To switch a cooking programme on and off automatically, you have a choice of how to enter the time parameters:

- "Duration" and "Finish at"
- "Duration" and "Start at"
- "Finish at" and "Start at"

Example:

It is 11:30. Your food needs 30 minutes to cook and should be ready at 12:30.

- Select "Change".
- Touch "Open further settings".
- Set a duration of 00:30 h in the "Duration" field.
- Set the time to 12:30 in the "Finish at" field.
- Touch OK.

The "Start at" time will be calculated automatically. "Start at 12:00" will appear in the display.

The oven will switch on automatically at this time.

Using the oven – further functions

Sequence of a programme that switches on and off automatically

Up until the start time the function, the selected temperature, "Start at" and the start time will appear in the display.

After the programme has started, you can follow the heating-up phase in the display until the required temperature has been reached.

Once this temperature is reached, a buzzer will sound if this option has been switched on (see "Settings – Volume – Buzzer tones").

After the heating-up phase, the time remaining will appear in the display.

You can follow the time counting down in the display. The last minute counts down in seconds.

At the end of the programme a buzzer will sound if this option has been switched on (see "Settings – Volume – Buzzer tones").

The oven heating and lighting will switch off. "Process finished" will appear in the display.

You have the option of saving the programme as a User programme (see "User programmes") or increasing the duration of the programme via "Change".

During the cooling down phase the cooling fan will continue to run for a while.

Changing an entered cooking time

■ Select "Change".

All options that can be changed will appear.

- Select the time you require.
- Touch OK.

These settings will all be deleted in the event of a power cut.

Cancelling cooking

"Cancel cooking?" will appear in the display.

■ Touch "Yes".

The main menu will appear. Any cooking durations set will be deleted.

Your oven is equipped with a steam injection system for cooking with moisture. Baking, roasting and cooking with Moisture Plus of quarantees optimised steam and air conduction for excellent cooking and browning results.

After selecting Moisture Plus (855), vou need to set the temperature and the number of bursts of steam.

You can select:

- Automatic burst of steam This requires enough water for one burst of steam. The burst of steam will be injected into the oven automatically after the heating-up phase.
- 1 burst of steam 2 bursts of steam 3 bursts of steam You need to add the appropriate amount of water for the number of bursts of steam. You have the option of releasing manual bursts of steam or time-

controlled bursts of steam.

Fresh tap water is taken into the steam system via the tube underneath the control panel on the left.

 ↑ Use only fresh tap water when cooking with the Moisture Plus function.

Other liquids will cause damage to the oven.

The water is injected as bursts of steam into the oven compartment during the cooking programme.

The steam inlets are located at the rear left corner of the roof of the oven.

One burst of steam takes about 5–8 minutes.

Moisture Plus **OSS**

The number of bursts of steam and when they are injected will depend on the type of food being cooked:

- Yeast mixtures will rise better if steam is injected at the beginning of the programme.
- Bread and rolls also rise better if exposed to steam at the start.
 Injecting a burst of steam at the end of the programme will give the bread and rolls a glistening crust.
- When roasting meat with a high fat content, injecting steam at the beginning of roasting will help render the fat.

Additional moisture is not suitable for mixtures which already contain a lot of moisture, such as choux pastry and meringues, as the addition of steam does not allow them to dry out sufficiently.

Cooking with the Moisture Plus of function

It is quite normal for condensation to form on the inside of the door during steam injection. This will dissipate during the course of the cooking programme.

- Prepare the food and place in the oven if no pre-heating is required.
- Touch "Oven functions".
- Select the Moisture Plus [555] function.

The recommended temperature of 160 °C will appear.

The oven heating, lighting and cooling fan will switch on.

Setting the temperature

- Set the required temperature.
- Touch OK

Setting the number of bursts of steam

If you wish the burst of steam to be injected into the oven automatically after the heating-up phase:

■ Touch "Automatic burst of steam"

If you wish to inject one or more bursts of steam manually at specific times:

■ Touch "1 burst of steam". "2 bursts of steam" or "3 bursts of steam".

When to add the bursts of steam

This option will only appear in the display after you have selected 1. 2 or 3 hursts of steam

Tip: If you have selected more than one burst of steam, the 2nd one should be released 10 minutes after starting the programme at the earliest.

Manual bursts of steam

If you want to inject the bursts of steam manually:

■ Touch "Manual". Then set the minute minder \triangle to remind you when to release them.

Time-controlled bursts of steam


If you want to time when to release the bursts of steam:

- Touch "Time-controlled".
- Set the time for each burst of steam The oven will then release the steam at the specified times. The time counts down as soon as the programme is started.
- Touch OK.

The prompt to draw in water then appears.

Preparing and starting the water intake process

- Fill a suitable container with the required amount of fresh tap water.
- Open the door.
- Pull the water intake pipe forwards (located below the control panel on the left).

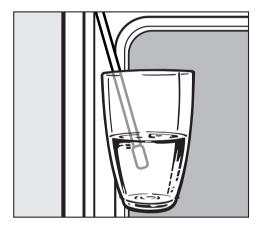

Immerse the end of the water intake pipe in the container with tap water.

■ Touch OK.

The water intake process will begin.

The amount of water actually drawn up into the oven may be less than the amount specified as required, leaving a small amount in the container.

The intake process can be interrupted and restarted at any time by selecting "Stop" or "Start".

- Remove the water container after the water intake process.
- Confirm the message telling you that the process is complete with OK.
- Close the door.

You will hear the pump briefly as the remaining water in the water intake pipe is drawn into the oven.

The required and actual temperatures will appear in the display.

You will see the temperature increasing.

A buzzer will sound when the selected temperature is first reached (see "Settings - Volume - Buzzer tones").

If you have selected "Time-controlled" after the heating-up phase, the time at which to release the next burst of steam will appear in the display. If necessary, you can alter this time via the "Change" option.

Changing the type of heating

The Moisture Plus function of uses a combination of "Fan Plus" together with the addition of moisture

You can use moisture with one of the following other types of heating:

- Conventional Heat
- Intensive Bake
- Auto Roast
- Select "Change".
- Select "Open further settings".
- Scroll through the list of options until "Change type of heating" appears.
- Touch "Change type of heating".
- Select the cooking function you want.
- Touch OK

Cooking will be carried out using the different type of heating selected.

Steam can cause injury by scalding.

Do not open the door while the burst of steam is being injected.

Condensation on the sensors will make them react more slowly.

Automatic burst of steam

"Automatic burst of steam" will appear in the display.

Once the heating-up phase has been completed, the automatic burst of steam is injected.

The water will vaporise in the oven whilst steam is being released and "Burst of steam active" will appear in the display.

When the burst of steam is completed, "Burst of steam finished" will appear in the display.

■ Continue cooking until the end of the cooking duration.

1, 2 or 3 bursts of steam

- Manual bursts of steam

If you have selected "Manual", you can release the steam as soon as "Start burst of steam" appears.

Please wait until the heating-up phase is completed to allow the steam to be distributed evenly by the warm air in the oven.

Please refer to the recipes for the timing of the bursts of steam.

Tip: Set the minute minder \triangle to remind you.

■ Touch "Start"

The burst of steam will be released and "Burst of steam active" will appear in the display.

Proceed as described to inject further bursts of steam.

"Burst of steam finished" will appear in the display after each burst of steam.

■ Continue cooking until the end of the cooking duration.

- Time-controlled bursts of steam

The oven will release the steam after the specified amount of time.

Evaporating residual moisture

When cooking using the addition of moisture, the water will be equally distributed between the number of bursts of steam and used up as long as the programme is not interrupted.

However, if a programme using the addition of moisture is interrupted before all the bursts of steam have been injected, the water for these unused bursts of steam will remain in the system.

The next time Moisture Plus of an Automatic programme with moisture is used "Evaporate residual moisture?" will appear in the display with the options "Skip" and "Yes".

It is best to start the evaporation of residual water straight away so that only fresh water is used during a cooking programme.

Starting residual moisture evaporation immediately

Steam can cause scalding injuries. Do not open the door during the evaporation process.

■ Select the Moisture Plus (

§ (S) function or an Automatic programme that uses moisture.

"Evaporate residual moisture?" will appear.

■ Touch "Yes".

"Evaporate residual water" and a time will appear in the display.

The evaporation process will begin. The duration will count down in the display.

The duration displayed depends on the amount of water in the system. During the evaporation process, this duration may change depending on how much water is present.

At the end of the residual water evaporation process "Process finished" appears in the display.

■ Touch 🗢.

A cooking process using the Moisture Plus (function or an Automatic programme with moisture can now be carried out.

The moisture will condense on the door and in the oven compartment and needs to be wiped off after the oven has cooled down.

Skipping residual moisture evaporation

Do not cancel the prompt for residual moisture evaporation unless you have to, as this could, in certain circumstances, cause the steam unit to overflow into the oven interior when taking in more water.

- If you select Moisture Plus (ass) or an Automatic programme that uses moisture, "Evaporate residual moisture?" will appear.
- Touch "Skip".

A cooking process using the Moisture Plus off function or an Automatic programme with moisture can now be carried out.

You will be prompted to carry out the evaporation of the residual moisture process the next time you select the Moisture Plus (3) function or an Automatic programme that uses moisture and when you switch the oven off.

Automatic programmes

Your oven has a wide range of Automatic programmes to enable you to achieve excellent results with ease. Simply select the appropriate programme for the type of food you are cooking and follow the instructions in the display.

Select Automatic programmes from the "Automatic programmes Auto" menu.

List of food types

- Cakes
- Cookies/Muffins
- Bread
- Bread mixes
- Bread rolls
- Pizza & Quiche
- Meat
- Game
- Poultry
- Fish
- Bakes/Gratins
- Frozen meals
- Desserts

Using Automatic programmes

From the main menu:

■ Touch "Automatic programmes Auto".

A list of food types will appear in the display.

■ Select the food type you want.

The Automatic programmes available for the food type selected will then appear.

■ Select the Automatic programme that you want.

Each step you need to take before starting the Automatic programme will appear in the display.

Depending on the programme you have selected, further information or prompts will appear regarding

- the roasting or baking dish,
- the shelf level.
- the cooking duration.
- Follow the instructions in the display.

See the recipe booklet for a selection of Automatic programmes to try.

Automatic programmes

Notes on using these programmes

- When using the Automatic programmes, the recipes provided are designed as a guide only.
 You can use them for other similar recipes, including those using different quantities.
- The oven interior needs to be at room temperature before starting an Automatic programme.
- The duration quoted for Automatic programmes is an estimate. It may increase or decrease depending on the programme. When using the food probe, the duration will be determined by when the core temperature is reached. The duration, in particular with meat, will vary depending on the initial temperature of the food.

- Some programmes require the addition of liquid during cooking. You will be prompted by a message in the display when this needs to be done (e.g. "Add liquid at ...").
- Some programmes require a preheating phase before food is placed in the oven. A prompt will appear to tell you when to add the food.

Automatic programmes

Search

(depending on language)

You can search "Automatic programmes [Auto]" by food type and by the name of the Automatic programme.

There is a full text search which can also be used to search for parts of words.

From the main menu:

■ Touch Automatic programmes Auto.

A list of food types will appear in the display.

- Touch "Search".
- Use the keyboard to type in the search text, e.g. "Bread".

The number of hits will be shown in the bottom right of the display.

If no match is found, or if there are more than 40 matches, the "Hits" field will be deactivated and you will need to change the search text.

■ Touch "... hits".

The food types and Automatic programmes available will then appear.

■ Touch the Automatic programme you want, or the food type until the programme you want appears.

The Automatic programme will start.

■ Follow the instructions in the display.

User programmes

You can create and save up to 20 of your own programmes.

- Each one can have up to 10 cooking stages. This enables you to save your most frequently used recipes very accurately. Each stage contains a function, temperature and duration or core temperature.
- You can specify the shelf level(s) for the food.
- You can enter the name of the programme for your recipe.

When you next select the programme, it will start automatically.

There are different ways of creating a User programme:

- Touch "Save" at the end of running an Automatic programme.
- Touch "Save" after running a programme with a set duration.

Then name the programme.

Creating a User programme

- Touch User programmes 🚡.
- Select "Create programme".

You can now specify the settings for cooking stage 1.

Follow the instructions in the display:

Select and confirm the cooking function, temperature and duration or core temperature.

Depending on the cooking function selected, you can switch on the Rapid Heat-up and Crisp functions via "Open further settings".

Settings for the 1st cooking stage have now been set

You can add more cooking stages, for example, if you want to add another cooking function to follow on from the first.

If further cooking stages are required:

■ Touch "Add" and proceed as for the 1st cooking stage.

When you have finished setting the cooking stages:

■ Touch "Finish".

Finally set the shelf level(s) to be used.

- Touch the level you want.
- Touch OK

A summary or your settings will appear in the display.

- Check the settings and then touch "OK" or "Change" to alter a setting.
- Touch "Save"
- Enter the programme name using the keyboard.

You can add a line break for longer programme names using the [symbol.

Once you have entered the programme name, touch "Save".

A message will appear in the display confirming that the name has been saved.

■ Touch OK

You can start the saved programme immediately, delay the start or change the cooking stages.

The option to "Change cooking stages" is described in "Changing User programmes".

Starting a User programme

■ Touch User programmes 🚡.



The programme names will appear in the display.

■ Touch the programme you want.

You can start the saved programme immediately, delay the start or display the cooking stages.

- Start now The programme will start straight away and the oven heating will switch on.
- Start later This option only appears if you are using the food probe. You can specify when you want the programme to start. The oven heating will switch on automatically at the time you set.
- Finish at You can specify when you want the programme to finish. The oven heating will switch off automatically at the time you set.
- Start at You can specify when you want the programme to start. The oven heating will switch on automatically at the time you set.

User programmes

- Display cooking stages
 A summary of your settings will appear in the display. You can alter the settings via "Change" (see "Changing User programmes").
- Touch the function you want.
- Confirm the message regarding which shelf level to use with OK.

The programme will start according to the specified start or finish time.

Changing User programmes

Changing cooking stages

Cooking stages in an Automatic programme that you have renamed as a User programme cannot be changed.

■ Touch User programmes ...

The programme names will appear in the display.

- Select "Edit".
- Select "Change programme".
- Touch the programme you want.
- Touch "Change cooking stages".

You can change the specified settings for a cooking stage or add more cooking stages to the programme.

- Touch the cooking stage you want to change or "Add cooking stage".
- Change the programme as you wish (see "Creating a User programme").
- Check the settings and then confirm them with "OK".
- Touch "Save".
- Change the name if necessary (see "Creating a User programme") and touch "Save".

The changes to your programme will be saved.

User programmes

Changing a name

■ Touch User programmes 🚡.

The programme names will appear in the display.

- Select "Edit".
- Select "Change programme".
- Touch the programme you want.
- Touch "Change name".
- Enter a new name (see "Creating a User programme").
- Touch "Save".

A message will appear in the display confirming that the name has been saved.

■ Touch OK.

The new name for your programme will be saved.

Deleting User programmes

■ Touch User programmes 🚡.

The programme names will appear in the display.

- Select "Edit".
- Select "Delete programme".
- Touch the programme you want.
- Touch "Yes".

The programme will be deleted.

You can delete all User programmes at once (see "Settings – Factory default – User programmes").

Baking

Eating food which has been cooked correctly is important for preventing food poisoning or other ailments. Only bake cakes, pizza, chips etc. until they are golden brown. Do not overcook them.

Oven functions

Depending on how the food is prepared, you can use Fan Plus , Intensive Bake , Moisture Plus or Conventional Heat .

Bakeware

The choice of bakeware depends on the oven function and how the food is prepared.

- Fan Plus 基, Intensive
 Bake 基, Moisture Plus swf
 Baking tray, universal tray, bakeware made from ovenproof material.
- Conventional Heat ::
 Dark metal, enamel or aluminium
 baking tins with a matt finish, as well as heat-resistant glass, ceramic and coated dishes can be used.

 Avoid bright, shiny metal tins as they result in uneven or poor browning, and in some cases cakes might not cook properly.

- Always place baking tins on the rack.
 Position rectangular tins with the longer side across the width of the rack for optimum heat distribution and even baking results.
- When baking cakes with fresh fruit toppings and deep sponge cakes, place the tin on the universal tray to catch any spillages and keep the oven cleaner.

Baking paper, greasing

All Miele accessories (universal tray and pizza tray) are treated with PerfectClean enamel.

Surfaces treated with PerfectClean enamel generally do not need to be greased or covered with baking paper.

Baking paper is only needed with

- anything with a high salt content (e.g. pretzels, bread sticks), because sodium can damage the PerfectClean surface;
- meringues or sponges with a high egg-white content, because they are more likely to stick;
- frozen food cooked on the rack.

Notes on the baking chart

Temperature

As a general rule, select the lower temperature given in the chart.

Baking at temperatures higher than those recommended may reduce the cooking time, but will lead to uneven browning, and unsatisfactory cooking results.

Baking time (4)

Check if the food is cooked at the end of the shortest time quoted.

To check if a cake is ready, insert a wooden skewer into the centre. It is ready if the skewer comes out clean, without dough or crumbs sticking to it.

Shelf levels 31

The shelf level on which you place your food for baking depends on the oven function and number of trays being used.

Fan Plus
1 tray: Shelf level 1
2 trays: Shelf levels 1+3

The universal tray should be placed underneath the baking tray if you are using a universal tray and a baking tray on several levels at the same time.

- Moisture Plus (6)(1)
 1 tray: Shelf level 1
- Intensive Bake at 1 tray: Shelf level 1 or 2
- Conventional Heat
 1 tray: Shelf level 1 or 2

Baking

Baking chart

Cakes/Biscuits		Image: Control of the		
	₽ ≡	\square_1^3	<u>(1)</u>	
	[°C]		[min.]	
Creamed mixture				
Sand cake	140–160	1	65–75	
Ring cake	150–170	1	65–80	
Muffins (1 tray)	150–170	1	25–50	
Small cakes (1 tray) 1) 2)	150–170	1	30-40	
Small cakes (2 trays) 1) 2)	150 ³⁾	1+3	30-40	
Foam cake (tray)	150–170	1	25–40	
Marble, nut cake (tin)	150–170	1	60–80	
Fresh fruit cake, with meringue topping (tray)	150–170	1	45–50	
Fresh fruit cake (tray)	150–170	1	35–45	
Fresh fruit cake (tin)	150–170	1	45-65	
Flan base 1)	150–170	1	25-30	
Small cakes/biscuits 1) (1 [2] tray(s))	150–170	1 [1+3 ⁴⁾]	20–25	
Rubbed in mixture				
Flan base	150–170	1	20–25	
Streusel cake	150–170	1	45–55	
Small cakes/biscuits 1) (1 [2] tray(s))	150–170	1 [1+3 ⁴⁾]	15–25	
Drop cookies 1) 2) (1 [2] tray/s)	150–170	1 [1+3 ⁴⁾]	30–45	
Cheese cake	140–160	1	70–95	
Apple pie (tin Ø 20 cm) 1) 2)	160	1	85-105	
Apple tart 1)	150–170	1	60–70	
Apricot tart with topping (tin)	140–160	1	55–75	
Swiss apple cake	_	-	_	

The data for the recommended function is printed in bold.

Unless otherwise stated, the times given are for an oven which has not been preheated. With a pre-heated oven, shorten times by up to 10 minutes.

In general, if a range of temperatures is given, it is best to select the lower temperature and to check the food after the shortest time.

				<u> </u>	
<u>O</u> =	3 1	<u> </u>	 ⊒≡	3	(
[°C]		[min.]	[°C]		[min.]
150–170	1	60–70	_	-	_
160–180	1	65-80	_	_	_
160-180	2	25-50	_	_	_
160 ³⁾	1	18–25	_	_	_
_	_	_	_	_	_
160–180	2	25-40	_	_	_
150–170	1	60–80	_	_	_
160–180	2	40–50	_	_	_
160–180	2	35–45	_	_	_
160–180	1	45–65	_	_	_
170–190	1	20-25	_	_	_
160–180 ³⁾	2	15–25	_	_	_
170–190	1	15–20	_	_	_
160–180	2	45–55	_	_	_
160–180	2	15–25	_	_	_
160 ³⁾	2	15–30	_	_	_
160–180	1	85–95	150–170	2	75–90
180	1	80–95	_	_	_
160–180	1	60–70	150–170	1	55–65
160–180	1	55–75	140–160	1	50–60
_	_	_	190–210 ³⁾	1	30–40

- Temperature / ☐ 3 Shelf level / ⊕ Baking time
- 1) Switch off Rapid Heat-up during the heating-up phase. To do this select "Open further settings Rapid Heat-up Off".
- 2) The settings also apply for testing in accordance with EN 60350.
- 3) Pre-heat the oven.
- 4) Take the baking trays out of the oven early if the food is sufficiently browned before the specified duration has elapsed.
- 5) Select "Open further settings Crisp function On".
- 6) Switch the catalyser off (see "Settings Catalyser").

Baking

Baking chart

Cakes/Biscuits	l. l.		
	I	□3 ₁	(
	[°C]		[min.]
Sponge mix ¹⁾			
Tart / flan base (2 eggs) 1)	160–180	1	20–30
Sponge cake (4 to 6 eggs) 1)	160–180	1	25–35
Whisked sponge cake 1)2)	170	1	25-35
Swiss roll ¹⁾	160–180 ³⁾	1	15–25
Yeast mixtures and quark dough			
Proving yeast dough	30–50	5)	15–30
Gugelhupf	140–160	1	45–65
Stollen	150–170	1	55–65
Streusel cake	150–170	1	50–60
Fresh fruit cake (tray)	150–170	1	55-65
White bread	160-180	1	45-55
Wholegrain bread	170–190 ³⁾	1	50-60
Pizza (tray) 1)	220–240	1	10–20
Onion tart	150–170	1	35–45
Apple turnovers (1 [2] tray(s))	150–170	1 [1+3 ⁴⁾]	25–30
Choux pasty 1), Eclairs (1 tray)	160–180	1	30–45
Puff pastry (1 tray)	170–190	1	20-30
Meringues, (1 [2] tray(s))	100–120	1 [1+3 ⁴⁾]	25–50

The data for the recommended function is printed in bold.

Unless otherwise stated, the times given are for an oven which has not been preheated. With a pre-heated oven, shorten times by up to 10 minutes.

In general, if a range of temperatures is given, it is best to select the lower temperature and to check the food after the shortest time.

				<u> </u>	
Q ≡	3 1	(₽	3 1	(
[°C]		[min.]	[°C]		[min.]
160–180 ³⁾	1	20–25	_	_	_
160-180 ^{3) 6)}	1	20–35	_	_	_
150-180 ^{3) 6)}	1	20–45	_	_	_
160-180 ^{3) 6)}	2	12–20	_	_	_
50	5)	15–30	_	_	
140–160	1	45–65	_	_	
150–170	2	55–65	_	_	
160–180	2	50-60	_	_	
170–190 ¹⁾	2	55–65	_	_	_
160–180	1	50–60	_	_	_
180–200 ³⁾	1	50-60	_	_	_
220–240	2	10–25	220–240	1	10–20
180–200	2	25–35	170–190	1	25–35
160–180	2	25–30	_	_	_
180–200 ³⁾	2	35–45	_	_	_
190–210 ³⁾	2	15–25	_	_	_
120–140 ³⁾	2	25–50	_	_	_

- → Fan Plus / Conventional Heat / → Intensive Bake
- Temperature / □ 3 Shelf level / ⊕ Baking time
- 1) Switch off Rapid Heat-up during the heating-up phase. To do this select "Open further settings Rapid Heat-up Off".
- 2) The settings also apply for testing in accordance with EN 60350.
- 3) Pre-heat the oven.
- 4) Take the baking trays out of the oven early if the food is sufficiently browned before the specified duration has elapsed.
- 5) Place the rack on the floor of the oven, and stand the bowl containing the dough on the rack.
- 6) Switch the catalyser off (see "Settings Catalyser").
- 7) Select "Open further settings Crisp function On".

Roasting

Oven functions

Depending on how the food is being cooked, you can use Fan Plus , Moisture Plus . Auto Roast , Conventional Heat or an Automatic programme.

Roasting dishes

You can use any heat-resistant crockery:

Miele Gourmet oven dishes, roasting pans, ovenproof glass trays, roasting bags, dishes made from earthenware or cast iron, the universal tray, rack and/or grilling and roasting insert (if available) on top of the universal tray.

We recommend roasting in covered oven dishes as this ensures that sufficient stock remains for making gravy.

The oven also stays cleaner than with open roasting.

Notes on the roasting chart

Temperature

As a general rule, select the lower temperature given in the chart. If higher temperatures are used, the meat will brown on the outside, but will not be properly cooked through.

When cooking with Fan Plus , Moisture Plus (355) or Auto Roast , select a temperature approx. 20 °C lower than for Conventional Heat .

Select a temperature of approx. 10 °C lower than quoted in the roasting chart for meat weighing more than 3 kg. The roasting process will take longer, but the meat will cook evenly through and the skin or crackling will not be too thick

When roasting on the rack, set a temperature approx. 10 °C lower than if using an oven dish.

Pre-heating

Pre-heating is only required when roasting beef sirloin joints and fillets.

Roasting duration ①

The roasting time can be determined by multiplying the thickness of the roast [cm] with the time per cm [min./cm] stated below, depending on the type of meat:

Check if the meat is cooked after the shortest time quoted.

Shelf levels 3

Use shelf level 1 or 2 depending on the height of the food.

Useful tips

Browning

Browning only occurs towards the end of the roasting time. If cooking with a roasting dish, remove the lid about halfway through the roasting time if a more intensive browning result is desired.

Standing time

At the end of the programme, take the roast out of the oven, wrap in aluminium foil and leave to stand for about 10 minutes. This helps retain juices when the meat is carved.

Roasting poultry

For a crisp finish, baste the poultry 10 minutes before the end of the cooking time with slightly salted water.

Roasting

Food probe



The wireless food probe enables the roasting process to be monitored simply and reliably.

How the food probe works

The metal tip of the food probe is inserted into the food. There is a temperature sensor in the metal tip which measures the core temperature of the food during cooking.

The temperature sensor is located approx. 2 cm from the tip. Insert the food probe so that the temperature sensor is positioned centrally (see "Important notes about using the food probe").

The rise in the core temperature reflects the extent to which the food is cooked. You can programme the core temperature to be lower or higher, depending on whether you want your meat to be rare, medium or well-done.

A core temperature of up to 99 °C can be set. Please refer to the roasting chart and "Low temperature cooking" for the core temperatures applicable for different types of meat.

The duration for roasting meat by temperature using the probe is similar to the duration when cooking by time.

The core temperature value is sent via radio signal from the transmitter in the handle of the food probe via the antenna in the back wall of the oven to the appliance's electronic unit as soon as the food with the food probe is placed in the oven.

Accurate transmission is only possible when the door is shut.

If the oven door is opened during the cooking programme, e.g. to baste the meat, the radio signal is interrupted. It will resume once the door has been closed. It will take a few seconds for the current core temperature to appear in the display again.

If the food probe is not being used, it must not be left in the oven during a cooking programme. The temperature sensor will be destroyed at temperatures over 100 °C. For this reason, the food probe should be replaced in its holder in the door when it is not being used.

It will not be damaged when it is inserted into the food, as it is only possible to select core temperatures up to 99 °C.

When the food probe can be used

Some Automatic programmes and Special applications will prompt you to use the food probe.

You can also use it with your own User programmes and with the following functions:

- Auto Roast
- Fan Plus 👗
- Intensive Bake 📥
- Conventional Heat
- Moisture Plus (8)
- Fan Grill TX

Roasting

Important notes about using the food probe

To ensure the food probe works correctly, please observe the following instructions.

- Do not use deep, narrow, metal cooking containers, as these will weaken the radio signal.
- Do not place any metal items above the food probe, such as lids, aluminium foil, racks or universal trays on a shelf level above the food with the food probe. Glass lids may be used.
- Do not use another standard metal cooking thermometer at the same time.
- Do not allow the handle of the food probe to sit in any sauce or cooking liquid, or to rest on the food or on the edge of the cooking container.

Do not use the food probe to lift or carry the food. Danger of breaking.

In addition please note:

- You can place the meat in a pot or on the rack in the universal tray.
- The metal tip of the food probe must be fully inserted into the centre of the food. The handle should be angled upwards towards the corners or the door of the oven. Make sure it is not horizontal.
- When cooking poultry, insert the metal tip into the thickest part of the breast. You can find the thickest part of the breast by pressing the area with your thumb and index finger.
- Do not let the metal tip touch any bones or insert it into a particularly fatty area of the meat. If fat or bone come into contact with the probe, this can lead to the oven being switched off too early.
- If the meat is very heavily marbled with fat, select the highest core temperature given in the roasting chart.

- When using roasting bags or aluminium foil, insert the probe through the bag or foil into the centre of the meat. You can also place the meat, with the food probe inserted, inside the foil. Follow the roasting bag / aluminium foil manufacturer's instructions.
- The food probe can only be inserted horizontally into flat food, e.g. fish.
 Therefore place flat food in glass or ceramic cooking containers, as the walls of a metal container would disturb the radio signals.

If the food probe is no longer recognised during cooking, a message will appear in the display. Change the position of the food probe in the food.

Using the food probe

- Remove the food probe from its holder in the door.
- Insert the metal tip of the food probe fully into the food. Make sure that the handle is angled upwards.
- Place the food in the oven.
- Close the door.
- Select the oven function or Automatic programme.

The message "Continue cooking with the food probe?" will appear.

- Touch "Yes".
- Change the recommended temperature if necessary.
- Change the recommended core temperature if necessary.

The core temperatures cannot be changed for the Automatic programmes.

Roasting

You can also delay the start of the cooking time. To do this, touch "Open further settings" and enter a time in the "Start at" field. In Automatic programmes touch "Start later".

You can estimate approximately when the food will be ready as the duration of the cooking programme is about the same as if you were cooking food without using the food probe.

You cannot enter a "Duration" or "Finish at" time as the total cooking duration is determined by how long it takes for the core temperature to be reached.

Time remaining display

If the temperature set for a cooking process is above 140 °C, the estimated time left for the cooking process will appear in the display after a short while.

The time remaining is calculated from the cooking temperature selected, the required core temperature and the pattern of the increasing core temperature.

The time remaining first shown is an estimate. As the cooking process continues, the time remaining is revised continuously, and a more accurate revised figure shown.

Altering the cooking or core temperature or selecting a different function will delete the time remaining information.

The time remaining will be recalculated if the door is kept open for a long period of time.

Displaying the core temperature

As soon as the time remaining appears, you can also display the actual core temperature.

- Select "Change".
- Touch "Display core temperature".
- Touch "On".
- Touch OK.

The actual core temperature will also appear in the display.

Using residual heat

The heating in the oven switches off shortly before the end of the cooking programme. The residual heat in the oven is sufficient to complete the cooking process.

Using the residual heat in the oven saves energy.

"Energy save phase" will appear in the display to show that the oven is in energy save mode. The measured core temperature is no longer visible.

The cooling fan continues to run, as does the hot air fan if a "fan" setting has been chosen.

When the core temperature selected has been reached.

- "Process finished" will appear in the display,
- a buzzer will sound if the buzzer is switched on (see "Settings - Volume -Buzzer tones").

If the food is not yet cooked sufficiently, insert the food probe into another place and repeat the programme.

Roasting

Roasting chart

Meat/Fish	1 . €		
	Q =	(
	[°C]	[min.]	
Topside of beef, approx. 1 kg	170–190	100–130 ²⁾	
Fillet of beef/Sirloin joint, approx. 1 kg	180–200 ³⁾	20–55	
Venison, approx. 1 kg	170–190	40–60 ⁴⁾	
Pork roast/neck, approx. 1 kg	170–190	100–120 ⁴⁾	
Pork joint with crackling, approx. 2 kg	160–180	130–160 ⁴⁾	
Gammon joint, approx. 1 kg	160–180	60–80 ⁴⁾	
Meat loaf, approx. 1 kg	170–190	60–90 ⁴⁾	
Veal, approx. 1.5 kg	170–190	100–120 ⁴⁾	
Leg of lamb, approx. 1.5 kg	170–190	90-120 ⁴⁾	
Rack of lamb, approx. 1.5 kg	170–190	20–60	
Poultry, 0.8-1.2 kg	180–200	60–70	
Poultry, approx. 2 kg	170–190	90–110	
Poultry, stuffed, approx. 2 kg	170–190	110–130	
Poultry, approx. 4 kg	160–180	150–180	
Fish, whole, approx. 1.5 kg	160–180	35–55	

The data for the recommended function is printed in bold.

The times given are for an oven which has not been pre-heated.

In general, if a range of temperatures is given, it is best to select the lower temperature and to check the food after the shortest time.

Temperatures refer to cooking in an uncovered dish.

If roasting directly on the universal tray or the rack, set the temperature to 10 °C lower.

011	<u>(∆∫∫∫</u> 1)			
] =	<u></u>	Ω≡	<u></u>	/ 1, 5)
[°C]	[min.]	[°C]	[min.]	[°C]
_	_	190–210	110-140 ²⁾	60–80
_	_	200–220 ³⁾	45–55	40-70 ⁶⁾
170–190	40-60 ⁴⁾	190–210	60–90 ⁴⁾	70–85
160–180	110-130 ⁴⁾	180–200	100-120 ⁴⁾	80–90
170–190	130-160 ⁴⁾	190–210	130-160 ⁴⁾	75–85
160-180	60-80 ⁴⁾	170–190	80–100 ⁴⁾	75–80
170–190	60-70 4)	190–210	60-70 ⁴⁾	75–80
170–190	90–110 ⁴⁾	190–210	100-120 4)	70–80
170–190	90–120 ⁴⁾	200–220	90-120 4)	75–85
_	_	190–210	20–60	65–75
190–210	60–70	190–210	60–75	80–90
180–200	90–110	180–200	100-120	80–90
180–200	100-120	180–200	110–130	80–90
170–190	140-170	180–200	150-180	80–90
170–190	35–55	190–210	35–55	75–80

- 🗘 Fan Plus / 🖸 Auto Roast / 🕼 Moisture Plus / 🔲 Conventional Heat
- 1) After the heating-up phase, inject the bursts of steam at intervals throughout the cooking duration.
- 2) Roast with the lid on first, then remove the lid halfway through roasting and pour over approx. 0.5 litre liquid.
- Pre-heat the oven. However, switch off "Rapid Heat-up". To do this, select "Open further settings – Rapid Heat-up – Off".
- 4) Pour over approx. 0.5 litre liquid halfway through roasting.
- When using the food probe, enter an appropriate core temperature for the food being cooked.
- 6) Select a core temperature which is appropriate for how well done you want the food to be cooked:

rare: 55-60 °C, medium: 65-70 °C, well done: 70-75 °C

Low temperature cooking

This type of cooking is ideal for cooking beef, pork, veal or lamb when a tender result is required.

First the meat needs to be seared all over briefly at a high temperature on the cooktop in order to seal it.

Then place the meat in the pre-heated oven where the low temperature and long cooking time will cook it to perfection and ensure it is very tender.

The meat will relax and the juices inside will start to circulate evenly throughout the meat to reach the outer layers. This will give very tender and succulent results.

Useful tips

- Use lean meat which has been correctly hung and trimmed. Bones should be removed before cooking.
- For searing, use a suitable cooking oil or fat that can withstand high temperatures (e.g. clarified butter).
- Do not cover meat during cooking.

The cooking duration is approx. 2–4 hours and depends on the weight and size of the meat, as well as the desired degree of doneness and browning.

Cooking duration/Core temperatures

Meat	Duration	Core tempe-
	[min.]	[°C]
Sirloin joint		
Rare	60–90	55–60
Medium	120-150	65–70
Well-done	180–240	70–75
Pork fillet	120–150	65–80
Gammon*	150–210	75–80
Saddle of veal*	180–210	65–75
Saddle of lamb*	90–120	65–75

Boned

After cooking

Because the cooking and core temperatures are very low:

- Meat can be carved straight from the oven. It does not need to rest.
- The cooking result won't be affected if the meat is left in the oven after the finish of the programme. It can be kept warm until you serve it.
- The meat is an ideal temperature to eat straight away. Serve on preheated plates with very hot sauce or gravy to prevent it cooling down too quickly.

Low temperature cooking

Using the "Low temperature cooking" special application

- Touch Special applications <a> □.
- Touch "Low temperature cooking".
- Set the required temperature.
- Set the core temperature.
- Follow the instructions in the display.
 Place the universal tray and rack in the oven for the pre-heating phase.
- While the oven is pre-heating, sear the meat on all sides on the cooktop.

Danger of burning!
Use oven gloves when placing food in the oven, turning or removing it and when adjusting oven shelves etc. in a hot oven.

As soon as "Use the food probe" appears, place the seared meat on the rack and insert the metal tip of the food probe fully into the centre of the meat.

Please also refer to the information in "Roasting – Food probe".

Place the rack on the universal tray and then place the tray in the oven on the shelf level quoted. Take care: the top heat/grill element in the oven will be hot. Danger of burning!

■ Close the door.

At the end of the programme, "Process finished" will appear in the display and a buzzer will sound if the buzzer is switched on (see "Settings – Volume – Buzzer tones").

If the meat is not cooked to your satisfaction, you can cook it for longer.

Low temperature cooking

Low temperature cooking – setting the temperature manually

Use the universal tray with the rack placed on top of it.

Do not use the Rapid Heat-up function to pre-heat the oven.

- Place the rack together with the universal tray on shelf level 1.
- Select "Oven functions []".
- Touch Conventional Heat .
- Enter 130 °C.
- Switch off Rapid Heat-up by touching
 "Change Open further settings –
 Rapid Heat-up Off".
- Pre-heat the oven together with the universal tray and rack for approx. 15 minutes.
- While the oven is pre-heating, sear the meat on all sides on the cooktop.

Danger of burning!
Use oven gloves when placing food in the oven, turning or removing it and when adjusting oven shelves etc. in a hot oven.

- Place the seared meat on the rack.
- Select "Change".
- Reduce the temperature to 100 °C.
- Continue cooking until the end of the cooking duration.

You can set the cooking process to finish automatically (see "Using the oven – further functions – Setting the cooking duration").

Danger of burning!
Grill with the oven door closed. If you grill with the door open, hot air will escape from the oven instead of being cooled by the cooling fan.
The controls will get hot.

Oven functions

Full Grill

For grilling and toasting bread, open sandwiches etc. and browning baked dishes.

The entire grill heating element is switched on and is ready for use when it glows red.

Economy Grill **

For grilling thin cuts in small quantities and for browning small baked dishes.

The inner part of the grill heating element will get hot and glow red.

Fan Grill 🟋

For grilling thicker items, e.g. rolled meat, poultry pieces.

 
The top heat/grill element and fan are switched on alternately.

Grilling dishes



Use the universal tray with the rack or grilling and roasting insert (if available) on top.

The juices from the food being cooked collect under the insert. This prevents them from spitting and making the oven dirty. The juices can then be used for making gravy and sauces.



Your oven also has a rotisserie which is ideal for cooking rolled meat and poultry (see "Grilling with the rotisserie").

Grilling

Notes on the grilling chart

Temperature

As a general rule, select the lower temperature given in the chart. If higher temperatures are used, the meat will brown on the outside, but will not be properly cooked through.

For thin items, a maximum temperature setting of 200 °C is generally recommended, for thicker items, a maximum of 180 °C.

Pre-heating

Always pre-heat the top heat/grill element for approx. 5 minutes with the door closed.

Shelf levels 3

Select the shelf level according to the thickness of the food.

- Thin items: Shelf level 2/3
- Thicker items: Shelf level 1/2

Grilling duration

Turn the food halfway through grilling.

Testing to see if cooked

One way of finding out how far through a piece of meat has been cooked is to press down on it with a spoon:

Rare: If there is very little

resistance to the pressure of the spoon, it will still be

red on the inside.

Medium: If there is some resistance,

the inside will be pink

Well-done: If there is great resistance,

it is cooked through.

Check if the meat is cooked after the shortest time quoted.

Tip

If the surface of thicker cuts of meat is cooked but the centre is still raw, continue grilling at a lower temperature setting or use a lower shelf level to allow the food to cook through to the centre.

Preparing food for grilling

Rinse meat under cold running water and then pat dry. Do not season meat with salt before grilling as this draws the juices out.

Add a little oil to lean meat if necessary. Do not use other types of fat as they can burn and cause smoke.

Clean fish in the normal way. To enhance the flavour, add a little salt or squeeze a little lemon juice over the fish.

Grilling

- Place the rack or the roasting and grilling insert (if available) in the universal tray.
- Place the food on top.
- Select the required oven function and the temperature.
- Pre-heat the top heat/grill element for approx. 5 minutes with the door closed.

Danger of burning!
Use oven gloves when placing food in the oven, turning or removing it and when adjusting oven shelves etc. in a hot oven.


- Place the food on the appropriate shelf level (see Grilling guide).
- Close the door.
- Turn the food halfway through grilling.

Grilling


Grilling with the rotisserie

The rotisserie can only be used with the functions Full Grill T, Economy Grill and Fan Grill T.

The rotisserie can support a maximum weight of 5 kg.

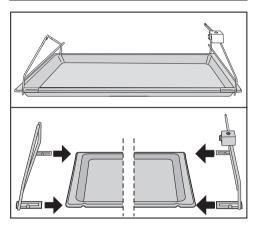

■ Push the rotisserie holders into the sides of the universal tray until they click into position.

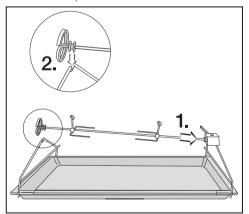

Secure the meat to the rotisserie spit using clamps, making sure it is held centrally. Meat needs to be balanced in the middle to give even rotation.

- Insert the pointed end of the rotisserie (1.) into the motor slot at the back of the rotisserie set up and set the other end onto the holder (2.) as illustrated.
- Place the rotisserie on shelf level 1.

The rotisserie will automatically fit into the motor slot on the back wall of the oven

- Close the door
- Select one of the Grill functions.
- Set the required temperature.
- Touch "Open further settings".

In the "Rotisserie" field "Off" is preselected.

■ Touch OK.

"On" will appear and the grill motor will switch on.

Food is grilled evenly on all sides as it rotates.

After the cooking process:

- Remove the food from the oven.
- Switch the oven off.

The setting for the grill motor will automatically revert to "Off".

Fan Grilling guide (Fan Grill 💢)

- Use the Fan Grill function for meat, fish, poultry and vegetables.
- Always pre-heat for at least 5 minutes before Fan Grilling.
- It is not necessary to turn food when Fan Grilling.
- The door must be closed during Fan Grilling.
- When using red meat, pat the meat dry before Fan Grilling as this encourages a richer colour.
- Activate the Crisp function (moisture reduction) at the beginning of the Fan Grill function. This is great for items that are moist on the inside and should be crispy on the outside.
- Note: all temperatures are approximations and must be varied according to the thickness and preparation of the meat. The chart below is a suggested guide only. Personal taste and size of serves will vary times and temperatures. We recommend you monitor cooking results for best outcomes.

Food	I =	☐3 1	(
	[°C]		[min.]
Lean thin sausages	180	3	8–10
Thick sausages	180	3	15–20
Lean beef fillet steak	220	3	6–12
Chicken breast fillet, plain or a dry marinade	200	3	14–18
Chicken breast fillet, with a wet marinade	200	3	14–18
Whole butterflied chicken	200	1	30–35
Thin white fish fillets	220	3	6–10
Thick fish fillets, cutlets or steaks (on grilling and roasting insert placed in the universal tray)	200	3	10–15
Oily fish (on grilling and roasting insert placed in the universal tray)	200	3	8–12
Lamb loin chops	190	3	12–16
Lamb back straps	220	3	8–10
Vegetables, capsicum, zucchini, sweet potato, eggplant	200	3	12–15
Potato wedges or small roast potatoes	220	2	20–25
Kebabs and satays (red meat)	200	3	12–15
Chicken satays	200	3	12–15

Temperature / □ 3 Shelf level / ⊕ Total grilling time

Fan Grilling can be used for small roasts but is only recommended for lean, tender cuts of meat, e.g. lamb racks, rump roasts, and beef fillet. Fan Grill the roast at 180–200 °C on shelf level 3, depending on thickness.

Grill chart

Grilling guide (Full Grill " / Economy Grill)

- Use for thick toasts, muffins, cheese on toast, foccacia, bruschetta and bacon.
- Pre-heat grill for at least 5 minutes on 200-220 °C.
- Select the appropriate shelf level for the thickness of the food.
- Thinner foods can be positioned on shelf 3, while thicker foods should be grilled on shelf 2.
- Grill until food is golden brown and crispy.
- Door must be closed for grilling.

Please note: This is a suggested guide only. Personal taste and size of serves will vary times and temperatures.

Special applications

Your oven has the following Special applications in addition to the Automatic programmes:

■ Touch Special applications 🐯.

The following Special applications are available:

- Defrost
- Drying
- Reheat (reheating of plated meals)
- Heat crockery
- Prove yeast dough
- Low temperature cooking
 This Special application is described in "Low temperature cooking".
- Pizza
- Sabbath programme

This section also gives information on the following applications:

- Gentle Bake
- Bottling
- Frozen food/Ready meals

Special applications

Defrost

Use the Defrost function to gently defrost frozen food.

The temperature can be set between 25 and 50 °C.

- Touch Special applications 😩.
- Touch "Defrost".
- Alter the recommended temperature, if necessary, and then set the duration.
- Follow the instructions in the display.

Air is circulated throughout the cabinet to gently defrost the food.

Danger of salmonella poisoning! It is particularly important to observe food hygiene rules when defrosting poultry. Do not use the liquid from the defrosted poultry. Pour it away, and wash the tray, the sink and your hands.

Useful tips

- Where possible, remove the packaging and put the food to be defrosted on the universal tray or into a suitable dish.
- When defrosting poultry, put it on the rack over the universal tray to catch the defrosted liquid so that the meat is not lying in this liquid.
- Meat and poultry need to be fully defrosted before cooking. Fish, on the other hand, can be partially defrosted before cooking.
 Defrost so that the surface is sufficiently soft to take herbs and seasoning.

Defrosting times

The time needed for defrosting depends on the type and weight of the food, and at what temperature it was deep frozen. The following chart is for guidance only. It is important to check that food is thoroughly defrosted.

Frozen food	Weight	Duration
	[g]	[min.]
Chicken	800	90-120
Meat	500	60–90
	1 000	90-120
Sausages	500	30-50
Fish	1 000	60–90
Strawberries	300	30-40
Butter cake	500	20-30
Bread	500	30–50

Drying

This programme is designed for traditional style drying of food to preserve it.

The temperature can be set between 80 and 100 °C.

It is important that fruit and vegetables are ripe and not bruised before they are dried.

- To prepare food for drying:
- Peel and core apples, and cut into slices 0.5 cm thick.
- Core plumbs if necessary.
- Peel, core and cut pears into wedges.
- Peel and slice bananas.
- Clean mushrooms, then either halve or slice them.
- Remove parsley and dill from the stem.
- Distribute the food evenly over the universal tray.

You can also use the rack.

- Touch "Special applications 🕸".
- Touch "Drying".
- Alter the recommended temperature, if necessary, and then set the duration.

■ Follow the instructions in the display.

Food	Drying time
Fruit	2-8 hours
Vegetables	3–8 hours
Herbs*	50–60 minutes

- Because this programme uses the fan, you should use Conventional Heat with a temperature of 80–100 °C for drying herbs.
- Reduce the temperature if condensation begins to form in the oven.

Danger of burning!
Wear oven gloves when removing the dried food from the oven.

Allow the dried fruit or vegetables to cool down after drying.

Dried fruit must be completely dry, but also soft and elastic. Juice must not escape when cut.

■ Store in sealed glass jars or tins.

Reheat

This programme uses moisture and is designed for reheating plated meals.

You can select:

- Roast with vegetables
- Roast with potatoes
- Roast with dumplings
- Roast with pasta
- Fish with vegetables
- Fish with potatoes
- Vegetable bake
- Pasta bake
- Pasta with sauce
- Pizza
- Casserole

Use heat-resistant crockery.

- Place the food to be reheated in its dish on the rack. Do not cover it.
- Touch Special applications <a>□.
- Touch "Reheat"
- Touch the plated meal you want and set the heat level.
- Follow the instructions in the display.

Danger of burning.
Wear oven gloves when removing the dishes from the oven.
Droplets of water may have accumulated underneath the dish.

Heat crockery

This programme is designed to preheat your crockery.

The temperature can be set between 50 and 80 °C.

Use heat-resistant crockery.

- Place the rack on shelf level 1 and place the crockery to be pre-heated on it.
- Touch Special applications 🕸.
- Touch "Heat crockery".
- Alter the recommended temperature, if necessary, and then set the duration.
- Follow the instructions in the display.

⚠ Danger of burning! Wear oven gloves when removing dishes from the oven.

- Remove the heated crockery from the oven.
- Switch the oven off.

Prove yeast dough

This programme does not use additional moisture and is designed for proving yeast dough.

The temperature can be set between 30 and 50 °C.

- Touch Special applications <a>□.
- Touch "Prove yeast dough".
- Alter the recommended temperature, if necessary, and then set the duration.
- Follow the instructions in the display.

If you wish to prove dough with the addition of moisture, select the relevant Automatic programme.

Pizza

This programme is designed specifically for baking pizza.

The temperature can be set between 160 and 250 °C.

- Touch Special applications 😩.
- Touch "Pizza".
- Alter the recommended temperature, if necessary, and then set the duration.
- Follow the instructions in the display.

Sabbath programme

This programme is designed for religious observance.

Select the Sabbath programme and then select the oven function and temperature.

The programme will only start after the door is opened and closed:

- The cooking process will begin after approx. 5 minutes using Conventional Heat or Bottom heat .
- The oven will heat up to the temperature you have set and will maintain this temperature for a maximum of 72 hours.
- The interior lighting does not come on, even when the door is opened.

If you have selected "Settings – Lighting – On", the lighting will remain switched on throughout the programme.

- "Sabbath programme" will be visible in the display throughout the programme.
- The time of day display is switched off.

A Sabbath programme that has been started cannot be changed, nor can it be saved under "User programmes".

The programme can only be cancelled by switching the oven off.

Using the Sabbath programme

- Touch Special applications 😩.
- Touch "Sabbath programme".
- Touch the oven function you want to select it.

The Sabbath programme cannot be started if the minute minder is being used.

- Set the required temperature.
- Touch OK.

The oven is now ready for placing the food in it.

- Open the door when you want to start the programme.
- Place the food in the oven.
- Close the door.

The oven heating will switch on after 5 minutes.

If you want to end the programme early:

Switch the oven off.

Gentle Bake

The Gentle Bake programme is ideal for cooking meat.

The temperature can be set between 100 and 250 °C.

- Select "Oven functions []".
- Select "Gentle Bake" and change the recommended temperature if necessary.
- Follow the instructions in the display.

Examples of use

Food	[°C]	① [min.]
Ham roast, approx. 1.5 kg	180	130–160
Braised beef, approx. 1.5 kg	180	160–180

- Temperature
- ① Duration

Unless otherwise stated, the times given are calculated on the basis of an oven which has not been pre-heated.

Use shelf level 1 or 2 depending on the height of the food.

In general, if a range of temperatures is given, it is best to select the lower temperature and to check the food after the shortest time.

Roast with the lid on first, then remove the lid three-quarters of the way through roasting and add approx. $\frac{1}{2}$ litre liquid.

Bottling

Containers for bottling

Danger of injury!
Do not use the appliance to heat up or bottle food in sealed jars and tins. Pressure will build up inside them and they can explode causing damage to the appliance, as well as the risk of injury and scalding.

Only use special jars for bottling:

- bottling jars,
- jars with twist-off lids.

Bottling fruit and vegetables

We recommend using Fan Plus ...

The instructions are for 6–8 jars with a capacity of 1 litre each.

- Place the universal tray on shelf level 1 and place the jars on the tray.
- Select Fan Plus 🙏 and a temperature of 150–170 °C.
- Wait until bubbles evenly rise in the jars.

Reduce the temperature at the right time to avoid the produce boiling over.

Fruit/Cucumbers

■ Select the lowest temperature as soon as bubbles are visible in the jars. Then leave the jars in the warm oven for a further 25–30 minutes.

Vegetables

■ Reduce the temperature to 100 °C as soon as bubbles are visible in the iars.

	Bottling duration
	[min.]
Asparagus, carrots	60–90
Peas, beans	90–120

After the bottling duration has finished, select the lowest temperature and leave the jars in the oven for a further 25–30 minutes.

After bottling

Danger of burning!
Wear oven gloves when removing the jars from the oven.

- Take the jars out of the oven.
- Cover the jars with a towel and leave to set for approx. 24 hours.
- Make sure all jars are closed properly when storing them.

Frozen food / Ready-meals

Useful tips

Cakes, pizza, baguettes

- Large frozen items such as cakes, pizzas or baguettes cover an extensive area of the universal tray. The temperature difference if large frozen items are cooked in these trays can cause the tray to distort in such a way that it cannot be removed from the oven when it is hot. Further use will make the distortion worse. Place this type of food on baking paper on the rack to prevent the risk of this happening.
- Use the lowest temperature recommended on the manufacturer's packaging.

Oven chips, croquettes or similar items

- Small items of frozen food such as oven chips can be cooked on the universal tray.
 Place baking paper on the tray so that they cook gently.
- Use the lowest temperature recommended on the manufacturer's packaging.
- Turn several times during cooking.

Preparation

Eating food which has been cooked correctly is important for preventing food poisoning or other ailments.

Only bake cakes, pizza, chips etc. until they are golden brown. Do not overcook them.

- Select the function and temperature recommended on the manufacturer's packaging.
- Pre-heat the oven.
- Place the food in the oven on the shelf level recommended on the packaging when the temperature indicator light goes out.
- Check the food at the end of the shortest time recommended on the packaging.

Tip: This oven offers Automatic programmes for some Frozen food / Ready meals (see "Automatic programmes").

Danger of burning! Make sure the oven heating elements are switched off and that the oven cavity is cool.

Danger of injury! Do not use a steam cleaning appliance to clean this appliance. The steam could reach electrical components and cause a short circuit.

All external surfaces are susceptible to discolouration or change in appearance if unsuitable cleaning agents are used.

Oven cleaners and descaling agents will damage the front of the oven, in particular.

Cleaning agent residues must be removed immediately after use.

All surfaces are also susceptible to scratching. Scratches on glass surfaces could even cause a breakage in certain circumstances.

Unsuitable cleaning agents

To avoid damaging the surfaces of your appliance, do not use:

- cleaning agents containing soda, ammonia, acids or chlorides,
- cleaning agents containing descaling agents on the oven front,
- abrasive cleaning agents,
 e.g. powder cleaners and cream cleaners.
- solvent-based cleaning agents,
- stainless steel cleaning agents,
- dishwasher cleaner,
- glass cleaning agents,
- cleaning agents for ceramic cooktops,
- hard, abrasive brushes or sponges,
 e.g. pot scourers, brushes or
 sponges which have been previously
 used with abrasive cleaning agents,
- dirt erasers,
- sharp metal tools,
- steel, wool or metal scourers
- spot cleaning,
- oven cleaner*,
- stainless steel spiral pads*.
- * These can, however, be used to remove very heavy soiling from PerfectClean treated surfaces in a spot treatment.

Remove any soiling immediately after use.

If not, it might become impossible to remove.

Continued use without regular cleaning will make the oven much harder to clean.

The accessories are not dishwasherproof, with the exception of the food probe.

Useful tips

- Soiling caused by spilt juices and cake mixtures is best removed whilst the oven is still warm. Exercise caution and make sure the oven is not too hot – danger of burning.
- To make cleaning easier, you can dismantle the oven door, remove the shelf runners and the FlexiClip telescopic runners (if present), and lower the top heat/grill element.

Normal soiling

There is a fibreglass seal around the oven interior which seals the inside of the door. It is sensitive to abrasion and rubbing.

To prevent the risk of damaging it, do not clean it.

- It is best to remove normal soiling immediately using a clean sponge and a solution of hot water and washing-up liquid or with a clean, damp microfibre cloth.
- After cleaning, make sure all residual cleaning agents are thoroughly removed with clean water. This is particularly important when cleaning surfaces treated with PerfectClean enamel as cleaning agent residues can impair the non-stick properties.
- After cleaning, wipe the surfaces dry using a soft cloth.

Food probe

The food probe can be cleaned in the dishwasher.

Stubborn soiling (does not apply to the FlexiClip telescopic runners)

Spilt fruit and roasting juices may cause lasting discolouration or matt patches on enamelled surfaces. This discolouration is permanent but will not affect the efficiency of the finish. Do not use force to remove this discolouration! Clean these following the instructions given here.

- Baked on deposits can be removed with a glass scraper or a nonabrasive stainless steel spiral pad.
- Very stubborn soiling on PerfectClean treated enamel can be cleaned using the Original Miele oven cleaner. It must be applied to cold surfaces in accordance with instructions on the packaging.

Non-Miele oven spray must only be used in a cold oven and for no longer than a maximum of 10 minutes.

- If necessary, the scouring pad on the back of a non-scratching washing-up sponge can be used to remove the soiling.
- After cleaning, remove all oven cleaning agent residues thoroughly with clean water, and dry with a soft cloth.

Pyrolytic cleaning 6 of the oven interior

Instead of cleaning the oven by hand, you can run the Pyrolytic cleaning programme

8.

During the Pyrolytic cleaning programme the oven interior is heated up to over 400 °C. Any residual soiling is broken down and reduced to ash by the high temperatures.

This oven has three levels of pyrolytic cleaning, each with a different duration.

Select:

- Level 1 for light soiling
- Level 2 for heavier soiling
- Level 3 for very heavy soiling

For safety reasons, the oven door is automatically locked at the beginning of the Pyrolytic cleaning programme.

It cannot be opened until the programme has finished.

The timer can be used to delay the start time of the Pyrolytic cleaning programme, for instance to make use of cheaper electricity tariffs.

At the end of the Pyrolytic cleaning programme any residues such as ash from the pyrolytic process can be easily wiped away.

Setting up for the Pyrolytic cleaning programme

The high temperatures used during pyrolytic cleaning will damage accessories that are not designed for cleaning in the Pyrolytic cleaning programme.

Please remove these accessories from the oven interior before starting the Pyrolytic cleaning programme. This also applies to non-pyrolytic accessories purchased separately to the oven.

The following accessories are suitable for cleaning in the Pyrolytic cleaning programme and can be left in the oven:

- Shelf runners
- FlexiClip telescopic runners HFC92
- Rack HBBR92:
- Take all non-pyrolytic accessories out of the oven
- Place the rack on the top shelf level.

If not removed, coarse soiling can smoke and cause the Pyrolytic cleaning programme to switch itself off.

Coarse soiling should be removed before running the Pyrolytic cleaning programme.

Starting the Pyrolytic cleaning programme

△ Danger of burning!
The oven door gets much hotter
during a Pyrolytic cleaning
programme than during normal use.
Make sure children cannot touch the
oven whilst a Pyrolytic cleaning
programme is running.

- Touch Maintenance ③.
- Touch "Pyrolytic".
- Select the level required according to the level of soiling.
- Touch OK.

Follow the instructions in the display.

■ Touch OK.

"Start now"

To start the Pyrolytic cleaning programme straight away:

- Touch "Start now".
- Touch OK

The Pyrolytic cleaning programme will now start.

The door locks automatically.

The oven heating and the cooling fan will then switch on automatically.

The oven lighting will not come on during the Pyrolytic cleaning programme.

The time remaining for the Pyrolytic cleaning programme will appear in the display. You cannot alter the duration.

If you have set a minute minder at the same time as running the cleaning programme, the buzzer will sound and the \triangle symbol will start flashing at the end of the minute minder time. The time will then continue to increase in the display.

The buzzer will stop and the visual indicators will go out as soon as you touch the \triangle sensor.

"Start later"

To start the Pyrolytic cleaning programme later on:

- Touch "Start later".
- Set the time at which you want it to start.
- Touch OK.

The door will lock automatically.

"Start at" and the start time set will appear in the display. You can alter the start or finish time up until the programme is due to start via "Change".

As soon as the start time is reached, the oven heating and the cooling fan will switch on automatically. The duration remaining will appear in the display.

At the end of the Pyrolytic cleaning programme

When the duration remaining reaches 0:00 h, a message will appear in the display to tell you that the door is unlocking.

When the door lock has been released,

- "Process finished" will appear in the display,
- a buzzer will sound if the buzzer is switched on (see "Settings - Volume -Buzzer tones").
- Switch the oven off.

The visual and acoustic signals are switched off.

Danger of burning!
Wait until the oven has cooled down before removing residual soiling left in the oven compartment from the Pyrolytic cleaning programme.

■ Wipe any residues (e.g. ash) left behind after the Pyrolytic cleaning programme out of the oven compartment and wipe any residues off any pyrolytic accessories. The amount of ash will vary depending on how dirty the oven was.

Most soiling can be easily removed using a clean, damp microfibre cloth, or with warm water and a little washing-up liquid on a clean sponge.

Depending on how dirty the oven was before cleaning, there may be a visible layer of soiling across the inner glass pane on the door. This should be removed using the reverse

- of a non-scouring washing-up sponge, a glass scraper or with a stainless steel spiral pad and a little washing-up liquid.
- Extend and retract the FlexiClip telescopic runners several times after running the Pyrolytic cleaning programme.

Please note:

- The fibreglass seal around the front of the oven should be handled carefully. Do not rub and scour it.
 If possible, you should avoid trying to clean it.
- The FlexiClip telescopic runners may appear discoloured or a lighter colour in places after they have been cleaned. This will not affect the functioning of the runners in any way.
- Spilt fruit juices may cause lasting discolouration to enamelled surfaces.
 This discolouration is permanent but will not affect the efficiency of the enamel. Do not attempt to remove these marks.

The Pyrolytic cleaning programme is cancelled

If the Pyrolytic cleaning programme is cancelled, the oven door will remain locked until the temperature inside the oven drops to below 280 °C.

The following will cause the Pyrolytic cleaning programme to stop:

- Switching the oven off.
 - "Switch appliance off?" will appear in the display.
- Touch "Yes" if you want to cancel the Pyrolytic cleaning programme.

The door will unlock once the temperature in the oven has dropped below 280 °C and the oven is switched off.

■ Touch "No" if you want to continue running the Pyrolytic cleaning programme.

The Pyrolytic cleaning programme will continue running.

A power cut.

"Process cancelled" will appear in the display if there is a power cut.

The door will unlock once the temperature inside the oven is below 280 °C.


A buzzer will sound if the buzzer is switched on (see "Settings - Volume - Buzzer tones").

"Process finished" will appear in the display.

- Touch 与.
- Start the Pyrolytic cleaning programme again.

Removing the door


The door weighs 13.5 kg.

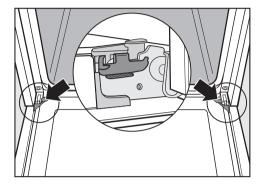

The oven door is connected to the hinges by retainers.

Before removing the door from the retainers, the locking clamps on both hinges have to be released.


■ Open the door fully.

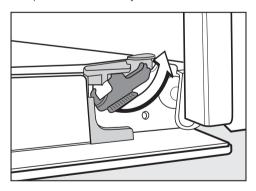

Release the locking clamps by turning them as far as they will go. Do not attempt to take the door off the retainers when it is in the horizontal position as the retainers will spring back against the oven.

Do not use the handle to pull the door off the retainers as the handle could break.

■ Raise the door up till it rests open.

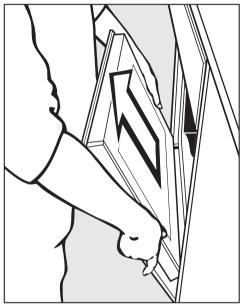

 Hold the door securely at both sides, and lift it upwards off the retainers.
 Make sure you take it off straight.

Dismantling the door

The oven door is an open system with four glass panes which have a heat-reflective coating on some of their surface.

During operation, cool air is passed through the oven door to keep the outer pane cool.

If soiling has worked its way in between the glass panes, the door can be dismantled in order to clean in between the panes. Take particular care as scratches can damage the glass.

When cleaning the glass panes, do not use abrasive cleaning agents, hard sponges or brushes, and do not use sharp metal tools or scrapers.


Please also read the general notes on cleaning the oven front before cleaning the glass panes.

The glass panes are coated in different ways with a heat-reflective coating on the sides facing into the oven cavity.

The glass panes must be fitted the right way round after being cleaned. Oven spray will damage the aluminium trims inside the door. These should only be cleaned using hot water and washing-up liquid applied with a clean sponge or a clean, damp microfibre cloth.


Be especially vigilant after dismantling the door that the glass panes do not break.

■ Place the door on a protective surface (e.g. on a table cloth) to prevent it getting scratched. The door handle should line up with the edge of the table. Make sure the glass lies flat and does not get broken during cleaning.

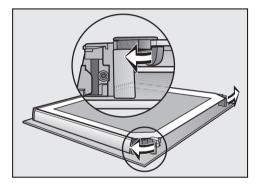


■ Flip the two glass pane retainers outwards to open them.


You can now remove the inner pane and the two middle panes one after the other.

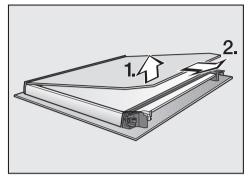


■ **Gently** lift the inner pane up and out of the plastic strip.

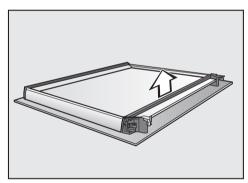

■ Remove the fibreglass seal.

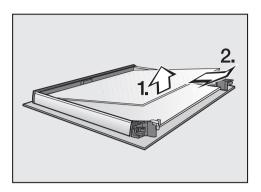

■ Gently lift the top of the two middle panes up and take it out.

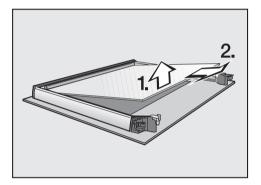


■ Then lift the bottom of the two middle panes up gently and take it out.

The fibreglass seal around the front of the oven should be handled carefully. Do not rub and scour it. If possible, you should avoid trying to clean it


- Clean the door panes and other individual parts with a clean sponge and a solution of hot water and washing-up liquid or a clean, damp microfibre cloth.
- Dry all parts with a soft cloth.

Then reassemble the door carefully:


The two middle panes are identical. To ensure they are refitted correctly, one of the corners is more angled than the others.

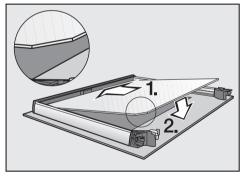


■ Refit the bottom of the two middle panes. The more angled corner must be located at the bottom left.

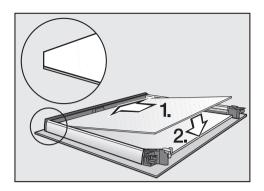


■ Refit the top of the two middle panes. The more angled corner must be located at the top left.

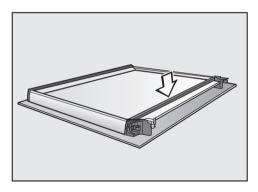

■ Refit the fibreglass seal.

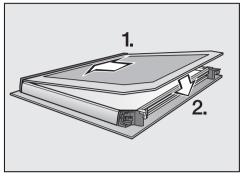


■ Push the inner pane with the matt printed side facing downwards into the plastic strip and place it between the retainers.

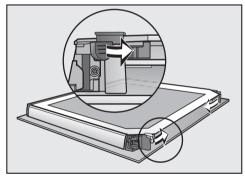

■ Flip the two glass pane retainers inwards to close them.

The door is now reassembled and is ready to fit back on the oven.

Fitting the door

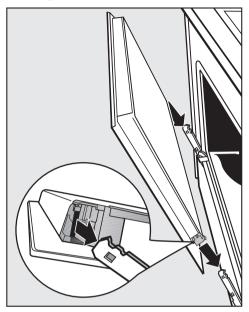


■ Hold the door securely on both sides and carefully fit it back into the hinge retainers.

Make sure that the door goes back on straight.

■ Open the door fully.

It is essential that the locking clamps lock securely when the door is refitted after cleaning. Otherwise the door could work loose from the retainers and be damaged.

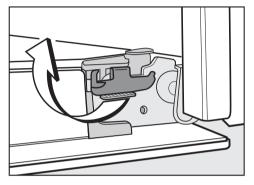

■ Flip both locking clamps back up as far as they will go into a horizontal position.

Removing the shelf runners with FlexiClip telescopic runners


Danger of injury!
Do not use the oven without the shelf runners.

You can remove the shelf runners together with the FlexiClip telescopic runners (if present).

If you wish to remove the FlexiClip telescopic runners separately beforehand, please follow the instructions in "Features – Fitting and removing the FlexiClip telescopic runners".

△ Danger of burning!

Make sure the oven heating elements are switched off and the oven interior is cool.

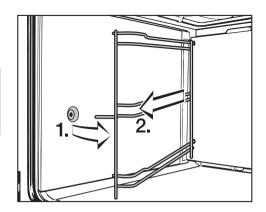

■ Pull the runners out of the holder (1) at the front of the oven and then pull them out of the oven (2).


Refit in the reverse order.

■ Ensure that all parts are correctly fitted.

Lowering the top heat/grill element

⚠ Danger of burning! Make sure the oven heating elements are switched off and the oven interior is cool.

■ Remove the shelf runners.

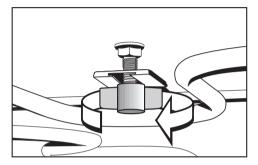

■ Undo the wing nut.

Do not use force to lower the top heat/grill element as this can cause it to break.

■ Carefully lower the top heat/grill element.

You can now clean the oven ceiling.

- Raise the top heat/grill element and tighten the wing nut securely.
- Refit the shelf runners.

Descaling the steam injection system *≨*

When to run the descaling process

The frequency of descaling will depend on the water hardness level in your area.

The descaling process can be run at any time.

However, to ensure that the oven functions correctly, you will be automatically prompted to run the descaling process after a certain number of programmes.

The oven will let you know when only 10 programmes can be run before you have to run the descaling process. The programmes will count down to 0 in the display. You will then not be able to run any function or Automatic programme using moisture.

They cannot be used until descaling has been carried out.

All other functions and Automatic programmes without moisture can still be used.

Descaling process sequence

Once the descaling process has been started, it must be completed through to the end. It cannot be cancelled.

The descaling cycle takes approx. 90 minutes and consists of several steps:

- 1. Preparation
- 2. Descaler intake
- 3. Activation phase
- 4. Rinse 1
- 5. Rinse 2
- 6. Rinse 3
- 7. Evaporate residual moisture

Preparing the descaling process

We recommend using the descaling tablets supplied. They have been specially developed for Miele for optimum cleaning results.

Other descaling agents, which contain other acids besides citric acid and/or other undesirable substances, such as chlorides for example, could cause damage. Moreover, the descaling effect required could not be guaranteed if the descaling solution was not of the appropriate concentration.

Miele descaling tablets are available to order from Miele or via the internet at www.miele-shop.com (depending on country).

You will need a container of approx. 1 litre capacity.

Follow the instructions for the mixing ratio carefully. Otherwise the oven will be damaged.


- Dissolve one descaling tablet in approx. 600 ml of cold mains tap water.
- Make sure the plastic tube with suction cap supplied is to hand.

Starting the descaling process

- Touch Maintenance ⑥.
- 2 Touch "Descale".

If the Moisture Plus off function and the Automatic programmes that use moisture are already locked, the descaling process can be started immediately by touching the OK sensor.

- Push the universal tray into the top shelf level as far as it will go to collect the descaling solution after it has been used. Touch OK to confirm the message.
- Place the container with the descaling solution on the floor of the oven.

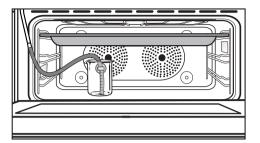

- **3** Attach one end of the plastic tube to the water intake pipe.
- Place the other end of the plastic tube in the bottom of the descaling solution container and secure the plastic tube to the container with the suction cup.
- **7** Close the door.
- 8 Touch OK.

The intake process will begin. You can hear the pump while this is happening.

The intake process can be interrupted and restarted at any time by selecting "Stop" or "Start".

The amount of solution specified can be more than the amount which is actually taken in. Some of the solution may therefore be left in the container at the end of descaling.

A message will appear in the display when the intake process is finished.

9 Touch OK.

The **Activation phase** will begin. You can follow the duration as it counts down.

- Open the door.
- Leave the container with the tube connected to the water intake pipe in the oven. Top the container up with approx. 300 ml of water, as the system will need to draw in some more liquid during the activation phase.
- Close the door.

The system will take in more liquid at approximately 5 minute intervals. You will hear the noise of the pump for a moment or so.

The oven lighting and the cooling fan will remain on during descaling.

At the end of the activation phase a buzzer will sound if the buzzer is switched on (see "Settings - Volume - Buzzer tones").

At the end of the activation phase the steam injection system will need to be cleaned to remove all traces of descaling solution.

Cleaning is carried out by flushing approx. 1 litre of fresh tap water through the system. The water is collected in the universal tray. This process is repeated three times.

Messages will appear in the display with advice about the rinsing process.

- Take the universal tray out of the oven and empty it. Place the tray back in the oven again on the top shelf level.
- Remove the plastic tube from the container.
- Sinse the container and fill with approx. 1 litre of fresh tap water.
- Place the container back in the oven, insert the plastic tube, secure it to the container and close the door.
- Touch OK.

The intake process for the **first rinse** starts.

Water will be flushed through the steam injection system and will then collect in the universal tray.

Messages will appear in the display with advice about the **second rinse**.

- Take the universal tray out of the oven and empty it. Place the tray back in the oven again on the top shelf level.
- Remove the plastic tube from the container. Fill it with approx. 1 litre of fresh tap water.
- Place the container back in the oven, insert the plastic tube, secure it to the container and close the door.
- 21 Touch OK.
- 2 Do the same for the **third rinse**.

Leave the universal tray (with the water which has collected in it) on the top oven shelf whilst the evaporation process takes place.

Confirm the message telling you that the process is complete with OK.

The **Evaporate residual moisture** process will begin after the third rinse.

Steam can cause scalding injuries. Do not open the door during the evaporation process.

- Remove the container and tube from the oven.
- 25 Close the door.
- Touch OK.

The oven heating will switch on and the duration for the evaporation process will count down in the display.

During the evaporation process, the duration may be adjusted by the system according to how much water is currently present.

At the end of the evaporation process messages will appear in the display with advice on cleaning the oven interior after running the descaling programme.

- 27 Touch OK.
- "Process finished" will appear in the display.
- 23 Touch

 to return to the main menu.

⚠ Danger of burning! Allow the oven interior and accessories to cool down before cleaning them.

Remove the universal tray and empty it. Clean the oven interior to remove any condensation and descaling agent residue.

Leave the oven door open until the oven interior is completely dry.

With the aid of the following guide, minor problems can be easily corrected without contacting Miele. If, after reading this guide, you can't remedy the problem yourself, please call Miele (see back cover for details).

Please note, however, that a call-out charge will be applied to unnecessary service visits where the problem could have been rectified as described in these operating instructions.

♠ Danger of injury!

Installation, maintenance and repairs may only be carried out by a suitably qualified and competent person. Repairs and other work by unqualified persons could be dangerous.

Miele cannot be held liable for unauthorised work.

Do not attempt to open the casing of the oven yourself.

Problem	Possible cause and remedy
The display is dark.	The time of day is switched off. It will not appear in the display until the oven is switched on.
	The time can be displayed constantly (see "Settings – Time of day – Display").
	There is no power to the oven.
	■ Check whether the mains fuse has tripped. If it has, contact a qualified electrician or Miele.
When the oven is switched on, "System lock ⊕"	The system lock ⊕ is active. It can be released for a programme to be run by touching the ⊕ symbol for at least 6 seconds.
appears in the display.	The system lock can be permanently deactivated (see "Settings – System lock ⊕").

Problem	Possible cause and remedy
The oven does not heat up.	■ Check whether "On" has been selected for the Demo mode (see "Settings – Showroom programme").
	If the Demo mode has been switched on, the oven can be operated but it will not heat up. Deactivate Demo mode.
"Power cut – Process cancelled" appears in the display.	There has been a power cut which has caused a current cooking process to stop. Switch the oven off and then back on again. Start the cooking process again.
12:00 appears in the display.	The power supply was interrupted for longer than 200 hours. Reset the time and date.
The message "Maximum operating hours reached" appears unexpectedly in the display.	The oven has been operating for an unusually long time and this has activated the safety switch-off function. ■ Select OK. Touch to delete "Process finished". The oven will then be ready for use again.
" Fault XX" appears in the display.	There is a problem that you cannot resolve. Call Miele.

Problem	Possible cause and remedy
"Door will not lock" appears in the display.	The Pyrolytic cleaning programme door lock is not locking.
	Switch the oven off and then back on again. Then restart the Pyrolytic cleaning programme.
	If the fault code appears in the display again, call Miele.
"Door will not release" appears in the display.	The door lock for the Pyrolytic cleaning programme is not being released.
	Switch the oven off and then back on again.
	If the door lock still does not release itself, call Miele.
The message "No signal to food probe.	The food probe is no longer recognised by the oven. Reposition the food probe in the food.
Reposition food probe in the oven" appears in the display.	If the oven still does not recognise the food probe, it must be faulty.
and and pray :	A replacement food probe can be ordered from Miele.
The message "Function	The steam injection system is faulty.
currently not available"	■ Call Miele.
appears in the display after selecting the	
"Descale" function.	

Problem	Possible cause and remedy
The message "Moisture control faulty – Automatic programmes will operate without moisture" appears in the display after selecting an Automatic programme.	The steam injection system is faulty. Call Miele. Automatic programmes can be run without using moisture.
After selecting the Moisture Plus [5]] function, "Moisture control faulty – Moisture Plus programme is not available" appears in the display. Programmes using moisture will not take in water.	The steam injection system is faulty. ■ Call Miele. ■ Use the Fan Plus ♣ function instead of the Moisture Plus ெ function. ■ Check whether "On" has been selected for the Demo mode (see "Settings – Showroom programme"). The oven can be used in Demo mode but the pump for the steam injection system will not work. ■ Deactivate Demo mode.
A noise can be heard after a cooking process. The trays and rack make a screeching sound when pushed in or taken out of the oven.	The fan remains switched on after a cooking programme (see "Settings – Cooling fan run-on"). Friction occurs between the shelf runners and the rack or trays due to the special heat-resistant glazing applied to these components at the factory. Lightly grease the shelf runners with a few drops of cooking oil applied to a soft cloth. Do this after each Pyrolytic programme to maintain lubrication.

Problem	Possible cause and remedy
The oven has switched itself off.	The oven will switch itself off automatically to save energy if no other action is taken within a certain time frame after switching it on or after the end of a cooking programme. Switch the oven back on.
Cakes and biscuits are not cooked properly after following the times given in the chart.	A different temperature from the one given in the recipe was used. Select the temperature required for the recipe.
	The ingredient quantities are different from those given in the recipe. Check whether there has been a change to the recipe. The addition of more liquid or more eggs makes a moister mix which would take longer to cook.
Browning is uneven.	The wrong temperature or shelf level was selected. There will always be a slight unevenness. If the unevenness is pronounced, check whether the correct temperature and shelf level have been selected.
	The material or colour of the baking tin is not suitable for the oven function. With Conventional Heat [light-coloured, shiny tins are less suitable. Use matt, dark-coloured tins.
	The catalyser has been set at too high a level. This can lead to an uneven browning result on more delicate food such as sponge cakes.
	Set the odour reduction catalyser to a lower level or switch it off (see "Settings – Catalyser").

Problem	Possible cause and remedy
The oven lighting switches off after a short time.	The oven lighting is set to switch off after 15 seconds (default setting). You can change the default setting for this (see
	"Settings – Lighting").
The top oven lighting does not switch on.	The halogen lamp needs replacing.
	Danger of burning! Make sure the oven heating elements are switched off and the oven interior is cool.
	 Disconnect the appliance from the mains. Switch off at the wall and withdraw the plug from the socket, or disconnect the mains fuse or remove the screw-out fuse in countries where this is applicable. Turn the lamp cover a quarter turn anti-clockwise to release it and then pull it together with its seal
	downwards to take it out.
	■ Replace it with a new halogen lamp (Osram 66725 AM/A, 230 V, 25 W, G9).
	Refit the lamp cover together with its seal and turn clockwise to secure.
	■ Reconnect the oven to the electricity supply.

Problem	Possible cause and remedy
	The halogen lamp needs replacing.
	Danger of burning! Make sure the oven heating elements are switched off and the oven interior is cool.
	■ Disconnect the appliance from the mains. Switch off at the wall and withdraw the plug from the socket, or disconnect the mains fuse or remove the screw-out fuse in countries where this is applicable.
	■ Remove the shelf runners.
	■ Use the lever to release the lamp cover from its frame.
	■ Replace it with a new halogen lamp (Osram 66725 AM/A, 230 V, 25 W, G9).
	Press the lamp cover back into its retainer and refit the shelf runners.
	■ Reconnect the oven to the electricity supply.

After sales service and warranty

After sales service

In the event of any faults which you cannot easily remedy, please contact Miele.

See back cover for contact details.

Please quote the model and serial number of your appliance when contacting Miele.

This information is given on the data plate, visible on the front frame of the oven, with the door fully open.

Warranty

This appliance has a manufacturer's warranty period of 2 years.

For further information, please refer to your warranty booklet.

Electrical connection

Danger of injury!
All electrical work should be undertaken by a suitably qualified and competent person.
Installation, repairs and other work by unqualified persons could be dangerous. Miele cannot be held liable for unauthorised work.
Ensure power is not supplied to the appliance until after installation or repair work has been carried out.

Connection of this appliance should comply with national and local safety regulations.

Connection to a switched socket is recommended as this provides easier access and isolation in the case of a service call.

If the switch is not accessible after installation or the appliance is **hard-wired** (depending on country), an additional means of disconnection must be provided for all poles.

When switched off there must be an allpole contact gap of 3 mm in the isolator switch (including switch, fuses and relays according to EN 60335).

Connection data

The required connection data can be found on the data plate located on the oven frame visible when the door is open.

Please ensure this information matches the household mains supply.

When contacting Miele, please quote the following:

- model number,
- serial number.
- connection data (voltage/frequency/ maximum rated load).

When replacing the connection cable supplied with another cable, or changing the connection, only cable type H 05 VV-F with a suitable cross-sectional area (CSA) may be used (available from Miele).

Oven

The oven is supplied for connection with an approx. 1.7 m long connection cable and must be connected to the mains according to the wiring diagram.

Maximum rated load: see data plate.


The wires in the mains connection cable are coloured in accordance with the following code:

Green/yellow = earth Blue = neutral Brown = live

WARNING: THIS APPLIANCE MUST BE FARTHED

Three phase 3 N AC 230 V


Wiring diagram – country variant

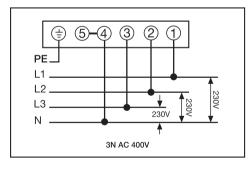


Single phase AC 230 V

This device is intended for connection to a power supply system where the maximum value of external phase neutral loop impedance Z_{max} of 0.35 Ohms at the point of distributor supply connection is not exceeded. If in doubt, please ask your electrical distributor for actual Z_{max} value. The user has to ensure that this device is connected only to a power supply system which fulfils the requirement above.

Wiring diagram – country variant

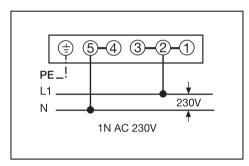

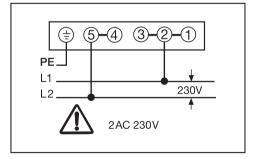

Building-in diagrams


Appliance dimensions and unit cut-out

Dimensions are given in mm.

Installation in a base unit


The HAL 5900 (90 cm) trim, available as an optional accessory, is only required when building the oven into a base unit.

■ Fix the HAL 5900 trim into the unit cut-out under the worktop (see lower section of diagram).

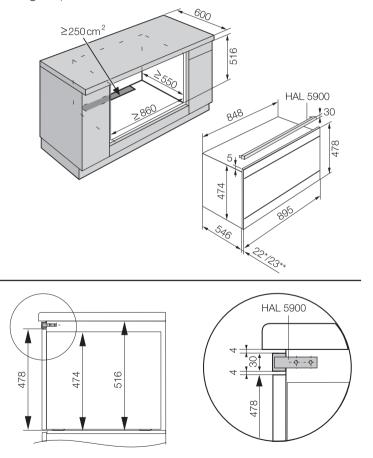

- * Ovens with glass front
- ** Ovens with metal front

Installation in a tall unit

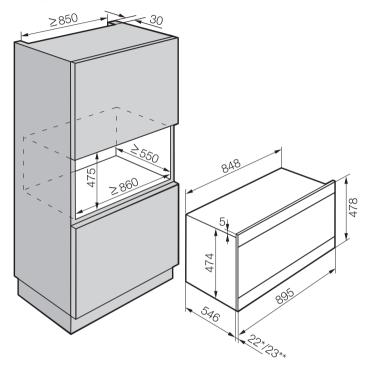


- * Ovens with glass front
- ** Ovens with metal front

Building-in diagrams

Front dimensions

Dimensions are given in mm.

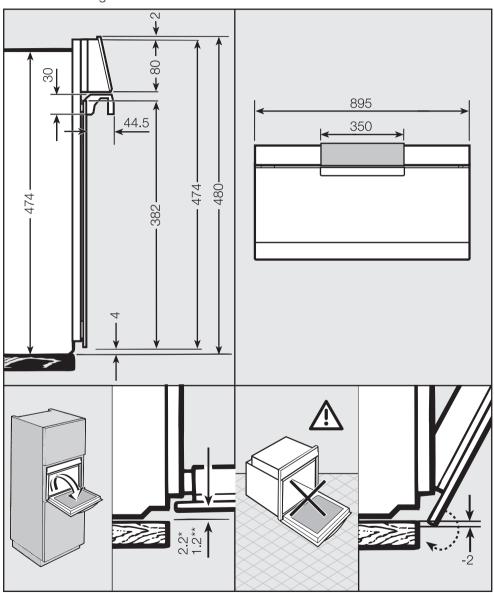

- * Ovens with glass front
- ** Ovens with metal front

Installing the oven

 \bigwedge The oven must be built into its housing unit before it can be used.

In order to function correctly, the oven requires an adequate supply of cool air.

Ensure that the supply of cool air is not impaired:

- do not fit a back panel in the housing unit.
- the unit shelf on which the oven sits must not touch the wall behind it
- do not fit insulation. to the side walls of the housing unit.

Please also ensure that the cool air supply is not unduly heated by other heat sources such as a wood burning stove.

Before installation

■ Before connecting the oven to the mains, you must disconnect the power supply to the oven isolator switch.

Installing the oven

the casing.

Connect the mains cable from the oven to the isolator.

Lifting the oven by the door handle can damage the door. Use the carry handles on the side of

■ Then remove the carry handles

■ Push the oven partially into the housing unit until the carry handles are still outside the housing unit.


tempted to use the handle to carry it.

It is advisable to remove the door

before installing the appliance (see


"Cleaning and Care - Removing the door") and remove accessories from the oven cavity. This will make it easier to install in its niche and you will not be

- before pushing the oven completely into the housing unit and aligning it.
- Open the door (if you have not removed it previously).

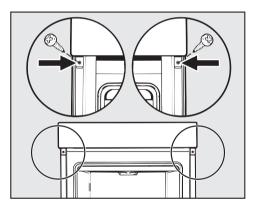

- Use the screws supplied to secure the oven to the side walls of the housing unit through the holes in the oven trim.
- Refit the door, if necessary (see "Cleaning and care - Refitting the door").

Miele@home

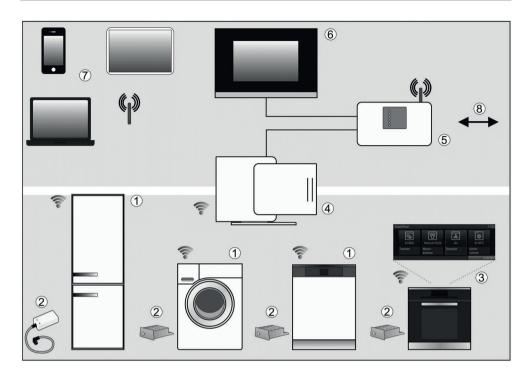

- 1 Miele@home communication enabled appliance
- ② Miele@home communication stick XKS3000Z or communication module XKM3000Z
- ③ Miele@home communication enabled Master appliance with SuperVision functionality
- 4 Miele@home Gateway XGW 3000
- ⁵ Wi-Fi router
- **6** Connection to a Home automation system
- © Smartphone, Tablet PC, Laptop
- (8) Internet connection

This appliance ①/③ is network enabled and can be connected to the Miele@home system via a communication module or communication stick ② and a conversion kit where required.

The Miele@home system enables network enabled appliances to send information via the household wiring network to a master appliance ③ such as an oven with SuperVision function about their operational status, as well as information about the progress of the programme.

Displaying information and operating appliances

- SuperVision master appliance 3
 The status of other signed on appliances can be shown in the display of some network enabled appliances.
- Mobile appliance (7)
 A PC, laptop, tablet or smartphone can be used within the reception area of a household WLAN (5) to display status information about signed on appliances and carry out certain functions
- Household network (a)
 The Miele@home system enables smart living. The Miele@home
 Gateway (a) allows other network enabled appliances to integrate into the household bus system.

In Germany network enabled appliances can be integrated into the QIVICON Smart Home Platform instead of the Miele@home Gateway (www.givicon.de).

SmartStart (depending on household appliance)

Smart grid enabled appliances can be started automatically at a time when electricity costs are favourable or when a favourable supply of electricity is available (e.g. from a solar power system).

Optional accessories (depending on household appliance)

- Communication module XKM 3000 Z or communication stick XKS 3000 Z
- Conversion kit for communication system XKV
- Miele@home Gateway XGW 3000

Both of these are supplied with their own installation and operating instructions.

Further information

Further information regarding Miele@home is available on the internet and in the instruction manuals of the various components, e.g. the Miele@home Gateway. Please note that the Miele@home and SuperVision system is currently only available in selected countries.

Copyright and licences

Miele utilises software for the operation and control of the appliance.

The copyright authorisation of Miele and other software providers (e.g. Adobe) is to be respected at all times.

Miele and its providers reserve all rights to software components.

The following actions are prohibited:

- Reproduction and distribution of the software,
- Generating modifications and derivative versions,
- Decompiling, reverse engineering, disassembling and other reductions of the software.

This product contains Adobe® Flash® Player Software under licence from Adobe Systems Incorporated, Adobe Macromedia Software LLC. Adobe and Flash are registered trademarks of Adobe Systems Incorporated.

Components are integrated in the software which fall under GNU General Public Licence and Open Source licences.

You can obtain an overview of the integrated Open Source components, along with a copy of the relevant licence, at www.miele.com/device-software-licences after entering your appliance's model code.

Miele can provide the source code for all components licenced under GNU General Public Licence and comparable Open Source licences.

To obtain the relevant source code, please send an e-mail to info@miele.com.

Miele Australia Pty. Ltd.

ACN 005 635 398 ABN 96 005 635 398



Miele Center and Head Office Melbourne:

1 Gilbert Park Drive Knoxfield, VIC 3180

Miele Center and Office Melbourne:

206-210 Coventry Street South Melbourne, VIC 3205

Miele Center and Office Sydney:

3 Skyline Place Frenchs Forest, NSW 2086

Miele Center and Office Brisbane:

39 Harvey Street North Eagle Farm, QLD 4009

Miele Center and Office Adelaide:

83-85 Sir Donald Bradman Drive Hilton, SA 5033

Miele Center and Office Perth:

205-207 Stirling Highway Claremont, WA 6010



www.miele.com.au



Miele New Zealand Limited

IRD 98 463 631

Head Office:

Level 2, 10 College Hill Freemans Bay, Auckland 1011

Miele Center Auckland:

8 College Hill Freemans Bay, Auckland 1011

Telephone:

0800 4 MIELE (0800 464 353)

www.miele.co.nz

Miele Global Headquarters Germany

Miele & Cie. KG

Carl-Miele-Straße 29 33332 Gütersloh Federal Republic of Germany



H6890BP



en - AU, NZ

M.-Nr. 10 188 130 / 00