

Operating instructions for dishwashers



To avoid the risk of accidents or damage to the appliance, it is **essential** to read these instructions as well as the installation plan before it is installed and used for the first time.

Contents


Guide to the appliance	5
Guide to the appliance.....	5
Control panel.....	6
Display	7
Warning and Safety instructions	8
Caring for the environment	17
Disposal of the packing material.....	17
Disposing of your old appliance	17
Energy-saving dishwashing	18
EcoFeedback consumption indicator	19
Before using for the first time	20
Opening the door	20
Emergency door opener	21
Closing the door	21
Basic settings.....	22
Before using the appliance for the first time, you require:	24
Dishwasher salt.....	24
Filling the salt reservoir	25
Add salt reminder.....	26
Rinse aid	27
Adding rinse aid	27
Add rinse aid reminder.....	28
Loading the dishwasher	29
Notes.....	29
Upper basket	31
Adjusting the upper basket.....	33
Lower basket	34
Cutlery.....	37
3D cutlery tray (depending on model).....	37
Loading examples	38
Dishwashers with cutlery tray	38
Comparison tests	40
Standard height with cutlery tray	40
XXL height with cutlery tray	43
Operation	46
Detergent	46
Adding detergent	48
Switching on	49

Selecting a programme.....	49
Starting the programme	50
Display	50
TimeControl	51
Energy management	51
At the end of the programme	52
Switching off	53
Unloading the dishwasher	53
Interrupting a programme	54
Changing a programme	54
Programme options	55
Extras	55
DetergentAgent	56
Delay start with EcoStart	57
Programme chart	60
Further programmes	64
Cleaning and care	65
Cleaning the wash cabinet.....	65
Cleaning the door and the door seal	65
Cleaning the control panel	65
Cleaning the reflector panel	65
Cleaning the door front	66
Checking the filters in the wash cabinet	67
Cleaning the filters	67
Cleaning the spray arms	69
Problem solving guide	70
Technical problems	70
Water inlet fault	73
Water drainage fault	74
General problems.....	75
Noises	77
Unsatisfactory washing result	78
Maintenance	81
Cleaning the water inlet filter	81
Cleaning the drain pump and non-return valve	82
After sales service	83
Repairs	83
Warranty	83

Contents

Optional accessories	84
Electrical connection	86
Water connection	87
The Miele Waterproof system	87
Connection to the water supply	87
Drainage	89
Technical data	90
Settings menu	91
Opening the Settings menu	91
Language 	92
Time of day	92
Water hardness	93
Rinse aid	94
Consumption (EcoFeedback)	94
Sensor wash	95
AutoOpen	95
Knock2open	95
BrilliantLight	95
Optimise standby	96
Check filters	96
Change main menu	97
Save extras	97
Temperature	97
Brightness	97
Volume	98
Memory	99
Version info	99
EcoStart	100
Showroom programme	102
Factory default settings	102
Closing the Settings menu	102

Guide to the appliance

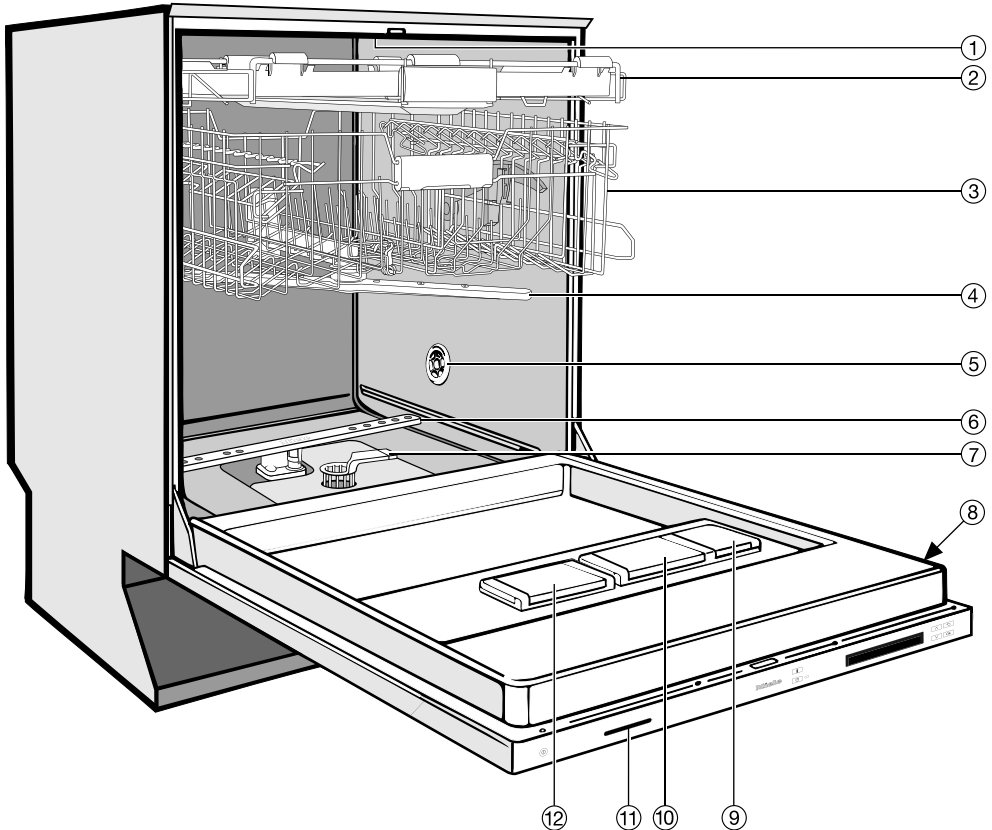


- ① Upper spray arm (not visible)
- ② Cutlery tray (depending on model)
- ③ Upper basket
- ④ Middle spray arm
- ⑤ Air inlet for drying (depending on model)
- ⑥ Lower spray arm

- ⑦ Filter combination
- ⑧ Data plate
- ⑨ Rinse aid reservoir
- ⑩ Dual compartment detergent dispenser
- ⑪ TimeControl in-operation indicator lights
- ⑫ Salt reservoir

Guide to the appliance

Control panel

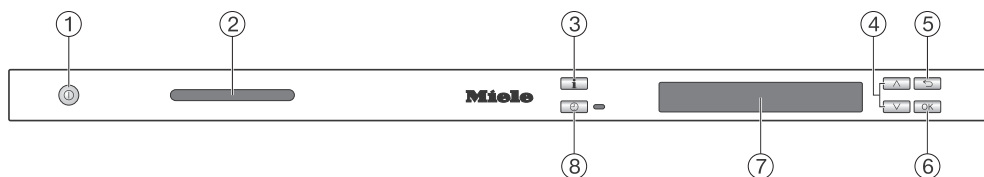

- ① **On/Off sensor** ①
For switching the dishwasher on and off.
- ② **TimeControl in-operation indicator lights**
For displaying the programme time remaining with the door shut.
- ③ **Information sensor i**
For displaying additional information about the option in the display.
- ④ **Arrow sensors** ∇∧
For altering values shown in the display.
For navigating between different menus.
- ⑤ **Back sensor** ←
For navigating back to the previous menu or deleting values which have been set previously.
- ⑥ **OK sensor**
For selecting the option shown in the display.
For confirming messages.
- ⑦ **Display**
See next page for more information.
- ⑧ **Delay start sensor** ⌚ **with indicator light**
For selecting the "Delay start" function.

These operating instructions apply to several different dishwasher models with different heights.

The specific dishwasher models are referred to as follows:

Standard = 80.5 cm high dishwashers (integrated)

and 84.5 cm high dishwashers (freestanding)

XXL = 84.5 cm high dishwashers (integrated)

Display

General

The display is used to select or set the following:

- the programme
- any Extras
- the Delay start function
- the Settings  menu
- information

The display can show the following:

- the programme name
- the stage the programme is at
- the current time of day
- the estimated time left for the programme to run
- the energy and water consumption (EcoFeedback)
- any relevant fault messages and information

To save energy, the dishwasher switches off after a few minutes if you do not press any sensors during this time.

To switch the dishwasher back on again, press the  sensor.

The scroll bar  on the right of the display indicates that more options or more text are available which can be displayed by touching the relevant arrow sensor  .

A dotted line will appear under the last option available.

The *OK* sensor is used to confirm a message or setting and also to move to the next menu or another menu level.

A tick  will appear beside the option which is currently selected.

To exit a sub-menu, touch the  sensor.

If you do not press any of the sensors for several seconds, the display will return to the previous menu level. You may need to enter your settings again.

The touch on metal sensors react to pressure and not simply to touch.

The Settings  menu is used to alter the dishwasher's electronics to suit different requirements (see "Settings menu").

Warning and Safety instructions

This dishwasher complies with current safety requirements. Inappropriate use can, however, lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the dishwasher, please read the installation plan and the operating instructions carefully before it is installed and used for the first time. They contain important information on its installation, safety, use and maintenance.

Keep the installation plan and the operating instructions in a safe place and pass them on to any future owner.

Miele cannot be held liable for damage caused by non-compliance with this information.

Correct application

- ▶ This appliance is designed for domestic use and for use in similar environments by guests in hotel or motel rooms, bed & breakfasts and other typical living quarters. This does not include common/shared facilities or commercial facilities within hotels, motels or bed & breakfasts.
- ▶ This dishwasher is not suitable for outdoor use.
- ▶ It must only be used as specified in these operating instructions for cleaning domestic crockery and cutlery. Any other usage is not supported by the manufacturer and could be dangerous.
- ▶ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning its use by a person responsible for their safety, and are able to recognise the dangers of misuse.

Warning and Safety instructions

Safety with children

- ▶ Young children must not be allowed to use this appliance.
- ▶ Older children may only use the appliance when its operation has been clearly explained to them and they are able to use it safely, recognising the dangers of misuse.
- ▶ Cleaning work may only be carried out by older children under the supervision of an adult.
- ▶ Children should be supervised to ensure that they do not play with the appliance. Keep small children away from the appliance at all times to avoid the risk of injury. There is the risk that children may lock themselves in the dishwasher.
- ▶ If the automatic door opening mechanism (depending on model) is active, keep young children away from the area in which the door opens. Danger of injury in the unlikely event of a fault with the opening mechanism.
- ▶ Danger of suffocation! Children may be able to wrap themselves in packing material or pull it over their heads with the risk of suffocation. Keep children away from any packing material.
- ▶ Keep detergent and other household agents out of the reach of children at all times. Some dishwasher detergents are strongly alkaline and contain irritants and corrosive ingredients. They can be extremely dangerous if swallowed, and can cause burning in the mouth, nose and throat, or inhibit breathing. Avoid contact with the skin and eyes. Keep children away from the dishwasher when the door is open. There could still be detergent residues in the cabinet or dispenser. Seek medical advice immediately if your child has swallowed or inhaled detergent, e.g. Poisons Information Centre (Australia) or National Poisons Centre (NZ).

Technical safety

- ▶ Repairs and other work by unqualified persons could be dangerous. Installation, maintenance work and repairs to electrical appliances must only be carried out by a Miele approved service technician.
- ▶ Before installation, check the dishwasher for visible signs of damage. Under no circumstances should you use a damaged dishwasher. A damaged dishwasher could be dangerous.
- ▶ The electrical safety of this appliance can only be guaranteed when continuity is complete between it and an effective earthing system. It is most important that this basic safety requirement is present and regularly tested and, where there is any doubt, the electrical system in the house should be checked by a qualified electrician.
Miele cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).
- ▶ Reliable and safe operation of this dishwasher can only be assured if it has been connected to the mains electricity supply.
- ▶ The dishwasher must only be plugged into the electricity supply via a suitable switched socket. The electrical socket must be easily accessible after the dishwasher is installed so that it can be disconnected from the electricity supply at any time.
- ▶ There must be no electrical sockets behind the dishwasher. Danger of overheating and fire risk if the dishwasher were to be pushed up against a plug.
- ▶ The dishwasher must not be installed under a cooktop. The high radiant temperatures which are sometimes generated by a cooktop could damage the dishwasher. For the same reason, it should not be installed next to open fires or other appliances which give off heat, such as heaters etc.

Warning and Safety instructions

► To avoid the risk of damage to the dishwasher, make sure that the connection data on the data plate (fuse rating, voltage and frequency) matches the mains electricity supply before connecting the dishwasher to the mains. Consult a qualified electrician if in any doubt.

► Do not connect the dishwasher to the mains supply until it has been fully installed and any adjustment has been made to the door springs.

► The dishwasher may only be operated if the door opening mechanism is working correctly. Otherwise there could be a risk of injury whilst the automatic door opening mechanism (depending on model) is active.

To check that the door opening mechanism is working correctly:

- the door springs must be adjusted equally on both sides. They are correctly adjusted when the door remains stationary when left half open (approx. 45° opening angle). It is also important that the door cannot fall open.
- the door locking pins automatically retract when the door opens at the end of the drying phase.

► Do not connect the appliance to the mains electricity supply by a multi-socket adapter or an extension lead. These do not guarantee the required safety of the appliance (e.g. danger of overheating).

► This appliance must not be installed and operated in mobile installations (e.g. on a ship).

► Do not install the dishwasher in a room where there is a risk of frost. Frozen hoses may burst or split. The reliability of the electronic control unit may be impaired at temperatures below freezing point.

► To avoid any damage to the appliance, the dishwasher must only be operated when it is connected to a fully vented plumbing system.

► The plastic housing of the water connection contains an electrical valve. The housing must not be dipped in water.

Warning and Safety instructions

- ▶ There are electrical wires in the water inlet hose. Do not cut the water inlet hose, even if it is too long.
- ▶ The integrated Waterproof system offers protection from water damage, provided the following conditions are met:
 - The dishwasher is correctly installed and plumbed in.
 - The dishwasher is properly maintained and parts are replaced where it can be seen that this is necessary.
 - The tap has been turned off when the appliance is not used for a longer period of time (e.g. during holidays).

The Waterproof system will work even if the appliance is switched off. However, the appliance must remain connected to the electricity supply.

- ▶ The water pressure (flow pressure at the connection point) must be between 30 and 1000 kPa (0.3 and 10 bar).
- ▶ A damaged appliance could be dangerous. If the dishwasher gets damaged, switch it off at the mains and call Miele.
- ▶ The manufacturer's warranty will be invalidated if the appliance is not repaired by a Miele approved service technician.
- ▶ Faulty components must only be replaced by genuine Miele spare parts. The manufacturer can only guarantee the safety of the appliance when Miele replacement parts are used.
- ▶ During installation, maintenance and repair work, the appliance must be disconnected from the mains electricity supply.
- ▶ If the connection cable is damaged, it must be replaced with a special cable of the same type (available from Miele) by a Miele authorised service technician only in order to avoid a hazard.

Warning and Safety instructions

► In areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the warranty.

Correct installation

► The dishwasher must be installed and connected in compliance with the installation instructions.



► Be careful when installing the dishwasher. Wear protective gloves to avoid injury on any sharp metal components.

► The dishwasher must be correctly aligned to ensure problem-free operation.

► In order to ensure stability, built-under and integrated dishwashers must only be installed under a continuous worktop which is secured to adjacent cabinetry.

► If you want to convert your freestanding dishwasher to a built-under ("U") model, you will need to order the appropriate conversion kit. If you remove the existing plinth, you must replace it with a U-model plinth. This is necessary to avoid the risk of injury caused by protruding metal parts.

► The door springs on either side need to be evenly adjusted. They are correctly adjusted if the half-opened door (approx. 45° door opening angle) remains in this position when it is released. The door must not fall down under its own weight.

The appliance may only be used with correctly adjusted door springs.

Correct use

- ▶ Do not use solvents in the dishwasher. Danger of explosion!
- ▶ Do not inhale or ingest dishwasher detergent. Some dishwasher detergents are strongly alkaline and contain irritants or corrosive ingredients. They can be extremely dangerous if swallowed, and can cause burning in the nose, mouth and throat, or inhibit breathing. Avoid contact with the skin and eyes. Seek medical advice immediately if detergent has been swallowed or inhaled, e.g. Poisons Information Centre (Australia) or National Poisons Centre (NZ).
- ▶ Avoid leaving the door open unnecessarily as someone could trip over it and be injured by it.
- ▶ Do not sit or lean on the opened door. This could cause the dishwasher to tip and be damaged, and you could get injured.
- ▶ Dishes can be very hot at the end of a programme. Allow them to cool until they are comfortable enough to handle before unloading.
- ▶ Only use detergent and rinse aid formulated for domestic dishwashers. Do not use washing-up liquid.
- ▶ Do not use commercial or industrial detergents as these may cause damage, and there is a risk of a severe explosive chemical reaction (such as an explosive oxyhydrogen gas reaction).
- ▶ Do not fill the rinse aid reservoir with powder or liquid detergent. This will cause serious damage to the reservoir.
- ▶ Inadvertently filling the salt reservoir with powder or liquid dishwasher detergent will damage the water softener. Make sure you have picked up the correct packet of dishwasher salt before filling the salt reservoir!
- ▶ Only use special coarse grained dishwasher salt for reactivation. Do not use other salts such as cooking salt, agricultural grade or gritting salt. These may contain insoluble additives which can impair the functioning of the water softener.

Warning and Safety instructions

- ▶ In an appliance with a cutlery basket (depending on model) cutlery is cleaned and dried more efficiently if placed in the basket with the handles downwards. However, to avoid the risk of injury, place knives and forks etc. with the handles upwards.
- ▶ Plastic items which cannot withstand being washed in hot water, such as disposable plastic containers, or plastic cutlery and crockery should not be cleaned in the dishwasher. The high temperatures in the dishwasher may cause them to melt or lose shape.
- ▶ If you use the "FlexiTimer/Delay start" option (depending on model), make sure that the dispenser is dry before adding detergent. Wipe dry if necessary. Detergent will clog if poured into a damp dispenser and may not be thoroughly dispersed.
- ▶ Please observe the information given in "Technical data" regarding the capacity of the dishwasher.

Accessories

- ▶ Use only genuine original Miele spare parts. If spare parts or accessories from other manufacturers are used, the warranty will be invalidated, and Miele cannot accept liability.

Disposal of your old dishwasher

- ▶ Make the door lock inoperative so that children cannot accidentally shut themselves in. Remove or destroy the locking bracket of the door lock, and make appropriate arrangements for the disposal of the appliance.

Disposal of the packing material

The packaging is designed to protect the appliance from damage during transportation. The packaging materials used are selected from materials which are environmentally friendly for disposal and should be recycled.

The packaging consists of the following materials:

Outer packaging:

- Corrugated cardboard made from up to 100% recyclable material:
or: Polyethylene (PE) shrink wrap
- Polypropylene (PP) strapping

Inner packaging:


- Chlorine and fluorine free expanded polystyrene (EPS)
- Base, lid frame and support battens made from untreated natural wood from renewable forests
- Polyethylene (PE) protective wrap

Recycling the packaging reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites. Rather than just throwing these materials away, please ensure they are recycled.

 Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation.

Disposing of your old appliance

Electrical and electronic appliances often contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance. Therefore, please do not dispose of your old appliance with your household waste.

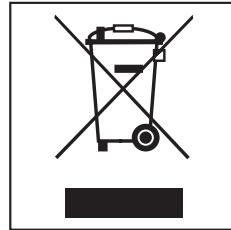

Please dispose of it at your local community waste collection / recycling centre.

Ensure that your old appliance presents no danger to children while being stored for disposal.

To enable sorting by type of plastic for recycling, all plastic parts of the appliance are labelled with international standard symbols.

Energy-saving dishwashing

This dishwasher is exceptionally economical in its use of water and electricity.

You can make the most of your appliance by following these tips:

- For most economical dishwashing, make full use of the baskets without overloading the dishwasher.
- Choose the programme to suit the type of crockery being washed and the degree of soiling.
- Select the ECO programme for energy-saving dishwashing. This programme is the most efficient in terms of its combined energy and water consumption at cleaning normally soiled crockery.
- If your dishwasher is connected to a hot water supply, select the SolarSave programme for washing a lightly to moderately soiled load. Because the water is not heated in this programme, crockery may still be slightly damper at the end of this programme than it would be with other programmes.
- Follow the detergent manufacturer's recommendations on detergent dosage.
- When using powder or liquid detergent you can use $\frac{1}{3}$ less detergent if baskets are only half full.

You can find further tips on energy-saving dishwashing in "Miele's guide to dishwashing".

EcoFeedback consumption indicator

The Consumption function is used for calling up information about the energy and water consumption of your dishwasher (see "Settings menu - Consumption").

Three different types of information can be displayed:

- an estimate of the consumption before the programme begins
- the actual consumption at the end of the programme
- the total consumption of the dishwasher

1. Consumption estimate:

The estimated energy and water consumption for a programme can be shown in the display.

- Open the door.
- Select the programme you want.
- Select the Estimated consumption option.

The estimated energy and water consumption will appear in the display.

The estimated consumption levels will be displayed as a bar chart. The more bars (■■■) in the display, the more energy or water will be used.

The values are influenced by the programme selected and any programme options selected.

The consumption indicator is switched on as standard. However, you can also switch the indicator off (see "Settings menu - Consumption").

2. Actual consumption

At the end of the programme you can call up the actual amount of energy and water used by the programme which has just been run.

- Open the door at the end of the programme.
- Press the **i** sensor.

Switching the dishwasher off at the end of the programme will delete the actual consumption values for the programme which has just been run.


3. "Consumption" setting

The Consumption setting gives a total of the energy and water which has been used in all previous dishwasher programmes (see "Settings menu - Consumption").

Before using for the first time

Opening the door

This dishwasher has a motorised door opener which is activated by knocking on the door front ("Knock2open function").

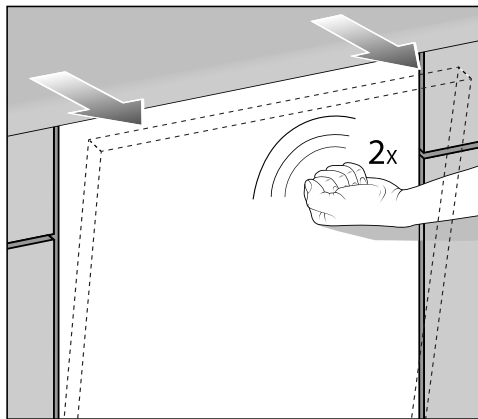

- Knock twice in quick succession on the top third of the door front.

The door will open a little.

- There are two dark grips inside the door at the top. Take hold of them and pull to release the door lock.

The door locking pin then retracts.

If the door is opened during operation, all functions are automatically interrupted.

The number of knocks required for opening the door can be changed if wished (see "Settings - Knock2open").

⚠ Water in the dishwasher may be hot. Danger of scalding!

Only open the door during operation if absolutely necessary and exercise extreme caution when doing so.


⚠ Keep the area around the door free of obstructions.

At the end of programmes with a drying phase (see "Programme chart"), the door will open automatically a little in order to help the drying process. This function can be deactivated if preferred (see "Settings menu - AutoOpen").


Before using for the first time

Emergency door opener

If the door will not open when knocked or if there is a power cut, the door can be opened manually with the emergency door opener supplied with the dishwasher.

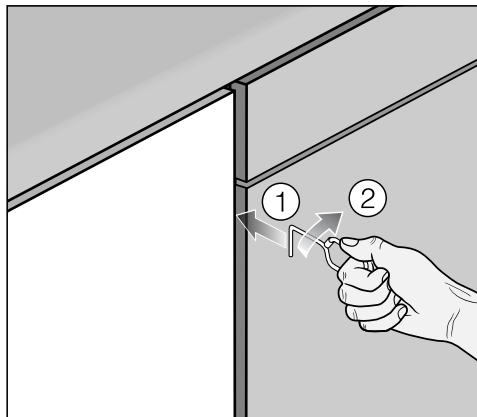

- Push the device into the gap between the dishwasher front and the neighbouring unit door about 15 cm below the worktop ①.
- Turn the device clockwise ② until it grips behind the dishwasher front.

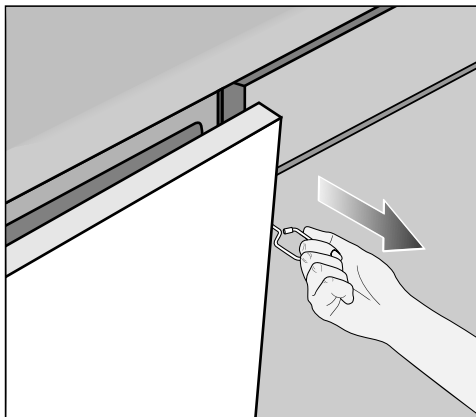

- Then use it to pull the door open.

Closing the door

- Push the baskets right in.
- Then raise the door upwards until the catch engages.

The door will then close automatically.



Danger of injury!

Do not put your hand inside the door as it is closing.

Before using for the first time

Basic settings

- Open the door.
- Switch the dishwasher on using the ① sensor.

The welcome screen will appear when the dishwasher is switched on for the first time.

Language

The display will change automatically to the screen for setting the language.

- Use the $\vee/\wedge$ arrow sensors to select the language you want and also the country, if appropriate, and confirm your selection with OK.

To learn about the display, read the section with the same name.

A tick ✓ will appear next to the language that has been set.

Time of day

The display will then change to the screen for setting the time.

The time of day needs to be set before the *Delay start* programme option can be used.

You can also show the current time of day in the display.

- Use the $\vee/\wedge$ arrow sensors to set the hour and confirm with OK.
- Then set the minutes and confirm with OK.

Keeping the relevant sensor pressed will increase or decrease the time automatically.

Before using for the first time

Water hardness

The display will change to the screen for setting the water hardness.

- The dishwasher must be programmed for the water hardness in your area.
- Your local water authority will be able to advise you of the water hardness level in your area.
- Where the water hardness fluctuates e.g. between 1.8 and 2.7 mmol/l (10 - 15 °d - German scale) always programme the dishwasher to the higher value (2.7 mmol/l or 15 °d in this example).

In the event of a fault, it will help the service technician if you know the hardness of your local water supply.

Enter the water hardness below:

_____ °d

The dishwasher is programmed at the factory for a water hardness level of 2.7 mmol/l (15 °d - German scale).

- Use the $\vee/\wedge$ arrows to select the hardness of your water supply and confirm with **OK**.

See "Settings menu - Water hardness" for more information.

The message **Set-up successfully completed** will then appear in the display.

After confirming this with **OK**, the prompts  **Insufficient salt** and  **Insufficient rinse aid** may appear.

- Add salt and rinse aid if necessary (see "Before using for the first time - Dishwasher salt" and "Rinse aid").
- Confirm the messages with **OK**.

The display will change to show the main menu.

The prompt to set the dishwasher up for first use will not appear again after you have run the first complete programme.

Before using for the first time

Before using the appliance for the first time, you require:

- approx. 1 kg dishwasher salt,
- domestic dishwasher detergent,
- rinse aid formulated for domestic dishwashers.

Every dishwasher is tested at the factory. There will be residual water in the appliance from this test. It is not an indication that it has been used previously.

Dishwasher salt

In order to achieve good cleaning results, the dishwasher needs to operate with soft water. Hard water results in a build-up of calcium deposits on crockery and in the dishwasher.

Mains water with a hardness level higher than 0.7 mmol/l (4 °d - German scale) needs to be softened. This takes place automatically in the integrated water softener. The water softener in the dishwasher is suitable for a water hardness level of up to 12.6 mmol/l (70 °d - German scale).

The water softener requires dishwasher salt.

Depending on the water hardness level (< 3.8 mmol/l, or 21 °d - German scale), dishwasher salt is not required if combination tablets are being used (see "Operation - Detergent").

If the water hardness in your area is constantly **lower than 0.9 mmol/l (5 °d)**, you do **not** need to add dishwasher salt. The prompt to add dishwasher salt will be switched off automatically. The water softener must, however, still be programmed to correspond to the water hardness level in your area.



Dishwasher detergent will damage the water softener.

Do not fill the salt reservoir with powder or liquid detergent.




Only use special coarse grained dishwasher salt for reactivation, as other salts (e.g. cooking salt, agricultural grade or gritting salt) may contain insoluble additives which can impair the functioning of the water softener.

Before using for the first time


Filling the salt reservoir

- When filling the salt reservoir **only open the door halfway** to ensure that all the salt gets into the reservoir.

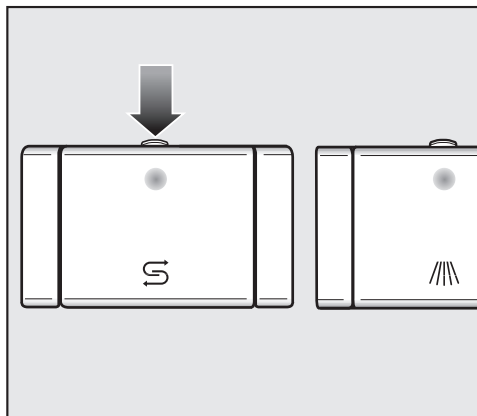


- Press the button on the lid of the salt reservoir in the direction of the arrow.

The flap will spring open.

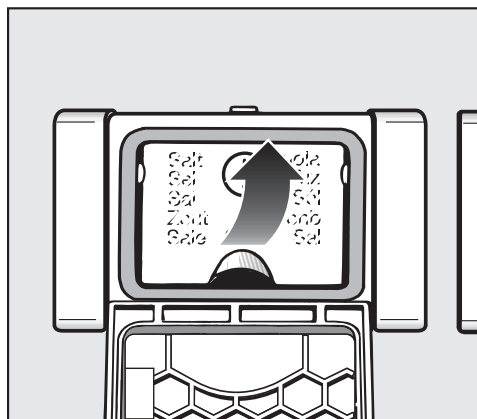

- Lift up the funnel.

Do **not** fill the reservoir with water.

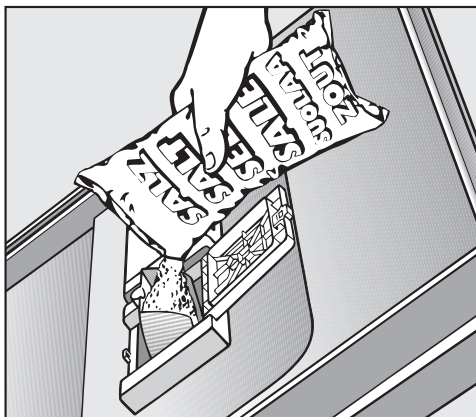

- Add dishwasher salt only until the reservoir is full or until water runs out of the opening. The salt reservoir holds approx. 1 kg of salt, depending on the brand used.

Do not add any more than 1kg of salt.

As the salt reservoir is filled, displaced water may overflow.

- Clean any excess salt from around the reservoir opening and then close the flap.
- Immediately after filling the salt reservoir, run the *Quick wash* programme with the *Short* programme option selected and without any crockery in the dishwasher, to remove any traces of salt from the cabinet.

Before using for the first time

Add salt reminder

- Fill the salt reservoir with dishwasher salt for reactivation when  Insufficient salt appears in the display (If it appears during a programme, wait until the end of the programme).

- Confirm with *OK*.

The message will go out.



Risk of corrosion!

Immediately after filling the salt reservoir, run the *Quick wash* programme with the *Short programme* option selected and without any crockery in the dishwasher to remove any traces of salt from the cabinet.

After the salt reservoir has been filled, the refill reminder may still appear in the display if the salt concentration has not yet reached the correct level. If this is the case, confirm again with *OK*.

The refill reminder will be switched off if you have programmed the dishwasher for a water hardness below 0.9 mmol/l (5°d - German scale).

If you only ever use multi-function combination products in your dishwasher, you can switch off both refill reminders for salt and rinse aid if you wish (see "Settings menu - Switching off the refill reminders").

If you switch to using detergent that does not contain salt or rinse aid, it is important to remember to add dishwasher salt and rinse aid and to switch the reminders back on.

Before using for the first time

Rinse aid

Rinse aid is necessary to ensure water does not cling and leave marks on crockery during the drying phase and helps crockery dry faster after it has been washed.

Rinse aid is poured into the storage reservoir and the amount set is dispensed automatically.

⚠ Inadvertently filling the rinse aid reservoir with powder or liquid detergent will damage the reservoir. Only pour rinse aid formulated for domestic dishwashers into the reservoir.

Alternatively, it is possible to use


- household vinegar with a max. 5% acid content
- or
- liquid citric acid up to 10% acid content

The resulting rinsing and drying quality will not, however, be as good as when rinse aid is used.

⚠ Do not use vinegar with a higher acid content (e.g. vinegar essence 25% acid). This would damage the dishwasher.


If you only ever use combination products containing rinse aid in your dishwasher, you do not need to add rinse aid.

Adding rinse aid

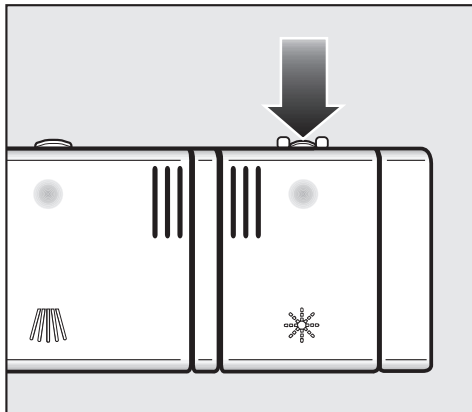

- Press the button on the lid of the rinse aid reservoir in the direction of the arrow until the flap springs open.

Before using for the first time

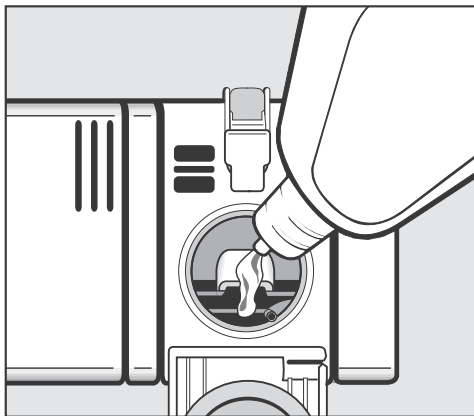

- Add rinse aid only until it is visible in the opening.

The rinse aid reservoir holds approx. 110 ml.

- Close the flap firmly so that it clicks into place. Otherwise water can enter the rinse aid reservoir during a programme.
- Wipe up any spilled rinse aid. This prevents over-foaming occurring during the next programme.

You can adjust the rinse aid dosage for best results (see "Settings menu - Rinse aid").

Add rinse aid reminder

When the ☼ Insufficient rinse aid message appears in the display, the reservoir contains sufficient rinse aid for 2 - 3 programmes only.

- Add rinse aid in plenty of time.
- Confirm with OK.

The message will go out.

If you only ever use multi-function combination products in your dishwasher, you can switch off both refill reminders for salt and rinse aid if you wish (see "Settings menu - Switching off the refill reminders").

If you switch to using detergent that does not contain salt or rinse aid, it is important to remember to add dishwasher salt and rinse aid and to switch the reminders back on.

Notes

Remove coarse food residues from crockery.

There is no need to rinse items under running water.

 Do not wash items soiled with ash, sand, wax, lubricating grease or paint in the dishwasher. Ash does not dissolve and is distributed in the wash cabinet. Wax, sand, lubricating grease and paint cause damage to the dishwasher.

Crockery can be loaded anywhere in the baskets, but the following notes should be observed:

- Do not place crockery and cutlery inside other pieces where they may be concealed.
 - Load the crockery so that water can access all surfaces. This ensures that they get properly cleaned.
 - Make sure that all items are securely positioned.
 - Hollow items such as cups, glasses, pans, etc. must be inverted in the basket.
 - Tall, narrow, hollow items, e.g. champagne glasses, should be placed in the centre of the basket to ensure better water coverage.
 - Wide based items should be placed at an angle so that water can run off them freely.
- The spray arms must not be blocked by items which are too tall or hang through the baskets. If in doubt, test for free movement by manually rotating the spray arms.
 - Make sure that small items cannot fall through the holders in the baskets.
Small items, e.g. lids, should therefore be placed in the cutlery tray or cutlery basket (depending on model).

Some foodstuffs may contain natural dyes, e.g. carrots, tomatoes or tomato sauce. Plastic items in the dishwasher may discolour if large quantities of these foodstuffs find their way into the dishwasher on the crockery. The stability of plastic items is not affected by this discolouration. Cleaning silver cutlery in the dishwasher may also cause plastic items to discolour.

Loading the dishwasher

Items not suitable for dishwashers:

- Wooden cutlery and crockery or items with wooden parts: these may discolour and fade. The glue used in these items is not dishwasher-proof and wooden handles may come loose after being washed in a dishwasher.
- Craft items, antiques, valuable vases and decorative glassware are also not suitable for dishwashers.
- Plastic items which are not heat-resistant: the high temperatures in the dishwasher may cause them to melt or lose shape.
- Copper, brass, tin and aluminium items may discolour or become matt.
- Colours painted over a glaze may fade after a number of washes.
- Delicate glassware and glassware containing lead crystal: clouding may occur over time.

Please note

Silverware previously cleaned with a **silver polish** may still be damp or spotted at the end of a programme, where water has not run off smoothly. It may need to be rubbed dry with a soft cloth.

Silver which has been in contact with foods containing sulphur can discolour. These include egg yolk, onions, mayonnaise, mustard, pulses, fish, fish brine and marinades.

 Aluminium components (e.g. rangehood grease filters) must not be cleaned with caustic alkaline commercial or industrial cleaning agents.

These may damage the material, or in extreme cases, there is a risk of a severe explosive chemical reaction (such as an explosive oxyhydrogen gas reaction).

Useful tip: When purchasing new crockery and cutlery, make sure they are dishwasher-proof.

Glass care

- Clouding may occur on glasses after frequent washing. If delicate glassware is washed in the dishwasher, ensure that only very low temperatures are used (see programme chart), or a special glass-care programme is used (depending on model). This will reduce the risk of clouding.
- Purchase glassware which is dishwasher-safe (e.g. Riedel glassware).
- Use detergents with glass protective additives (e.g. Miele CareCollection tabs).
- Visit "<http://www.mieleglass-care.com/international/en/glasscare/english>" for more information on glass care.

Upper basket

See "Loading the dishwasher / Loading examples" for examples of how to load crockery and cutlery.

⚠ For safety reasons, do not operate the dishwasher without the upper and lower baskets in place (except when running the Tall items programme, if available).

- Use the upper basket for small, light-weight and delicate items such as cups, saucers, glasses, dessert bowls, etc.
Shallow pans or casserole dishes can also be placed in the upper basket.
- Long items such as soup ladles, mixing spoons and long knives should be placed lying down across the front of the upper basket.

Cup rack


- To make room for tall items, raise the rack upwards.

Glasses can be arranged along the positioning rail of the cup rack to give them some support during the programme.

- Lower the cup rack and lean the glasses against it.

Hinged spikes

The rows of spikes can be lowered to make more room for larger items such as casserole dishes.

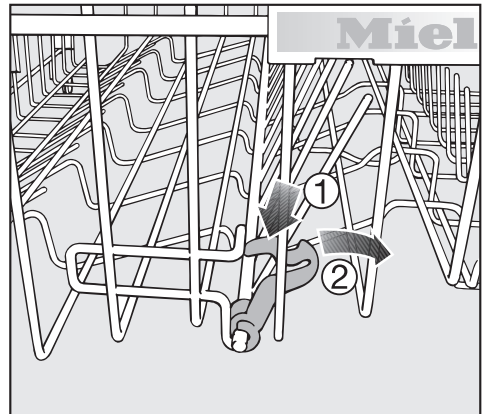


- Press the yellow lever downwards ① and then lower the spikes ②.

Loading the dishwasher

Jumbo cup rack (depending on model)


The cup rack can be set at two different widths so that it can also accommodate large cups.

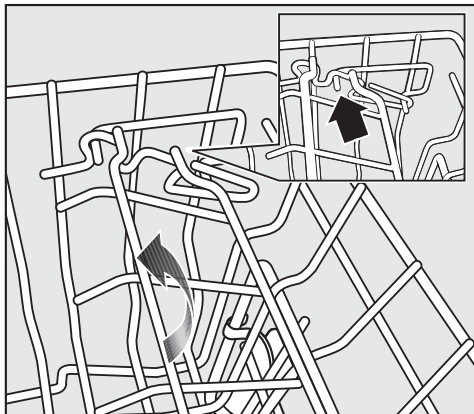

- Pull the cup rack upwards and click it back into position at the required width.

Glass rail

This rail is designed to hold glasses with long stems securely.

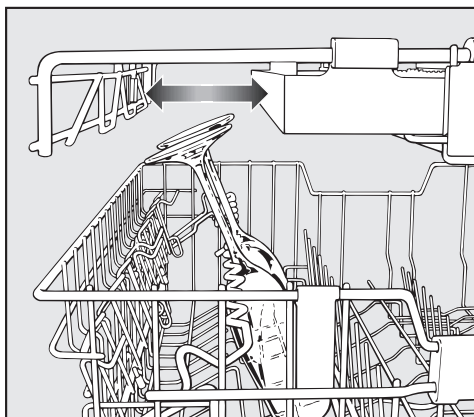


- Lower the rail and lean tall glasses against it.

- You can also move one of the side inserts of the cutlery tray to make more room for tall glasses.

Adjusting the height

You can set the glass rail at two different heights.

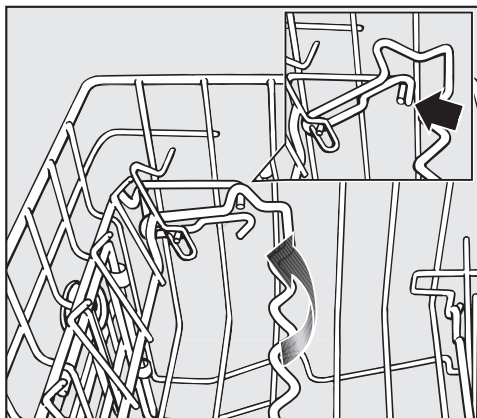

- Pull the rail upwards and click it back into position at the required height.

Use the low setting for small glasses and tumblers.

Use the high setting for tall glasses and glasses with stems.


Loading the dishwasher

Adjusting the upper basket

In order to gain more space for taller pieces of crockery in the bottom or upper basket, the upper basket can be adjusted on three levels with 2 cm between each level.

The upper basket can also be set at an angle with one side high and the other side low. This can be useful to help prevent water being left in deep dishes etc. Ensure, however, that the basket can be inserted smoothly into the cabinet. It is better to adjust the basket before loading it.

- Pull out the upper basket.

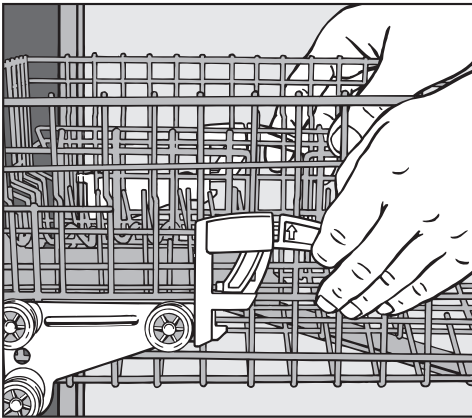

To raise the upper basket:

- Pull the basket up until it clicks into place.

To lower the upper basket:

- Pull upwards on the levers at either side of the upper basket.
- Adjust the basket to the desired height and then push the levers securely back down into position.

Depending on the setting of the upper basket, the following plate dimensions can be accommodated.

Dishwashers with cutlery basket

(see data plate for model number)

Upper basket level	Plate Ø in cm		
	Upper basket		Lower basket
	Stand-ard	XXL	
Top	20	24	31 (35*)
Middle	22	26	29
Bottom	24	28	27

Dishwashers with cutlery tray

(see data plate for model number)

Upper basket level	Plate Ø in cm		
	Upper basket		Lower basket
	Stand-ard	XXL	
Top	15	19	31 (35*)
Middle	17	21	29
Bottom	19	23	27

* When tilted, plates of up to 35 cm can be accommodated (see "Lower basket").


Loading the dishwasher

Lower basket

See "Loading the dishwasher - Loading examples" for examples of how to load crockery and cutlery.

- For larger and heavier items such as plates, serving platters, saucepans, bowls, etc.

Glasses, cups and small items such as saucers can also be placed in the lower basket. Do not place thin, delicate glassware in the lower basket.

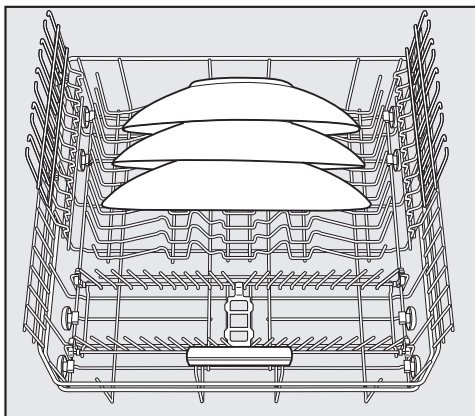

- Place large platters and dishes in the centre of the lower basket.

When tilted, plates up to 35 cm in diameter can be accommodated.

Removable MultiComfort insert


The rear section of the lower basket is used for washing cups, glasses, plates, pots and pans.

You can remove the MultiComfort insert to make more room for larger items such as casserole dishes.

Removing the insert

- Pull the yellow handle forwards and remove the insert.

Refitting the insert

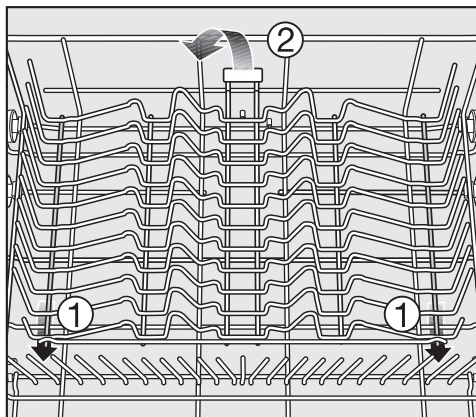


- Fit the insert into the lower basket with the hooks going under the long cross-piece ① as illustrated.
- Press down on the insert until it clicks into position ②.

Loading the dishwasher

Glass rack

- The glass rack can be raised to make more room for tall items.
- Stem glassware, e.g. wine glasses or champagne flutes, can be leaned against the glass rack or suspended from it.


You can set the glass rack at two different heights.

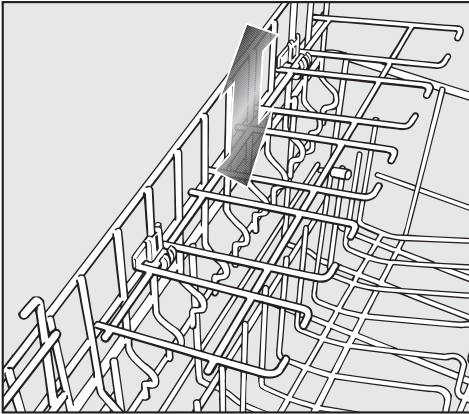

- Slide the glass rack to the desired height until the catches click into place at the top.

Glass rail

This rail is designed to hold glasses with long stems securely.

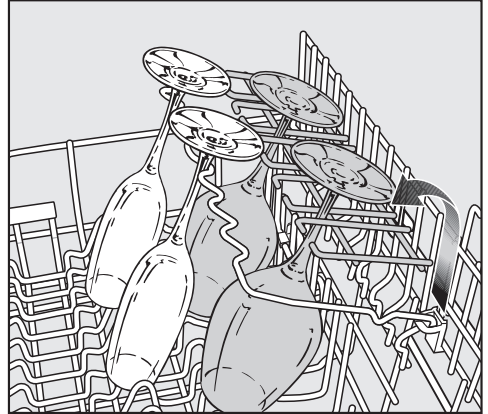


- Lower the rail and lean tall glasses against it.

Loading the dishwasher

Hinged spikes

The spikes at the front are used for washing plates, soup bowls, platters, dessert bowls and saucers.


Both rows of spikes can be lowered to make more room for large items, e.g. pots, pans and dishes.

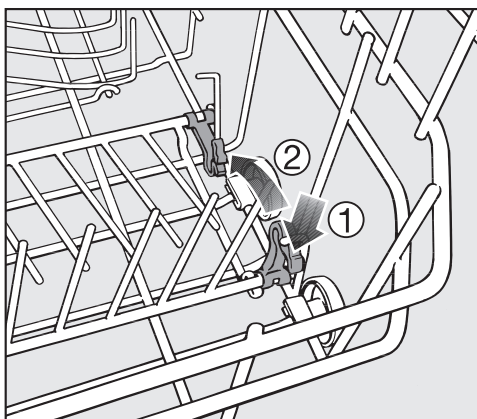

- Press the yellow lever downwards ①, and then lower the spikes ②.

Bottle holder

The bottle holder can be used to wash narrow items, e.g. milk and baby bottles.

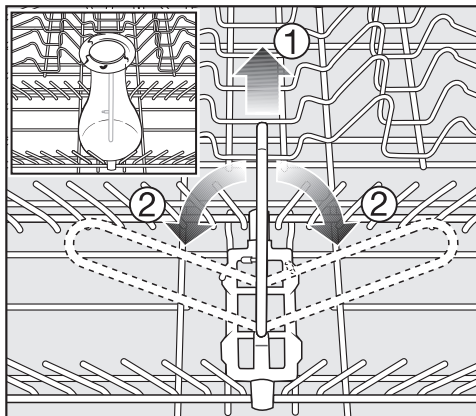

- If the bottle holder is not needed, lift it up ① and fold the sides down ②, as illustrated.

Cutlery

3D cutlery tray (depending on model)

See "Loading the dishwasher / Loading examples" for examples of how to load crockery and cutlery.


- Arrange the cutlery in the tray as shown.

To make unloading much easier, cutlery should be grouped in zones, one for knives, one for forks, one for spoons, etc.


Spoon heads should be placed in contact with at least one of the serrated retainers on the base of the cutlery tray to ensure that water runs off them freely.

The upper spray arm must not be blocked by items which are too big (e.g. cake slices).

The side sections of the tray can be moved into the middle to accommodate tall items of crockery in the upper basket.

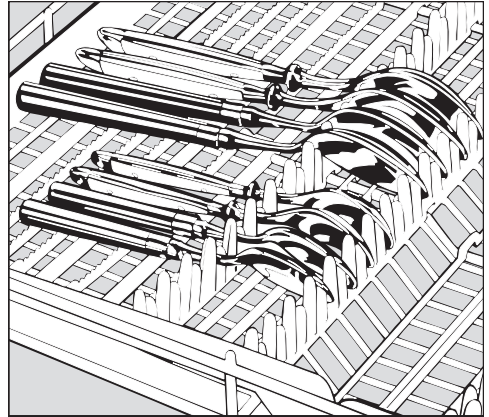

If spoon handles do not fit between the holders, then lay them the other way round.

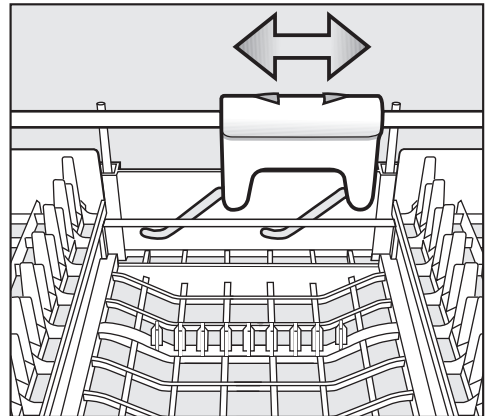



You can use the yellow slide to adjust the height of the middle section of the cutlery tray to make more room for large items of cutlery, such as serving spoons and ladles.

Loading the dishwasher



Loading examples

Dishwashers with cutlery tray

Upper basket

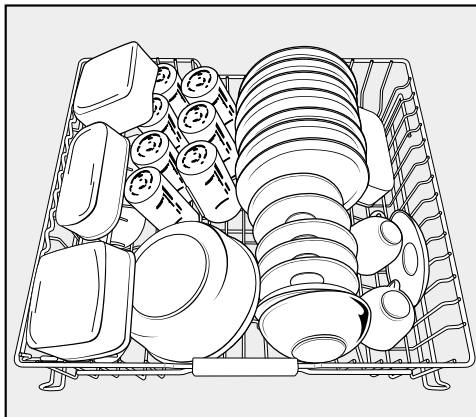
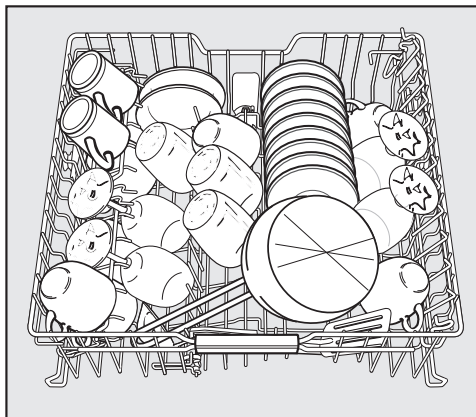


Lower basket

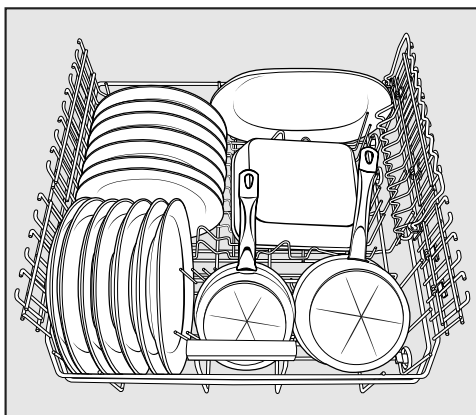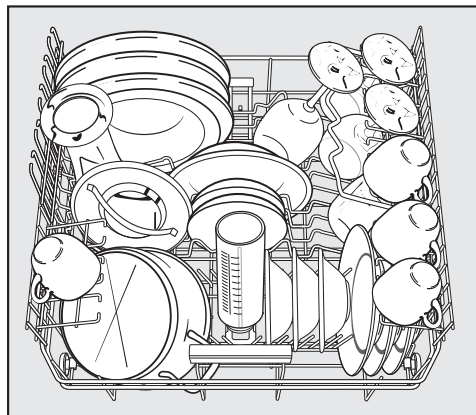


Loading the dishwasher

Cutlery tray

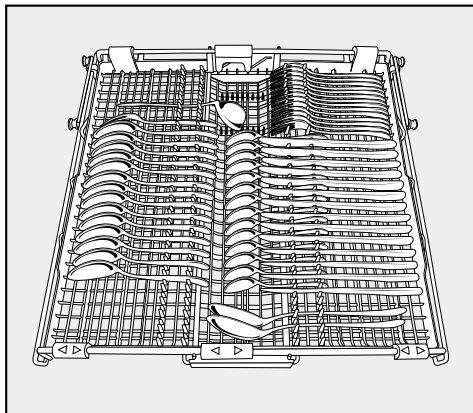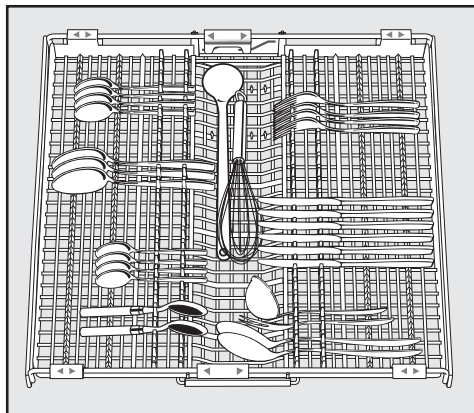

Heavily soiled items

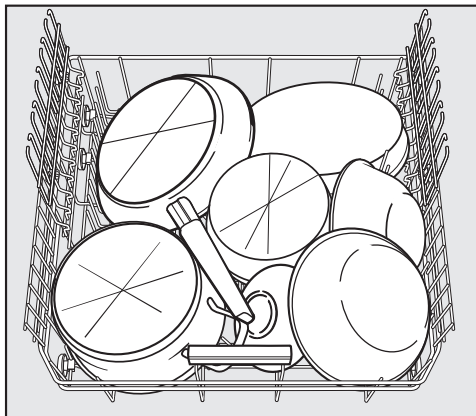

Comparison tests

Standard height with cutlery tray

Test standard:	AS/NZS 2007.1:2005, AS/NZS 2007.2:2005; AS/NZS 6400:2005
Standard programme for energy label comparison tests:	ECO
Capacity:	 14 place settings
Detergent quantity:	32.5 g in compartment II
Rinse aid dispensing:	Setting 3

You can find information on adjusting the rinse aid dosage in the "Rinse aid" section of this booklet.

Upper basket level:

Position:	Bottom
Jumbo cup rack (if available):	Outer position

Loading examples

Pictures illustrating how to load the dishwasher are shown on the following pages.

Picture ①: Upper basket

Picture ②: Lower basket


Picture ③: Cutlery tray

Do not lower or remove the basket inserts.


Remove the bottle holder from the lower basket
(if available).

Capacity

14

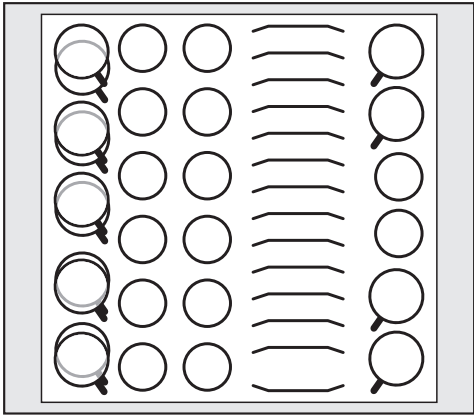


1

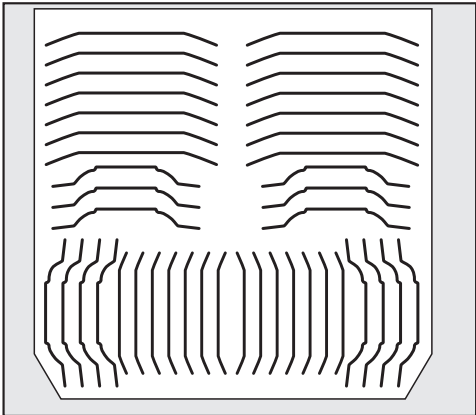

2

Comparison tests

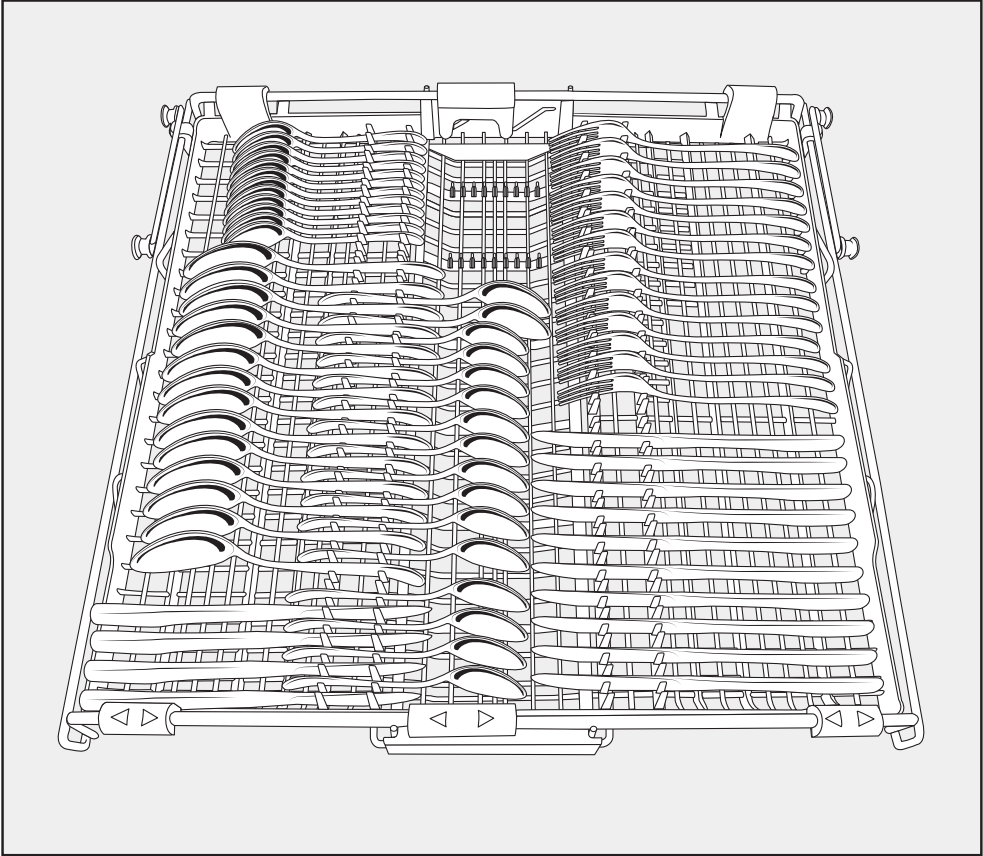

③

XXL height with cutlery tray

Test standard:	AS/NZS 2007.1:2005, AS/NZS 2007.2:2005; AS/NZS 6400:2005
Standard programme for energy label comparison tests:	ECO
Capacity:	 15 place settings
Detergent quantity:	33.7 g in compartment II
Rinse aid dispensing:	Setting 3
You can find information on adjusting the rinse aid dosage in the "Rinse aid" section of this booklet.	

Upper basket level:

Position:	Bottom
Jumbo cup rack (if available):	Outer position

Loading examples

Pictures illustrating how to load the dishwasher are shown on the following pages.

Picture ①: Upper basket

Picture ②: Lower basket


Picture ③: Cutlery tray


- Do not lower or remove the basket inserts.
- Remove the bottle holder from the lower basket
(if available).

Comparison tests

Capacity

15

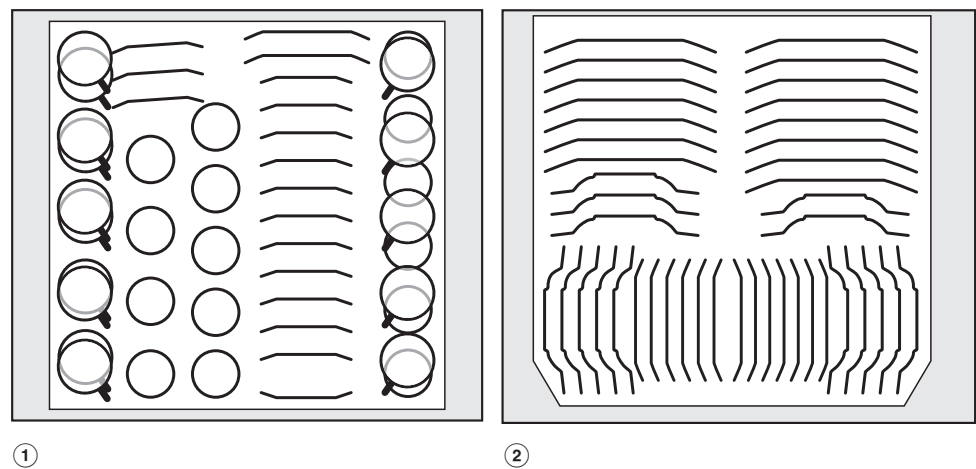

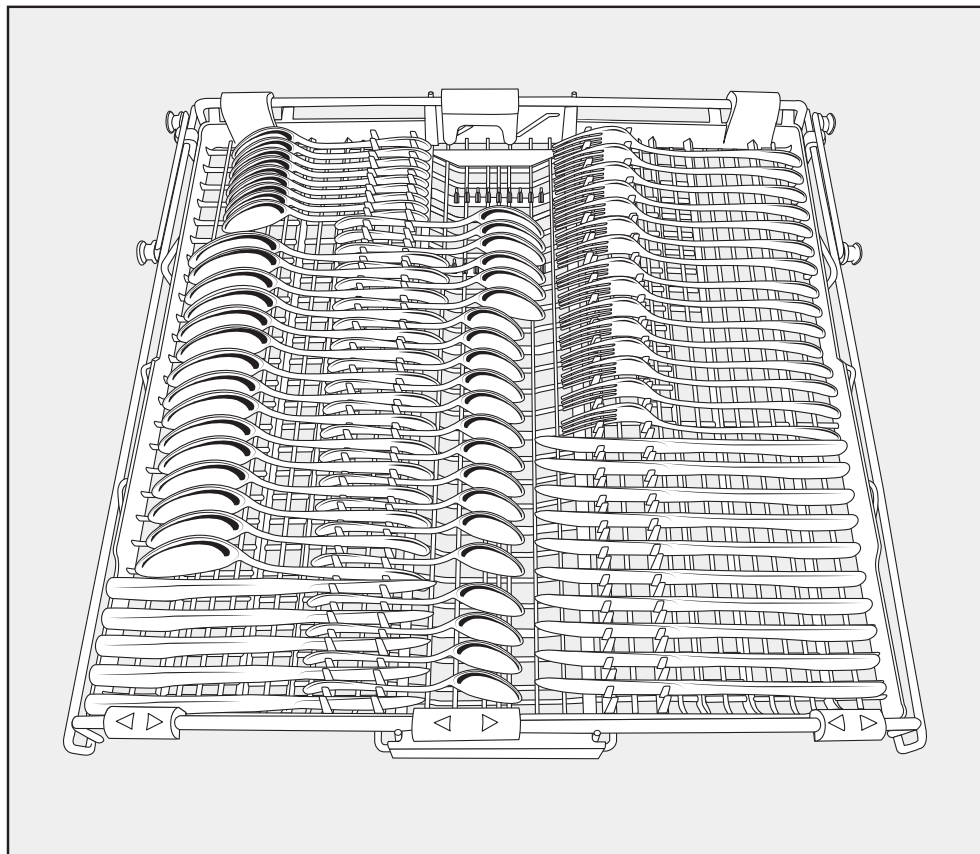

③

Operation

Detergent

 Only use detergents formulated for domestic dishwashers. Do not use washing-up liquid.

Active ingredients

Modern detergents contain various active ingredients, the most important of which are:

- Complexing agents to prevent calcification.
- Alkalis to aid the removal of dried on soiling.
- Enzymes to break down starch and loosen protein.
- Oxygen based bleaching agents to remove coloured stains (e.g. tea, coffee, tomato sauce).

Most dishwasher detergents are mildly alkaline and contain enzymes and oxygen based bleaching agents.

Types of detergent:

- Powder and liquid gel detergents.
These detergents allow you to adjust the amount dispensed according to the amount of load and level of soiling.
- Tab detergents. These are suitable for most levels of soiling.

You can also buy combination products (see "Programme options - Detergent-Agent", if applicable).

In addition to detergent, these products contain rinse aid and salt substitutes. They are available as "3 in 1" or when they also contain other components such as glass and stainless steel protective additives and enhanced cleaning power, as "5 in 1", "7 in 1", "All in 1" etc.

Refer to the manufacturer's packaging as to whether combination products are suitable for the water hardness level in your area.

Please note that the cleaning and drying results of combination detergents can vary greatly.

For optimum cleaning and drying results, use Miele dishwasher detergent and add Miele salt and Miele rinse aid separately. See "Optional accessories".

Detergent dosage

- Follow the dosage recommended by the manufacturer on the packaging.
- Unless directed otherwise, use one detergent tab or add 20 to 30 ml detergent to compartment II, depending on the level of soiling. With very heavy soiling you can also add a small amount of detergent to compartment I.
- Tabs may not dissolve completely when the Quick wash programme (if available) is used.

Failure to dispense the recommended amount of detergent may impair cleaning results.


 Some dishwasher detergents are strongly alkaline and contain irritant or corrosive ingredients which can cause burning in the nose, mouth and throat if swallowed, or inhibit breathing.

Avoid inhalation of powder detergents and do not ingest dishwasher detergent. Seek medical advice immediately if detergent has been swallowed or inhaled.

Keep detergent and other household agents out of the reach of children at all times. Keep children away from the dishwasher when the door is open. There could still be detergent residues in the cabinet. Check that the detergent dispenser is empty at the completion of a programme. To avoid the danger of children coming into contact with the dishwasher detergent, only add detergent just before starting the programme and close the door, activating the safety lock (if your dishwasher is fitted with one).


Operation

Adding detergent

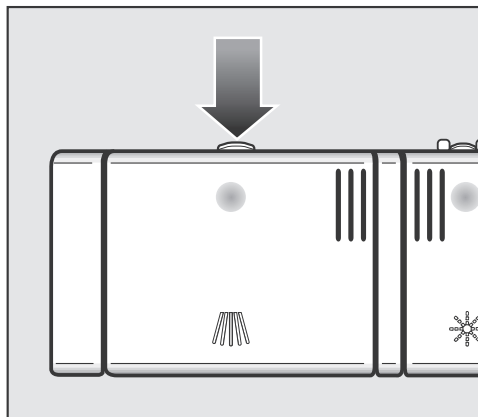

- Press the opening catch on the detergent dispenser. The flap will spring open.

The flap is always open at the end of a programme.

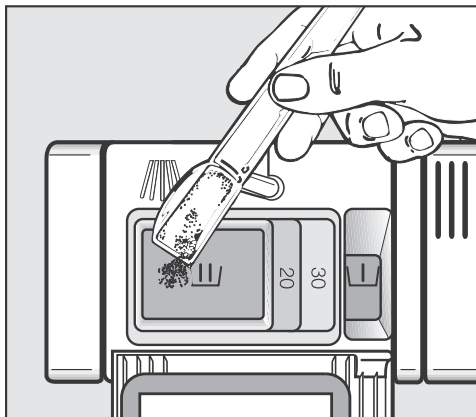

- Add the required amount of detergent and close the flap.
- Make sure that the detergent packaging is properly closed after use to avoid it getting damp and becoming lumpy.

For information

Compartment I holds max. 10 ml,
Compartment II holds max. 50 ml.

There are marks in Compartment II to assist with dispensing: 20, 30. The marks indicate a level of approx. 20 or 30 ml when the door is open in a horizontal position.

Switching on

- Turn on the tap if it is turned off.
- Open the door.
- Make sure the spray arms are not obstructed.
- Switch the dishwasher on using the ⓘ sensor.

The main menu will appear in the display.

Switch the **Memory** function on (see "Settings menu - Memory") if you want the last programme selected to appear in the display instead of the main menu.

Selecting a programme

Choose your programme according to the type of load and how dirty it is.

The different programmes and their uses are described in the **Programme chart** later on in this booklet.

- Use the ∨∧ arrows to select the programme required.

The display will change to show the programme menu.

Touch the ⓘ sensor to call up more information about the programme currently selected.

You can now select Extras for your programme (see "Programme options").

To select a different programme, touch the ⇐⇒ sensor to return to the main menu.

Operation

Starting the programme

- Start the programme by closing the door.

The TimeControl in-operation indicator light comes on to show that a programme has been started.

If you open the door, the message *Crockery can be added* will appear in the display.

As long as this message is showing, crockery can be added without compromising wash results.

 Water in the dishwasher may be hot. Danger of scalding from water in the cabinet.

Make sure you open the door very carefully.

A programme should only be cancelled in the first few minutes, if at all. Otherwise important programme stages could be omitted.

Display

The estimated duration of the programme selected appears in hours and minutes in the display before the programme begins. During the programme, the time left until the end of the programme is displayed.

Each programme stage is indicated by a symbol:

 Pre-wash / Soak

 Main wash

 Interim rinse

 Final rinse

 Drying

 Finish

The programme duration displayed may vary with the same programme. It is influenced by, among other things, the water temperature at each intake, the reactivation process, the type of detergent, the amount of crockery and how dirty it is.

When a programme is selected for the first time, the display shows an average time for a cold water intake.

The times shown in the Programme chart refer to standard test loads and temperatures.

Each time a programme is run, the electronic unit takes the new conditions into account, and calculates the time required.

TimeControl

The TimeControl indicator light lets you know how much longer the programme has to run with the door shut.

All four indicator lights under the worktop will come on when the programme starts. They will go out one after the other from left to right in 20-minute intervals an hour before the end of the programme to let you know how long the programme still has left to run.

- 4 indicator lights:
Programme start / Time remaining exceeds 60 minutes
- 3 indicator lights:
Time remaining 60-41 minutes
- 2 indicator lights:
Time remaining 40-21 minutes
- 1 indicator light:
Time remaining 20-1 minute
- All indicators off:
The programme has finished

Energy management

To save energy, the dishwasher will switch off automatically 10 minutes after the last time a sensor has been pressed or after the end of the programme (see "Settings menu - Optimise standby").

- Press the ① sensor to switch the dishwasher back on.

The dishwasher will not switch off whilst a programme is running, during the Delay start period or if there is a fault.

Operation

At the end of the programme

At the end of a programme, the Time-Control indicator light will go out with the door shut.

The buzzer might also be sounding.

The programme has finished when the door has opened slightly (if applicable) and **Finished** appears in the display.

If the **Consumption** programmable function is switched on, you can now view the actual energy and water consumption of the programme which has just finished (see "Settings - Consumption").

The drying fan may continue to run for a few minutes at the end of the programme.

You can now empty the dishwasher.

 If you have deactivated the automatic door opening function (see "Settings menu - AutoOpen"), but would still like to open the door at the end of the programme, then make sure that you open the door fully.

Otherwise steam from the dishwasher could damage the edge of the worktop because the fan is no longer running.

Switching off

At the end of a programme:

- Open the door.
- The dishwasher can be switched off at any time using the ⓘ sensor.

Switching the dishwasher off during a programme stops the programme.

Switching the dishwasher off during the run-up to a Delay start time will also stop the process.

If the dishwasher is not going to be used for a longer period of time, e.g. whilst on holiday, the tap should be turned off.

Unloading the dishwasher

Dishes tend to break and chip more easily when they are hot. Allow the dishes to cool until they are comfortable enough to handle before unloading them.

If you open the door fully after switching off, the dishes will cool much faster.

First unload the lower basket, then the upper basket and finally the cutlery tray (depending on model).

This will prevent water drops from the upper basket and cutlery tray from falling onto the dishes in the lower basket.

Operation

Interrupting a programme

A programme is interrupted as soon as the door is opened.

If the door is closed again, the programme will continue from the point it was at before the door was opened.



Water in the dishwasher may be hot. Danger of scalding!

Only open the door if absolutely necessary and exercise extreme caution when doing so. Before closing the door again, leave it ajar for approx. 20 seconds. This will enable the temperature in the wash cabinet to settle. Then raise the door up and push until the catch engages.

Changing a programme

If the detergent dispenser flap has already opened, do not change the programme.

If a programme has already started and you wish to change it, proceed as follows:

- Open the door.
- Press the Back sensor ↶.
- Confirm the message **Cancel programme?** with **Yes**.

The programme will be cancelled.

- Select the Main menu option.

The display will revert to the main menu.

- Select the programme you want, and then start it by shutting the door.

The In-operation indicator comes on to show that a programme has been started.

Extras

You can select Extras for the programme you have selected.

- Open the door.
- Switch the dishwasher on using the  sensor.
- Select a programme.
- Select the Extras option.

All available Extras will be shown in the display.

- Select the Extras you want using the *OK* sensor.

A tick  will appear beside the Extra to show that it has been selected.

Extras that cannot be combined will have a lock symbol  next to them.

- To deselect an option you have chosen, simply press the *OK* sensor again.
- When you have finished selecting Extras, confirm with *Accept*.

The display will change back to the programme menu.

The number of Extras selected, e.g. 1 of 4, will appear in the programme menu.

You can save the selected Extras for the respective programme (see "Settings menu - Save Extras").

Short

The *Short* Extra reduces the duration of the programmes in which this option is available by up to 30%.

The selection of the *Short* Extra may have precedence over other selected Extras.

In order to achieve optimum cleaning results, energy consumption may increase slightly with this option.

When used in combination with the *Quick wash* programme, the *Short* Extra results in a wash programme without drying or automatic opening of the door (if available).

Energy save

The *Energy save* Extra reduces the energy consumption of programmes in which this option is available by up to 20%.

In order to achieve optimum cleaning results, the programme duration is extended with this option.

Intensive lower basket

The *Intensive lower basket* Extra intensifies cleaning performance in the lower basket in programmes in which this option is available.

Energy and water consumption are increased slightly due to the extended wash duration in the lower basket.

Programme options

Extra dry

The **Extra dry** Extra improves the drying performance in programmes in which this option is available.

Energy consumption is increased due to an extended fan running time and an increased final rinse temperature.

Soak

The **Soak** Extra is used for soaking crockery with dried on soiling.

Energy and water consumption will increase with this Extra.

If you are using powder dishwasher detergent, add approx. 5 g to compartment I.

Pre-wash

The **Pre-wash** Extra can be used for removing easily soluble soiling from crockery.

Adding a pre-wash will increase the programme duration and increase energy and water consumption levels.

DetergentAgent

For optimum cleaning results, the dishwasher automatically adjusts the programme sequence to the type of detergent being used. Depending on the programme, this can mean that the running time and energy consumption vary slightly.

If you only ever use multi-function combination products containing salt and rinse aid in your dishwasher, you can switch the reminders off if you wish (see "Settings menu - Refill reminders"). The **DetergentAgent** function will not be affected by this.

Ensure that you refill dishwasher salt and rinse aid and switch on the refill reminders again if you are not using combination products.

Delay start with EcoStart

There are three ways of starting the programme by means of delaying the start. You can set the start time or the finish time of a programme. You also have the option of taking advantage of time variable economy rates of electricity using the EcoStart function.

When using the Delay start function, make sure that the detergent compartment is dry before adding detergent. Wipe dry with a cloth if necessary. If the compartment is wet, powder detergent can become lumpy and stick to the dispenser, with the result that it is not fully dispensed.

Do not use liquid detergent when selecting Delay start, as it can run into the dishwasher before it is required.

You then have a choice of Start at, Finish at and EcoStart.

- Select the one you want.

Now enter the required time.

If, while you are setting the time, you do not press any sensors for several seconds, the display will revert to the previous menu. You will then have to enter your settings again.

If you keep the relevant arrow sensor $\nabla/\wedge$ pressed, the value shown will automatically increase or decrease.

- Open the door.
- Switch the dishwasher on using the  sensor.
- Select the programme you want from the main menu.
- Press the  sensor.

The  indicator light comes on.

Programme options

Start at

With the **Start at** function, you set the exact time at which you want the programme to start.

- Use the $\nabla/\wedge$ arrow sensors to set the hour and confirm with **OK**.

The hour will be saved and the minute number block will be highlighted.

- Use the $\nabla/\wedge$ arrow sensors to set the minutes and confirm with **OK**.

The display will change to show the programme menu.

- Close the door.

The left-hand TimeControl in-operation indicator light will start flashing.

When the set time is reached, the programme selected will begin automatically.

Finish at

With the **Finish at** function, you set the time at which you wish the programme to end.

- Use the $\nabla/\wedge$ arrow sensors to set the hour and confirm with **OK**.

The hour will be saved and the minute number block will be highlighted.

- Use the $\nabla/\wedge$ arrow sensors to set the minutes and confirm with **OK**.

The display will revert to the programme menu and the estimated start time will appear.

- Close the door.

The left-hand TimeControl in-operation indicator light will start flashing.

A message will appear in the display if the programme cannot be completed by the set finish time because it has too long a running time.

The selected programme will start automatically when the estimated start time is reached.

EcoStart

The EcoStart function allows you to take advantage of time variable economy rates of electricity. Before you can use this option, you must set up to three electricity tariff time zones (see "Settings menu - EcoStart").

You then set the latest time at which the programme selected should end.

The dishwasher will start automatically in the cheapest tariff zone within the time set.

- Use the $\vee/\wedge$ arrow sensors to set the hour and confirm with OK.

The hour will be saved and the minute number block will be highlighted.

- Use the $\vee/\wedge$ arrow sensors to set the minutes and confirm with OK.

The display will change to show the programme menu.

- Close the door.

The left-hand TimeControl in-operation indicator light will start flashing.

The estimated start time for the programme selected will appear in the display.

The selected programme will start automatically during the most cost effective time zone. It will finish at the latest by the set finish time.

Changing or deleting set times

You can change the set times or the programme before the start time in the display is reached.

- Open the door.
- Select the **Change** option and confirm with OK.
- Press the  sensor.
- Select the function for which you want to change or delete the time.

After confirming the **Change** option, you can change the set time.

After confirming the **Delete** option, the set time will be deleted and the  indicator light will go out.

You can now select and start a programme.

Programme chart

Programme	Programme sequence				
	Pre-wash	Main wash	Interim rinse	Final rinse	Drying
		°C		°C	
ECO ¹⁾	X	48	X	47	X
Sensor wash	Variable programme sequence, sensor-controlled adjustment according to amount of crockery and soiling				
	If required	47-65	If required	57	X
Light soiling 55°C	X	55	X	60	X
Intensive 75°C	2X	75	X	60	X
Sensor wash gentle ♀ ^c	X	44	X	57	X
Quick wash 40°C		40	X	45	X
Hygiene		69	2X	70	X
ExtraQuiet		46	X	64	X
SolarSave	2X	X	X	X	X
Pasta/Paella	X	74	X	60	X
Tall items 65°C	X	65	X	60	X
Glasses warm		34	X	54	
Maintenance programme		75	2X	70	X

¹⁾ This programme is the most efficient in terms of its combined energy and water consumption for cleaning normally soiled crockery.

Programme chart

Consumption ²⁾			Duration ²⁾	
Electricity		Water		
Cold water kWh	Hot water kWh	Litres	Cold water h:min	Hot water h:min
0.73 ³⁾ / 0.76 ⁴⁾	0.40 ³⁾ / 0.44 ⁴⁾	11.3 ³⁾ / 11.0 ⁴⁾	2:41	2:34
0.70 ⁵⁾ -1.30 ⁶⁾	0.50 ⁵⁾ -0.85 ⁶⁾	6.5 ⁵⁾ -16.0 ⁶⁾	1:25-2:45	1:20-2:35
1.10	0.70	14.0	1:59	1:47
1.45	0.95	15.0	2:54	2:40
0.90	0.45	13.5	1:53	1:42
0.65	0.25	11.0	0:46	0:35
1.60	1.20	13.5	2:17	2:05
1.10	0.80	10.5	4:48	4:38
	0.05	27.5		1:29
1.45	0.95	13.5	2:24	2:10
1.15	0.65	14.5	1:52	1:39
0.75	0.40	10.5	0:52	0:42
2.10	1.35	21.5	1:56	1:34

²⁾ In practice there may be variations to these figures due to variable conditions and data recorded by the sensors. The durations displayed in your dishwasher will reflect your household conditions.

Selecting programme options will also affect consumption levels and programme durations (see "Programme options").

³⁾ Standard height dishwashers

⁴⁾ XXL dishwashers

⁵⁾ Part load with light soiling

⁶⁾ Full load with heavy soiling

Programme chart

Crockery	Food deposits	Action required
Mixed, everyday crockery	All fresh to dried-on food deposits	Variable, sensor-controlled programme sequence Shorter duration
Heat-sensitive glasses and plastic	Fresh, easily removed food deposits	This needs a short programme Shorter duration
Mixed crockery		This needs a gentle programme with glass care Shorter duration
	Fresh food deposits which have begun to dry on	Very quiet programme
		This needs a water and energy saving programme
Pots, pans, everyday porcelain and cutlery		Average programme values Shorter duration
	Burnt-on, stubborn, dried-on food deposits containing starch or protein ¹⁾	Maximum cleaning power Shorter duration
Items such as baby bottles, chopping boards etc, that need to be hygienically clean	Fresh food deposits which have begun to dry on	Programme with special parameters for hygienic cleaning

¹⁾ Food such as potatoes, pasta, rice or stews can leave starchy deposits. Deposits containing protein can be left by food such as fried meat, fish or eggs and bakes.

Programme chart

Programme	Detergent	
	Compartment I ²⁾	Compartment II ²⁾
  Sensor wash +short	-	25 ml or 1 tab
  Quick wash 40°C +short	-	20 ml or 1 tab ³⁾
  Sensor wash gentle  +short	-	20 ml or 1 tab
 ExtraQuiet	-	25 ml or 1 tab ³⁾
 ECO	-	25 ml or 1 tab
  Light soiling 55°C +short	-	25 ml or 1 tab
  Intensive 75°C +short	10 ml	25 ml or 1 tab
 Hygiene	-	25 ml or 1 tab

²⁾ see "Detergent"

³⁾ In some cases, tabs may not dissolve completely.

Programme chart

Further programmes

SolarSave

This programme does not heat the water. To use it, the water intake temperature must be at least 45°C (see "Water connection - Connection to the water supply"). This programme is suitable for mixed loads of crockery and glassware with moderate, slightly dried on food residues.

Pasta/Paella

Programme with long soak phases incorporated for mixed loads of crockery, pots and pans and robust porcelain. This programme is particularly suitable for removing soiling containing starch left by pasta, rice and potatoes.

Tall items 65°C

Programme for very large heat-resistant items, (e.g. very deep pans). In this programme the upper basket needs to be removed to make space for large items in the lower basket. This programme has a medium action to remove fresh to slightly dried on residues.

Glasses warm

This programme does not use rinse aid and omits the drying phase. It is particularly suitable for cleaning beer glasses where a good head of froth is needed.

Maintenance programme

The wash cabinet is largely self-cleaning. However, if residues or soiling build up in the cabinet, they can be removed by running the "Maintenance programme" without a load. This programme is designed for cleaning the wash cabinet using care products such as Miele's dishwasher cleaner or conditioner (see "Optional accessories - Dishwasher care products). Please follow usage instructions on the packaging.

Check your dishwasher regularly (approx. every 4-6 months). This way faults and problems can be avoided.

 The external surfaces of this appliance are all susceptible to scratching.

Contact with unsuitable cleaning agents can alter or discolour the external surfaces.

Cleaning the wash cabinet

The wash cabinet is largely self-cleaning, provided that the correct amount of detergent is always used.

If, however, there are limescale or grease deposits in the cabinet, these can be removed with a special dishwasher cleaner (see "Optional accessories"). Follow the instructions on the packaging.

Using mainly low temperature programmes (below 50°C), could cause bacteria and unpleasant odours to build up in the wash cabinet. To avoid this, the dishwasher will increase the temperature in the final rinse of the selected programme automatically after several programmes using low temperatures have been run.

- Clean the filters in the wash cabinet regularly.

Cleaning the door and the door seal

Mould could build up on the door seal and the sides of the dishwasher door as these surfaces are outside the wash cabinet and are not accessed and cleaned by the spray arm jets.

- Wipe the door seals regularly with a damp cloth to remove food deposits.
- Wipe off any food or drink residues which may have dripped onto the sides of the dishwasher door before closing it.

Cleaning the control panel

- The control panel should **only** be wiped with a damp cloth.

Cleaning the reflector panel

The reflector panel for the In-operation indicator light is situated in the cover-plate underneath the worktop.

- The reflector panel should only be wiped with a damp cloth or a suitable cleaning agent designed for use on plastic.

Cleaning and care

Cleaning the door front

 Soiling that is left too long might become impossible to remove and could cause external surfaces to alter or discolour.
Remove any soiling immediately.

- Clean the front with a solution of warm water and a little washing-up liquid applied with a soft sponge. Wipe the surfaces dry using a soft cloth.
For cleaning, you can also use a clean, damp microfibre cloth, such as the Original Miele all purpose microfibre cloth, without any cleaning agent.

To avoid damaging external surfaces, do not use:

- cleaning agents containing soda, ammonia, acids or chlorides,
- cleaning agents containing descaling agents,
- abrasive cleaning agents, e.g. powder cleaners and cream cleaners,
- solvent-based cleaning agents,
- stainless steel cleaning agents,
- dishwasher cleaner,
- oven cleaner,
- glass cleaning agents,
- hard, abrasive brushes or sponges, e.g. pot scourers, brushes or sponges which have been previously used with abrasive cleaning agents,
- dirt erasers,
- sharp metal scrapers,
- steel wool or metal scourers,
- steam cleaning appliances.

Checking the filters in the wash cabinet

The filter combination in the base of the wash cabinet retains coarse soil from the suds solution, preventing it accessing the circulation system and re-entering the cabinet through the spray arms.

 This dishwasher must not be used without all the filters in place.

Collection of coarse soil may cause the filters to clog. The level of soiling and time it takes before the filters need cleaning will vary depending on use.

The message **Check filters** will appear in the display after every 50 programme cycles (factory default setting).


You can set the interval for this message to appear to between 30 and 60 programme cycles (see "Settings menu - Check filters").

- Check the filter combination.
- Clean it if necessary.
- Then confirm the message with **OK**.

The message will disappear.
The display will change to show the programme selection menu.

Cleaning the filters


- Switch the dishwasher off.

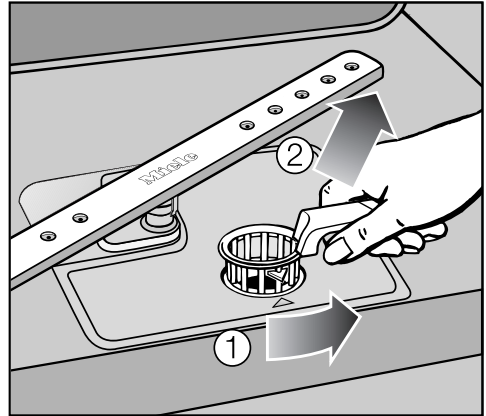

- Turn the handle anti-clockwise to release the filter combination ①.
- Lift the filter combination out of the dishwasher ②. Remove any coarse particles and rinse the filter well under running water. Use a nylon brush if necessary.


 During cleaning ensure that coarse soil doesn't get into the circulation system and cause a blockage.

Cleaning and care

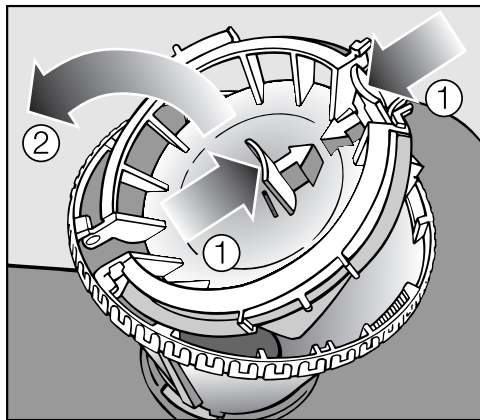

To clean the inside of the filter, the flap must be opened:

- Press the catches ① together in the direction of the arrows as shown, and open the filter ②.
- Rinse all the filters under running water.
- Then close the flap so that the catch engages.

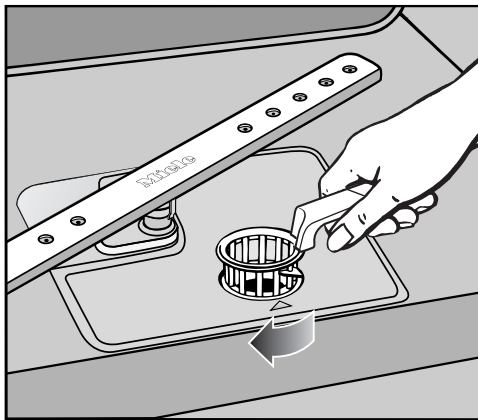

- Replace the filter combination so that it lies flat in the base of the wash cabinet.
- Then turn the handle clockwise until both arrows point towards each other. This will lock the filter combination in place.

⚠ Take care when you are fitting the filter combination that it is secured in position correctly. Otherwise coarse soil could get into the circulation system and cause a blockage.


Cleaning the spray arms

Particles of food can get stuck in the spray arm jets and bearings. The spray arms should therefore be inspected and cleaned regularly (approx. every 4 - 6 months).


- Switch the dishwasher off.

Remove the spray arms as follows:


- Take out the cutlery tray (if your dishwasher is fitted with one).
- Push the **top** spray arm upwards to engage the inner ratchet. Then unscrew the spray arm.

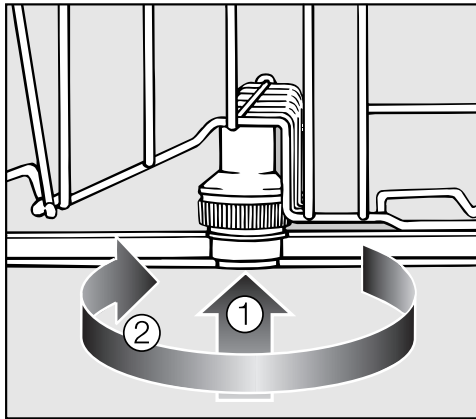

- Push the **middle** spray arm upwards ① to engage the ratchet. Then unscrew the spray arm ②.
- Remove the lower basket.

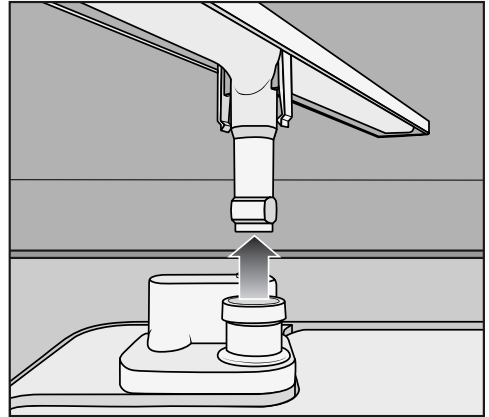

- Pull the **lower** spray arm firmly upwards to remove it.

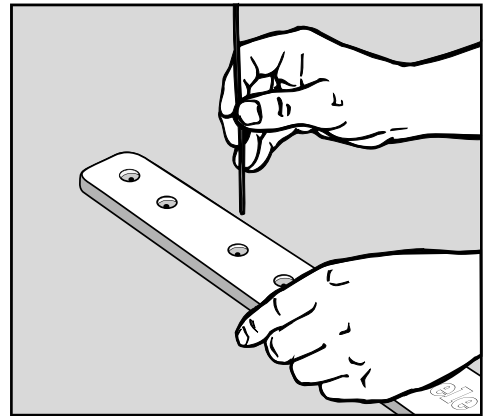

- Use a pointed object to push food particles into the spray arm jets.
- Rinse thoroughly under running water.
- Refit the spray arms and check that they rotate freely.

Problem solving guide

With the help of the following guide, minor faults in the performance of the appliance, some of which may result from incorrect operation, can be put right without contacting Miele. This will save time and money.

Please note that a call-out charge will be applied to unnecessary service visits where the problem could have been rectified as described in these operating instructions.



Unauthorised or incorrect repairs could cause personal injury or damage to the appliance.

Repair work to electrical appliances must only be carried out by a suitably qualified and competent person in strict accordance with current local and national safety regulations. The manufacturer cannot be held liable for unauthorised work.

Technical problems

Problem	Possible cause and remedy
The dishwasher does not start.	The door is not properly closed. ■ Raise the door upwards until the catch engages.
	The appliance is not plugged in. ■ Insert the plug and switch on at the socket.
	The mains fuse has tripped. ■ Reset or replace the fuse (see data plate for minimum fuse rating).
	The appliance is not switched on. ■ Switch the dishwasher on with the ① sensor.
The dishwasher stops during a programme.	The mains fuse has tripped. ■ Reset or replace the fuse (see data plate for minimum fuse rating). ■ If the mains fuse trips again, call Miele.
After the programme has started, the In-operation indicator light is not visible.	The reflector panel was not correctly fitted. ■ Refit the reflector panel correctly (see Installation diagram).

Problem solving guide

Problem	Possible cause and remedy
All in-operation indicators are flashing quickly. The warning buzzer is sounding. One of the following faults appears in the display:	Before rectifying the problem, you must: ■ Switch the dishwasher off using the ① sensor.
 Technical fault FXX	There may be a technical fault. After a few seconds: ■ Switch the dishwasher back on. ■ Select the programme you want. ■ Close the door. If the fault message appears again, there is a technical fault. ■ Call Miele.
 Waterproof fault	The Waterproof system has reacted. ■ Turn off the tap. ■ Call Miele.
 Technical fault F78	A fault has occurred in the circulation pump. ■ Switch the dishwasher off for at least 30 seconds with the ① sensor. ■ Switch the dishwasher back on. ■ Select the programme you want. ■ Close the door. If the fault message appears again, there is a technical fault. ■ Call Miele.

Problem solving guide

Problem	Possible cause and remedy
All in-operation indicators are flashing quickly. The warning buzzer is sounding. One of the following faults appears in the display:	Before rectifying the problem, you must: ■ Switch the dishwasher off with the ① sensor.
Fault auto. door closing	The door is sometimes obstructed by an item inside the appliance. ■ If this is the case, remove the item and switch the dishwasher on again. ■ If the same message appears again, call Miele.
Fault auto. door opening	There may be a technical fault. ■ Open the door manually. ■ If the same message appears again, call Miele.

Water inlet fault

Problem	Possible cause and remedy
All TimeControl in-operation indicators are flashing quickly. The warning buzzer is sounding. One of the following faults appears in the display:	
🔌 Water inlet fault. Please open the stopcock	The tap is turned off. ■ Turn on the tap fully.
🔌 Water inlet fault	Before rectifying the problem, you must: ■ Switch the dishwasher off using the ① sensor. Water intake is restricted. ■ Turn on the tap fully and start the programme again. ■ Clean the water inlet filter (see "Maintenance"). ■ The water pressure at the intake is lower than 30 kPa (0.3 bar). Seek professional advice.
The following message appears in the display during the SolarSave programme: ❗ Water in. temp. too low	The intake water has not reached the required temperature of 45°C (see "Water connection - Connection to the water supply"). ■ Start the programme again. ■ If the fault message appears again, select a different programme.

Problem solving guide

Water drainage fault

Problem	Possible cause and remedy
All TimeControl in-operation indicators are flashing quickly. The warning buzzer is sounding. The following fault appears in the display:  Drain fault	Before rectifying the problem, you must: ■ Switch the dishwasher off with the ① sensor.
	The water outlet is restricted. There might be water in the wash cabinet. ■ Clean the filter combination (see "Cleaning and care - Cleaning the filters"). ■ Clean the drain pump (see "Maintenance"). ■ Clean the non-return valve (see "Maintenance"). ■ Remove any kink or loop in the drain hose.

General problems

Problem	Possible cause and remedy
The door will not open when knocked.	The Knock2open function has been permanently disabled. ■ Switch the door opening mechanism on again (see "Settings menu - Knock2open"). If the door will still not open or if there is a power cut, the door can still be opened with the door opening device supplied (see "Before using for the first time - Emergency door opener").
The interior lighting doesn't switch on when the door is opened.	The interior lighting has been switched off permanently. ■ Switch the lighting back on again (see "Settings menu - BrilliantLight").
The following fault appears in the display:  Salt reservoir lid During the programme the warning buzzer is also sounding and the TimeControl in operation indicator lights are flashing.	The salt reservoir lid has not been closed properly. ■ Close the salt reservoir lid.
	If the salt reservoir lid has opened during a programme: ■ Switch the dishwasher off and on again with the ① sensor. ■ Close the salt reservoir lid. ■ Start the programme again.
Detergent residue is left in the dispenser at the end of a programme.	The dispenser was still damp when detergent was added. ■ Make sure the dispenser is dry before adding detergent.
The detergent dispenser lid cannot be closed properly.	Clogged detergent residue is blocking the catch. ■ Clean the detergent from the catch.
At the end of a programme there is a film of moisture on the inside of the door and the interior walls.	This is caused by the drying system and does not indicate a fault. The moisture will dissipate after a while.

Problem solving guide

Problem	Possible cause and remedy
Water remains in the wash cabinet at the end of a programme.	Before rectifying the problem, you must: ■ Switch the dishwasher off using the ① sensor.
	The filter combination in the wash cabinet is clogged. ■ Clean the filter combination (see "Cleaning and care - Cleaning the filters").
	The drain pump or non-return valve may be blocked. ■ Clean the drain pump or the non-return valve (see "Maintenance").
	The drain hose is kinked. ■ Remove any kink from the drain hose.

Noises

Problem	Possible cause and remedy
Knocking noise in the wash cabinet.	A spray arm is knocking against an item in a basket. ■ Interrupt the programme, and rearrange the items which are obstructing the spray arm.
Rattling noise in the wash cabinet.	Items of crockery are insecure in the wash cabinet. ■ Interrupt the programme, and rearrange the items of crockery.
	A foreign object (e.g. a cherry stone) has become lodged in the drain pump. ■ Remove the foreign object from the drain pump (see "Maintenance - Cleaning the drain pump and non-return valve").
Knocking noise in the water pipes.	This may be caused by the on-site installation or the cross-section of the piping. ■ This has no influence on dishwasher function. If in doubt, contact a suitably qualified plumber.

Problem solving guide

Unsatisfactory washing result

Problem	Possible cause and remedy
The dishes are not clean.	The dishes were not loaded correctly. ■ See notes in "Loading the dishwasher".
	The programme was not powerful enough. ■ Select a more intensive programme (see "Programme chart").
	There is some stubborn soiling although most of the crockery is only lightly soiled (e.g. with tea stains). ■ Use the Sensor wash programme option (see "Settings menu - Sensor wash").
	Not enough detergent was dispensed. ■ Use more detergent, or change your detergent.
	Items are blocking the path of the spray arms. ■ Rearrange the items so that the spray arms can rotate freely.
	The filter combination in the base of the wash cabinet is not clean or is not correctly fitted. This may cause the spray arm jets to get blocked. ■ Clean and/or fit the filter combination correctly. ■ Clean the spray arm jets if necessary (see "Cleaning and care - Cleaning the spray arms").
	The non-return valve is open and blocked. Dirty water has flowed back into the wash cabinet. ■ Clean the drain pump and the non-return valve (see "Maintenance").
Smearing appears on glassware and cutlery, there is a bluish sheen on the surface of glassware; film can be wiped off.	The rinse aid dosage is set too high. ■ Reduce the dosage (see "Settings menu - Rinse aid").

Problem solving guide

Problem	Possible cause and remedy
Dishes, cutlery and glasses are not dry or are flecked.	The amount of rinse aid may be insufficient, or the rinse aid reservoir is empty. ■ Replenish the reservoir, increase the dosage or change the brand of rinse aid (see "Before using for the first time - Rinse aid").
	Crockery was taken out of the cabinet too soon. ■ Leave it in for longer (see "Operation").
	Combination tabs have been used which have impaired drying performance. ■ Change your detergent, or replenish the rinse aid (see "Before using for the first time - Rinse aid").
Glassware has a brown or blue tinge, and film cannot be wiped off.	This may be caused by the detergent. ■ Change your detergent.
Glassware is dull and discoloured; film cannot be wiped off.	The glassware is not dishwasher-proof. The surfaces are affected. ■ There is no remedy. Purchase glassware which is dishwasher-proof.
Tea or lipstick stains have not been completely removed.	The wash temperature of the selected programme was too low. ■ Select a programme with a higher wash temperature.
	The bleaching effect of the detergent used is too low. ■ Change your detergent.
Plastic items are discoloured.	Natural dyes e.g. from carrots, tomatoes or tomato sauce may be the cause. The amount of detergent used or its bleaching effect was not sufficient to deal with natural dyes. ■ Use more detergent (see "Operation - Detergent"). Discolouration is irreversible.

Problem solving guide

Problem	Possible cause and remedy
White residue is visible on cutlery and crockery, clouding occurs on glassware; film can be wiped off.	Not enough rinse aid was used. ■ Increase the dosage (see "Settings menu - Rinse aid").
	There is no salt in the salt reservoir. ■ Fill the salt reservoir (see "Before using for the first time - Dishwasher salt").
	An unsuitable combination detergent has been used. ■ Change your detergent. Use a standard liquid, tablet or powder detergent, and fill the salt and rinse aid reservoirs in the dishwasher.
	The water softener is programmed to too low a water hardness level. ■ Programme the water softener to a higher water hardness level (see "Settings menu - Water hardness").
There are rust stains on cutlery.	The affected items are not corrosion resistant. ■ There is no remedy. Purchase cutlery which is dishwasher-proof.
	A programme was not run after dishwasher salt was added. Traces of salt have got into the wash cycle. ■ Always run the <i>Quick wash</i> programme with the <i>Short</i> programme option selected and without any crockery in the dishwasher after adding dishwasher salt.

Cleaning the water inlet filter

A filter is incorporated in the screw connection of the valve on the water inlet hose. The filter must be cleaned when dirty, otherwise insufficient water flows into the wash cabinet.


⚠ The plastic housing of the water connection contains an electrical component.
The housing must not be dipped in water.

Recommendation

If the mains water contains a large amount of insoluble substances, we recommend fitting a large-area filter in the connection between the tap and the water inlet hose threaded union. This filter is available from Miele.

Cleaning the filter:

- Disconnect the dishwasher from the mains supply.
Switch off at the mains socket and withdraw the plug.
- Turn off the tap.
- Unscrew the inlet hose.

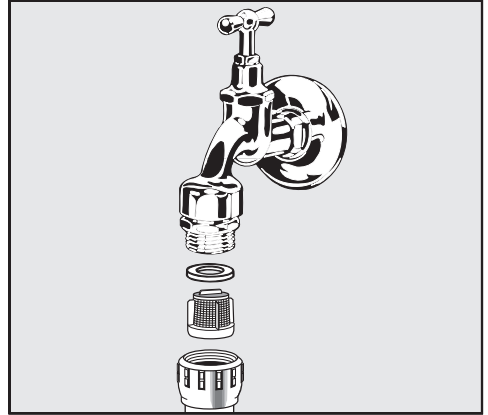

- Carefully remove the washer.
- Withdraw the filter using pointed pliers and rinse clean under running water.
- Replace the filter and washer, making sure they are sitting correctly.
- Reconnect the inlet hose to the tap, making sure it goes on correctly and is not cross-threaded.
- Turn on the tap.

If water leaks out, the inlet hose may not be connected securely or it may have been screwed on at an angle.


- Unscrew and reconnect the inlet hose correctly.

Maintenance


Cleaning the drain pump and non-return valve

If the water has not been pumped away at the end of a programme, the drain pump or the non-return valve might be blocked. They are, however, easy to clean.

- Disconnect the dishwasher from the mains supply. Switch off at the mains socket and withdraw the plug.
- Take the filter combination out of the wash cabinet (see "Cleaning and care - Cleaning the filters").
- Scoop the water out of the cabinet using a suitable container or utensil.

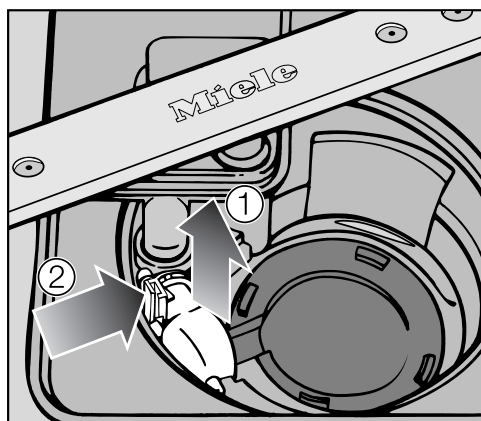

- Press the catch for the non-return valve inwards ①.
- Lift out the non-return valve ②, and rinse well under running water.
- Remove all foreign objects from the non-return valve.

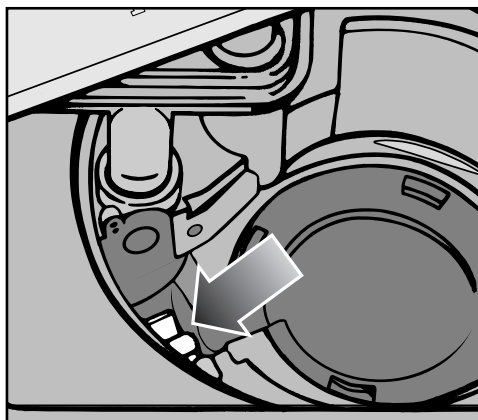

The drain pump is situated under the non-return valve (see arrow).

- Remove all foreign objects from the drain pump (watch out for glass or bone splinters which are particularly difficult to detect and could cause injury). Turn the drain pump impeller by hand to check that there are no more obstructions. You will feel a little resistance when you turn the impeller.
- Carefully refit the non-return valve and secure it with the catch.

⚠ Ensure that the catch engages correctly.

⚠ Be careful not to damage any delicate components when cleaning the drain pump and the non-return valve.

Repairs

In the event of any faults which you cannot remedy yourself, please contact Miele.

The contact details for Miele are given at the back of these instructions.

When contacting Miele, please quote the model and serial number of your dishwasher, both of which are shown on the data plate on the right-hand side of the door.

Warranty

The manufacturer's warranty for this appliance is 2 years.

For further information, please refer to your warranty booklet.

Optional accessories

Dishwasher detergent and rinse aid, as well as cleaning and care products, are available as optional accessories. All the products are designed for use with Miele dishwashers.

These and many other useful products can be ordered via the internet at www.miele-shop.com (depending on country) or from Miele (see end of this booklet for contact details).



Dishwasher detergent, rinse aid and salt

When you decided to buy a Miele dishwasher, you chose excellent quality and performance. However, ensuring that your dishwasher always delivers the best possible results will also depend on your choice of dishwasher detergent, rinse aid and dishwasher salt, as cleaning results can vary depending on the brand used.

With Miele CareCollection products, you can be sure of optimum results as these products have been specially designed for Miele dishwashers.

Detergent tabs

- sparkling results even with stubborn food deposits
- combination product with other components such as rinse aid, salt and glass protection additives
- phosphate-free - safe for the environment
- water-soluble wrapping - no need to unwrap

Powder detergent

- with active oxygen for thorough cleaning
- with enzymes which are effective even in low temperature programmes
- with glass protection against corrosion

Rinse aid

- for gleaming glasses
- helps crockery to dry
- with glass protection against corrosion
- specially designed cap for precise, easy dispensing

Dishwasher salt

- prevents limescale on crockery and in the appliance
- extra coarse-grained

Dishwasher care products

Miele cleaning and care products provide optimum care for your dishwasher.

Dishwasher cleaner

- cleans the dishwasher effectively and thoroughly
- removes grease, bacteria and unpleasant odours
- ensures excellent dishwashing results

Dishwasher descaler

- removes heavy limescale deposits
- mild and gentle with natural citric acid

Dishwasher conditioner

- removes odours, limescale and light deposits
- maintains the elasticity and leak tightness of the seals

Accessories

Some accessories may be supplied as standard, depending on model.

Cappuccinatore insert

The Cappuccinatore insert can be used for cleaning the individual parts of the Miele Cappuccinatore in the dishwasher.

Cutlery basket

The cutlery basket is placed in the lower basket and can be used to wash additional items of cutlery.

Glass rail

This rail is designed to hold glasses with stems securely in the lower basket.

Electrical connection

This dishwasher is supplied with a mains cable with moulded plug ready for connection to an AC single phase supply, (230 - 240 V 50 Hz for NZ and Australia) via a suitable switched socket.

 The electrical socket must be easily accessible after the dishwasher has been installed. Do not connect the dishwasher to the mains electricity supply by an extension lead. Extension leads do not guarantee the required safety of the appliance (e.g. danger of overheating).

Do not connect the appliance solely to an inverter such as those used with an autonomous energy source e.g. **solar power**. When switched on, peak loads in the system can cause the safety switch-off mechanism to be triggered. This can damage the electronic unit. The machine must not be used with so-called **energy-saving devices** either. These reduce the amount of energy supplied to the machine, causing it to overheat.

 Before connecting the appliance, check that the connection data on the data plate (voltage, frequency, rated load and fuse rating) matches the mains electricity supply. If in any doubt, consult a qualified electrician.

The data plate is located on the right-hand side of the door.

 All electrical work must be carried out by a suitably qualified and competent person in strict accordance with current local and national safety regulations.

For extra safety, it is advisable to install a residual current device (RCD), with a trip current of 30 mA.

The Miele Waterproof system

As long as your dishwasher has been installed correctly, the Miele waterproof anti-leak system will protect you from water damage.

Connection to the water supply

 Water in the dishwasher must not be used as drinking water.

 **IMPORTANT** Australia and New Zealand

This appliance must be installed according to AS/NZS 3500.1. Back flow prevention is already integrated in the appliance.


- The dishwasher may be connected to a cold or hot water supply, max. 60 °C.
We would only recommend connection to a hot water supply if it is economical, e.g. a solar powered supply. When connected to a hot water supply, all programme stages which would otherwise be carried out with cold water will be carried out with hot water.
- The SolarSave programme (if available) requires a hot water supply of between 45°C (minimum) and 60°C (maximum).
The higher the water intake temperature, the better the cleaning and drying results.

Water connection

- A tap with a 3/4 " male thread must be provided on site.
- Connection to the mains water supply should only be carried out by a qualified and competent person in strict accordance with national and local safety regulations.
The tap should be easily accessible once the appliance has been built in.
- The water pressure (flow pressure at the take-off point) must be between 30 and 1000 kPa (0.3 and 10 bar). If the water pressure is lower than this, the fault message *Water intake* will appear in the display (see "Problem solving guide"). If the water pressure is too high, a pressure reducing valve must be fitted.

After connecting the dishwasher to the water supply, check that all plumbing connections are watertight.

⚠ To avoid any damage to the appliance, the dishwasher must only be connected to a fully vented plumbing system.

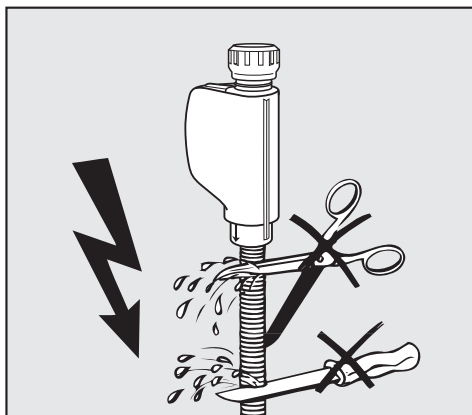

⚠ The inlet hose must not be shortened or damaged in any way as it contains electrical components (see illustration).

Drainage

- The appliance drainage system is fitted with a non-return valve which prevents dirty water from flowing back into the dishwasher via the drain hose.
- The dishwasher is supplied with approx. 1.5 m of flexible drain hose with an internal diameter of 22 mm.
- The drain hose can be extended using a connection piece to attach a further length of hose. The drainage length must not be longer than 4 m, and the delivery head must not exceed 1 m.
- If the hose is to be directly fitted to the drainage outlet on site, use the hose clip supplied (see installation diagram).
- The hose can be directed to the left or the right of the appliance.
- The on-site connector for the drain hose can be adapted to different widths of hose. If the connector protrudes too far into the drain hose, it will need to be shortened. Otherwise the drain hose may become blocked.
- The drain hose must not be shortened.


 Make sure that there are no kinks in the hose, and that it is not squashed or stretched.

After commissioning the appliance, ensure that the water outlet does not leak.

Venting the drainage system

If the on-site drain connection is situated lower than the guide path for the bottom basket rollers in the open door, the drainage system must be vented. Otherwise a siphoning effect during a programme can cause the appliance to empty itself of water.

- To vent it: Open the dishwasher door fully.

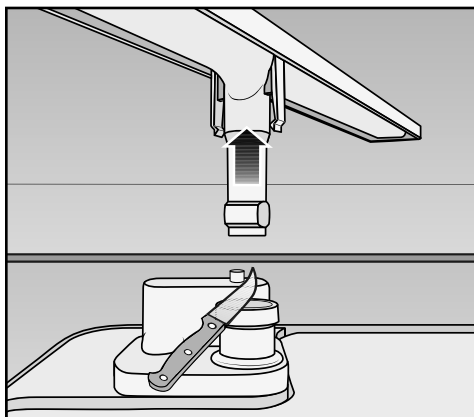

- Pull the lower spray arm firmly upwards to remove it.
- Cut off the top of the vent valve in the wash cabinet.

Technical data

Dishwasher model	Standard	XXL
Height	80.5 cm (adjustable + 6.5 cm)	84.5 cm (adjustable + 6.5 cm)
Height of building-in recess	Min. 80.5 cm (+ 6.5 cm)	Min. 84.5 cm (+ 6.5 cm)
Width	59.8 cm	59.8 cm
Width of building-in recess	60 cm	60 cm
Depth	57 cm	57 cm
Weight	Max. 53 kg	Max. 59 kg
Voltage	See data plate	
Rated load	See data plate	
Fuse rating	See data plate	
Power consumption when switched off	0.30 W	0.30 W
Power consumption when not switched off	2.50 W	2.50 W
Test certificates awarded	See data plate	
Water pressure (flow rate)	30 - 1000 kPa (0.3 - 10 bar)	30 - 1000 kPa (0.3 - 10 bar)
Hot water connection	Up to max. 60 °C	Up to max. 60 °C
Delivery head	Max. 1 m	Max. 1 m
Drainage length	Max. 4 m	Max. 4 m
Mains cable	Approx. 1.7 m	Approx. 1.7 m
Capacity	14 place settings*	14/15 place settings*

* Depending on model

Settings menu for changing standard settings

Opening the Settings menu

- Switch the dishwasher on with the ① sensor if it is switched off.

The main menu will appear in the display.

If the Memory function is activated, the programme menu for the programme last selected will be displayed instead (see "Settings - Memory"). If this is the case, use the ↵ sensor to get to the main menu.

To learn about the display, read the section with the same name.

- Select the Settings  option.

The display will change to show the Settings  menu.

- Select the option you want to change.

Press the  sensor to call up more information about the programme currently selected.

Sub-menu options which have already been selected will have a tick ✓ beside them.

- To exit a sub-menu again, use the ↵ sensor.

The display will revert to the menu above.

Settings menu

Language

The display can be set to appear in one of several different languages.

You can change the language in the display via the Language  sub-menu.

- Select the language you want and confirm this with OK.

Some languages also have a country option to select.

- If so, select the appropriate country and confirm your selection with OK.

The flag after the word Language  acts as a guide if a language which you do not understand has already been set.

If this is the case, keep selecting the option which has a flag after it until you reach the Language  sub-menu.

Time of day

The current time of day must be set before you can use the Delay start option.

Setting the clock format

You can select either a 24-hour or 12-hour clock.

- Select the Clock format option.
- Select the setting you want and confirm with OK.

Setting the time of day

- Select the Set option.
- Set the hour with the $\vee/\wedge$ arrow sensors and confirm with OK.
Then set the minutes and confirm with OK.

The time of day has now been saved.

Water hardness

This appliance is fitted with a water softener.

- The dishwasher must be programmed for the water hardness in your area.
 - Your local water authority will be able to advise you of the water hardness level in your area.
 - Where the water hardness fluctuates, e.g. between 1.8 and 2.7 mmol/l (10 - 15 °d - German scale), always programme the dishwasher to the higher value (2.7 mmol/l or 15 °dH in this example).
- Select the water hardness level for your area and confirm your selection with OK.

A tick ✓ will appear beside the water hardness which has been set.

°d	mmol/l	°f	Display
1	0.2	2	1
2	0.4	4	2
3	0.5	5	3
4	0.7	7	4
5	0.9	9	5
6	1.1	11	6
7	1.3	13	7
8	1.4	14	8
9	1.6	16	9
10	1.8	18	10

°d	mmol/l	°f	Display
11	2.0	20	11
12	2.2	22	12
13	2.3	23	13
14	2.5	25	14
15	2.7	27	15
16	2.9	29	16
17	3.1	31	17
18	3.2	32	18
19	3.4	34	19
20	3.6	36	20
21	3.8	38	21
22	4.0	40	22
23	4.1	41	23
24	4.3	43	24
25	4.5	45	25
26	4.7	47	26
27	4.9	49	27
28	5.0	50	28
29	5.2	52	29
30	5.4	54	30
31	5.6	56	31
32	5.8	58	32
33	5.9	59	33
34	6.1	61	34
35	6.3	63	35
36	6.5	65	36
37-45	6.6-8.0	66-80	37-45
46-60	8.2-10.7	82-107	46-60
61-70	10.9-12.5	109-125	61-70

Settings menu

Rinse aid

You can adjust the rinse aid dosage for best results.

The rinse aid dosage can be set from approx. 0-6 ml.

The factory default setting is 3 ml.

The dosage can turn out to be higher than the set value due to the automatic adjustment of the *Sensor wash* programme.

If spots appear on crockery and glassware:

- Increase the rinse aid dosage.

If clouding or smearing appears on crockery and glassware:

- Decrease the rinse aid dosage.

- Use the $\vee/\wedge$ arrow sensors to set the rinse aid dosage and confirm with OK.

Consumption (EcoFeedback)

You can programme the dishwasher so that the energy and water consumption of the currently selected programme appears in the display. The estimated consumption can be displayed before the programme starts and the actual consumption can be displayed after the programme has finished.

In this menu you can also call up the total energy and water used in all previous dishwasher programmes (see "Caring for the environment - EcoFeedback consumption indicator").

Consumption indicator

- Select the *Display consumption* option.
- Select the setting you want and confirm with OK.

Total consumption

You can display the values for *Energy* and *Water*.

- Select the *Total consumption* option.

You can also reset the values for the total consumption to 0.

- Select the *Reset* option.
- Select the *Yes* option.
- Confirm the message with OK.

The values are now reset to 0.

Sensor wash

You can adjust the **Sensor wash** programme so that it will remove stubborn soiling in a lightly soiled load.

- Select the setting you want and confirm with **OK**.

AutoOpen

At the end of programmes with a drying phase (except **ExtraQuiet**) the door will open automatically a little in order to help the drying process (see "Programme chart").

In the **ECO** programme the door will open during the drying phase.

This function can be deactivated if wished.

- Select the setting you want and confirm with **OK**.



If you have deactivated the automatic door opening function but would still like to open the door at the end of the programme, then make sure that you open the door fully. Otherwise steam from the dishwasher could damage the edge of the worktop because the fan is no longer running.

Knock2open

You can choose whether the door should open with 1 or 2 knocks.

- Select the setting you want and confirm with **OK**.

This function can also be disabled, in which case the door has to be fitted with a handle to open it.

BrilliantLight

This dishwasher has interior lighting. When the door is open, the lighting will switch off automatically after 15 minutes.

The interior lighting can be switched off permanently.

- Select the setting you want and confirm with **OK**.

Settings menu

Optimise standby

The dishwasher is supplied with the Optimise standby function switched on as standard.

To save energy, the dishwasher will switch off automatically a few minutes after the last time a sensor has been pressed or after the end of a programme.

The dishwasher will not switch off in the event of a fault.

Optimise standby can be switched off if you prefer. If you do this, the duration before the dishwasher switches off increases to 6 hours. Doing this will increase energy consumption.

- Select the setting you want and confirm with **OK**.

Switching off the refill reminders

If you only ever use multi-function combination products containing salt and rinse aid in your dishwasher, you can switch the refill reminders for salt and rinse aid off if you wish. Doing so will not affect the DetergentAgent function (see "Programme options - Detergent-Agent").

- Select the setting you want and confirm with **OK**.

If you switch to using detergent that does not contain salt or rinse aid, it is important to remember to add dishwasher salt and rinse aid and to switch the reminders back on.

Check filters

You can adjust the interval at which the message to remind you to check the filters appears.

You can set an interval of between 30 and 60 programme cycles.

The "Check filters" message is set at the factory to appear after every 50 programme cycles.

- Select the interval you want and confirm this with **OK**.

Change main menu

You can change the order of the programmes in the programme selection menu and also enter your favourite programmes into the first two programme places.

- Select the programmes you want to place in the first and second position of the programme selection menu.
- Confirm each position with OK.

The programmes you have selected will then appear together in the display.

- If you are happy with the order in which they are shown, confirm with OK.
- To change the order in which they are shown, select **Change main menu**.

Enter the settings again.

Save extras

Additional programme options can be added to some programmes, e.g. **Short** (see "Programme options - Extras").

You can use the **Save extras** option to save settings you have chosen for a particular programme so that they are automatically selected when you run the programme in the future.

The dishwasher is delivered with this function deactivated.

- Select the setting you want and confirm with OK.

Temperature

The temperature can be displayed in °C/Celsius or °F/Fahrenheit.

The factory default setting is °C.

- Select the option you want and confirm with OK.

Brightness

There are seven different display brightness settings.

- Select the brightness you want and confirm this with OK.

Settings menu

Volume

A sequence of audible tones will sound at the end of the programme or if there is a fault as long as the buzzer has been activated.

Buzzer in the event of a fault

The buzzer in the event of a fault will sound four times at intervals with a short pause between each set of tones.

The buzzer which sounds when there is a fault cannot be deactivated.

Buzzer at the end of a programme

The buzzer at the end of a programme will sound four times at intervals with a short pause between each set of tones.

Buzzer tones

The volume of the tone at the end of the programme can be selected in seven stages or switched off.

- Select the volume you want using the *Quieter* and *Louder* options, or switch the buzzer off.
- Confirm with OK.

Night time buzzer tone

You can select a different volume for the buzzer at night, or switch it off.

- Select the volume you want for the night time buzzer using the *Quieter* and *Louder* options, or switch the night time buzzer off.
- Confirm with OK.

Night time

You can select the times for night time to begin and end.

- Select the *Start at* option.
- Use the $\vee/\wedge$ arrow sensors to set the time in hours and minutes for the night time to begin and confirm both with OK.
- Select the *Finish at* option.
- Use the $\vee/\wedge$ arrow sensors to set the time in hours and minutes for the night time to end and confirm both with OK.

Keypad tone

An audible tone sounds each time a sensor is pressed.

The volume for the keypad tone can be set in seven stages, or switched off.

- Select the volume you want using the *Quieter* and *Louder* options, or switch the keypad tone off.
- Confirm with OK.

Memory

With the Memory function activated, the dishwasher will save the last programme selected. When you switch the dishwasher off and back on again, the last programme selected will appear in the display instead of the ECO programme.

- Select the setting you want and confirm with **OK**.

Version info

You can call up the electronic software version of your dishwasher for technical support purposes.

- Confirm the display with **OK**.

Settings menu

EcoStart

In order to run your dishwasher in the most economical way, you can use the EcoStart option to take advantage of your electricity supplier's time variable tariffs (see "Programme options - Delay start with EcoStart - EcoStart").

With this option selected, your dishwasher will start automatically at your electricity supplier's cheapest tariff times.

To use this option, you must first set up to three electricity tariff time zones in which the dishwasher can start. You can allocate different priorities to these time zones. The time with the cheapest electricity tariff will be given Priority 1.

Contact your electricity supplier to find out the times of the cheapest electricity tariffs.

Once the electricity tariff times have been set, you can use the EcoStart option to set the latest finish time required for each programme.

The dishwasher will then start automatically in the cheapest electricity tariff time and the programme will end at the latest at the finish time set.

Setting the electricity tariff times

Before you can use the EcoStart option, you must set at least one electricity tariff time.

- Select an electricity tariff time from T1-T3 to set.

The start of the electricity tariff time selected will appear in the display and the hour number block will be highlighted.

- Use the $\nabla/\wedge$ arrow sensors to set the hours and minutes for the start time and confirm both with OK.

The end of the electricity tariff time selected will appear in the display and the hours number block will be highlighted.

- Use the $\nabla/\wedge$ arrow sensors to set the hours and minutes for the end time and confirm both with OK.

The electricity tariff time will be saved and its priority will appear in the display.

- Select the priority you want and confirm this with OK.

- Confirm the message with OK.

The electricity tariff time will be activated.

Changing the electricity tariff times

You can change the start, finish or priority of an electricity tariff time.

- Select an electricity tariff time from T1-T3 to change.
- Select the setting you want to change.
- Use the $\vee/\wedge$ arrow sensors to change the setting and confirm with OK.

The change will be saved.

Deleting the electricity tariff times

- You can delete the settings for an electricity tariff time and in doing so deactivate the *EcoStart* option for this time zone.
- Select an electricity tariff time from T1-T3 to delete.
- Select *Delete*.
- Confirm the query *Delete tariff T1?* with *Delete*.

The settings for the electricity tariff time selected will be reset.

- Confirm the message with OK.

The electricity tariff time has now been deleted.

Settings menu

Showroom programme

For demonstration purposes only.

The dishwasher is fitted with various demonstration programmes for showroom use.

- Demo mode
Programme for use in showrooms to demonstrate the TimeControl function.
- Demo with sound
This programme activates the circulation pump to demonstrate the sound of the dishwasher.
- Demo AutoOpen
The door will open automatically.
- BrilliantLight
The interior lighting is on constantly.

Factory default settings

You can reset all settings to the factory default settings.

You will be given the choice of Appliance settings reset or Main menu.

- Select the one you would like to reset.
- Confirm the message Reset settings? or Reset main menu? with Yes.

Closing the Settings menu

To close the Settings  menu, use the  sensor. This will take you back to the main menu.

Miele Australia Pty. Ltd.

ACN 005 635 398

ABN 96 005 635 398

Miele**Miele Center and Head Office Melbourne:**

1 Gilbert Park Drive

Knoxfield, VIC 3180

Miele Center and Office Melbourne:

206-210 Coventry Street

South Melbourne, VIC 3205

Miele Center and Office Sydney:

3 Skyline Place

Frenchs Forest, NSW 2086

Miele Center and Office Brisbane:

39 Harvey Street North

Eagle Farm, QLD 4009

Miele Center and Office Adelaide:

83-85 Sir Donald Bradman Drive

Hilton, SA 5033

Miele Center and Office Perth:

205-207 Stirling Highway

Claremont, WA 6010

**www.miele.com.au****Miele New Zealand Limited**

IRD 98 463 631

Head Office:

Level 2, 10 College Hill

Freemans Bay, Auckland 1011

Miele Center Auckland:

8 College Hill

Freemans Bay, Auckland 1011

Telephone:

0800 4 MIELE (0800 464 353)

www.miele.co.nz**Miele Global Headquarters****Germany****Miele & Cie. KG**

Carl-Miele-Straße 29

33332 Gütersloh

Federal Republic of Germany

G 6990 / G 6995



en-AU, NZ

M.-Nr. 09 867 890 / 04