 


# Palsonic

The AUSTRALIAN Company

## 100cm(40") LED TV WITH DVB-T

### INSTRUCTION MANUAL PT4088F

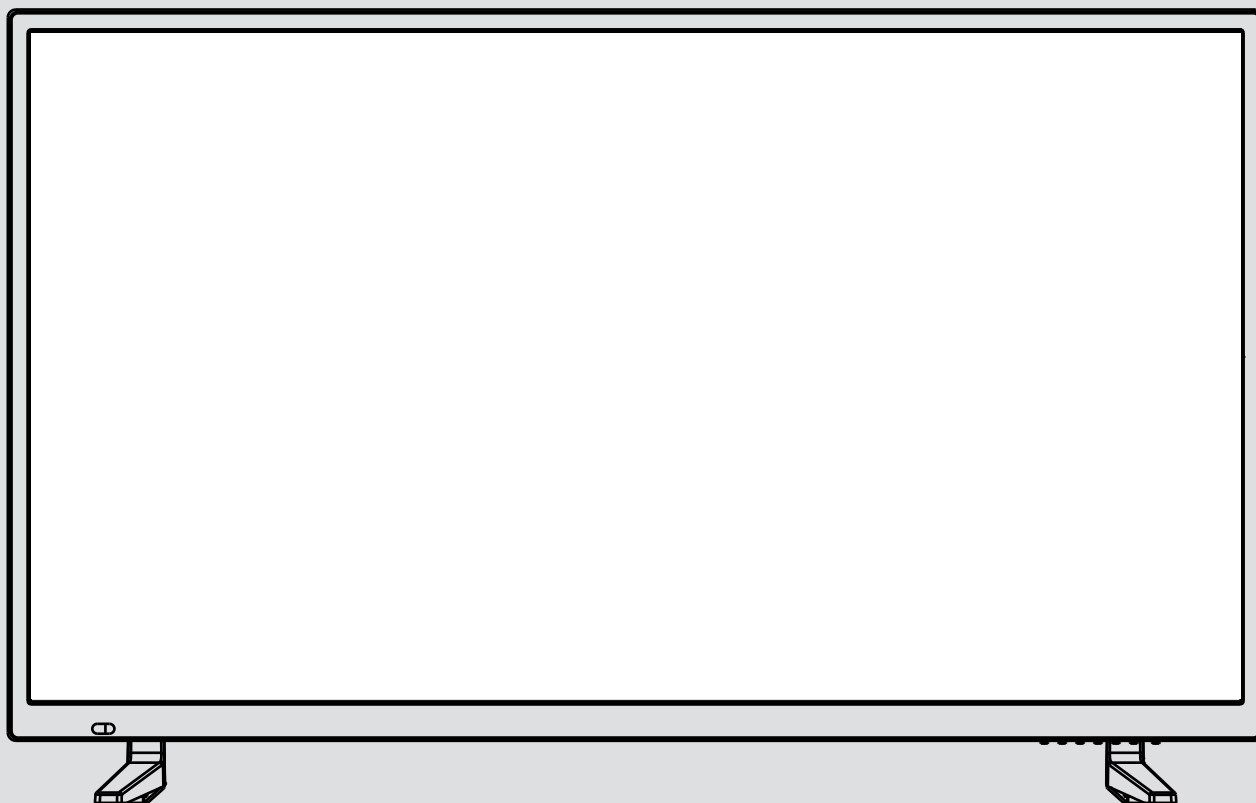

\*Where available



\*Where available



# Contents

---

|  |     |
|--|-----|
| Power Supply.....                        | 1   |
| Installation.....                        | 2   |
| Use and Maintenance.....                 | 3   |
| Important Safety Instructions .....      | 4-5 |
| Overview(Front View) / Accessories ..... | 6   |
| Overview(Back View) .....                | 7   |
| Remote control .....                     | 8-9 |

## OSD Menu

|                              |       |
|------------------------------|-------|
| 1. First Time Setup .....    | 10    |
| 2. PICTURE Menu .....        | 11-12 |
| 3. SOUND Menu .....          | 12-13 |
| 4. CHANNEL Menu .....        | 13-16 |
| 4. LOCK Menu .....           | 17-18 |
| 5. SETUP Menu .....          | 18-21 |
| Multimedia Operation .....   | 22-25 |
| Simple Troubleshooting ..... | 26    |
| Specifications .....         | 27    |

 
# Power Supply

---

## Warnings


Do not touch the power plug with wet hands.

- Doing so may result in electric shock.

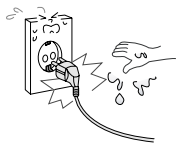


Do not use a damaged power cord or plug or a loose outlet.

 - Doing so may result in fire or electric shock.

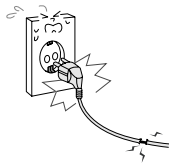

Do not plug several devices into the same outlet.

 - Doing so may cause the outlet to overheat and start a fire.




Insert the power plug fully into the outlet.

- A loose or improperly inserted power plug may result in fire.




Do not bend the power cord excessively or place heavy objects on it.

 - Doing so may result in fire or electric shock.



Be sure to ground the unit.

 - Failing to do so may lead to electric shock when a short circuit or overload occurs. If necessary, install a ground fault circuit breaker. Never ground to a telephone line, lightning rod, or metal gas pipe. (Doing so may result in fire, electric shock, or other hazards.)




## Cautions

---

When disconnecting the power cord from an AC outlet, always grasp it by the plug.

 - Pulling on the cord can damage the internal wire and may result in fire.

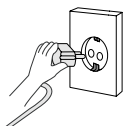

Always unplug the unit before cleaning.

- Not doing so may result in fire or electric shock.



The purpose of these precautions is to ensure user safety and prevent property damage.

Be sure to read and observe all safety precautions.




# Installation
 
## Warnings


Do not place containers with liquids such as flower vases, soft drink cans, or medicine bottles or small metallic objects on top of the unit.

- If liquid enters the unit or any metal object falls into the unit, it may result in short-circuit, fire, or electric shock.

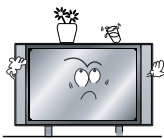

Do not place the unit where it is exposed to rain, excessive moisture or grease.

 - Doing so may result in fire, electric shock, malfunction, or deformation.

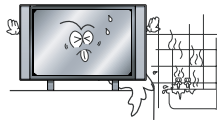

Do not use or store flammable or combustible materials near the unit.

- Doing so may result in fire or explosion.



 
Do not place the unit on an unstable surface, such as a wobbly stand or sloped table, or on any surface whose area is smaller than the bottom area of the unit.

- If a child climbs on the unit, it could topple and fall onto the child, resulting in serious injury to the child or damage to the unit. Place the unit on a flat stable surface.




Do not place a burning candle, burning anti-mosquito incense, or lighted cigarette on top of the unit. Do not place the unit near any heat source such as a fireplace or space heater.

- Doing so poses a serious risk of fire.

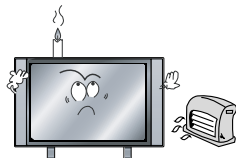


Do not place the unit in a poorly ventilated enclosure, such as a cabinet.

 - Doing so poses a serious risk of fire.

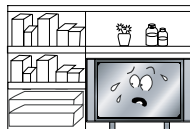

Do not run power cords near heat-producing appliances such as radiators, stoves, or irons.

 - The excessive heat could melt the insulation and expose live wires, resulting in fire or electric shock.



Install the antenna away from high-voltage power lines and communication cables and make sure it is installed securely.


- If the antenna touches a power line, contact with the antenna could result in fire, electric shock, serious injury, or death.



## Cautions

 
Install the unit at an adequate distance from the wall to ensure sufficient ventilation.

- If the temperature inside the unit rises, it may result in fire.



Do not cover the unit with a tablecloth, curtain, or other material.

 - If the temperature inside the unit rises, it may result in fire.




Be sure to place the unit on a level surface.



### ⚠ Warnings

 Form a drip loop where the coaxial antenna cable enters your building to prevent rainwater from traveling along the cable and coming in contact with the antenna input terminal.

- If rainwater finds its way inside the unit, it may result in fire or electric shock.

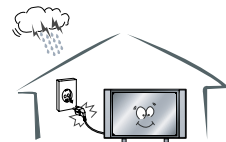

- The following precautions are divided into "Warnings" and "Cautions".

⚠ Warning : Ignoring this precaution may result in death or serious injury.


⚠ Caution : Ignoring this precaution may result in injury or property damage.

# Use and Maintenance
 
## Warnings


Disconnect the power cord from the wall outlet during an electrical storm.

- Not doing so may result in fire or electric shock.

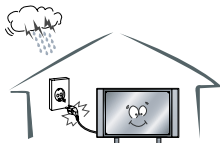


Do not insert any metal objects, such as a screwdriver, paper clip, or bent wire into the ventilation openings or A/V terminals.

 - Doing so poses a serious risk of fire or electric shock.

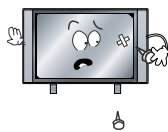


Do not allow children to climb or hang on the unit.

 - The unit could topple over onto a child and result in serious injury.

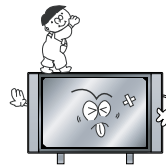

Never disassemble or modify the unit in any way. Do not attempt to service the unit yourself.

 
- Doing so may result in fire or electric shock. If the unit requires repair, contact the service center.

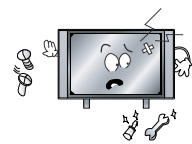

## Cautions


When not using the unit for long periods of time, disconnect the power cord from the wall outlet.

 - Dust could accumulate over time on the unit and cause it to generate heat and ignite, or deteriorate insulation, which in turn may result in an electrical fire.



When moving the unit, be sure to turn off the unit and unplug the power cord from the wall outlet.

 - Moving the unit with the power cord connected to the outlet may cause damage to the cord, resulting in fire or electric shock.

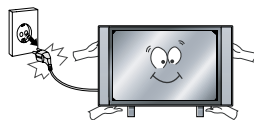

If you notice any unusual odors or smoke around the unit, immediately disconnect the unit from the outlet and contact the service center.

- Failure to do so may result in fire or electric shock.



### ⚠ Warnings

 
When removing the batteries from the remote control, make sure children do not swallow them. Keep the batteries out of the reach of infants and children.

- If a child has swallowed a battery, seek medical attention immediately.



Always use two or more people to lift or move the unit.

- If the unit is dropped, it could be damaged or otherwise cause injury.




Wipe off any moisture, dirt, or dust on the power plug pins with a clean dry cloth.

- Failure to do so may result in fire or electric shock.




It is advisable to clean the interior of the unit at least once a year. Contact the store of purchase or service center for information.

 - Continuing to use the unit without cleaning off the dust build-up inside it may result in fire or electric shock.

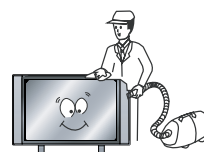

Always turn off the unit and unplug the power cord when cleaning the unit. Use a soft dry cloth to clean the unit.

 - Never clean with industrial strength polish, wax, benzene, paint thinner, air freshener, lubricant, detergent, or other such chemicals. Also, do not clean with a damp cloth.



# Important Safety Instructions

---

## Warnings and Precautions

To prevent any injuries, the following safety precautions should be observed in the installation, use, servicing and maintenance of this equipment.





Before operating this equipment, please read this manual completely, and keep it for future reference.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Do not clean with strong chemical agents
- 7) The appliance is intended for household use only, and not for commercial or industrial use.
- 8) Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
- 9) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 10) Care required with the use of this apparatus in tropical climates. Do not use the appliance under temperatures over 40°C.
- 11) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 12) Only use the attachments/accessories specified by the manufacturer.
- 13) Use only with a stand, or bracket, specified by the manufacturer, or sold with the apparatus.

# Important Safety Instructions

- 14) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 15) Do not operate the unit if it is not working normally or has been damaged in anyway.  
Turn the unit off, unplug it from the power source and consult service personnel. Do not attempt to service this unit yourself.
- 16) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 17) Do not listen to headphones at high volumes; the excessive sound pressure from earphones can cause hearing loss.
- 18) Keep the player clean and never store it next to a heat source or in dirty, humid or wet places. Keep it out of direct sunlight.
- 19) Press the Player's button gently. Pressing them or the screen too hard can damage the player.
- 20) Do not subject the product to harsh impacts. Do not drop the appliance. This may result in damage to the product.  
Do not touch, push or rub the surface of the LCD screen with any sharp or hard objects. When the surface of the LCD screen becomes dusty, wipe it gently with an absorbent cotton cloth or other soft material like chamois. Do not use acetone, toluene or alcohol to clean the surface of the screen. These chemicals will cause damage to the surface.
- 21) Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

**WARNING:** To reduce the risk of fire or electric shock, this apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

|  |  |
|--|--|
|  <div><b>CAUTION</b><br/>RISK OF ELECTRIC SHOCK<br/>DO NOT OPEN</div>  |  <p>The lightning flash with an arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p> |
| <p><b>CAUTION:</b> TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK), NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>  |  <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>  |

5B-En

Apparatus with Class I construction shall be connected to a Mains socket outlet with a protective earthing connection.

## WARNING

**TO PREVENT DAMAGE WHICH MAY RESULT IN FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

 
### Caution :

- These servicing instructions are for use by qualified service personnel only.  
To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

# Overview

---


## Front View

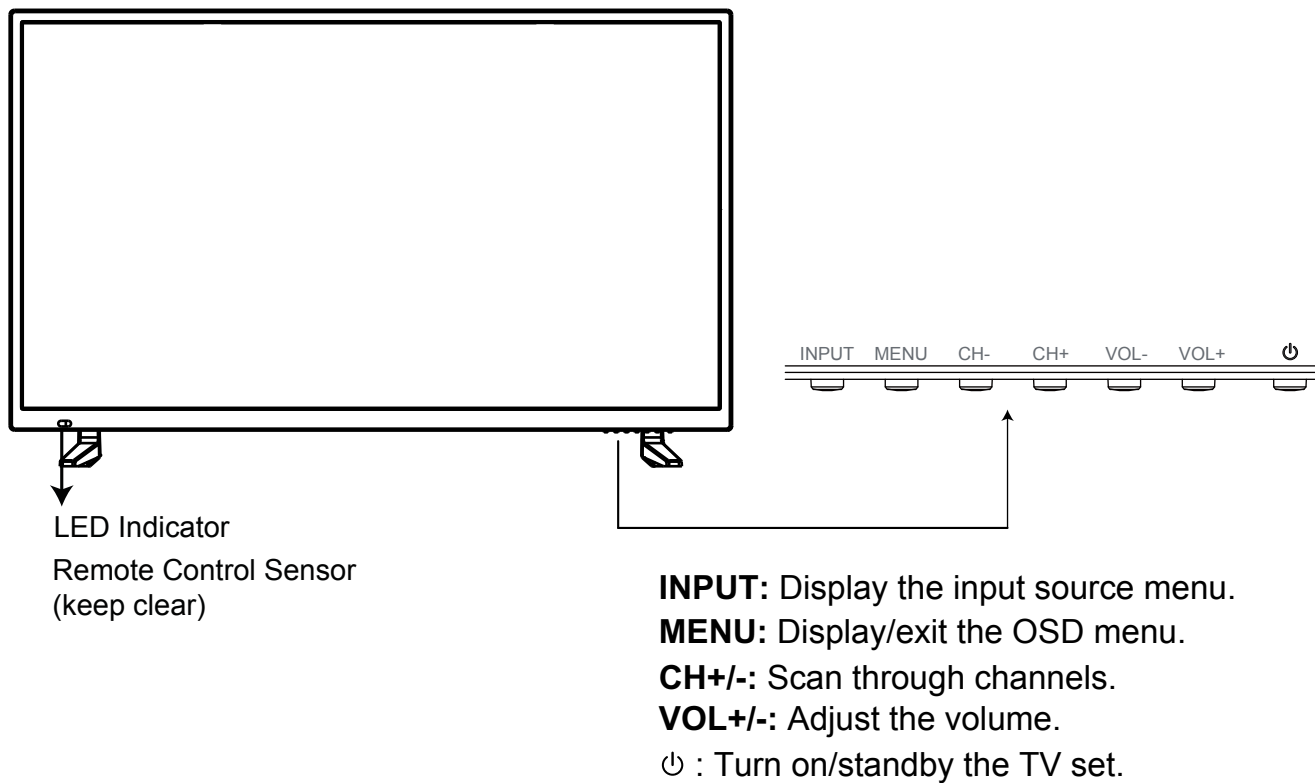

## Accessories

---

 
- The configuration of the components may look different from the following illustration.

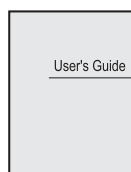

User's Guide



 
Remote Control



Batteries (2xAAA)

# Overview
 
## Back View

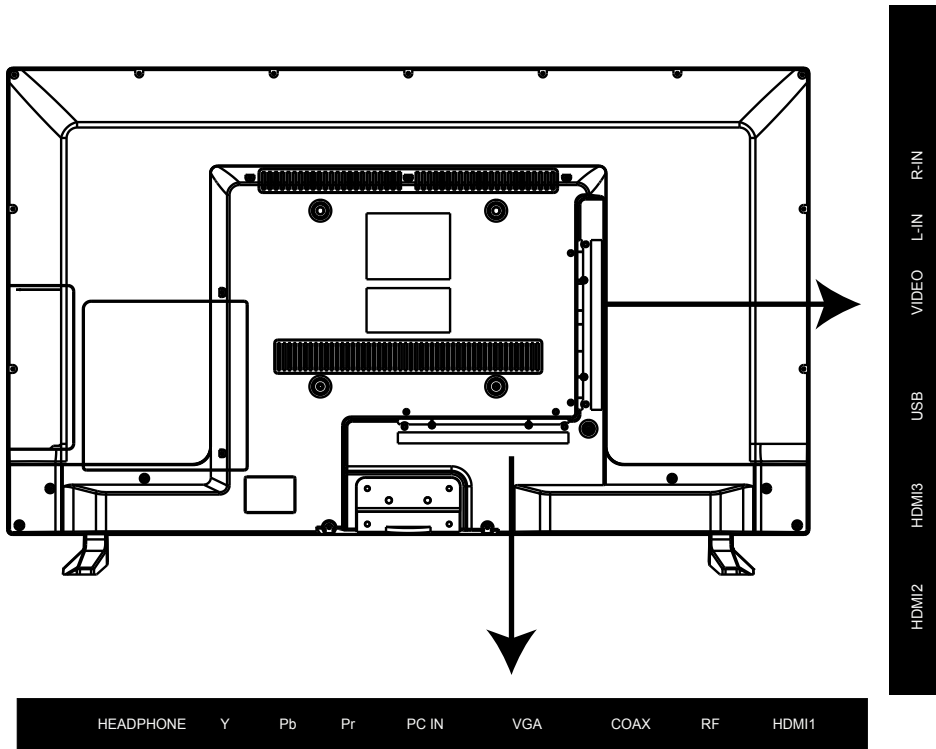

**AC POWER IN:** Connect to power.

**HEADPHONE:** Connect it to your headphone or other audio equipment.

**YPbPr:** Connect them to the YPbPr video output terminal of DVD.

**PC IN:** Connect it to the audio output terminal of PC.

**VGA:** For PC display. Connect it to the D-Sub 15 pins analog output connector of the PC.

**COAX:** Digital output to AV receiver.

**RF:** Connect antenna or cable 75 Ohm coaxial to receive TV signal.

**HDMI1/2/3:** Connect it to the HDMI of DVD or other equipment.

**USB:** USB jack for Recording and Media.

**Video:** Connect it to video output terminal of DVD.

**L/R in:** Connect them to audio output terminals of DVD, shared with YPbPr.

# Remote Control

## ● Functions of remote control buttons

The remote control is using Infra-Red (IR). Point it towards the front of the TV. The remote control may not work correctly if it is operated out of range or out of angle.



 : Turn the TV on/standby.

MUTE: Press to mute the sound, press again or press VOL+ to unmute.

SLEEP: Standby timer.

AUTO : Auto adjust in PC mode.

FAV: Display the favorite channel list.

FAV+/-: Scan the favourite channel.

EPG: To show the Electronic Program Guide during no-menu state only in DTV mode.

TEXT: Turn the teletext display.

HOLD: Hold or carry on the current subpage.

TV/RADIO: To switch to TV or radio state in DTV mode.

SUBTITLE: Turn on/off the subtitle display in DTV mode and DVD mode.

INDEX: Go to index.

SIZE: Press to see top half of page double size, Press again to see the bottom half of page double size. Press again for normal size.

REVEAL: Reveal any hidden text.

SUBPAGE: Press to enter subpages, press again to cancel.

INPUT: Press to display the input source menu.

DISPLAY: Press to display the current mode's information.

\* In DTV mode, press display one time, display the basic information. Press a second time, display the detail information. Press a third time to exit.

MENU: System setup menu.

EXIT: Exit the OSD menu.

### NUMBER BUTTONS

Press 0-9 to select a TV channel directly when you are watching TV.

LIST: Display channel list.



Return to the previous channel viewed.

CURSOR KEYS (▲/▼/◀/▶ / OK)

Allows you to navigate the on-screen menus and adjust the system settings to your preference.

# Remote Control

---



VOL +/-: Adjust the volume.  
 CH▲/▼: Scan through channels.  
 ASPECT: Change the screen display mode.  
 AUDIO: Change the audio language in DTV mode.  
 PMODE: Select the picture mode.  
 SMODE: Select the sound mode.

## Media

▶▶: Play/Pause program.  
 ◀◀: Fast reverse.  
 ▶▶: Fast forward.  
 ● : Press to start record the program in DTV mode.  
 ■ : Stop program.  
 ◀◀: Previous chapter.  
 ▶▶: Next chapter.

# OSD Menu

## First Time Setup

Connect an RF cable from the TV's input called "RF-In" and to your TV Aerial socket.

### OSD Language

Press ◀ / ▶ button to select the language to be used for menus and message.

### Mode Setting

Press ◀ / ▶ button to select mode.

### Country

Press ◀ / ▶ button to select the country you want to.

### Tuner Type

Press ◀ / ▶ button to select Antenna(DVB-T).

### Auto Scan

Press ◀ / ▶ button to select Mode: **DTV+ATV, DTV, ATV**.



### LCN

 
Press ◀ / ▶ button to select : **On, Off**.

### Auto Channel Update

Press ◀ / ▶ button to select : **On, Off**.

### Auto Tuning Status

First tuning digital, press Menu button to skip digital tuning,  
Second tuning analogue, press Menu button to skip analogue tuning.

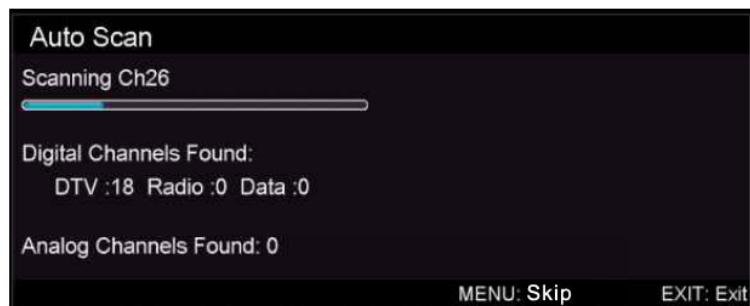


# OSD Menu

## Picture Menu

Press **MENU** button to display the main menu.

 Press **◀ / ▶** button select **PICTURE** in the main menu, then press **ENTER / ▼** to enter.

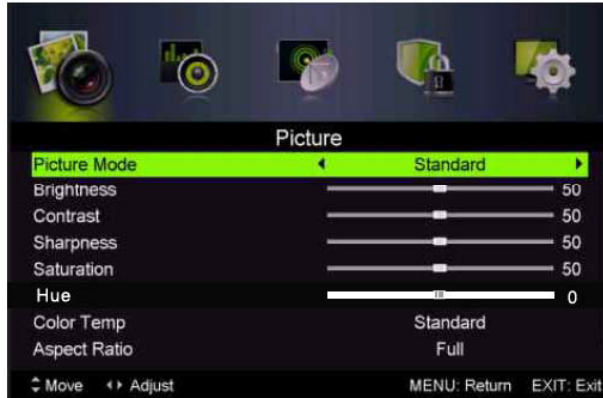

1. Press **▼ / ▲** button to select the option that you want to adjust in the **PICTURE** menu.
2. Press **Enter/◀ / ▶** button to adjust.
3. After finishing your adjustment, Press **MENU** button to return back to the previous menu.

### Picture MODE

Press **◀ / ▶** button to select. (Available Picture mode: Standard, Mild, Personal, Dynamic).

### Brightness/Contrast/ Sharpness/Saturation/Hue

Press **▼ / ▲** button to select option, then press **◀ / ▶** button to adjust.

**Brightness** Adjust image Brightness.

**Contrast** Adjust image Contrast.

**Sharpness** Adjust the peaking in the detail of the picture.

**Saturation** Adjust the saturation of the color based on your own like.

**Hue** Use in compensating color changed with the transmission in the NTSC mode.

### Color Temp

Change the overall color cast of the picture. Press **◀ / ▶** button to select Standard/Cool/Warm.

### Aspect Ratio

Press **◀ / ▶** button to select Full/4:3 /Zoom1/Zoom2 /Auto To select the available display format.

## PC Setting Menu

Press **◀ / ▶** button on the remote control to select **PC SETTING** in the main menu.

### Auto Adjust

Press **Enter/▶** button to adjust the screen automatically to the optimal position of the picture.

### H Position.

Adjust the horizontal position of the picture.

### V Position.

Adjust the vertical position of the picture.

### Phase

Adjust the horizontal interfering lines.

### Clock

Adjust the vertical interfering lines.



1. Press **▼ / ▲** button on the remote control to select the option that you want to adjust in the **PC SETTING** menu.
2. Press **Enter** button on the remote control to adjust.
3. After finishing your adjustment, Press **MENU** button to return back to the previous menu.

# OSD Menu

## Advanced Settings

Adjust advanced video features to fine tune the picture.

Press ▼ / ▲ button to select Advanced Settings, then press **Enter** / ► button to enter sub-menu.

### NR

Set options to reduce video noise.

Press ▼ / ▲ button to select NR, then press ◀ / ► button to select .

Off Select to turn off video noise detection.

Weak Detect and reduce low video noise.

Medium Detect and reduce moderate video noise.

Strong Detect and reduce enhanced video noise.



### Dynamic Contrast

Automatically adjust picture detail and brightness.

Press ▼ / ▲ button to select Dynamic Contrast , then press ◀ / ► button to select .

 
 
(Available Dynamic Contrast : Off,Weak ,Medium,Strong ).

**Backlight:** Adjust the back light level for energy saving.

## Sound Menu

Press **MENU** button to display the main menu.

Press ◀ / ► button select **SOUND** in the main menu, then press **ENTER** / ▼ to enter.

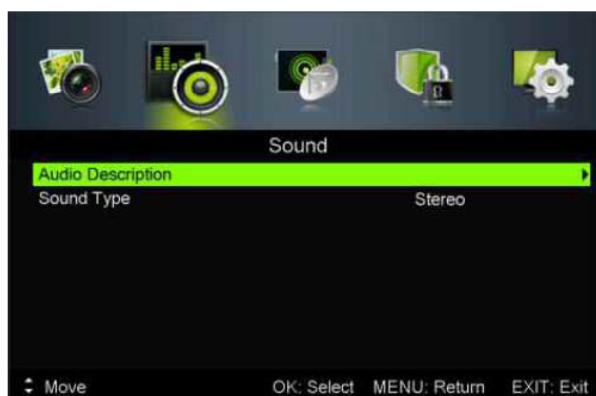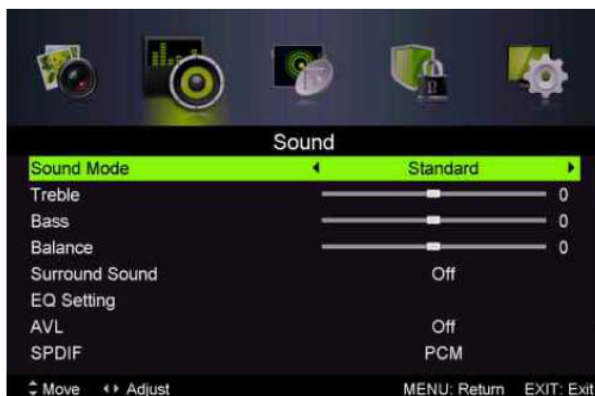

1. Press ▼ / ▲ button to select the option that you want to adjust in the **SOUND** menu.
2. Press **Enter**/◀ / ► button to adjust.
3. After finishing your adjustment, Press **MENU** button to return back to the previous menu.

### Sound Mode

Press ◀ / ► button to select. (Available Sound mode: Standard, Music, Personal, Movie).

### Treble/Bass/Balance

Press ◀ / ► button to adjust.

**Treble** Adjust the treble effect. Increases or decreases high-pitched sounds.

**Bass** Adjust the bass effect. Increases or decreases lower-pitched sounds.

**Balance** Adjust the balance between left and right speakers to adapt to your listening position.

 
### Surround Sound

Press ◀ / ► button to select On or Off.

# OSD Menu

## EQ Setting

Adjust the curve of 7 bands equalizer. Press **Enter**/ **►** button to enter sub-menu.

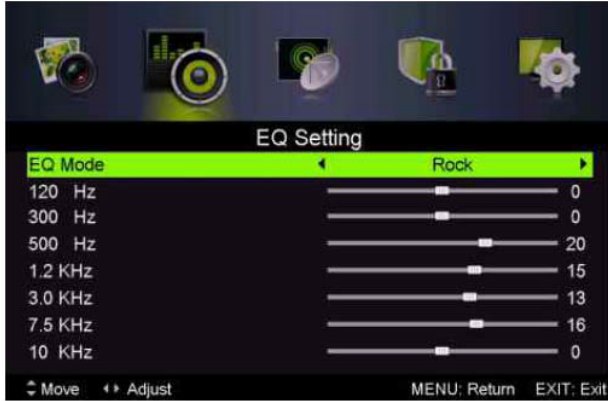

## AVL

Press **▼** / **▲** button to select AVL, then press **◀** / **►** button to select On or Off.

## SPDIF

Press **◀** / **►** button to select Off / Auto/PCM .

## Audio Description

Press **Enter** / **►** button to enter sub-menu.

## Mode

Press **◀** / **►** button to select On or Off. When the mode is **On**, **Volume** can be adjust by users.

## Sound Type

Press **◀** / **►** button to select. (Available Sound Type: Stereo, Dual I, Dual II, Mixed).

# Channel Menu

Press **MENU** button to display the main menu.

Press **◀** / **►** button to select **CHANNEL** in the main menu, then press **ENTER** / **▼** to enter. .



1. Press **▼** / **▲** button to select the option that you want to select in the **CHANNEL** menu.
2. Press **Enter** button to enter sub-menu.
3. Press **MENU** button to return back to the previous menu.

# OSD Menu

---

## Auto Scan

Press ▼ / ▲ button to select Auto Scan, then press **Enter** / ► button to enter sub-menu.

Tuner type is **Antenna**



## Country

Press ◀ / ▶ button to select country

## Mode

Press ◀ / ▶ button to select Mode: **DTV+ATV**, **DTV**, **ATV**.

## Start

Press **Enter** / ► button to start the auto searching.

## Manual Scan

Search for the channels manually.

Press ▼ / ▲ button to select Manual Scan, then press **Enter** / ► button to enter sub-menu.



## Digital Manual Scan

Press ▼ / ▲ button to select Digital Manual Scan, then press **Enter** / ► button to enter sub-menu.

# OSD Menu

---

Tuner type is **Antenna**



## Digital Scan

Press ◀ / ▶ button to select Digital Scan:enter digital numbers.

### Start

Press **Enter** / ▶ button to start the channel searching.

## Analog Manual Scan

Press ▼ / ▲ button to select Analog Manual Scan, then press **Enter** / ▶ button to enter sub-menu.



## Analog Scan

Press ◀ / ▶ button to select Analog Scan.

### Channel to Save

Press ◀ / ▶ button to select Channel to Save.

### Color System

Press ◀ / ▶ button to select Color System:Auto,PAL or SECAM.

### Sound System

Press ◀ / ▶ button to select Sound System :Auto,DK,BG,I or L.

### AFC

Auto Frequency control.

press ◀ / ▶ button to select On or Off.

### Start

Press **Enter** / ▶ button to start the channel searching.

# OSD Menu

## Auto Channel Update

Press ◀ / ▶ button to select On or Off.

## Channel Edit

Press ▼ / ▲ button to select Channel Edit, then press **Enter** / ▶ button to enter sub-menu.



   The three colored key are the shortcut key for programming the channels.

First press ▼ / ▲ to highlight the channel you want to delete or move or skip, then: Press the **Red** button to delete the channel.

 
Press the **Green** button to skip the select channel.(Your TV set will skip the channel automatically when using CH+/- to view the channels.)

Press the **Blue** button to set the channel to moving state. then press ▼ / ▲ to move it to the position you want to put, and press **Blue** button again to done the move operation.


## Favorite Management

1>.Press “ENTER” or “RIGHT” key on “Favorite management” of “Channel”page in ATV or DTV source.

The operation interface shows as follow:

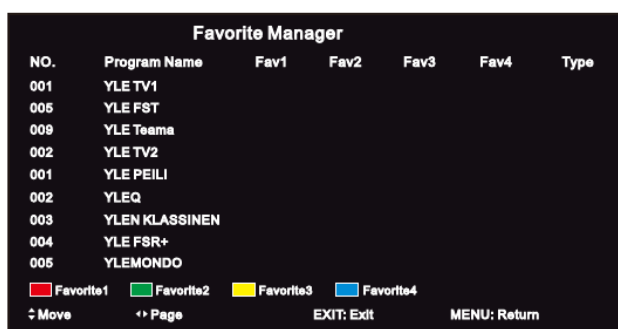

 2>.Press “▲▼” or buttons to select the favorite list and “RED”, “GREEN”, “YELLOW”, “BLUE” key to mark them.

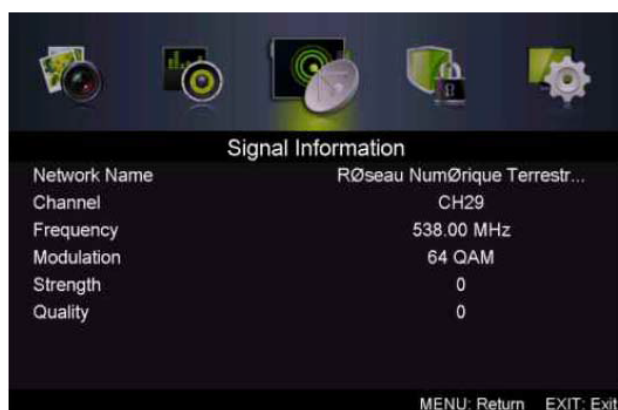

## Signal Information

Press ▼ / ▲ button to select Signal Information, then press the **Enter** button to see the detail information about the signal. Only available when there is signal under DTV.

# OSD Menu

## Lock System Menu

Press **MENU** button to display the main menu.

Press **◀ / ▶** button select **LOCK SYSTEM** in the main menu, then press **ENTER / ▼** to enter.



1. Press **▼ / ▲** button to select the option that you want to adjust in the **LOCK SYSTEM** menu.

2. Press **Enter/◀ / ▶** button to adjust.

3. After finishing your adjustment, Press **MENU** button to return back to the previous menu.

Default password is 0000, and if forget what you set, please call the service center.



 
### Enable

Press **▼ / ▲** button to select Enable, then press **◀ / ▶** button to select On or Off.

**Channel Locks, Parental Rating and Lock Keypad** are available when Enable is **On**.

### Channel Locks

Press **▼ / ▲** button to select Channel Locks, then press **Enter / ▶** button to enter sub-menu.

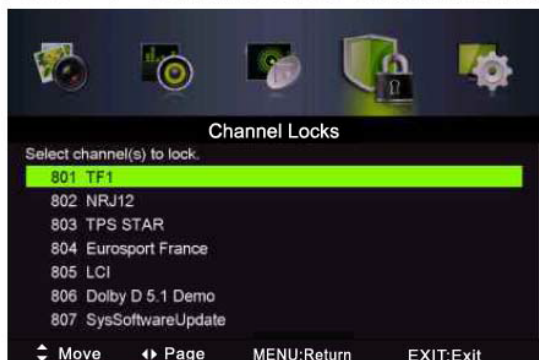

### Lock Keypad

Set to prevent it from being used by young children, or other unexpected usage.

Press **▼ / ▲** button to select Lock Keypad, then press **◀ / ▶** button to select On or Off.

### Parental Rating

Press **▼ / ▲** button to select Parental Rating, then press **◀ / ▶** button to select.

# OSD Menu

## New Password

Press ▼ / ▲ button to select New Password, then enter a 4-digital number you want to set twice.

## Clear Lock

Press ▼ / ▲ button to select Clear Lock.

## Setup Menu

Press **MENU** button to display the main menu.

Press ◀ / ▶ button select **SETUP** in the main menu, then press **ENTER** / ▼ to enter.



1. Press ▼ / ▲ button to select the option that you want to adjust in the **SETUP** menu.
2. Press **Enter**/◀ / ▶ button to adjust.
3. After finishing your adjustment, Press **MENU** button to save and return back to the previous menu.

## OSD Language

Press ▼ / ▲ button to select OSD Language, then press ◀ / ▶ button to select.

## Audio Languages

Press ▼ / ▲ button to select Audio Languages, then press **Enter** button to enter sub-menu.

Press ▼ / ▲ / ◀ / ▶ button to select the Audio Primary Language and Audio Secondary Language.

## Subtitle

Select a subtitle language can be displayed. Default English is selected as subtitle language.

Press ▼ / ▲ button to select Subtitle, then press **Enter** button to enter sub-menu.



## Mode

Press ▼ / ▲ button to select **Mode**, then press ◀ / ▶ button to select On or Off.

Press ▼ / ▲ / ◀ / ▶ button to select the Subtitle Primary Language and Subtitle Secondary Language.

## Hearing Impaired

Press ▼ / ▲ button to select Hearing Impaired, then press ◀ / ▶ button to select On or Off.

# OSD Menu

 
## Teletext

Adjust Teletext settings. Only available under DTV ,ATV,AV, SV and SCART source.  
Press ▼ / ▲ button to select Teletext, then press **Enter** / ► button to enter sub-menu.



## Mode Setting

Press ▼ / ▲ button to select Mode Setting.

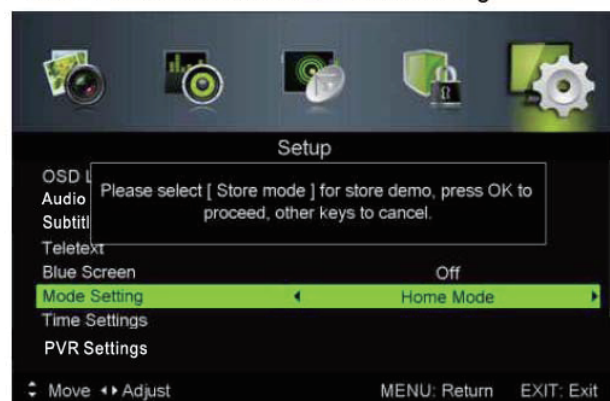

## Time Settings

Press ▼ / ▲ button to select Time Settings, then press **Enter** / ► button to enter sub-menu.

### OSD Time

Press ▼ / ▲ button to select OSD Time,press ◀ / ▶ button to select.

(Available OSD Time:Off,10seconds,20seconds, 30seconds,60seconds).

### Sleep Timer

Press ▼ / ▲ button to select Sleep Timer,press ◀ / ▶ button to select.

(Available Sleep Timer:Off ,5mins, 15mins, 30mins, 60mins, 90mins, 120mins, 240mins).

### Auto Sleep

 
Press ▼ / ▲ button to select Auto Sleep ,press ◀ / ▶ button to select Off,3 hours,4hours or 5 hours.

### Time Zone

Press ▼ / ▲ button to select Time Zone,then press **Enter** / ► button to enter sub-menu.




# OSD Menu

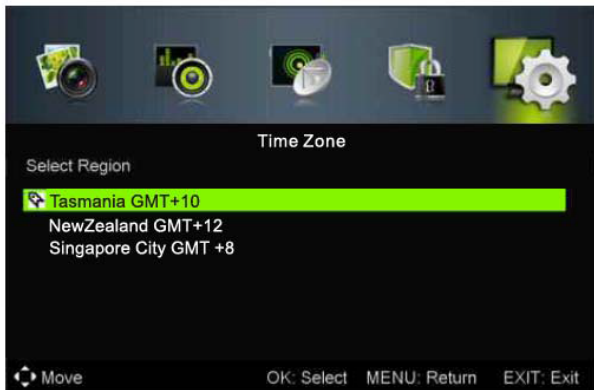

## Time

 Press ▼ / ▲ button to select Time ,then press **Enter** / ► button to enter sub-menu.

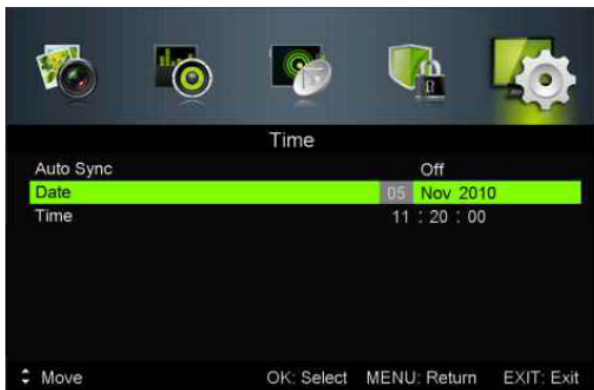


## HDMI CEC Control

Turn on/off HDMI CEC Control.



## PVR Settings

 Press ▼ / ▲ button to select PVR Settings, then press **Enter** button to enter sub-menu.  
It will check the USB .

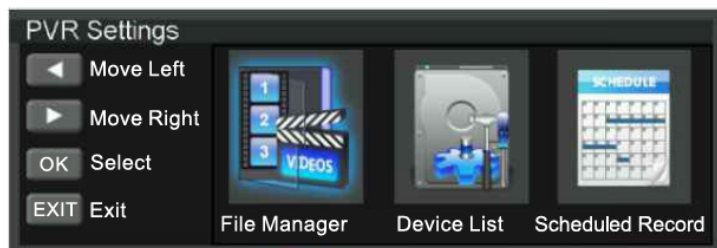


Press ◀ / ▶ button to select File Manager,then press **Enter** button to enter

  Press ◀ / ▶ button to select Device List,then press **Enter** button to enter sub-menu.

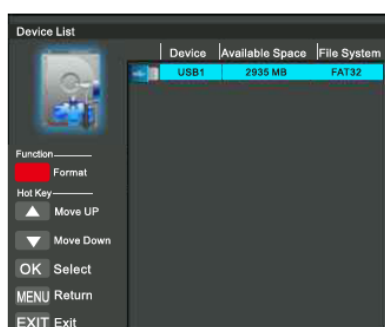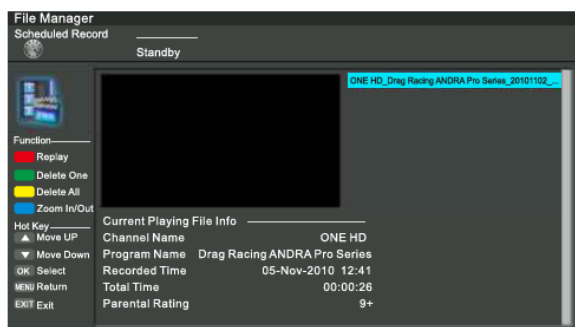

# OSD Menu

 Press ◀ / ▶ button to select Scheduled Record, then press **Enter** button to enter sub-menu.

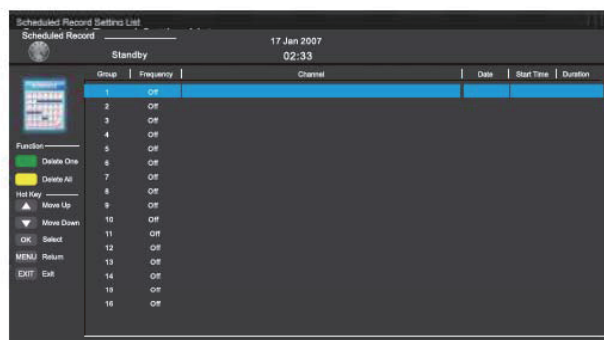

## First Time Setup

Press ▼ / ▲ button to select First time Setup, then press **Enter** button to enter.

## Reset

Press ▼ / ▲ button to select Reset, then press **Enter** button to enter sub-menu.  
If you are sure to reset, press **Yes** to reset.

# EPG Menu

 
Press the button EPG in the remote control to enter EPG menu.

Press the RED button to display previous date.

Press the GREEN button to display next date.

Press the YELLOW button to see the setting you have done before.

Press the BLUE button to set the time you want to remind the program you want to see.

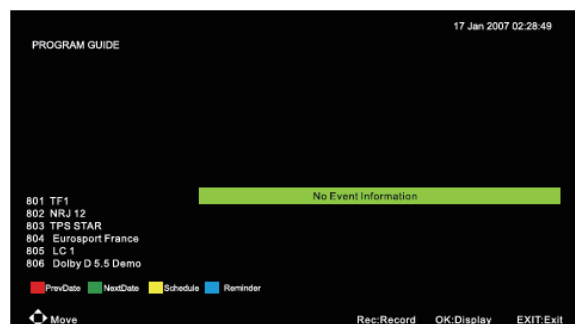

## Timeshift

Press Pause key when the program is playing under the DTV Source to start Timeshift.

The white bar indicated the recording progress.

The blue bar indicated the playback progress.



## Recording:

Press REC on the remote control to start recording immediately in DTV mode.

Press the R.List on the remote control to display the Recorder List to play a selected recording.

note:

 
- a. A compatible USB memory device must be connected to the TV.
- b. Ensure that the USB device has enough speed and date space.

# Multimedia Operation

## Basic Operation

Note: Before operating **USB** menu, Plug in USB device, then press **INPUT** button to set the Input Source to **USB** .

Press ◀ / ▶ button to select **USB** in the Source menu, then press **Enter** button to enter.

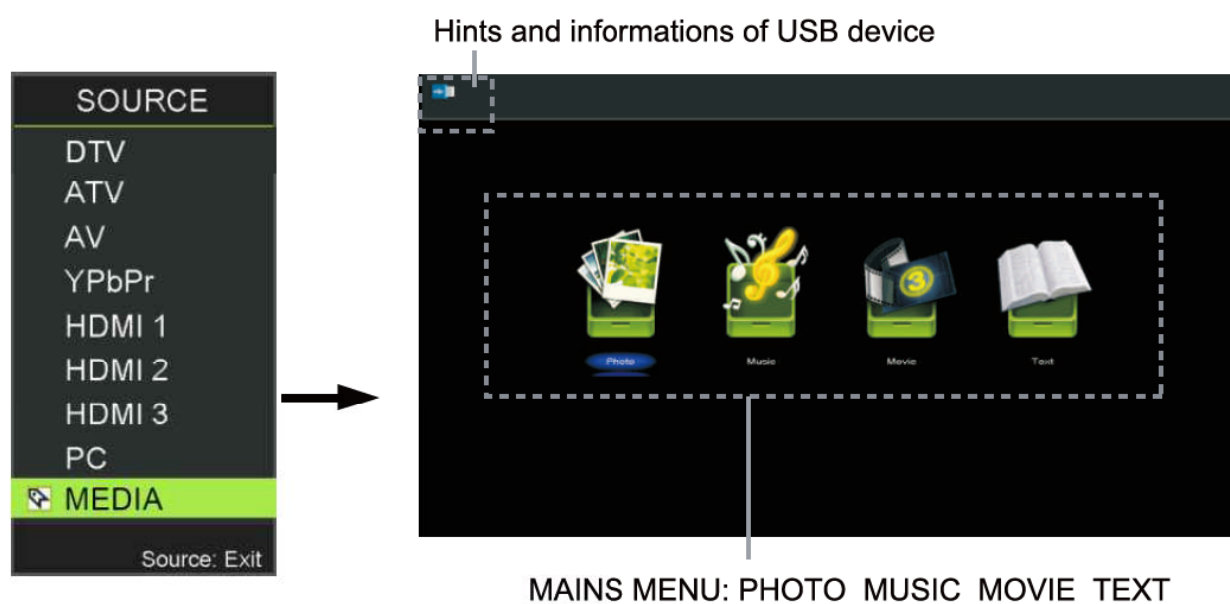

Press ◀ / ▶ button to select the option you want to adjust in the main **USB** menu, then press **Enter** button to enter.

# Multimedia Operation

---

## **USB Usage Precautions**

Never turn the unit off or disconnect a USB Storage Device (Flash Drive) when it is being accessed. Doing so could damage the TV and the connected USB storage device.

- Do not use a device that has a maximum current consumption of 100 mA or more.
- Do not use a device that has security functions or other special functions.
- Do not use a device that is divided into two or more partitions.
- A USB hub cannot be used to connect USB devices to this unit.

## **USB storage devices that can be played on this unit**

- Only USB Storage Device (Flash Memory) maximum 64GB can be used. Do NOT use a high-capacity USB hard disk with this unit.
- Some flash memory players that charge from USB terminals cannot be used for playback.
- Hard disk drives, CD/DVD Drives, and other devices connected via USB cannot be used.
- This unit cannot copy or move files.
- Playable formats: FAT16, FAT32
- Depending on the condition of the USB flash drive, this unit might not be able to play the files on it or skipping might occur.
- NTFS, HFS and HFS+ formats are not supported and cannot be used.
- Max. number of playable folders: 200
- Max. number of playable files: 999
- If the USB storage device contains more than 999 files or 200 folders, this unit cannot play it back correctly.
- This unit cannot play files that are larger than 2GB.
- Files with variable bit rates might not play correctly.

## **File information display**

- The display of this unit can only show single-byte letters and numbers.
- If the file information contains Japanese, Chinese or other double-byte characters, playback is possible but the name will not be shown correctly.

# Multimedia Operation

## 1. Photo


Photo viewing



Press ◀ / ▶ button to select PHOTO in the main menu, then press **Enter** button to enter.  
Press ▼ / ▲ button to select drive disk you want to watch, then press **Enter** button to enter.  
Press ▼ / ▲ button to select return option to back to the previous menu.

## 2. Music

 Play the music

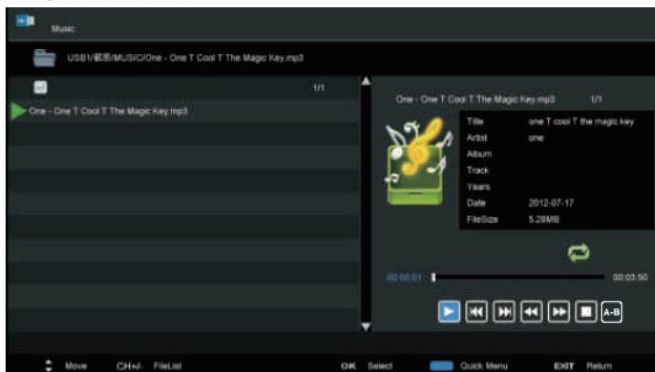

When highlighting the option you select, the file information will appear on the right.



Press to play or pause.

Press to play the previous song.

Press to play the next song.

Press to play backward.

Press to play faster.


Press to stop.

Press CH+/- to switch operation focus between File List and Player.

# Multimedia Operation
 
## 3. Movie

Play the movie

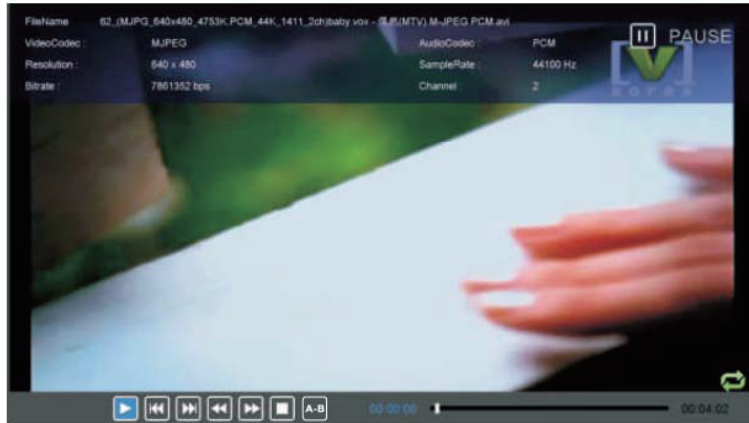

Press ◀ / ▶ button to select MOVIE in the main menu, then press **Enter** button to enter.

Press ▼ / ▲ button to select drive disk you want to watch, then press **Enter** button to enter.

Press ▼ / ▲ button to select return option to back to the previous menu.



Press to play or pause.



Press to view the previous movie.



Press to view the next movie.



Press to play backward.




Press to play faster.



Press to stop and back to the previous folder.


## 4. Text

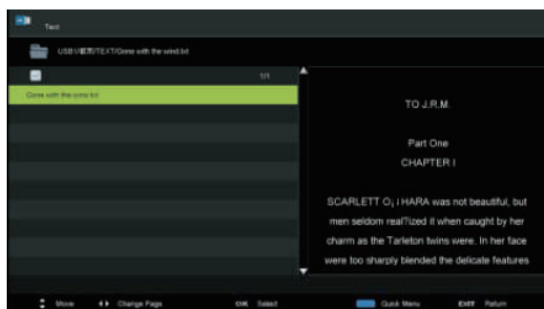 

Press ◀ / ▶ button to select TEXT in the main menu, then press **Enter** button to enter.

Press ▼ / ▲ button to select drive disk you want to watch, then press **Enter** button to enter.

 Press ▼ / ▲ button to select return option to back to the previous menu.

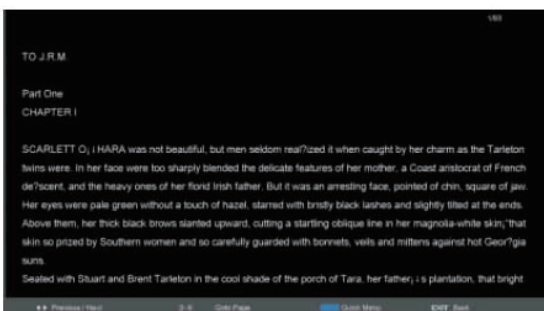

When highlighting the option you select, the file information will appear on the right.

## Simple Troubleshooting

---

If the display fails or performance dramatically deteriorates check the Display in accordance with the following instructions. Remember to check the peripherals to pinpoint the source of the failure.

If the display still fails to perform as expected, connect your helpline for assistance.

### **No power**

- Check all connections to the TV.
- Press either the power button or the Standby button on the Remote control.

### **No picture or sound**

- Ensure that the TV is plugged in and the power is on.
- Ensure that the aerial is connected.
- Try a different programme.

### **Poor picture quality**

- Check the aerial connections.
- Check that the channel is tuned in properly.
- Adjust the picture settings: brightness, colour, sharpness, contrast, hue.
- Make sure that the TV is not located close to electrical appliances that may emit radio frequency interference.

### **No colour**

- Adjust the colour setting.
- Check that the programme is broadcast in colour.
- Check that the channel is tuned properly.

### **TV does not respond to remote control**

- Check that there are no obstructions between the remote control and the unit.
- Check that the remote control is within range of the unit.
- Check that the batteries in the remote control are not weak or exhausted.

This TV is for household use and registered as harmless on electromagnetic waves. Therefore, you can use it in every location as well as residential areas.

# Specifications

---

|                  |             |                    |
|------------------|-------------|--------------------|
| LCD Panel        | Panel Size  | 40"                |
|                  |             |                    |
| Max. Resolution  |             | 1920x1080          |
| Input Connector  | VIDEO       | 1                  |
|                  | YPbPr       | 1                  |
|                  | VGA         | 1                  |
|                  | AUDIO (L/R) | 1                  |
|                  | PC AUDIO    | 1                  |
|                  | HDMI        | 3                  |
|                  | RF          | 1                  |
|                  | USB         | 1                  |
| Output Connector | HEADPHONE   | 1                  |
|                  | COAX        | 1                  |
|                  |             |                    |
|                  |             |                    |
| Main Voltage     |             | 100-240V ~ 50/60Hz |
| Power            |             | 80W                |
|                  |             |                    |
|                  |             |                    |

## IMPORTANT NOTICE:

This product composes up to 6.0 million cells and a few cell defects may occur in the manufacture of the panel. Several dead pixels (allow up to 2 bright or 2 dark pixels) on the panel are deemed acceptable by the industry standards. In line with manufacturers and would not mean that the panel is faulty. Dead pixels panels with 6 pixels or more within 12 month period, Palsonic Corporation Pty Ltd. complies with industry standard and reserves the right to repair the unit and non-refundable. We hope you will understand that the product that corresponds to this standard is regarded as acceptable.

# **Palsonic**

**The AUSTRALIAN Company**

Palsonic Customer Service  
Telephone (Australia) 1300 657 888

Palsonic Corporation Pty Ltd ABN 34 000 474 108  
1 Joynton Avenue, Waterloo NSW 2017 Australia

Telephone (02) 9313 7111 Facsimile (02) 9697 0655  
[www.palsonic.com.au](http://www.palsonic.com.au)