



CONTENTS

1. SAFETY INFORMATION.....	3
2. CONDITIONS OF USE.....	5
3. SAFETY INSTRUCTIONS.....	5
4. PRODUCT DESCRIPTION.....	7
5. ACCESSORIES.....	8
6. CONTROL PANEL.....	9
7. PROGRAMME TABLE.....	12
8. OPTIONS.....	14
9. BEFORE FIRST USE.....	16
10. DAILY USE.....	16
11. HINTS AND TIPS.....	19
12. CARE AND CLEANING.....	20
13. TROUBLESHOOTING.....	23
14. TECHNICAL DATA.....	25
15. INSTALLATION.....	25
16. WARRANTY	26

FOR PERFECT RESULTS

Thank you for choosing this AEG product. We have created it to give you impeccable performance for many years, with innovative technologies that help make life simpler features you might not find on ordinary appliances. Please spend a few minutes reading to get the very best from it.

Visit our website for:



Get usage advice, brochures, trouble shooter, service information:
www.aeg.com



Register your product for better service:
www.registeraeg.com

CUSTOMER CARE AND SERVICE

Always use original spare parts.

When contacting our Authorised Service Centre, ensure that you have the following data available: Model, PNC, Serial Number.

The information can be found on the rating plate.



Warning / Caution-Safety information



General information and tips



Environmental information

Subject to change without notice.

1. SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damages. Always keep the instructions with the appliance for future reference.



- Read the supplied instructions.



- Caution, risk of fire!

1.1 Children and vulnerable people safety



WARNING!

Risk of suffocation, injury or permanent disability.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Do not let children play with the appliance.
- Children of less than 3 years should be kept away unless continuously supervised.
- Keep all packaging away from children.
- Keep all detergents away from children.
- Keep children and pets away from the appliance door when it is open.
- If the appliance has a child safety device, we recommend you activate it.
- Cleaning and user maintenance shall not be made by children without supervision.

1.2 General Safety

- Do not change the specification of this appliance.

- If the tumble dryer is put on top of a washing machine, use the stacking kit. The stacking kit, available from your authorized vendor, can be used only with the appliance specified in the instructions, supplied with the accessory. Read it carefully before installation (Refer to the Installation leaflet).
- The appliance can be installed as freestanding or below the kitchen counter with correct space (Refer to the Installation leaflet).
- Do not install the appliance behind a lockable door, a sliding door or a door with a hinge on the opposite side, where the appliance door can not be fully opened.
- The ventilation openings in the base (if applicable) must not be obstructed by a carpet.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- Ensure you have good ventilation in the installation room to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
- Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels. (if applicable)
- If the supply cord is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons in order to avoid a hazard.
- Obey the maximum load volume of 8kg (refer to the "Programme chart" chapter).
- Do not use the appliance if industrial chemicals have been used for cleaning.
- Wipe away lint that has accumulated around the appliance.
- Do not run the appliance without a filter. Clean the lint filter before or after each use.
- Do not dry unwashed items in the tumble dryer.

- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Remove all objects from pockets such as lighters and matches.
- Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.

2. CONDITIONS OF USE

This appliance is intended to be used in household and similar applications such as:

- Farm houses

- By clients in serviced apartments, holiday apartments and other residential type environments.

3. SAFETY INSTRUCTIONS

3.1 Installation

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Obey the installation instruction supplied with the appliance.
- Always be careful when you move the appliance because it is heavy. Always wear safety gloves.
- Do not install or use the appliance where the temperature is less than 5°C or higher than 35°C.
- Make sure that the floor where you install the appliance is flat, stable, heat resistant and clean.
- Make sure that there is air circulation between the appliance and the floor.
- Always move the appliance vertically.
- The rear surface of the appliance must be put against the wall.

- When the appliance is put in its permanent position, check if it is fully level with the aid of a spirit level. If it is not, adjust the feet until it is.

3.2 Electrical connection



WARNING!

Risk of fire and electrical shock.

- The appliance must be earthed.
- Make sure that the electrical information on the rating plate agrees with the power supply. If not, contact an electrician.
- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Do not touch the mains cable or the mains plug with wet hands.
- Only for UK and Ireland. The appliance has a 13 amp mains plug. If it is necessary to change the fuse in the mains plug, use a 13 amp ASTA (BS 1362) fuse.
- This appliance complies with the E.E.C. Directives.

3.3 Use



WARNING!

Risk of injury, electrical shock, fire, burns or damage to the appliance.

- Do not dry the damaged items which contain padding or fillings.
- Only dry fabrics which are applicable to dry in the tumble dryer. Follow the instructions on the fabric label.
- If you have washed your laundry with a stain remover start an extra rinse cycle before you start the dryer.
- Do not drink or prepare food with the condensed water/distilled water. It can cause health problems to people and pets.
- Do not sit or stand on the open door.
- Do not dry dripping wet clothes in the tumble dryer.

- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and create a fire hazard.
- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent -this will reduce, but not eliminate, the hazard.

3.4 Internal light



WARNING!

Risk of injury.

- Visible LED radiation, do not look directly into the beam.
- The type of light bulb or halogen lamp used for this appliance is only for household appliances. Do not use it for house lighting.
- To replace the internal light, contact the Authorised Service Centre.

3.5 Care and cleaning



WARNING!

Risk of injury or damage to the appliance.

- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.

3.6 Compressor



WARNING!

Risk of damage to the appliance.

- The compressor and its system in the tumble dryer is filled with the special agent which is free from fluoro-chloro-hydrocarbons. This system must stay

tight. The damage of the system can cause a leakage.

3.7 Disposal




WARNING!

Risk of injury or suffocation.

- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.
- Remove the door catch to prevent children and pets to get closed in the appliance.

4. PRODUCT DESCRIPTION

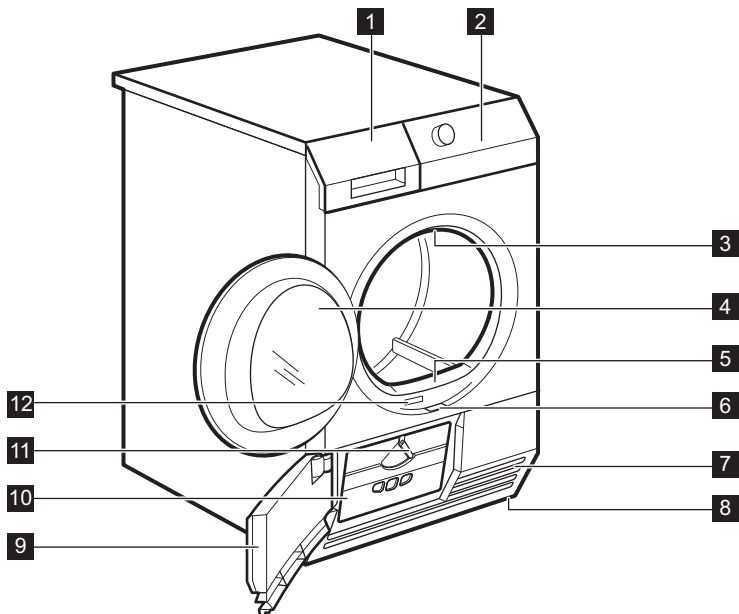


- | | |
|--|--|
| 1 Water container | 8 Adjustable feet |
| 2 Control panel | 9 Heat exchanger door |
| 3 Internal light | 10 Heat exchanger cover |
| 4 Appliance door | 11 The knob to lock the heat exchanger cover |
| 5 Filter | 12 Rating plate |
| 6 The button to open the heat exchanger door | |
| 7 Airflow slots | |



The load door can be installed by the user in the opposite side. It can help to easily put and remove the laundry or if there is a limit to install the appliance (see separate leaflet).

5. ACCESSORIES

5.1 Stacking kit

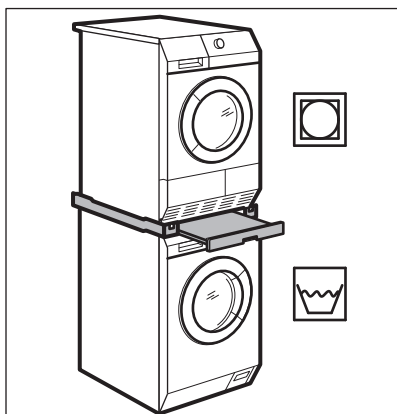


Accessory name: SKP11, STA8, STA9

Available from your authorized vendor.

Stacking kit can be used only with the washing machines specified in the leaflet. See the leaflet attached.

Read carefully the instructions supplied with the accessory.

5.2 Draining kit

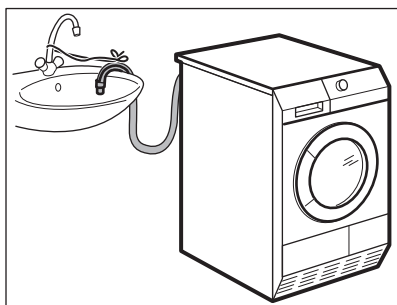

Accessory name: DK11.


It is available from your authorized vendor (can be attached to some types of the tumble dryers)

The accessory for through draining of the condensed water into a basin, siphon, gully, etc. After the installation, the water container is drained automatically. The water container must stay in the appliance.

The installed hose must be on the height from minimum of 50 cm to maximum of 1 m from floor level. The hose cannot be in loop. Decrease the length of the hose if necessary.

Read carefully the instructions supplied with the accessory.

5.3 Pedestal with the drawer

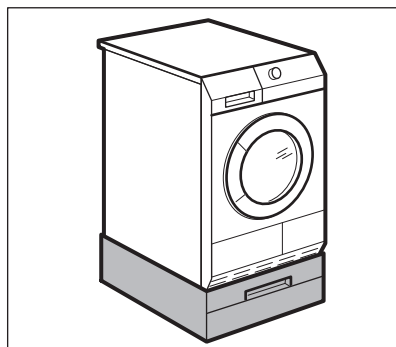

Accessory name: PDSTP10.


It is available from your authorized vendor.

To put the appliance higher at the level what helps to easy load and remove the laundry.

The drawer can be used for laundry storage e.g. : towels, cleaning products and more.

Read carefully the instructions supplied with the accessory.

5.4 Drying rack

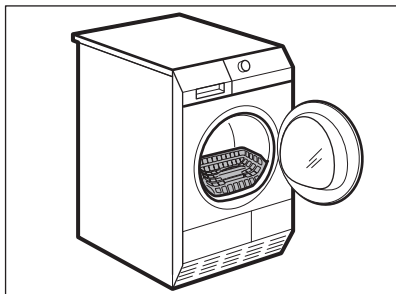

Accessory name: RA6.


It is available from your authorized vendor (can be attached to some types of the tumble dryers). Do the check with the vendor or on the web site if the accessory is compatible with your appliance.

Drying rack accessory let to dry safely in the tumble dryer:

- sport shoes
- wool
- soft toys
- lingerie

Read carefully the instructions supplied with the accessory.

6. CONTROL PANEL

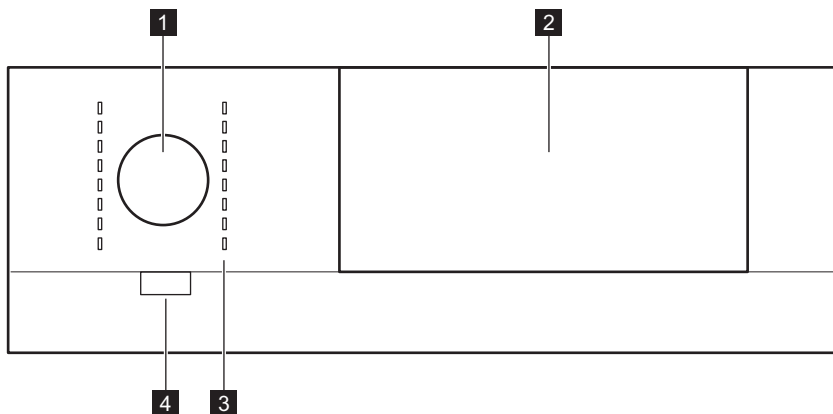


1 Programme dial

2 Touch panel with the display

3 Programme indicators

4 ① On/Off button with the **Auto Off** function

6.1 The touch panel

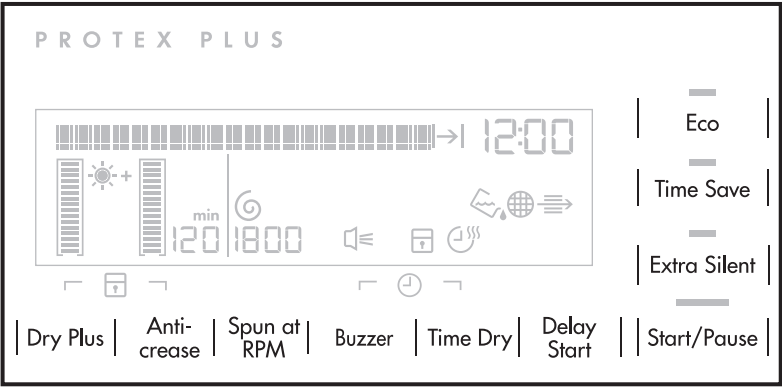


As alternative for the buttons to set the option you must touch the area with the option name. Each area between the vertical marks *senses* the user finger.




For accurate selection touch the centre point of the area between the vertical marks. Do not wear gloves when you touch the panel to set the function. Make sure the panel is always clean and dry.

6.2 Display

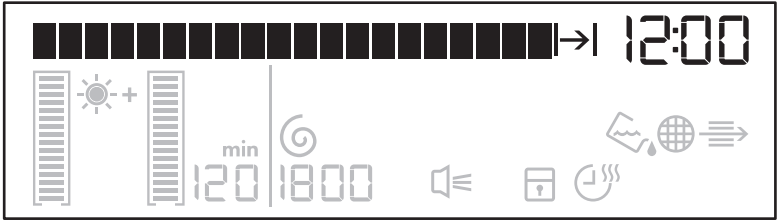


Symbol on the display	Symbol description
Time of day	text bar
12 : 00	clock
12.00	cycle time indication
→16 : 20	estimated hour of the programme end
→16 : 30	estimated hour of the time programme end time programme interval 10min. — 120min.

Symbol on the display	Symbol description
→ 16 : 50	estimated hour of the programme end with the delayed start delay start interval 30min. — 20h.

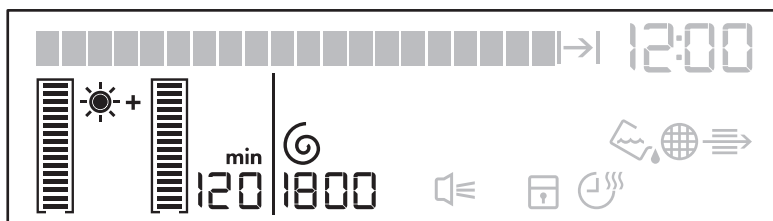



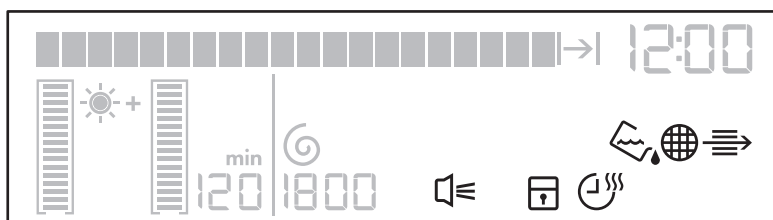



 



 
Symbol on the display	Symbol description
	extra laundry dryness: default, moderate, maximum
	anti-crease phase duration: default, interval (30min. - 120min.)
	laundry was spun at: 800 — 1800 rpm default



Symbol on the display	Symbol description
	buzzer on
	child lock on
	time dry option on
	indicator: <i>drain the water container</i>
	indicator: <i>clean filter</i>
	indicator: <i>do the check of the heat exchanger</i>

7. PROGRAMME TABLE

Programmes	Load ¹⁾	Properties / Fabric mark
Cottons		
Extra Dry ²⁾	8 kg	Drying level: extra dry. / 
Cupboard Dry +	8 kg	Drying level: cupboard dry +. / 
Cupboard Dry	8 kg	Drying level: cupboard dry. / 
Iron Dry	8 kg	Drying level: applicable for iron. / 
Jeans	8 kg	Leisure clothing such as jeans, sweat-shirts of different material thicknesses (e.g. at the neck, cuffs and seams). / 
Bed Linen	3 kg	To dry bed linen such as: single and double sheet, pillowcase, bed-spread. / 
Duvets	3 kg	To dry one or two duvet and pillows (with feather, down or synthetic fillings). / 
Time Drying	8 kg	With this programme you can use the option Time Dry and set the programme duration. / 
Synthetics		
Extra Dry	3,5 kg	Drying level: extra dry. / 
Cupboard Dry	3,5 kg	Drying level: cupboard dry. / 
Iron Dry	3,5 kg	Drying level: applicable for iron. / 
Easy Iron	1 kg (or 5 shirts)	Easy care fabrics for which a minimum of ironing is necessary. The drying results can be different from one type of fabric to the other. Shake the items before you put them in the appliance. When the programme is completed, Immediately remove the items and put them on a hanger. / 

Programmes	Load 1)	Properties / Fabric mark
Outdoor	2 kg	To dry outdoor pieces of clothing, technical, sports, pile fabrics, waterproof and breathable jackets, shell jacket teamed with a removable fleece or inner insulation.
Silk 	1 kg	To dry hand-washable silk with warm air and gentle movement. / 
Wool 3)  	1 kg	Wool fabrics. Gentle drying for hand-washable woollens. Remove immediately the items when the programme is completed.  WOOL HAND WASH SAFE
Extra Quick Mixed	3 kg	To dry cotton and synthetic fabrics. / 




1) The maximum weight refers to dry items.

2) For test institutes only: Standard programme for tests are specified in the AS/NZS2442.2 document.

3) The wool drying cycle of this tumble drying machine has been tested and approved by The **Woolmark** Company. The cycle is suitable to dry wool garments, which are labelled "hand wash" provided that the garments are washed in a **Woolmark** endorsed hand washing cycle and tumble dried according to the instructions issued by the manufacturer. **1780SW13W**.

7.1 Programmes and options selection

Programmes 1)	Options						
	Dry Plus	Anti-crease	Spun at RPM	Time Dry	Eco 2)	Time Save	Extra Silent
Cottons; Extra Dry	■	■	■		■	■	■
Cottons; Cupboard Dry +	■	■	■		■	■	■
Cottons; Cupboard Dry	■	■	■		■	■	■
Cottons; Iron Dry	■	■	■		■	■	
Jeans	■	■	■		■	■	
Bed Linen	■	■	■		■		

Programmes ¹⁾	Options						
	Dry Plus	Anti-crease	Spun at RPM	Time Dry	Eco ²⁾	Time Save	Extra Silent
Duvets	■		■		■		
Time Drying		■		■	■		
Synthetics; Extra Dry	■	■	■		■	■	■
Synthetics; Cupboard Dry	■	■	■		■	■	■
Synthetics; Iron Dry	■	■	■		■	■	
Easy Iron	■	■	■		■		
Outdoor	■		■		■		
Silk 	■		■		■		
Wool  	■			■ ³⁾	■		
Extra Quick Mixed	■	■	■			■	


1) Together with the programme you can set 1 or more options.

2) The option is off if the 1 of the options Time Save or Extra Silent is on.


3) Only with the drying rack — see chapter ACCESSORIES


8. OPTIONS


8.1 Dry Plus

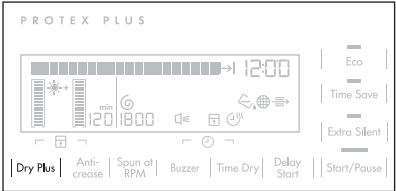


This option helps to get the laundry more dried. There are 3 possible selections:

 - the default selection which is related to the programme.

 - the selection to get the laundry lightly dried.


 - the selection to get the laundry more dried.

8.2 Anti-crease

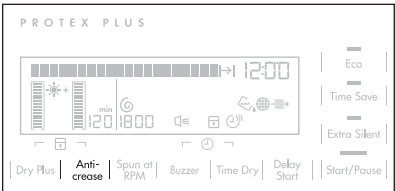

Extends of 30, 60, 90 or 120 minutes the standard anti-crease phase (30 minutes) at the end of the drying cycle. This option prevents laundry from creases. Laundry can be removed during the anti-crease phase.


8.3 Spun at RPM

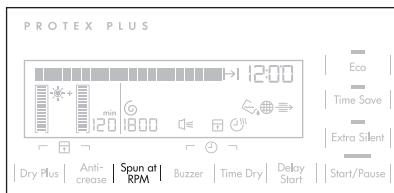

This option helps to set the best condition to dry the laundry.

If you know the initial spin speed when you washed you can use this option. Higher spin speed causes that the laundry contains less water.

8.4 Buzzer

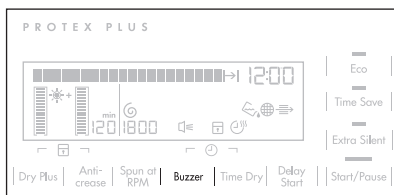


When the buzzer option is activated you can hear the sound at the:

- cycle end
- anti-crease phase start and end
- cycle interruption

The buzzer option is by default always on. You can use this option to activate or deactivate the sound.


i You can activate the Buzzer option with all programmes.

8.5 Time Dry

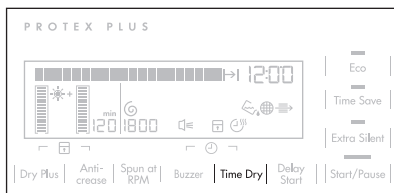

Operates only with the Time Drying programme. Lets the user to set special time of drying programme from minimum 10 min. to maximum of 2 hours (in 10 min. steps).

8.6 Delay Start

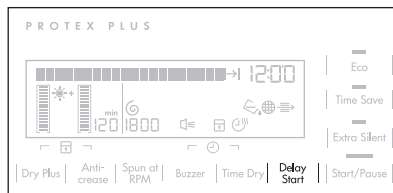

i Lets to delay the start of a drying programme from minimum of 30 minutes to maximum of 20 hours.


1. Set the drying programme and options.
2. Touch the Delay Start option field again and again.

The time of the delay come into the view on the display (e.g. **12h** if the programme has to start after 12 hours.)

3. To activate the Delay Start option, touch the Start/Pause field.

Time to start decreases on the display.

8.7 Eco

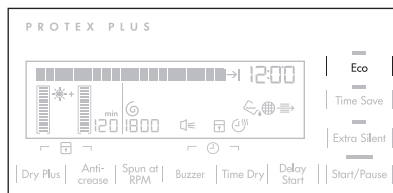


This option is on by default with all the programmes. Does not include the Extra Quick Mixed programme.

The power consumption is at the minimum level.

The option Eco is off if 1 of the options Time Save or Extra Silent is on.


8.8 Time Save

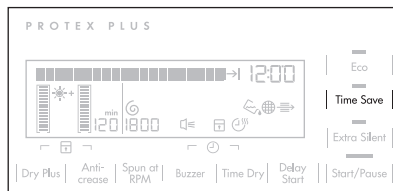

Decreases the time of the cycle without

the effect on the drying quality. The cycle time can be shorter by 30% on the cottons and 40% on synthetics. The appliance operates with the higher energy consumption.

8.9 Extra Silent

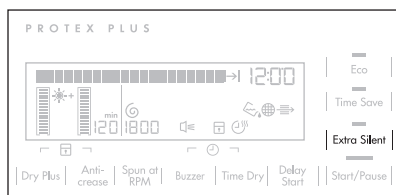

The appliance operates with low noise 62

dB without the effect on the drying quality. The appliance operates slowly with the longer cycle time.

9. BEFORE FIRST USE

Before you use the appliance for the first time do these operations:

- Clean the tumble dryer drum with a moist cloth.
- Start a short programme (e.g. 30 minutes) with moist laundry.



At the beginning of drying cycle (3-5 min.) there could be a slightly higher sound level. It is because of start of the compressor that is normal for compressor powered appliances such: refrigerators, freezers.

9.1 Language

The first time you turn on the dryer the default language comes into the view on the display. You can confirm it or change the different language from the available languages list.

To set the different language:

1. Turn the programme dial to set your language.
2. Touch the Start/Pause field. The language is memorised.

9.2 Clock

The first time you turn on the dryer the default time comes into the view on the display. You can confirm or change it.

To set the different time:





1. Turn the programme dial to set new hour.
2. Touch the Start/Pause field. The hour is memorised.
3. Turn the programme dial to set new minutes.
4. Touch the Start/Pause field. The minutes are memorised.

10. DAILY USE

10.1 Preparing the laundry

- Close the zippers.
- Close the fasteners of the duvet covers.
- Do not keep ties or ribbons loose (e.g. apron ribbons). Tie them before you start a programme.
- Remove all items from the pockets.
- If an item has the internal layer made of cotton, turn it inside out. Make sure that the cotton layer is always external
- We recommend that you set the correct programme applicable for the type of fabrics that are in the appliance.
- Do not put fabrics with strong colours together with fabrics with light colours. Strong colours can bleed.

- Use an applicable programme for cotton jersey and knitwear to prevent the items to shrink.
- Make sure that the laundry weight is not more than the maximum weight that is in the programme table.
- Dry only the laundry that is applicable for tumble dryer. Refer to the fabric label on the items.

Fabric label	Description
	Laundry that is applicable for tumble drying.
	Laundry that is applicable for tumble drying and resists higher drying temperature.
	Laundry that is applicable for tumble drying but only with low drying temperature.
	Laundry that is not applicable for tumble drying.

10.2 Loading the laundry



CAUTION!

Do not lock the laundry in between the appliance door and rubber seal.

1. Pull the appliance door.
2. Load loosely the laundry.
3. Close the appliance door.

10.3 Turning on the appliance

To turn on the appliance:

Push the On/Off button.

If the appliance is on, some indications come in to the view on the display.

10.4 Auto Off function


To decrease the energy consumption, the Auto Off function turns off automatically the appliance:

- if the Start/Pause field was not touched in the time of 5 minutes.
- after 5 minutes from the programme end.

Push the  On/Off button to turn on the appliance.

If the appliance is on, some indications come in to the view on the display.

10.5 Setting a programme

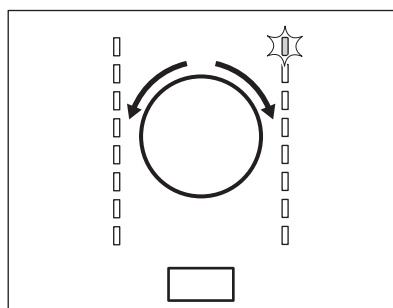

Use the programme dial to set the programme.


The possible time to complete the programme comes into the view on the display.



The drying time you see is related to the load of 5 kg for cotton and jeans programmes. For the other programmes the drying time is related to the recommended loads. The drying time of the cotton and jeans programmes with the load more than 5 kg is longer.

10.6 Options

Together with the programme you can set 1 or more special options.

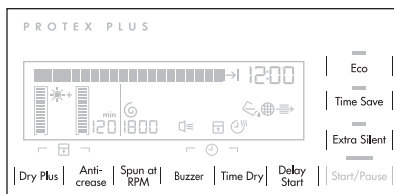

To activate or deactivate the option touch the applicable option field. When the option is activated the LED above the option field or symbol on the display comes into the view.

10.7 Child lock option


The child lock can be set to prevent the children to play with the appliance. The child lock option locks all push buttons and the programme dial (this option does not lock **On/Off** button).


You can activate the child lock option:

- before you push the **Start/Pause** button - the appliance cannot start
- after you push the **Start/Pause** button - programmes and option selection is off.

Child lock option activation:

1. Turn on the dryer.
2. Wait approximately 8 seconds.
3. Select 1 of the available programmes.
4. Touch at the same time and hold down the **Dry Plus** and **Anti-crease** option fields.

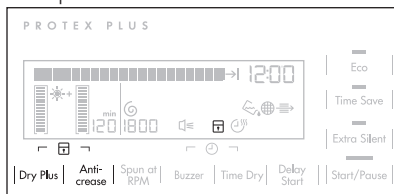


The symbol  comes into the view on the display.

5. To deactivate the child lock, touch again the above option fields until the symbol goes out of the view.

10.8 Starting a programme

To start the programme:

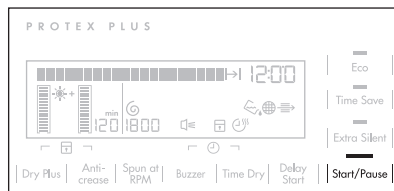

Touch the **Start/Pause** field.

The appliance starts and the LED above the touch field does not flash but is stable.

10.9 Programme change


To change a programme:

1. Push the On/Off button to turn off the appliance.
2. Push again the On/Off button to turn on the appliance.
3. Set a new programme.

10.10 Programme end



Clean the filter and drain the water container after each drying cycle. (See chapter CARE AND CLEANING.)

If the drying cycle is completed, the symbol  flashes on the display. If the Buzzer option is on, the acoustic signal sounds intermittently for 1 minute.



If you do not turn off the appliance, the crease guard phase starts. Laundry can be removed during this phase.

To remove the laundry:

1. Push the On/Off button for 2 seconds to turn off the appliance.
2. Open the appliance door.
3. Remove the laundry.
4. Close the appliance door.

11. HINTS AND TIPS


11.1 Ecological hints

- Spin good the laundry before drying.
- Use the load volumes which are specified in the programme chart.
- Clean the filter after each drying cycle.
- Do not use fabric softener to wash and then dry. In the tumble dryer laundry becomes soft automatically.
- Use the condensate as distilled water, e.g. for steam ironing. If it is necessary clean the condensate before (e.g. with a coffee filter) to remove possible small pieces of fluff.
- Always keep the airflow slots on the bottom of the appliance clear.
- Make sure that is good airflow in the appliance installation position.

11.2 Adjustment of the remaining laundry moisture degree

To change the default degree of the remaining moisture of the laundry:

1. Turn on the appliance.
2. Wait approximately 8 seconds.
3. Select 1 of available programmes.
4. Touch at the same time and hold down the **Dry Plus** and **Spun at RPM** option fields.

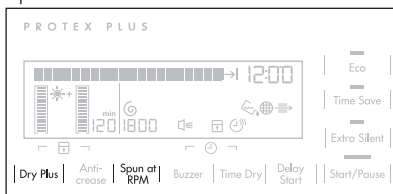

One of the symbols goes into the view on the display:

- ☐ - the maximum dry laundry
- ☐= - the more dry laundry
- ☐≡ - the standard dry laundry

5. Touch the **Start/Pause** field again and again until you set necessary degree.
6. To memorise the setting, touch at the same time the **Dry Plus** and


Spun at RPM option fields for approximately 2 seconds.

11.3 Deactivating the Tank indicator

The water container indicator is by default on. It starts to light at the end of the drying cycle or during the cycle if the water reservoir is full. If the draining kit is installed the water container is drained automatically and indicator can be permanently off.

To deactivate the indicator:

1. Turn on the appliance.
2. Wait approximately 8 seconds.
3. Select 1 of available programmes.
4. Touch at the same time and hold down the **Dry Plus** and **Buzzer** option fields.

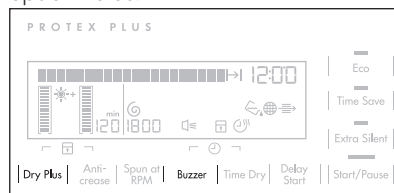

One of 2 configurations is possible:


- the Tank indicator: ☐ is on and the symbol ☐= goes into the view - the water container indicator is permanently **on**
- the Tank indicator: ☐ is off and the symbol ☐≡ goes into the view - the water container indicator is permanently **off**

11.4 Language

You can change the language each time you want.

To set the different language:

1. Turn on the dryer.
2. Wait approximately 8 seconds.
3. Touch at the same time the **Anti-crease** and **Spun at RPM** option fields and hold down.

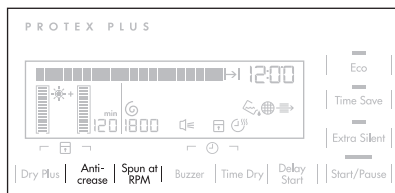

You see the language name on the display.


4. Turn the programme dial to set the new language.
5. Touch the **Start/Pause** field. The language is memorised.

11.5 Clock

You can change the clock each time you want.

To set the different time:

1. Turn on the dryer.

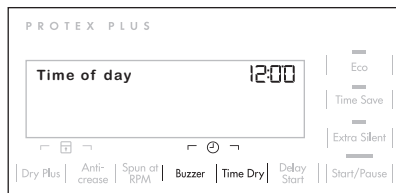


Clock digits start to flash on the display.

4. Turn the programme dial to set new hour.
5. Touch the **Start/Pause** field. The hour is memorised.
6. Turn the programme dial to set new minutes.
7. Touch the **Start/Pause** field. The minutes are memorised.

12. CARE AND CLEANING


12.1 Cleaning the filter

At the end of each cycle the symbol  *Filter* is on the display and you must clean the filter.




The filter collects the fluff. The fluff occurs while the cloths are dried in the tumble dryer.


1. Open the door. Pull the filter.

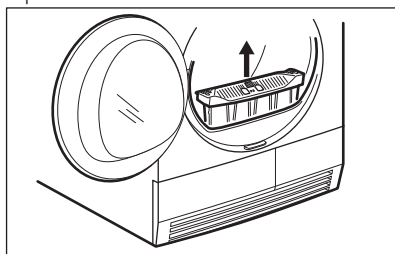

2. Push the hook to open the filter.

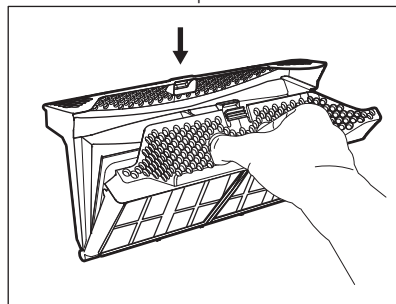


3. Use a moist hand to clean both parts of the filter.

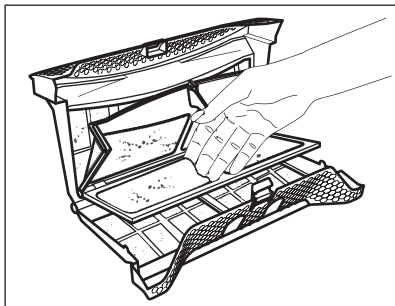

12.2 Draining the water container



Drain the condensed water container after each drying cycle.

If the condensed water container is full, the programme breaks off automatically.


The symbol  *Tank* is on the display and you must drain the water container.

To drain the water container:


4. If necessary clean the filter with the brush under warm tap water and/or a vacuum cleaner. Close the filter.

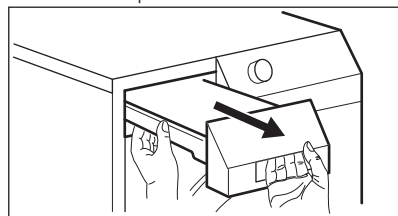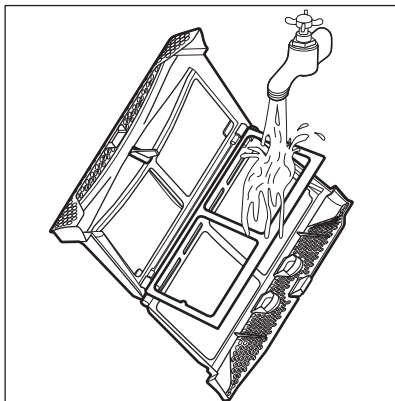

2. Move the plastic connection out and drain the water into a basin or equivalent receptacle.

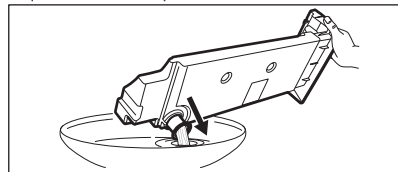


5. If necessary remove fluff from the filter socket and gasket. You can use a vacuum cleaner. Put the filter inside the filter socket.

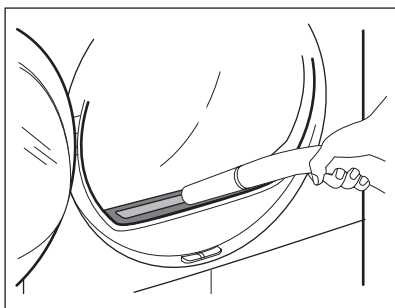


3. Move plastic connection in and install water container.
4. To continue the programme press the Start/Pause button.

 12.3 Cleaning the heat exchanger


If the symbol  *Condenser* flashes on the display, do the inspection of the heat exchanger and its compartment. If there is a dirt, clean it.

To do the inspection:


1. Open the door. Pull the filter.

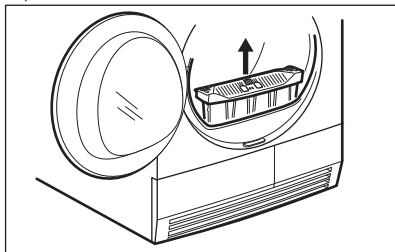


2. Move the release button on the bottom of the door to open the heat exchanger door.

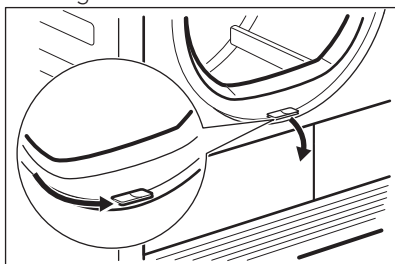


3. Turn the blockage to unlock the heat exchanger cover.

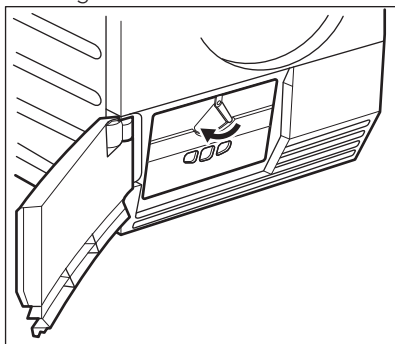

4. Lower the heat exchanger cover.

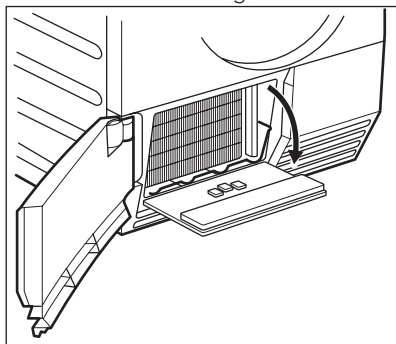

5. If necessary, remove the fluff from the heat exchanger and its compartment. You can use wet cloth and/or a vacuum cleaner with the brush.

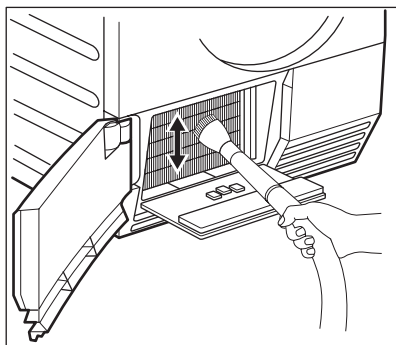

6. Close the heat exchanger cover.
7. Lock the blockage until it snaps.
8. Put the filter back.

12.4 Cleaning the drum



WARNING!

Disconnect the appliance before you clean it.

Use a standard neutral soap detergent to clean the inner surface of the drum and drum ribs. Dry the cleaned surfaces with a soft cloth.



CAUTION!

Do not use abrasive materials or steel wool to clean the drum.

12.5 Cleaning the control panel and housing

Use a standard neutral soap detergent to clean the control panel and housing.

Use a moist cloth to clean. Dry the cleaned surfaces with a soft cloth.



CAUTION!

Do not use furniture cleaning agents or cleaning agents which can cause corrosion to clean the appliance.

12.6 Cleaning the airflow slots

Use a vacuum cleaner to remove the fluff from the airflow slots.

13. TROUBLESHOOTING

Problem ¹⁾	Possible cause	Remedy
The tumble dryer does not operate.	The tumble dryer is not connected to mains supply.	Connect in at mains socket. Check fuse in fuse box (domestic installation).
	The loading door is opened.	Close the loading door.
	The On/Off button was not pushed.	Push the On/Off button.
	The Start/Pause button was not pushed.	Push the Start/Pause button.
	The appliance is in the standby mode.	Push the On/Off button.
Unsatisfactory drying result.	Incorrect programme selection.	Do the selection of the applicable programme. ²⁾
	The filter is clogged.	Clean the filter. ³⁾
	The Dry Plus option was in minimum level. ⁴⁾	Change the Dry Plus option to the moderate or maximum level. ⁴⁾
	Too high volume of the load.	Obey the maximum load volume.
	The airflow grill is clogged.	Clean the airflow grill in the bottom of the appliance.
	Dirt on the humidity sensor in the drum.	Clean the front surface of the drum.
	Incorrect remaining laundry moisture degree.	Adjust remaining laundry moisture degree. ⁵⁾
	The heat exchanger is clogged.	Clean the heat exchanger. ³⁾

Problem 1)	Possible cause	Remedy
The loading door does not closed	The filter not locked in the position.	Put the filter in the correct position.
	The laundry is locked between the door and the seal.	Put the load correctly in the drum.
Err (Error) on the display.	You try to change the programme or the option after the start of the cycle.	Turn the tumble dryer off and on. Make the new selection.
	The option you try to activate is not applicable with the selected programme.	Turn the tumble dryer off and on. Make the new selection.
No drum light	Defective drum lamp.	Contact the service centre to replace the drum lamp.
Abnormally elapsing time on the display.	The time to end is calculated on the basis of the volume and dampness of the laundry.	The automatic procedure — this is not the appliance malfunction.
Programme inactive.	The water container is full.	Drain the water container, push the Start/Pause button. ³⁾
Drying cycle too short.	Too small laundry volume.	Do the selection of time programme. The time value must be related to the load. To dry 1 item or small quantities of the laundry we recommend to use short times.
	The laundry is too dry.	Do the selection of time programme or higher drying level (e.g. Extra Dry)
Drying cycle too long ⁶⁾	The filter is clogged.	Clean the filter.
	Too high volume of the load.	Obey the maximum load volume.
	The laundry not spun sufficiently.	Spin correctly the laundry.
	Too low or too high room temperature - this is not the appliance malfunction.	Ensure a room temperature higher than +5°C and lower then +35°C.

¹⁾ If there is an error message on the display (e.g. **E51**): Turn the tumble dryer off and on. Make a selection of the new programme. Push the Start/Pause button. Does not operate? - contact the service centre and give the error code.

²⁾ Follow the programme description — see PROGRAMME TABLE

³⁾ See chapter CARE AND CLEANING

⁴⁾ Only dryers with the Dry Plus option

⁵⁾ See HINTS AND TIPS chapter

⁶⁾ Note: After maximum 5 hours the drying cycle ends automatically.

14. TECHNICAL DATA

Height x Width x Depth	850 x 600 x 600 mm (maximal 640 mm)
Max. depth with the appliance door open	1090 mm
Max. width with the appliance door open	950 mm
Adjustable height	850 mm (+ 15 mm - feet regulation)
Drum volume	118 l
Maximum load volume	8 kg
Voltage	230-240 V
Frequency	50 Hz
Necessary fuse	5 A
Total power	1000 W
Left—on mode power absorption	0,11 W
Off mode power absorption	0,11 W
Type of use	Household
Permitted ambient temperature	+ 5°C to + 35°C
Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture	IPX4

15. INSTALLATION

15.1 Unpacking



CAUTION!

Before use all parts of the transport packaging must be removed.



To remove the polystyrene blockages:

1. Open the door.
2. Pull plastic hose with the polystyrene blockages out from the drum.





15.2 Feet regulation

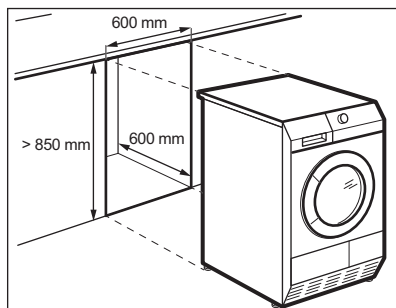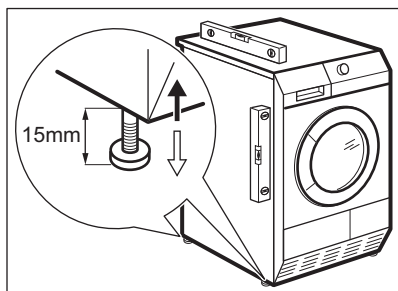It is possible to adjust the height of the tumble dryer. To do that adjust the feet.



17. ENVIRONMENT CONCERNS

Recycle the materials with the symbol . Put the packaging in applicable containers to recycle it. Help protect the environment and human health and to recycle waste of electrical and electronic appliances. Do not dispose appliances

marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

AEG Warranty

FOR SALES IN AUSTRALIA AND NEW ZEALAND
ALL AEG BRANDED APPLIANCES

This document sets out the terms and conditions of the product warranties for AEG Appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Appliance.

1. In this warranty:
 - (a) 'acceptable quality' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL;
 - (b) 'ACL' means Schedule 2 to the Competition and Consumer Act 2010;
 - (c) 'Appliance' means any AEG product purchased by you and accompanied by this document;
 - (d) 'ASC' means AEG authorised service centres;
 - (e) AEG is the brand controlled by Electrolux Home Products Pty Ltd of 163 O'Riordan Street, Mascot NSW 2020, ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited (collectively 'Electrolux') of 3-5 Niall Burgess Road, Mount Wellington, in respect of Appliances purchased in New Zealand;
 - (f) 'major failure' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL and includes a situation when an Appliance cannot be repaired or it is uneconomic for Electrolux, at its discretion, to repair an Appliance during the Warranty Period;
 - (g) 'Warranty Period' means the Appliance is warranted against manufacturing defects in Australia and New Zealand for 60 months, following the date of original purchase of the Appliance;
 - (h) 'you' means the purchaser of the Appliance not having purchased the Appliance for re-sale, and 'your' has a corresponding meaning.
2. This warranty only applies to Appliances purchased and used in Australia or New Zealand in normal domestic applications and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand.
3. During the Warranty Period Electrolux or its ASC will, at no extra charge if your Appliance is readily accessible for service, without special equipment and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Electrolux or its ASC may use remanufactured parts to repair your Appliance. You agree that any replaced Appliances or parts become the property of Electrolux. This warranty does not apply to light globes, batteries, filters or similar perishable parts.
4. Parts and Appliances not supplied by Electrolux are not covered by this warranty.
5. To the extent permitted by law, you will bear the cost of transportation, travel and delivery of the Appliance to and from Electrolux or its ASC. If you reside outside of the service area, you will bear the cost of:
 - (a) travel of an authorised representative;
 - (b) transportation and delivery of the Appliance to and from Electrolux or its ASC.In all instances, unless the Appliance is transported by Electrolux or an AEG authorised representative, the Appliance is transported at the owner's cost and risk while in transit to and from Electrolux or its ASC.
6. Proof of purchase is required before you can make a claim under this warranty.

7. You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Electrolux is not liable in the following situations (which are not exhaustive):
 - (a) the Appliance is damaged by:
 - (i) accident
 - (ii) misuse or abuse, including failure to properly maintain or service
 - (iii) normal wear and tear
 - (iv) power surges, electrical storm damage or incorrect power supply
 - (v) incomplete or improper installation
 - (vi) incorrect, improper or inappropriate operation
 - (vii) insect or vermin infestation
 - (viii) failure to comply with any additional instructions supplied with the Appliance;
 - (b) the Appliance is modified without authority from Electrolux in writing;
 - (c) the Appliance's serial number or warranty seal has been removed or defaced;
 - (d) the Appliance was serviced or repaired by anyone other than Electrolux, an authorised repairer or ASC.
8. This warranty, the contract to which it relates and the relationship between you and Electrolux are governed by the law applicable where the Appliance was purchased. Where the Appliance was purchased in New Zealand for commercial purposes the Consumer Guarantee Act does not apply.
9. To the extent permitted by law and subject to your non-excludable statutory rights and warranties, AEG excludes all warranties and liabilities (other than as contained in this document) including liability for any loss or damage whether direct or indirect arising from your purchase, use or non use of the Appliance.
10. For AEG Appliances and services in Australia, the Appliances come with a guarantee that cannot be excluded under the ACL. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure. The benefits to you given by this warranty are in addition to your other rights and remedies under a law in relation to the Appliances or services to which the warranty relates.
11. At all times during the Warranty Period, Electrolux shall, at its discretion, determine whether repair, replacement or refund will apply if an Appliance has a valid warranty claim applicable to it.
12. For Appliances and services provided in New Zealand, the Appliances come with a guarantee pursuant to the provisions of the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act.
13. To enquire about claiming under this warranty, please follow these steps:
 - (a) carefully check the operating instructions, user manual and the terms of this warranty;
 - (b) have the model and serial number of the Appliance available;
 - (c) have the proof of purchase (e.g. an invoice) available;
 - (d) telephone the numbers shown below.
14. You accept that if you make a warranty claim, Electrolux and its ASC may exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

Important Notice

Before calling for service, please ensure that the steps listed in clause 13 above have been followed.

<p>FOR SERVICE</p> <p>or to find the address of your nearest state service centre in Australia PLEASE CALL 1300 363 664 OR EMAIL customercare@aegaustralia.com.au For the cost of a local call (Australia only)</p>	<p>SERVICE AUSTRALIA</p> <p> aeg.com/au</p>	<p>FOR SPARE PARTS</p> <p>or to find the address of your nearest state spare parts centre in Australia PLEASE CALL 13 13 50 OR EMAIL customercare@aegaustralia.com.au For the cost of a local call (Australia only)</p>
<p>FOR SERVICE</p> <p>or to find the address of your nearest authorised service centre in New Zealand FREE CALL 0800 10 66 10 OR EMAIL customercare@electrolux.co.nz (New Zealand only)</p>	<p>SERVICE NEW ZEALAND</p> <p> aeg.co.nz</p>	<p>FOR SPARE PARTS</p> <p>or to find the address of your nearest state spare parts centre in New Zealand FREE CALL 0800 10 66 20 OR EMAIL customercare@electrolux.co.nz (New Zealand only)</p>

