 


Applications

⚠ Before using the washer-dryer for the first time, ensure that it is correctly installed and connected. Install and connect the appliance as described in the operating instructions.

 
It is **essential** to read the separate operating instructions.

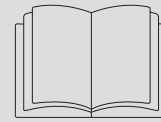

You can use this washer-dryer to:


- **wash separately**
with a maximum load of 8.0 kg,
- **dry separately**
with a maximum load of 5.0 kg,
- or
- **wash and dry in a continuous sequence**
with a maximum load of 5.0 kg.

Operation

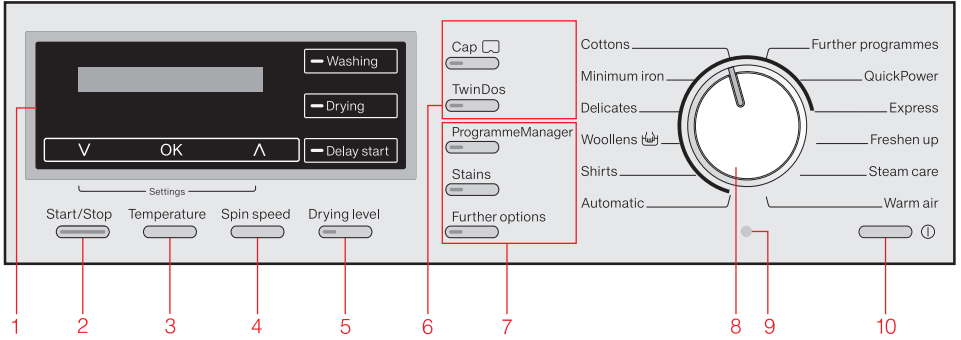

- 1 Display with sensors**
See points 11 to 16 for more information.
- 2 Start/Stop button**
For starting the programme selected and cancelling a programme once it has started.
- 3 Temperature button**
For selecting a wash temperature.
- 4 Spin speed button**
For selecting the spin speed.
- 5 Drying level button**
For selecting the drying level.

 - 6 Dispensing buttons**
For selecting automatic detergent dispensing and CapDosing.
- 7 Options buttons**
Various options can be added to the programmes.
- 8 Programme selector**
For selecting washing and drying programmes.
- 9 Optical interface**
For service technicians.
- 10 On button**
For switching the washer-dryer on and off.

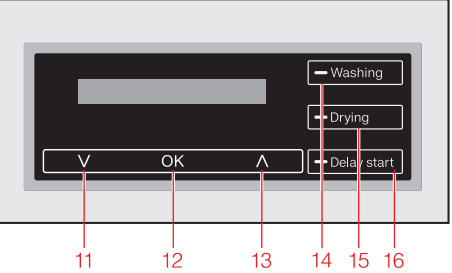

- 11 V sensor**
Scrolls down the list to the next option or decreases a value.
- 12 OK sensor**
Confirms the programme selected, a value set or opens a sub-menu.
- 13 ^ sensor**
Scrolls up the list to the next option or increases a value.
- 14 Washing sensor**
For selecting the washing function.
- 15 Drying sensor**
For selecting the drying function.
- 16 Delay start sensor**
For selecting Delay start.

Separate washing

1. Preparing the laundry

- Empty all pockets.
- ⚠ Foreign objects (e.g. nails, coins, paper clips etc.) can cause damage to fabrics and to components in the machine.
- Sort the laundry by colour and by care label. Most garments have a textile care label in the collar or side seam.
- Pre-treat stains and badly soiled areas (see the booklet “Miele’s guide to laundry care”).

2. Selecting a programme

- Switching the washer-dryer on**
- Press the On button.

- Selecting a programme via the programme selector**
- Turn the programme selector to the required programme.
- The maximum load for the wash programme selected will appear in the display. This will then be replaced by the standard display.

- Selecting a programme via “Further programmes”**
- Turn the programme selector to *Further programmes*.
 - Touch the V or ^ sensor until the programme you want appears in the display.
 - Confirm the programme with the OK sensor.
- The maximum load for the wash programme selected will appear in the display. This will then be replaced by the standard display.

 
3. Loading the drum

Opening the door

- Reach under the door grip and pull the door open. The load display will appear.
- Unfold the laundry and load loosely in the drum.
- Pay attention to the load indication.

Closing the door

- Make sure that no items are caught between the door and the seal.
- Shut the door with a gentle swing. The display will ask you to enter the degree of soiling of the laundry.

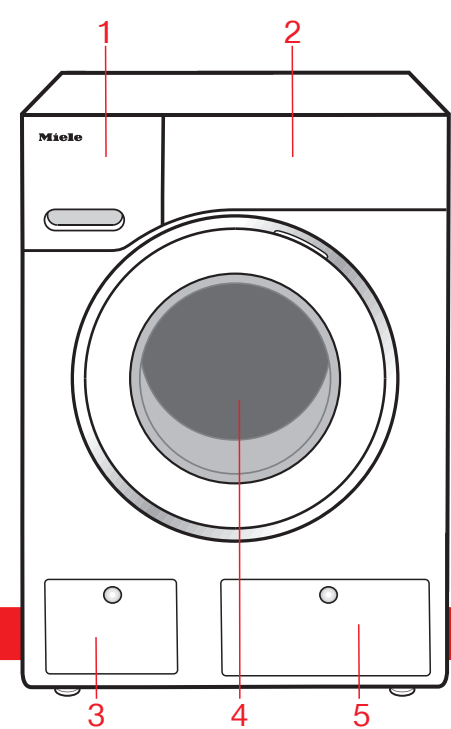

4. Selecting programme settings

- Selecting the degree of soiling**
- Select the degree of soiling with the V or ^ sensor and confirm with OK. The dosage display will appear.

- Confirming the detergent dosage display**
- Confirm with OK.

- Selecting the temperature**
- Press the Temperature button.
 - Set the temperature you want with the V and ^ sensors and confirm your selection with the OK sensor.

- Selecting the spin speed**
- Press the Spin speed button.
 - Set the spin speed you want with the V and ^ sensors and confirm your selection with the OK sensor.

- Selecting options**
- Use the ProgrammeManager, Stains or Further options buttons for selecting the options you want.

- Selecting Delay start**
- Select a Delay start time if required.

5. Adding detergent

Detergent can be dispensed via TwinDos, via the detergent dispenser drawer or with Caps.

TwinDos

- The optimum amount of UltraPhase 1 and UltraPhase 2 will be dispensed automatically according to the colour mix of the load.
- Press the TwinDos button.

Detergent dispenser drawer

- Pull out the detergent drawer and add detergent to the compartments U, U or S.

CapDosing

- There are different types of capsules available. Each capsule contains the correct amount of detergent for one wash cycle.
- Press the Cap button, select the type of capsule and place a capsule in the Cap compartment.

Separate drying

DRYING

If you have washed a full load of laundry and you wish to dry the laundry in the washer-dryer afterwards, you will have to remove half the load and carry out the drying process in two loads.

1. Preparing the laundry

- Sort the laundry according to the type of fibre and weave, garment care label symbol and the drying level required.
- Before drying, check the drying symbol on the care label.

2. Selecting a programme

- Switching the washer-dryer on**
- Press the On button.

- Selecting a programme via the programme selector**
- Turn the programme selector to the required programme.

- Selecting a programme via “Further programmes”**
- Turn the programme selector to *Further programmes*.
 - Touch the V or ^ sensor until the programme you want appears in the display.
 - Confirm with OK.

4. Selecting programme settings

- Selecting the drying level**
- Press the Drying level button. Select the drying level or duration you want with the V and ^ sensors and confirm your selection with OK.

Selecting drying

- Touch the Washing and Drying sensors until just the Drying indicator light remains on.

The Washing indicator light must **not** be lit up as this would mean that the relevant wash programme would begin before the drying process.

3. Loading the drum

Opening the door

- Reach under the door grip and pull the door open.
- Load the laundry loosely in the drum.

Do not overload the drum. Overloading can cause unnecessary wear and tear of the laundry, give a disappointing drying result and cause more creasing.

- Remove foreign objects like detergent dispensing devices from the laundry.

⚠ They can melt and damage the dryer and the laundry.

Closing the door

- Shut the door with a gentle swing.
- Make sure that no items are caught between the door and the seal.

Selecting thermospin

- Press the Spin speed button.
- Set the spin speed you want with the V and ^ sensors and confirm your selection with OK.

Selecting options

- Select the option you want using either the ProgrammeManager or Further options button.

Selecting Delay start

- Select a Delay start time if required.

5. Starting the programme

- Press the flashing Start/Stop button. The door will lock and the drying programme will start. The programme status will appear in the display.

The mains water tap must be kept open for drying.

6. At the end of the programme

- The door remains locked during the anti-crease phase.
- Press the Start/Stop button. The door will be unlocked.

If you have unloaded the drum during the anti-crease phase, make sure you spread out the laundry to cool it down.

- Pull open the door.
- Remove the laundry.

See the section “After each washing or drying programme” in the chapter “Washing and drying in a continuous sequence”.

- Switch the washer-dryer off.

Changing the programme sequence

Cancelling a programme

- Press the Start/Stop button and select *Cancel programme*.
- Touch the OK sensor. The suds will be drained away or the laundry will be cooled down before the door can be opened.

Removing the laundry

- Pull the door open and unload the drum.

Selecting another programme

- Close the door.
- Select the required programme.
- Press the Start/Stop button.

Interrupting a programme

- Switch the washer-dryer off with the On button.
- To continue the programme, switch the washer-dryer back on with the On button.

⚠ Do not switch the washer-dryer off before the end of a drying programme. If this is done, all items must be removed immediately and spread out to cool down.

Changing

Changing a programme

- after the programme has started is not possible.

Changing the temperature

- is possible up to 5 minutes after the programme has started (not with the Cottons programme).
- Press the Temperature button.
- Change the temperature using the V or ^ sensors and confirm your choice with OK.

Changing the spin speed

- is possible up to the start of the spin cycle.
- Press the Spin speed button and change the spin speed.

Changing the drying level / drying duration

- is possible while a wash programme is running.
- Press the Drying level button and change the drying level.

Selecting or deselecting drying

- is possible while a wash programme is running.
- Touch the Drying sensor.

Changing options

- Some options can be selected or deselected after a programme has started.

Changes cannot be made while the safety lock is active.

Adding or removing laundry

- You can add or remove items during the first few minutes after the programme has started.
- Press the Start/Stop button.
 - Select **Add laundry** using the V or ^ sensor.

If this message does not appear in the display, then it is no longer possible to add or remove items of laundry.

- Confirm with OK. The programme will stop and the door will unlock.
- Pull open the door and add or remove items.
- Close the door.
- Press the Start/Stop button.
- The programme will continue.

SEPARATE DRYING

M.-Nr. 10 868 090