




## 30 Litre Electronic Microwave Owner 's Instruction Manual

### IV600FBI

Read the Instructions carefully and Keep for Future Reference

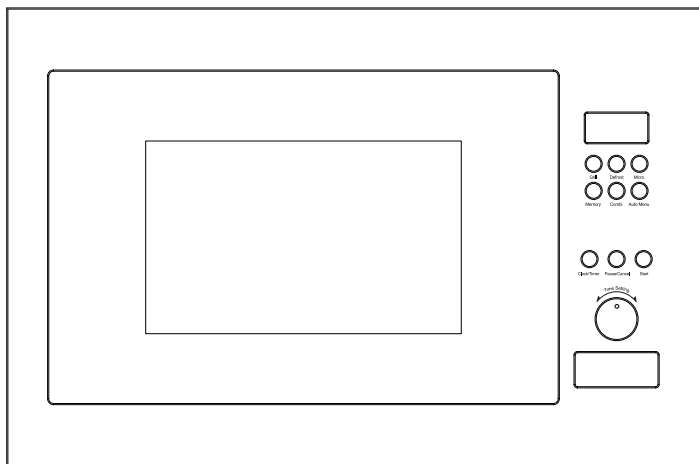

## IMPORTANT SAFETY INSTRUCTIONS

When Using Electrical Appliance Basic Safety Precautions Should Be Followed, Including The Following:

Warning: To Reduce The Risk Of Burns, Electric Shock, Fire, Injury To Persons Or Exposure To Excessive Microwave Energy:

- 1.Read All Instructions Before Using The Appliance.
- 2.Use This Appliance Only For Its Intended Use As Described In This Manual. Do Not Use Corrosive Chemicals Or Vapors In This Appliance. This Type Of Oven Is Specifically Designed To Heat, Cook Or Dry Food. It Is Not Designed For Industrial Or Laboratory Use.
- 3.Do Not Operate The Oven When Empty.
- 4.Do Not Operate This Appliance If It Has A Damaged Cord Or Plug, If It Is Not Working Properly Or If It Has Been Damaged Or Dropped. If The Supply Cord Is Damaged, It Must Be Replaced By The Manufacturer Or Its Service Agent Or A Similarly Qualified Person In Order To Avoid A Hazard.
- 5.Warning: When The Appliance Is Operated In The Combination Mode, Children Should Only Use The Oven Under Adult Supervision Due To The Temperatures Generated.
- 6.Warning: Only Allow Children To Use The Oven Without Supervision When Adequate Instructions Have Been Given So That The Child Is Able To Use

The Oven In A Safe Way And Understands The Hazards Of Improper Use.

7.To Reduce The Risk Of Fire In The Oven Cavity:

A.When Heating Food In Plastic Or Paper Container, Keep An Eye On The Oven Due To The Possibility Of Ignition.

B.Remove Wire Twist-ties From Paper Or Plastic Bags Before Placing Bag In Oven.

C.If Smoke Is Observed, Switch Off Or Unplug The Appliance And Keep The Door Closed In Order To Stifle Any Flames.

D.Do Not Use The Cavity For Storage Purposes. Do Not Leave Paper Products, Cooking Utensils Or Food In The Cavity When Not In Use.

8.Warning: Liquid Or Other Food Must Not Be Heated In Sealed Containers Since They Are Liable To Explode.

9.Microwave Heating Of Beverage Can Result In Delayed Eruptive Boiling, Therefore Care Has To Be Taken When Handle The Container.

10.Do Not Fry Food In The Oven. Hot Oil Can Damage Oven Parts And Utensils And Even Result In Skin Burns.

11.Eggs In Their Shell And Whole Hard-boiled Eggs Should Not Be Heated In Microwave Ovens Since They May Explode Even After Microwave Heating Has Ended.

12.Pierce Foods With Heavy Skins Such As Pota

toes, Whole Squashes, Apples And Chestnuts Before Cooking.

13.The Contents Of Feeding Bottles And Baby Jars Should Be Stirred Or Shaken And The Temperature Should Be Checked Before Serving In Order To Avoid Burns.

14.Cooking Utensils May Become Hot Because Of Heat Transferred From The Heated Food. Potholders May Be Needed To Handle The Utensil.

15.Utensils Should Be Checked To Ensure That They Are Suitable For Use In Microwave Oven.

16.Warning: It Is Hazardous For Anyone Other Than A Trained Person To Carry Out Any Service Or Repair Operation Which Involves The Removal Of Any Cover Which Gives Protection Against Exposure To Microwave Energy.

17.This Product Is A Group 2 Class B Ism Equipment. The Definition Of Group 2 Which Contains All Ism (Industrial, Scientific And Medical) Equipment In Which Radio-frequency Energy Is Intentionally Generated And/or Used In The Form Of Electromagnetic Radiation For The Treatment Of Material, And Spark Erosion Equipment. For Class B Equipment Is Equipment Suitable For Use In Domestic Establishments And In Establishments Directly Connected To A Low Voltage Power Supply Network Which Supplies Buildings Used For Domestic Purpose. For Domestic Purpose.

18.This Appliance Is Not Intended For Use By Persons (Including Children) With Reduced Physical, Sensory Or Mental Capabilities, Or Lack Of Experience And Knowledge, Unless They Have Been Given Supervision Or Instruction Concerning Use Of The Appliance By A Person Responsible For Their Safety.

19.Children Should Be Supervised To Ensure That They Do Not Play With The Appliance.

20.The Microwave Oven Is Only Used In Freestanding.

21.Warning: Do Not Install Oven Over A Range Cooktop Or Other Heat-producing Appliance. If Installed Could Be Damaged And The Warranty Would Be Avoid .

22.The Accessible Surface May Be Hot During Operation.

23.The Microwave Oven Shall Not Be Placed In A Cabinet.

24.The Door Or The Outer Surface May Get Hot When The Appliance Is Operating.

25.The Temperature Of Accessible Surfaces May Be High When The Appliance Is Operating.

26.The Appliance Shall Be Placed Against A Wall.

27.Appliance Is Not To Be Used By Children Or Persons With Reduced Physical, Sensory Or Mental Capabilities, Or Lack Of Experience And Knowledge,

Unless They Have Been Given Supervision Or Instruction.

28.Children Being Supervised Not To Play With Appliance

29.Warning: If The Door Or Door Seals Are Damaged, The Oven Must Not Be Operated Until It Has Been Repaired By A Competent Person

30.The Instructions Shall State That Appliances Are Not Intended To Be Operated By Means Of An External Timer Or Separate Remote-control System.

31.The Microwave Oven Is For Household Use Only And Not For Commercial Use.

32.Never Remove The Distance Holder In The Back Or On The Sides, As It Ensures A Minimum Distance From The Wall For Air Circulation.

33.Please Secure The Turn Table Before You Move The Appliance To Avoid Damages.

34.Caution: It Is Dangerous To Repair Or Maintain The Appliance By No Other Than A Specialist Because Under These Circumstances The Cover Have To Be Removed Which Assures Protection Against Microwave Radiation. This Applies To Changing The Power Cord Or The Lighting As Well. Send The Appliance In These Cases To Our Service Centre.

35.The Microwave Oven Is Intended For Defrosting, Cooking And Steaming Of Food Only.

36. Use Gloves If You Remove Any Heated Food.

37.Caution! Steam Will Escape, When Opening Lids Or Wrapping Foil.

38.If Smoke Is Emitted, Switch Off Or Unplug The Appliance And Keep The Door Closed In Order To Stifle.



CAUTION: Hot surface.

This appliance can be used by children aged from 8 years and above and persons with reduced Physical,sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.Children shall not play with the appliance.Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.

## SPECIFICATIONS

Power consumption:	240V~50Hz, 1450W
Output:	900W
Grill Heater:	1200W
Operating Frequency:	2,450MHz
Outside Dimensions:	592mm(W) X 430mm(D) X 390mm(H)
Oven Cavity Dimensions:	350mm(W) X 372mm(D) X 232mm(H)
Oven Capacity:	30 litres
Uncrated Weight:	Approx. 17.5kg

## BEFORE YOU CALL FOR SERVICE

1. If the oven will not perform at all, the display does not appear or the display disappears:
  - a) Check to ensure that the oven is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds and plug it in again securely.
  - b) Check the premises for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
2. If the microwave power does not function:
  - a) Check to see whether the timer is set.
  - b) Check to make sure that the door is securely closed to engage the safety interlocks. Otherwise, the microwave energy will not flow into the oven.

IF NONE OF THE ABOVE RECTIFIES THE SITUATION, THEN CONTACT THE AUTHORIZED SERVICE AGENT.

### **Note:**

**The appliance is for household use for heating food and beverages using electromagnetic energy and for indoor use only.**

## RADIO INTERFERENCE

Microwave oven may cause interference to your radio, TV, or similar equipment. When interference occurs, it may be eliminated or reduced by the following procedures.

- a. Clean the door and sealing surface of the oven.
- b. Place the radio, TV, etc. as far away from your microwave oven as possible.
- c. Use a properly installed antenna for your radio, TV, etc. to get a strong signal reception.



## INSTALLATION

1. Make sure all the packing materials are removed from the inside of the door.
2. Inspect the oven after unpacking for any visual damage such as:
  - Misaligned Door
  - Damaged Door
  - Dents or Holes in Door Window and Screen
  - Dents in CavityIf any of the above are visible, DO NOT use the oven.
3. This Microwave Oven weighs 14.5 kg and must be placed on a horizontal surface strong enough to support this weight.
4. The oven must be placed away from high temperature and steam.
5. DO NOT place anything on top of the oven.
6. DO NOT remove the turn -table drive shaft.
7. As with any appliance, close supervision is necessary when used by children.

## WARNING-THIS APPLIANCE MUST BE EARTHED.

1. The plug socket should be within easy reach of the power cord
2. This oven requires 1.5 KVA for its input. consultation with service engineer is suggested when installing the oven.

CAUTION: This oven is protected internally by ac 250V, 10 Amp Fuse.

## IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:

Green-and-yellow	: Earth
Blue	: Neutral
Brown	: Live

As the colours of the wires in the mains leads of the appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green-and-yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol  $\perp$  coloured green of green-and-yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

## IMPORTANT SAFETY INSTRUCTIONS

- WARNING: When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated; (Only for the model with grill function)
- WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person;
- WARNING: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy;
- WARNING: liquids and other foods must not be heated in sealed containers since they are liable to explode.
- WARNING: Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use;
- The oven must have sufficient air flow.Keep 10 cm space at back;15 cm at both sides and 30cms from top of the oven.Don't remove oven's feet, do not block air events of the oven.
- Only use utensils that are suitable for use in microwave ovens.
- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition;
- If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames;
- Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container;
- The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns;
- Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended;
- When cleaning surfaces of door, door seal, cavity of the oven, use only mild, nonabrasive soaps, or detergents applied with a sponge or soft cloth.
- The oven should be cleaned regularly and any food deposits removed;
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation;
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

## SAFETY INSTRUCTIONS FOR GENERAL USE

Listed below are, as with all appliances, certain rules to follow and safeguards to assure top performance from this oven:

1. Always have the glass tray, roller arms, coupling and roller track in place when operating the oven.
2. Do not use the oven for any reason other than food preparation, such as for drying clothes, paper, or any other nonfood items, or for sterilizing purposes.
3. Do not operate the oven when empty. This could damage the oven.
4. Do not use the oven cavity for any type of storage,such a papers, cookbooks, etc.
- 5.Do not cook any food surrounded by a membrane,such as egg yolks,potatoes,chicken livers,etc without first being pierced several times with a fork.

6. Do not insert any object into the openings on the outer case.
7. Do not at any time remove parts from the oven such as the feet, coupling, screws, etc.
8. Do not cook food directly on the glass tray. Place food in/on proper cooking utensil before placing in the oven.

**9. IMPORTANT-COOKWARE NOT TO USE IN YOUR MICROWAVE OVEN**

Do not use metal pans or dishes with metal handles.

Do not use anything with metal trim.

Do not use paper covered wire twist-ties on plastic bags.

Do not use melamine dishes as they contain a material which will absorb microwave energy. This may cause the dishes to crack or char and will slow down the cooking speed.

Do not use Centura Tableware. The glaze is not suitable for microwave use. Corelle Livingware closed handle cups should not be used.

Do not cook in a container with a restricted opening, such as a pop bottle or salad oil bottle, as they may explode if heated in a microwave oven.

Do not use conventional meat or candy thermometers. There are the thermometers available specifically for microwave cooking. These may be used.

10. Microwave utensils should be used only in accordance with manufacturer's instructions.
11. Do not attempt to deep-fry foods in this oven.
12. Please remember that a microwave oven only heats the liquid in a container rather than the container itself. Therefore, even though the lid of a container is not hot to the touch when

removed from the oven, please remember that the food/liquid inside will be releasing the same amount of steam and/or spitting when the lid is removed as in conventional cooking.


13. Always test the temperature of cooked food yourself especially if you are heating or cooking food/liquid for babies. It is advisable never to consume food/liquid straight from the oven but allow it to stand for a few minutes and stir food/liquid to distribute heat evenly.
14. Food containing a mixture of fat and water, e.g. stock, should stand for 30-60 seconds in the oven after it has been turned off. This is to allow the mixture to settle and to prevent bubbling when a spoon is placed in the food/liquid or a stock cube is added.

15. When preparing/cooking food/liquid and remember that there are certain foods, e.g. Christmas puddings, jam and mincemeat, which heat up very quickly. When heating or cooking foods with a high fat or sugar content do not use plastic containers.
16. Cooking utensil may become hot because of heat transferred from the heated food. This is especially true if plastic wrap has been covering the top and handles of the utensil. Potholders may be needed to handle the utensil.

17. To reduce the risk of fire in the oven cavity:


- (a) Do not overcook food. Carefully attend microwave oven if paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
- (b) Remove wire twist-ties from bags before placing bag in oven.
- (c) If materials inside the oven should ignite, keep oven door closed, turn the oven off at the wall switch, or shut off power at the fuse or circuit breaker panel.

**FEATURE DIAGRAM**

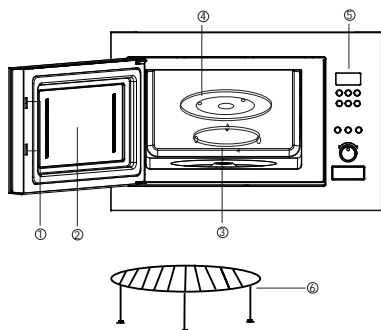

- (1) Door Safety Lock System
- (2) Oven Window
- (3) Roller Ring
- (4) Glass Tray
- (5) Control Panel
- (6) Grill rack

COMPUTER CONTROL PANEL

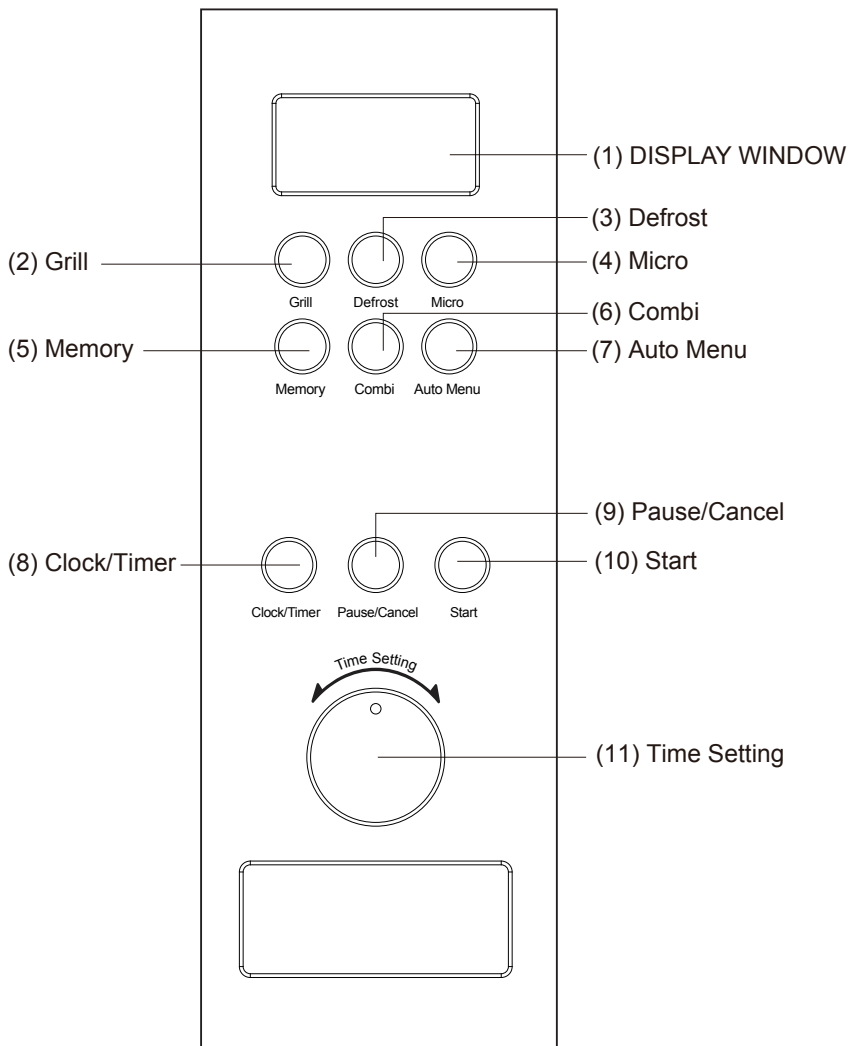

## Operation Instruction

### 1 Single Button Heating

Only with a single press of a button, you can start simple cooking, it is very convenient and quick to heat a glass of water etc.

Example: To heat a glass of milk

- a) Put a glass of milk onto the glass turntable, and close the door.
- b) Press the button "Start", the microwave oven will work on 100% power for 1 minutes.
- c) You will hear 5 beeps when cooking is completed.

### 2 Microwave Heating

This function has two options.

#### 1) Quick microwave heating (100% power)

Example: to heat food on 100% power for 5 minutes

- a) Set cooking time to "5:00"
- b) Press "Start"

#### 2) Manual-operation microwave heating

Example: To heat food on 70% power for 10 minutes

- a) Press "Micro" button, select "70%" power;
- b) Set time cooking to "10:00"
- c) Press "Start"

There are 5 power levels and the longest microwave heating time is 60 minutes.

Touching times	Microwave power	Display
1	100%	P100
2	70%	P70
3	50%	P50
4	30%	P30
5	10%	P10

### 3. Auto weight defrost

Select the food type and weight, it will automatically help you to adjust the power level and time.

Example: defrost 500g frozen meat.

- a) Press the button "Auto defrost", "dEF" will be displayed.
- b) Rotate the knob "Time setting" to set the weight 500g.
- c) Press "Start"

The weight of food must be less than 2000g.

### 4. Auto-Menu

You only need to select the food type and weight, it will automatically adjust the power and time.

Example: Auto cooking 400g fish

- A) Press "Auto menu" button until "A-5" display
- B) Rotate the knob "Time setting" until "400" display.
- C) Press "Start"

Weight Touching Times	Menu	A-1	A-2	A-3	A-4	A-5	A-6
		Rice	Vegetable	Meat	Spaghetti	Fish	Bread
1		100	100	200	1	100	100
2		200	200	300	2	200	200
3		300	300	400		300	300
4		400	400	500		400	400
5		500	500	600		500	500
6			600	800		600	600
7				1000		700	
8						800	
9						900	
10						1000	

#### 5. Memory cooking function:

This function can memorize some useful cooking programmes to avoid resetting time and power operation.

a) If no memory has been set press "memory" "1" will be displayed, input cooking power and time, press "memory" again, the set program will be memorized. If you press "Start" instead of "memory" button, the oven will start work, and the program also will be memorized.

b) If there is any memory has been set already, when you press "memory" button, "1" will be displayed, the oven will operate according to the memorized program after you press "Start" button.

The programme will not be kept when the electricity is off.

#### 6. Grill

This function has two patterns, you may press "Grill" to select such functions: (the longest cooking time is 60 minutes).

Pattern 1: 85% grill power, display G-1

Pattern 2: 50% grill power, display G-2

Example: Cooking food with G-1 for 20 minutes

A) Press "Grill" until the LED displayed "G-1".

B) Set cooking time "20:00"

C) Press "Start"

When grilling, the food isn't heated by microwave, heat is radiated from the metal heater at the top of the oven. When grill is working, the cooking time has 2 stages, after the 1st half of the cooking, the program will automatically pause and sound 2 beeps, indicating you to open the oven and turn food over, close the door after turn the food over, press "Start" button, the cooking will continue for the 2nd half. If you do not want to turn the food over, the oven will re-start after 1 min pause.

## 7. Combination Cooking

This appliance offers you a choice of two methods of combination cooking.

Option 1 : 55% Micro + 45% Grill), display "C-1"

Option 2 : 30% Micro + 70% Grill), display "C-2"

Example : Cooking food using option 2 for 30 minutes.

- a) Press "Combi" button to select "C-2"
- b) Set cooking time for 30 minutes
- c) Press "Start "

## 8. Clock

The oven can be used as a clock.

Example: to input current time 16:30

- A) Press "Clock", the clock symbol will flash in display. Rotate the "Time setting" knob to set "16:00".
- B) Press "Clock" again, rotate the "Time setting" knob to set "16:30"
- C) Press "Clock" again, the clock setting is finished, the time start to go on working.

## 9. Timer

The timer function helps the microwave oven begin automatic cooking at set time, and automatically stop operation after finishing cooking. (You should set the clock before using timer function).

Example: the current time of microwave oven is 16:30, to set cooking at 18:15 on 70% power for 10 minutes.

- A) Press "Timer" and set time to 18:15 (same procedure as setting clock).
- B) Press "Micro" to set 70% power.
- C) Input cooking time 10 minutes by rotating the knob "Time Setting".
- D) Press "Start" .

If you don't set power and cooking time (omit B and C steps), and directly press "Start" button, the microwave oven will work only as a clock, there will be 10 beeps at 18:15, but no other function will run.

## 10. Child-safety lock


To activate the child safety lock, press "Auto Menu" and "Combi" button at the same time for 2 seconds. Press "Auto Menu" and "Combi" button, at the same time for 2 seconds again, it will unlock this function.

## 11. Pause/Cancel

- a) In the course of operation, pressing "Pause/Cancel" button will stop operation.
- b) If any program was set before pressing start, pressing this button will cancel all the set program.

## CARE OF YOUR MICROWAVE OVEN

1. Turn the oven off and remove the power plug from the wall socket before cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. The use of harsh detergent or abrasives is not recommended.
3. The outside oven surface should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Do not allow the Control Panel to become wet. Clean with a soft, damp cloth. Do not use detergents, abrasives or spray-on cleaners on the control Panel.
5. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity conditions and in no way indicates malfunction of the unit.
6. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
7. The roller ring and oven cavity floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent, water or window cleaner and dry. The roller ring may be washed in mild sudsy water or dish washer. Cooking vapour collect during repeated use but in no way affect the bottom surface or roller ring wheels.  
When removing the roller ring from cavity floor for cleaning, be sure to replace it in the proper position.
8. Remove odors from your oven by combining a cup of water with the juice and skin of one lemon in a deep microwavable bowl. Microwave for 5 minutes, wipe thoroughly and dry with a soft cloth.
9. When it becomes necessary to replace the oven light, please consult a dealer to have it replaced.

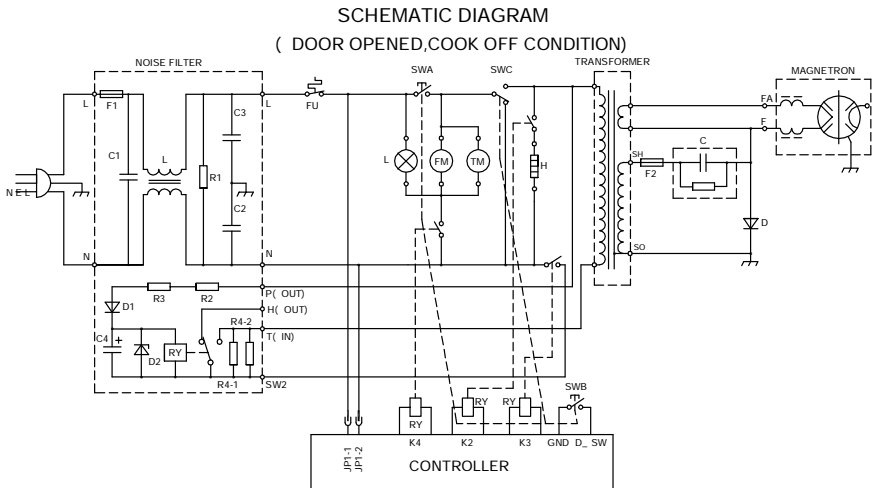

SWA: PRIMARY INTERLOCK SWITCH  
 SWB: SECONDARY INTERLOCK SWITCH  
 SWC: THE MONITOR INTERLOCK SWITCH


L: LAMP  
 FM: FAN MOTOR  
 TM: TURNTABLE MOTOR  
 H: HEATER

\*CIRCUIT SUBJECT TO CHANGE WITHOUT NOTICE



## ► INSTALLATION


### Assemble Indicator Figure

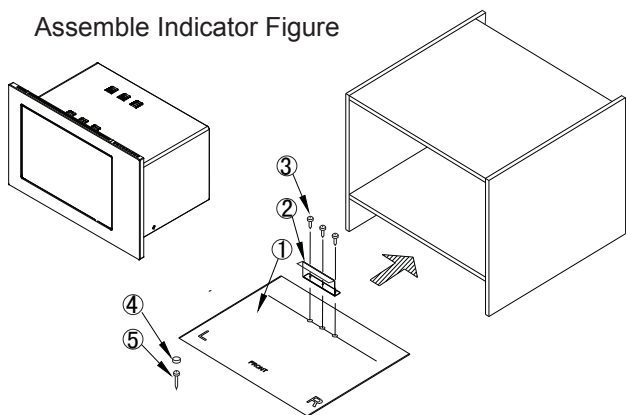

1. The Indicator Chart Paper
2. Orientation
3. Bolts M4 × 10mm
4. Screw Cover
5. Bolts M4 × 35mm

## ► INSTALLATION METHOD




1: Make sure the cabinet dimension are as follows:  
550 (depth) x 565mm (width) x 365mm (height)

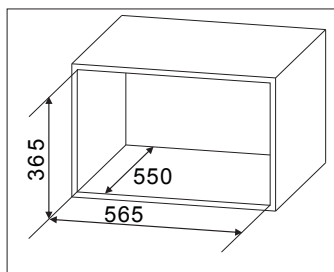

2: Put the indicator chart paper into the cabinet, and assemble the orientation in the position with three screw, this position has marked in the indicator chart paper

Attention:

1. Indicator chart should aligned with the left edge, right edge and front edge
2. The orientation fixing is shown as per picture 3

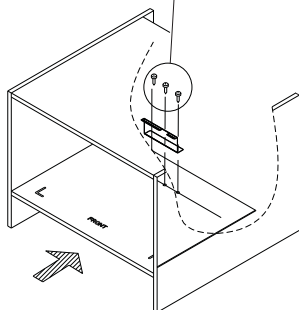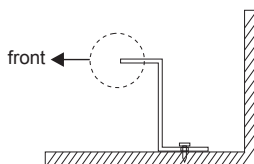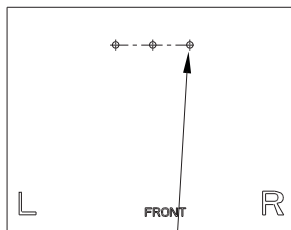


3. Put the microwave oven into the cabinet.  
make sure both sides of microwave walls  
are equally arranged and installed to the  
cabinet and the orientation must securely  
hold the back of the microwave oven

4. After the position fixed ,then open the  
door of the microwave oven and locate  
the screw hole infront of the cavity.  
Assemble the screw (M4 x 35mm) to  
tighten the microwave oven to the  
cabinet and cover the screw head with  
the screw cover provided to finish the  
last step

**Attention:**

Cabinet back and bottom should  
keep a distance of not less than 100mm  
as shown below for heat venting purpose

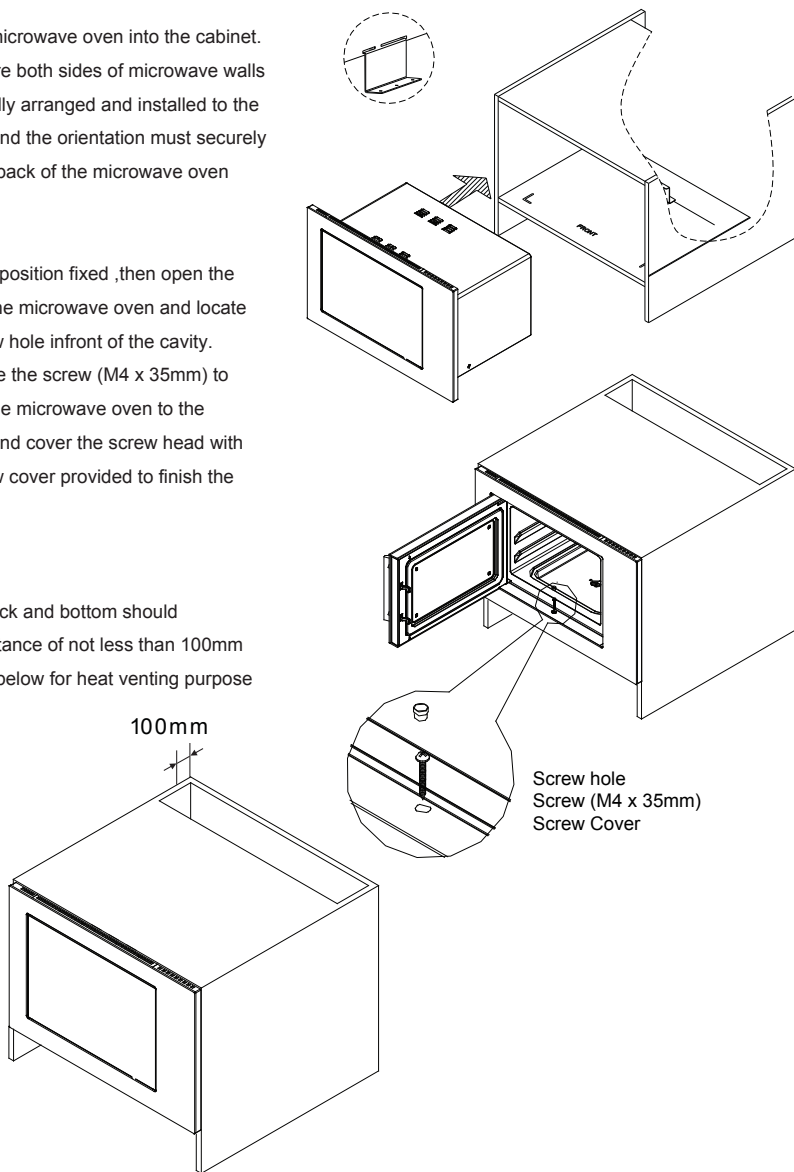

# Warranty Card

ilve.com.au

**Eurolinx Pty Limited A.B.N. 50 001 473 347  
trading as ILVE ("ILVE")**

**Office:**

**48-50 Moore Street, Leichhardt N.S.W 2040**

**Post:**

**Locked Bag 3000, Annandale, N.S.W 2038**

**P: 1300 856 411**

## WARRANTY REGISTRATION

Your ongoing satisfaction with your ILVE product is important to us. We ask that you complete the enclosed Warranty Registration Card and return it to us so that we have a record of the ILVE product purchased by you.

## PRIVACY

ILVE respects your privacy and is committed to handling your personal information in accordance with the National Privacy Principles and the Privacy Act 1988 (Cth). A copy of the ILVE Privacy Policy is available at [www.ilve.com.au](http://www.ilve.com.au). ILVE will not disclose any personal information set out in the Warranty Registration Card ("Personal Information") without your consent unless required by:

1. law;
2. any ILVE related company;
3. any service provider which provide services to ILVE or assist ILVE in providing services (including repair and warranty services) to customers. Our purpose in collecting the Personal Information is to keep a record of the ILVE product purchased by you, in order to provide a better warranty service to you in the unlikely event that there is a problem with your ILVE product. ILVE may contact you at any one or more of the address, email address or telephone numbers set out in the Warranty Registration Card. Please contact ILVE on 1300 694 583 should you not wish to be contacted by ILVE.

## WARRANTY

### 1. Warranty

ILVE warrants that each ILVE product will remain, for a period of twenty four (24) months computed from the date of purchase of the ILVE product, free from defects arising in the manufacture of the ILVE product ("Warranty"). Except for consumer guarantees set out in the Competition and Consumer Act 2010 (Cth) ("Act"), ILVE does not make any further warranties or representations in relation to ILVE products.

### 2. What is not Covered by the Warranty.

The Warranty does not apply if an ILVE product is defective by a factor other than a defect arising in the manufacture of the ILVE product,

including but not limited to:

- (a) damage through misuse (including failure to maintain, service or use with proper care), neglect, accident or ordinary wear and tear (including deterioration of parts and accessories and glass breakage);
- (b) use for purpose for which the ILVE product was not sold or designed;
- (c) use or installation which is not in accordance with any specified instructions for use or installation;
- (d) use or operation after a defect has occurred or been discovered;
- (e) damage through freight, transportation or handling in transit (other than when ILVE is responsible);
- (f) damage through exposure to chemicals, dusts, residues, excessive voltage, heat, atmospheric conditions or other forces or environmental factors outside the control of ILVE;
- (g) repair, modification or tampering by the purchaser or any person other than ILVE, an employee of ILVE or an authorised ILVE service contractor\*;
- (h) use of parts, components or accessories which have not been supplied or specifically approved by ILVE.
- (i) damage to surface coatings caused by cleaning or maintenance using products not recommended in the ILVE product handbook provided to the purchaser upon purchase of the ILVE product;
- (j) damage to the base of an electric oven due to items having been placed on the base of the oven cavity or covering the base, such as aluminium foil (this impedes the transfer of heat from the element to the oven cavity and can result in irreparable damage); or
- (k) damages, dents or other cosmetic imperfections not affecting the performance of the ILVE in respect of an ILVE product purchased as a "factory second" or from display

The Warranty does not extend to light globes used in ILVE products.

### 3. Domestic Use

Each ILVE product is made for domestic use. This Warranty may not extend to ILVE products used for commercial purposes.

### 4. Time for Claim under the Warranty

You must make any claim under this Warranty within twenty eight (28) days after the occurrence of an event which gives rise to a claim pursuant to the Warranty, by booking a service call on the telephone number below.

Continued over...

## 5. Proof of Purchase

Customers must retain proof of purchase in order to be eligible to make a warranty claim in respect of an ILVE product.

## 6. Claiming under the Warranty

Customers will bear the cost of claiming under this Warranty unless ILVE determines the expenses are reasonable, in which case the customer must claim those expenses by providing written evidence of each expense to ILVE at the address on the Warranty Registration Card.

## 7. Statutory Rights

(a) These terms and conditions do not affect your statutory rights.

(b) The limitations on the Warranty set out in this document do not exclude or limit the application of the consumer guarantees set out in the Act or any other equivalent or corresponding legislation in the relevant jurisdiction where to do so would:

(i) contravene the law of the relevant jurisdiction; or

(ii) cause any part of the Warranty to be void.

(c) ILVE excludes indirect or consequential loss of any kind (including, without limitation, loss of use of the ILVE product) and (other than expressly provided for in these terms and conditions) subject to all terms,

conditions and warranties implied by custom, the general law, the Act or other statute.

(d) The liability of ILVE to you for a breach of any express or non-excludable implied term, condition or warranty is limited at the option of ILVE to:

(i) replacing or repairing the defective part of the ILVE product;

(ii) paying the cost of replacing or repairing the defective part of the ILVE product;

(iii) replacing the ILVE product; or

(iv) paying the cost of replacing the ILVE product.

(e) Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

## 8. Defects

Any part of an ILVE product deemed to be defective and replaced by ILVE is the property of ILVE. ILVE reserves the right to inspect and test ILVE products in order to determine the extent of any defect and the validity of a claim under the Warranty.

\*To locate your closest ILVE authorised service agent please contact ILVE on 1300 856 411 or visit <http://support.ilve.com.au/>

**ALL SERVICE CALLS MUST BE BOOKED THROUGH THE ILVE SERVICE AND WARRANTY DEPARTMENT ON 1300 856 411**

**01012013**

## Warranty Card tear off

WARRANTY REGISTRATION CARD  
01012013

Please complete and send to ILVE at: REPLY PAID 83617  
LEICHHARDT NSW 2040

Last Name:		First Name:
Address:		
State:	Postcode:	Email:
Home Phone:		Mobile:
Purchase Date:     /     /		(Please attach proof of purchase to validate warranty)

MODEL NUMBER	SERIAL NUMBER (if you cannot locate the serial number please call ILVE on 1300 85 64 11)
1	
2	
3	
4	

**01012013**