


Operating and installation instructions

Steam oven

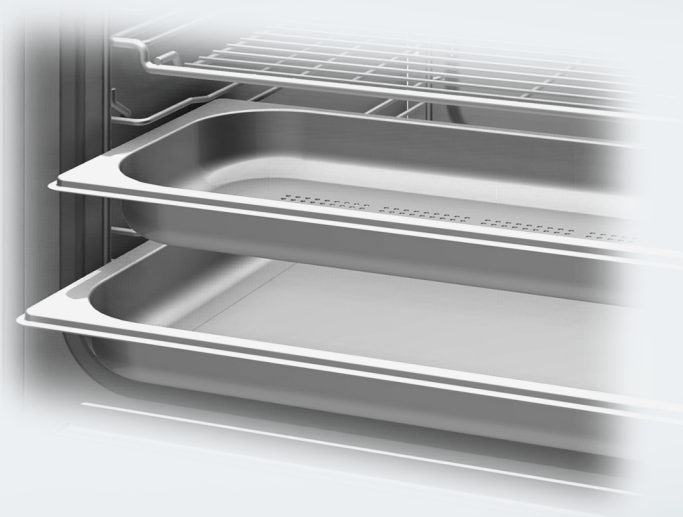


To prevent the risk of accidents or damage to the appliance, it is **essential** to read these instructions before it is installed and used for the first time.


Contents

Warning and Safety instructions	6
Caring for the environment	14
Overview	15
Steam oven front view	15
Accessories supplied	16
Controls	17
Sensors	18
Display	20
Symbols	21
Description of the functions	22
Water container	22
Condensate tray	22
Temperature	22
Duration	22
Noises	22
Heating-up phase	23
Cooking phase	23
Steam reduction	23
Oven interior lighting	23
Using for the first time	24
General settings	24
Cleaning for the first time	25
Setting the water hardness level	26
Setting the correct boiling point for water	26
Main and sub-menus	27
Operation	28
Basic operation	28
Interrupting operation	30
Further functions	31
Switching on and off automatically	31
Sequence of an automatic cooking process	32
Changing settings during a cooking process	32
Cancelling cooking	33
Automatic programmes	34
List of food types	34
Using Automatic programmes	34

User programmes	36
Creating a User programme	36
Starting a User programme.....	38
Changing User programmes	38
Changing cooking stages.....	38
Changing the name	39
Delete User programmes	40
Minute minder △	41
Setting the minute minder	41
Changing the time set for the minute minder	42
Cancelling the time set for the minute minder	42
General notes	43
The advantages of cooking with steam	43
Suitable containers.....	43
Cooking containers	43
Your own containers.....	43
Condensate tray	43
Shelf level	44
Frozen	44
Temperature	44
Duration.....	44
Cooking with liquid.....	44
Your own recipes	44
Steam cooking	45
Vegetables.....	45
Meat	48
Sausages.....	50
Fish.....	50
Shellfish	53
Mussels	54
Rice	55
Pasta / Noodles	56
European dumplings	57
Grains	58
Dried pulses	59
Hen's eggs	61
Fruit	62
Menu cooking.....	63
Sous-vide (vacuum) cooking	65
Reheating	71

Contents

Special applications	73
Reheat	73
Defrost	74
Bottling	77
Extracting juice	80
Making yoghurt	81
Proving yeast dough	82
Dissolving gelatine	83
Melting chocolate	83
Skinning fruit and vegetables	84
Preserving apples	84
Blanching	85
Sweating onions	85
Rendering fat	86
Disinfecting items	86
Heating damp towels	87
Decrystallising honey	87
Preparing custard royale	87
Settings	88
Calling up the "Settings" menu	88
Changing and saving settings	88
Settings overview	89
Language 	90
Time	90
Display	90
Clock format	90
Setting	90
Date	91
Lighting	91
Display brightness	91
Acoustic information	91
Melody	91
Solo tone	91
Keypad tone	92
Units	92
Weight	92
Temperature	92
Keeping warm function	93
Steam reduction	93
Recommended temperatures	94

Safety	94
System lock 	94
Sensor lock	95
Water hardness	95
Showroom programme.....	96
Demo mode.....	96
Factory default settings	96
Cleaning and care	97
Notes on cleaning and care.....	97
Appliance front	98
Oven compartment	99
Water container	99
Accessories	100
Shelf runners	100
Descaling.....	101
Door.....	103
Problem solving guide	105
Optional accessories	108
Cooking containers	108
Cleaning and care products	110
Other accessories	110
Safety instructions for installation	111
Detailed dimensions of oven front	112
Building-in dimensions	113
Installation in a tall unit.....	113
Installation in a base unit.....	114
Installation in a tall unit in combination with an oven.....	115
Installation	116
Electrical connection	117
After sales service, data plate, warranty	119

Warning and Safety instructions

This appliance conforms to current safety requirements. Inappropriate use can, however, lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the appliance, please read these instructions carefully before using it for the first time. They contain important notes on installation, safety, use and maintenance. Miele cannot be held liable for damage caused by non-compliance with these instructions.

Keep these instructions in a safe place and ensure that new users are familiar with the contents. Pass them on to any future owner.

Correct application

- ▶ This steam oven is designed for domestic use and for use in similar environments by guests in hotel or motel rooms, bed & breakfasts and other typical living quarters. This does not include common/shared facilities or commercial facilities within hotels, motels or bed & breakfasts.
- ▶ The steam oven is not suitable for outdoor use.
- ▶ This steam oven must only be used as described in these instructions.
Any other usage is at the owner's risk and could be dangerous.
- ▶ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning its use by a person responsible for their safety, and are able to recognise the dangers of misuse.
- ▶ This steam oven is supplied with a special lamp to cope with particular conditions (e.g. temperature, moisture, chemical resistance, abrasion resistance and vibration). This special lamp must only be used for the purpose for which it is intended. It is not suitable for room lighting. Replacement lamps may only be replaced by a Miele authorised technician.

Warning and Safety instructions

Safety with children

- ▶ Activate the system lock to ensure that children cannot switch on the steam oven inadvertently.
- ▶ Young children must not be allowed to use this appliance.
- ▶ Older children may only use the steam oven when its operation has been clearly explained to them and they are able to use it safely, recognising the dangers of misuse.
- ▶ Cleaning may only be carried out by older children under the supervision of an adult.
- ▶ Please supervise children in the vicinity of the steam oven and do not let them play with it.
- ▶ Danger of suffocation! Children may be able to wrap themselves in packing material or pull it over their heads with the risk of suffocation. Keep children away from any packing material.
- ▶ Danger of burning! Children's skin is far more sensitive to high temperatures than that of adults. Make sure that children do not attempt to open the door when the appliance is in operation. Keep children well away from the appliance until it has cooled down and there is no danger of burning.
- ▶ Danger of injury! The maximum load capacity for the door is 8 kg. Children can hurt themselves on an open door. Ensure that children do not sit on or swing on the door.

Technical safety

- ▶ Repairs and other work by unqualified persons could be dangerous. Installation, maintenance work and repairs to electrical appliances must only be carried out by a Miele approved service technician.
- ▶ A damaged appliance is dangerous. Check the appliance for any visible damage. Never install or attempt to use a damaged appliance.
- ▶ Reliable and safe operation of this oven can only be assured if it has been connected to the mains electricity supply.
- ▶ The electrical safety of this appliance can only be guaranteed when continuity is complete between it and an effective earthing system. It is most important that this basic safety requirement is present and tested regularly and, where there is any doubt, the household wiring system should be inspected by a qualified electrician.
- ▶ Before connecting the appliance to the mains supply, ensure that the connection data on the data plate (voltage and frequency) matches the mains electricity supply. This data must correspond in order to avoid the risk of damage to the appliance. Consult a qualified electrician if in any doubt.
- ▶ Do not connect the appliance to the mains electricity supply by a multi-socket adapter or an extension lead. These do not guarantee the required safety of the appliance (e.g. danger of overheating).
- ▶ For safety reasons, this appliance may only be used after it has been built in.
- ▶ This appliance must not be installed and operated in mobile installations (e.g. on a ship).
- ▶ Tampering with electrical connections or components and mechanical parts is highly dangerous to the user and can cause operational faults. Do not open the outer casing of the appliance.

Warning and Safety instructions

- ▶ The manufacturer's warranty will be invalidated if the appliance is not repaired by a Miele approved service technician.
- ▶ Faulty components must only be replaced by genuine Miele spare parts. The manufacturer can only guarantee the safety of the appliance when Miele replacement parts are used.
- ▶ If the plug has been removed or the connection cable is not supplied with a plug, the steam oven must be connected to the mains supply by a suitably qualified electrician.
- ▶ If the connection cable is damaged, it must be replaced with a special connection cable of type H 05 VV F (pvc insulated), available from Miele, in order to avoid a hazard.
- ▶ During installation, maintenance and repair work, the appliance must be disconnected from the mains electricity supply. It is only completely isolated from the electricity supply when:
 - it is switched off at the mains circuit breaker, or
 - it is switched off at the wall socket and the plug is withdrawn from the socket. Do not pull the mains connection cable but the mains plug to disconnect your appliance from the mains electricity supply.
- ▶ If the steam oven is installed behind a furniture panel (e.g. a door), ensure that the door is never closed whilst the steam oven is in use. Heat and moisture can build up behind a closed furniture panel and cause subsequent damage to the steam oven, the housing unit and the floor. Do not close the door until the steam oven has cooled down completely.
- ▶ In areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings clean at all times. Any damage caused by cockroaches or other vermin will not be covered by the warranty.

Correct use

- ▶ **Danger of burning!** The steam oven becomes hot when in use. Exercise care when handling food and trays so as not to burn yourself on the walls of the steam oven, shelf runners, trays, steam and hot food itself. Use oven gloves when placing food in the steam oven, removing it and when adjusting shelves etc. in a hot steam oven.
When putting cooking containers into the steam oven or taking them out, take care not to spill the contents.
- ▶ **Danger of burning!** There will be some residual hot water in the steam generator at the end of a cooking process. This will be pumped back into the water container. Take care not to spill the contents when taking the water container out of the appliance.
- ▶ Do not use the steam oven to heat up or bottle food in sealed tins. Pressure will build up inside them and they can explode causing damage to the appliance, as well as the risk of injury and scalding.
- ▶ Plastic dishes which are not heat and steam resistant melt at high temperatures and can damage the appliance. Use temperature (to 100 °C) and steam resistant plastic dishes. Follow the manufacturer's instructions.
- ▶ Food which is left in the steam oven can dry out and the escaping moisture can lead to corrosion in the appliance. Do not leave cooked food in the oven compartment and do not use any cooking containers which are susceptible to corrosion as this could lead to corrosion in the appliance.
- ▶ Do not leave the appliance door open unnecessarily as someone may trip over it or be injured by it.
- ▶ The door can support a maximum load of 8 kg. Do not sit on or lean against an open door, and do not place heavy objects on it. Also make sure that nothing can get trapped between the door and the oven compartment. The steam oven could get damaged.

Warning and Safety instructions

► When using an electrical appliance, e.g. a hand-held mixer, near the steam oven, ensure that the connection cable doesn't get caught in the door. The insulation on the cable could become damaged, giving rise to an electric shock hazard.

Cleaning and care

- ▶ Do not use a steam cleaning appliance to clean this steam oven. Pressurised steam could reach the electrical components and cause a short circuit.
- ▶ Scratches on the door glass can result in the glass breaking. Do not use abrasive cleaners, hard sponges, brushes or sharp metal tools to clean the door glass.
- ▶ The shelf runners can be removed for cleaning purposes (see "Cleaning and care - Accessories"). Ensure they are correctly fitted after cleaning and never operate the steam oven without the shelf runners fitted.
- ▶ Try to avoid the interior walls being splashed with food or liquids containing salt. If it does happen, wipe these away thoroughly to avoid corrosion on the stainless steel surface.

Accessories

- ▶ Use only genuine original Miele spare parts. If spare parts or accessories from other manufacturers are used, the warranty will be invalidated, and Miele cannot accept liability.

Caring for the environment

Disposal of the packing material

The transport and protective packaging has been selected from materials which are environmentally friendly for disposal, and can normally be recycled.

Recycling the packaging reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites. Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation.


Disposing of your old appliance

Electrical and electronic appliances often contain valuable materials. They also contain specific materials, compounds and components, which were essential for their correct function and safety. These could be hazardous to human health and to the environment if disposed of with your domestic waste or if handled incorrectly. Please do not, therefore, dispose of your old appliance with your household waste.



Please dispose of it at your local community waste collection / recycling centre for electrical and electronic appliances. You are also responsible by law for deleting any personal data that may be stored on the appliance prior to disposal. Please ensure that your old appliance poses no risk to children while being stored prior to disposal.

Steam oven front view

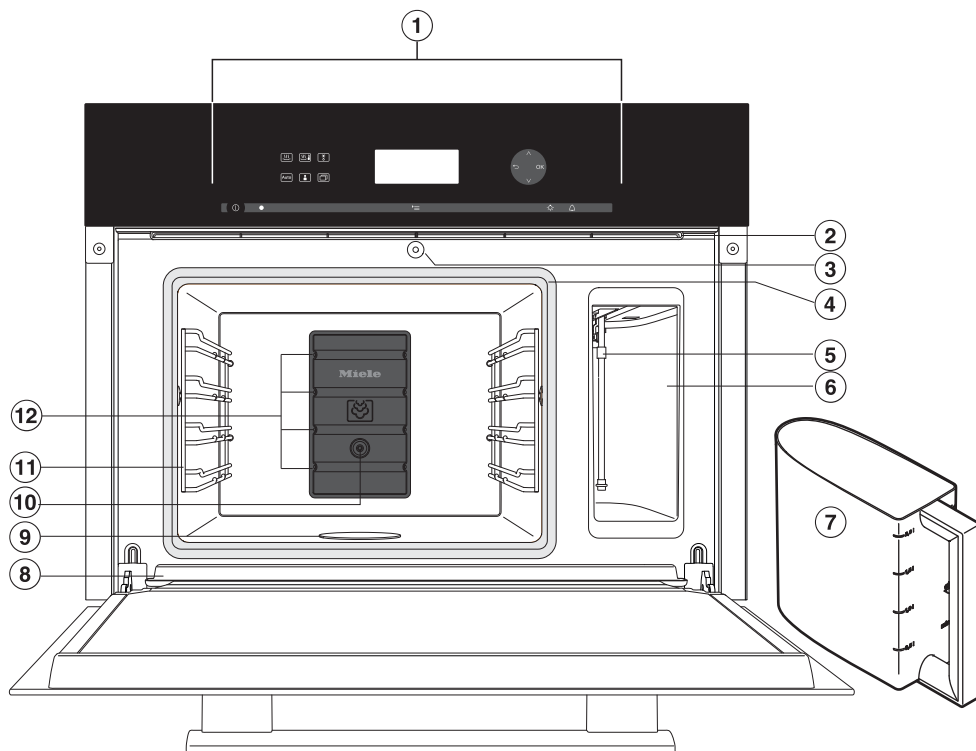


- | | |
|--|-------------------------|
| ① Control panel | ⑦ Water container |
| ② Ventilation outlet | ⑧ Drip channel |
| ③ Automatic door release for steam reduction | ⑨ Floor heating element |
| ④ Door seal | ⑩ Temperature sensor |
| ⑤ Suction tube | ⑪ Shelf runners |
| ⑥ Compartment for water container | ⑫ Steam inlet |

Overview

Accessories supplied

The accessories supplied with your appliance, as well as a range of optional ones, are available to order from Miele (see "Optional accessories").


DGG 21



1 condensate tray for catching excess moisture; can also be used as a cooking container.

325 x 430 x 40 mm (W x D x H)


DGGL 8



1 perforated cooking container
Gross capacity 2.0 litres / Useable capacity 1.7 litres

325 x 265 x 40 mm (W x D x H)

DGGL 1



2 perforated cooking containers
Gross capacity 1.5 litres / Useable capacity 0.9 litre

325 x 175 x 40 mm (W x D x H)


Rack



1 rack for placing your own cooking containers on

Descaling tablets

For descaling the appliance

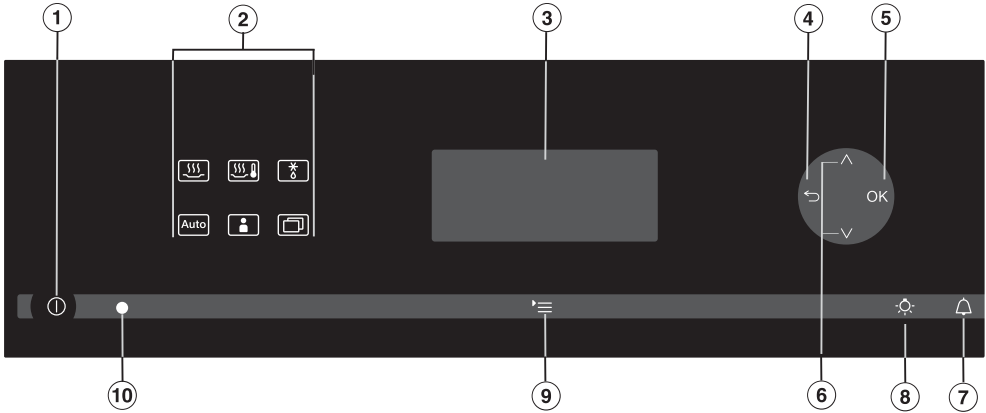







- ① Recessed On/Off button ①
For switching the appliance on and off
- ② Sensor controls
For selecting oven functions
- ③ Display
Displays time of day and information for operation
- ④ ↶ sensor
To go back one step at a time
- ⑤ OK sensor
For calling up functions and saving settings
- ⑥ ^∇ sensors
For scrolling through lists and for changing values
- ⑦ 🔔 sensor
For setting the minute minder
- ⑧ ☀ sensor
For switching the oven interior lighting on and off
- ⑨ ≡ sensor
For accessing settings
- ⑩ Optical interface
(for service technician use only)





Controls






Sensors

The sensors react to touch. Each touch is confirmed with a keypad tone. This keypad tone can be switched off (see "Settings – Keypad tone").

Oven functions

	Steam cooking
	Reheat
	Defrosting
	Automatic programmes
	User programmes
	Further programmes

Sensor	Function	Notes
	For accessing settings	<p>Touching the  sensor when the steam oven is switched on will bring up a list of settings.</p> <p>If the display is dark, the sensor will not react until the steam oven is switched on.</p> <p>During a cooking process you can alter the temperature or set a cooking duration after touching this sensor.</p>
	For switching the oven interior lighting on and off	<p>If the time of day display is visible, the oven interior lighting can be switched on and off by touching the  sensor.</p> <p>If the display is dark, the sensor will not react until the steam oven is switched on.</p> <p>The oven interior lighting switches off after 15 seconds during a cooking process or remains constantly switched on, depending on the setting selected.</p>

Sensor	Function	Notes
	For setting the minute minder	<p>If the time of day is visible, you can enter a minute minder duration at any time, e.g. when boiling eggs on the cooktop (see "Minute minder ").</p> <p>If the display is dark, the sensor will not react until the steam oven is switched on.</p>
	To go back a step	
 	For scrolling through lists and for changing values	<p>Use the arrows for scrolling up or down through lists of options. Each option is highlighted as you scroll through them. The option you want must be highlighted before you can select it.</p> <p>Values which are highlighted can be increased or decreased using the arrow sensors.</p>
OK	For calling up functions and saving settings	<p>Functions highlighted in the display can be selected by touching OK. The selected function can then be changed.</p> <p>Confirm with OK to save changes.</p> <p>If information appears in the display, select OK to confirm the message.</p>

Controls

Display

The display is used for showing the time of day or information about functions, temperatures, cooking durations, Automatic programmes, User programmes and settings.

Information or a list of options will appear in the display depending on the function selected and/or touching the '≡ sensor.

After switching the steam oven on with the On/Off ⓘ sensor, you will be prompted to Select function.









If you have not selected a function, the settings option list will appear in the display when you touch the '≡ sensor.

If a function has been selected (except for Auto) and the settings have been entered for the cooking programme, the list of options for that cooking programme will appear when you touch the '≡ sensor.

- To select an option, scroll through the list with the ^ and v arrow sensors until the option you want is highlighted.
- Then confirm the selection with OK.

Symbols

The following symbols may appear in the display:

Symbol	Meaning
 	If two or three options are available, arrows will appear on the right-hand side of the display. Use these to scroll through the list. Available options are highlighted in white one after the other.
	If more than three options are available, a bar will appear on the right-hand side of the display. Use this to scroll through the list.
	The end of a list is indicated by a dotted line. By scrolling down further, you reach the beginning of the list again.
	A tick indicates the option which is currently selected.
	This symbol indicates that there is additional information and advice about using the oven. Select OK to access the information.
	Minute minder
	Some settings, e.g. display brightness and buzzer volume, are selected using a bar chart.

Description of the functions

Water container

The maximum water level is 2.0 litres, the minimum 0.5 litre. These levels are indicated on the container on the handle side. Do not exceed the maximum level.

The amount of water used will depend on the type of food and the duration of cooking. Water will sometimes need to be replenished during the cooking process. Water consumption is increased if the door is opened during cooking.

Fill the water container to the maximum level before each use.

At the end of the cooking programme hot residual water in the steam generator is pumped back into the water container. The water container must be emptied after each use.

Condensate tray

When using perforated containers, place the condensate tray on the lowest shelf level to collect any drops of liquid and allow them to be removed easily.

You can also use the condensate tray as a cooking container if necessary.

Temperature

Some functions have a default recommended temperature. This temperature can be altered within the given range for the programme or programme stage in use, or for every time that programme is used (see "Settings - Recommended temperatures"). Recommended temperatures can be changed in 5 °C steps, or in 1 °C steps for Sous-vide cooking.

Duration

You can set a duration of between 1 minute (00:01) and 10 hours (10:00). If the duration exceeds 59 minutes, you have to enter it in hours and minutes. Example: Duration 80 minutes = 1:20.

Noises

You will hear a pumping sound when the appliance is switched on, during use and after switching it off. This is the sound of water being pumped through the system and is quite normal.

When the steam oven is in use, you will hear a fan noise.

Heating-up phase

During the heating-up phase the display will show the temperature in the cooking compartment and Heating-up phase as it rises in all programmes except Automatic programmes, Descale.

When cooking with steam, the duration of the heating-up phase will depend on the quantity and the temperature of the food. In general the heating-up phase will last for approx. 5 minutes. The duration will be longer if you are preparing refrigerated or frozen food.

Cooking phase

The cooking phase begins when the set temperature is reached. During the cooking phase, the duration remaining will be shown in the display.

Steam reduction

If a cooking temperature above approx. 80 °C has been set, the appliance door will automatically open a fraction just before the end of a cooking programme to release some of the steam from the cabinet. Steam reduction appears in the display. The door will then close again automatically.


Steam reduction can be switched off if you wish (see "Settings - Steam reduction"). If switched off, there will be a lot of steam emitted from the cabinet when the door is opened.

Oven interior lighting

For energy saving reasons, the oven interior lighting has been set at the factory to go out after the programme has begun.


If you want the lighting to remain on during cooking, the relevant factory default setting needs to be changed (see "Settings - Lighting").

If the door is left open at the end of a cooking programme, the oven lighting will switch off automatically after 5 minutes.

The lighting can be switched on for 15 seconds by pressing the  button on the control panel.

Using for the first time

General settings

 The steam oven must not be operated until it has been correctly installed in its housing unit.

The steam oven will switch on automatically when it is connected to the electricity supply.

Welcome screen

A welcome greeting is displayed. You will then be asked to select some basic settings which are needed before the appliance can be used.

- Follow the instructions in the display.

Setting the language

- Scroll through the list until the language you want is highlighted.
- Confirm with OK.

Selecting the country

- Scroll through the list until the country you want is highlighted.
- Confirm with OK.

Setting the date

- Set the year, month and then the day.
- Confirm each with OK.

Setting the time of day

- Set the hours and the minutes.
- Confirm each with OK.

The time of day can be displayed in the 12-hour format (see "Settings - Time of day - Clock format").

Time of day display

You will then be asked how you want the time of day to appear in the display when the steam oven is switched off (see "Settings - Time of day - Display"):

– On

The time is always visible in the display.

– Off

The display appears dark to save energy. Some functions are limited.

– Night dimming

The time only appears in the display between 5:00 and 23:00. It switches off at night to save energy.

- Scroll through the list until the option you want is highlighted.

- Confirm with OK.

Some information about energy consumption will appear in the display.

- Confirm with OK.

Set up successfully completed will appear.

- Confirm with OK.

The steam oven is ready for use.

If you have selected the wrong language by mistake, proceed as described in "Settings - Language 🚩".

- Please stick the extra data plate for the appliance supplied with this documentation in the space provided in the "After sales service, data plate, warranty" section of this booklet. Alternatively, the additional label can be stuck near the appliance if the appliance markings are not visible after installation.

- Remove any protective wrapping and stickers (but not the data plate).

The appliance has undergone a function test in the factory. Residual water from this testing may have trickled back into the cabinet during transportation.

Cleaning for the first time

Water container

- Take the water container out of the appliance and rinse it by hand.

Accessories / Oven compartment

- Remove all accessories from the oven compartment.
- Wash the accessories in a mild solution of washing-up liquid and hot water or in the dishwasher.

The interior of the steam oven has been treated at the factory with a conditioning agent.

- To remove this, clean the oven interior with a mild solution of washing-up liquid and warm water and then dry thoroughly with a soft cloth.

Using for the first time

Setting the water hardness level


The water hardness level of the steam oven is set to **Hard** at the factory. For trouble-free operation of the steam oven, and to ensure that it is descaled at the appropriate time, it is important to set the water hardness level for your area. The harder the water, the more often the steam oven must be descaled.

- Check the hardness of your local water supply and adjust the water hardness as necessary (see "Settings - Water hardness").

Setting the correct boiling point for water

Before cooking with the steam oven for the first time, it must be set to the correct boiling point for water in your area. This is determined by the altitude at which you live. This procedure also flushes out the water pipework.








This procedure **must** be carried out to ensure efficient functioning of your appliance.

- Run the Steam cooking  programme at 100 °C for 15 minutes. Proceed as described in "Operation".

Setting the correct boiling point for water following a house move

If you move house, the appliance will need to be reset for the new altitude if this differs from the old one by 300 m or more. To do this, descale the appliance (see "Cleaning and care - Descaling").

Main and sub-menus

Function / Menu	Recommended temperature	Temperature range
Steam cooking  For cooking all types of food, bottling, extracting juice with steam, special applications and menu cooking	100 °C	40–100 °C
Reheat  For gentle reheating of cooked food	100 °C	80–100 °C
Defrost  For gentle defrosting of frozen food	60 °C	50–60 °C
Automatic programmes  The list of Automatic programmes available will appear in the display		
User programmes  You can create and save cooking processes		
Further programmes 		
Sous-vide (vacuum) cooking For cooking food in a vacuum bag	65 °C	45–90 °C
Blanch	–	–
Bottling	90 °C	80–100 °C
Sterilise dishes	–	–
Prove yeast dough	–	–
Cook vegetables	100 °C	90–100 °C
Cook fish	85 °C	75–100 °C
Cook meat	100 °C	90–100 °C
Settings  Changing the factory default settings	–	–
Descale	–	–


Operation

Basic operation

- Switch the steam oven on using ①.

Select function appears in the display.

Only use cold mains tap water (below 20 °C). Never use distilled or mineral water or other liquids.

- Fill the water container and push it into the appliance until it connects.
- Place the food in the oven.
- Select .

Set the temperature appears in the display.

- Change the recommended temperature if necessary.
- Confirm with OK.

The recommended temperature will be automatically accepted within a few seconds.

If required, select ↶ to go back to the temperature selection option (see "Changing the temperature").

Set the duration appears in the display.

- Set the cooking duration. Any time between 1 minute and 10 hours can be set.
- Confirm with OK.

The cooking process begins. The steam generator, lighting and fan switch on.

- Set further settings as necessary (see "Further functions").

If you are cooking at a temperature of approx. 80 °C, **Steam reduction** will appear in the display shortly before the end of the cooking time and the door will automatically open a little.

At the end of the cooking duration

- Process finished **appears** in the display,
- the fan remains switched on,
- a buzzer or melody will sound (see "Settings - Acoustic information").

You have the option of saving the programme as a User programme (see "User programmes") or increasing the duration of the programme via **'≡**.



Danger of burning!

You could burn yourself on the oven interior walls, spilled food and accessories.

Use oven gloves when removing hot food from the oven.

- Wait until **Steam reduction** goes out in the display before opening the door and removing the food.
- Switch the steam oven off using ①.

A new cooking process can only be started if the automatic door release is retracted into its original position. Do not push it in manually as this could damage it.



Danger of burning!

The residual water in the water container is hot.

Take care not to tip the water container when taking it out of the appliance.

- Remove the water container and empty it.
- After each use, clean and dry the whole appliance as described in "Cleaning and care".
- Leave the appliance door open until the oven interior is completely dry.

Insufficient water

If water needs replenishing during the programme, a buzzer will sound and a reminder to refill the container will appear in the display.

- Remove the water container and fill it with fresh tap water.
- Push the water container into the appliance until it connects.

Operation will continue.

After use

- Remove the condensate tray and empty it.

Operation

Interrupting operation

Operation is interrupted as soon as the door is opened. The heating will be switched off and the cooking duration remaining stored in memory.



Danger of burning!

Steam can escape when the door is opened.

Step back and wait until the steam has dissipated.



Danger of burning!

You could burn yourself on the oven interior walls, spilled food and hot steam.

Wear oven gloves when placing food in the oven or removing it and when adjusting oven shelves etc. in a hot oven.

Operation will resume when the door is closed.

When the door is closed, the pressure has to equalise, which can cause a whistling sound.

The oven will heat up again and the display will show the temperature of the cooking compartment as it rises. Once the set temperature has been reached, the display will change to show the cooking duration remaining as it counts down.

The cooking process will be ended early if the door is opened in the last minute of cooking time (55 seconds standing time).

Further functions

Setting further durations

You have placed the food in the oven, selected a temperature and a duration.

■ Touch '≡

Further options will appear in the display which you can select or change for your programme:

- Finish at
- Start at

You can set the programme to switch off or on and off automatically by setting Finish at or Start at.

- Finish at

You specify the time you want cooking to stop.

- Start at

You specify the time you want cooking to start.

Cooking results can be impaired if there is a long delay between the food being placed in the oven and the start of cooking. Fresh food can change its colour and even deteriorate.

If the temperature in the oven compartment is too high, e.g. just after another programme, you will not be able to use this function. Finish at and Start at will not appear in the display if this is the case. Leave the oven door open until the appliance has cooled down.

Switching on and off automatically

To switch a cooking programme on and off automatically, you have a choice of how to enter the time parameters:

- Duration and Finish at
- Duration and Start at

Example: It is 11:45. The food takes 5 minutes to cook and should be ready at 12:30.

■ Touch '≡.

■ Scroll through the list until Duration is highlighted.

■ Confirm with OK.

■ Set "00:05" and confirm with OK.

■ Scroll through the list until Finish at is highlighted.

■ Confirm with OK.

■ Scroll through the list until Change is highlighted.

■ Confirm with OK.

■ Set "12:30" and confirm with OK.

Start at is calculated automatically. The cooking duration entered is added to the heating-up time calculated by the steam oven.

Start at 12:18 appears in the display. The cooking process will start automatically at this time.

Operation

Sequence of an automatic cooking process

Up until the start time the function, the selected temperature, Start at and the start time will appear in the display.

After the start time you can see the temperature increasing in the display during the heating-up phase until the set temperature is reached. Once this temperature is reached a tone will sound.

After the heating-up phase, you can follow the time counting down in the display. The last minute counts down in seconds.

If you are cooking at a temperature of approx. 80 °C or more, Steam reduction will appear in the display **shortly before the end of the cooking time** and the door will automatically open a little.

At the end of the cooking process the steam generator will switch off. A buzzer or melody will sound (see "Settings - Acoustic information"). Process finished will appear in the display.

You have the option of saving the programme as a User programme (see "User programmes") or increasing the duration of the programme via '≡.

Changing settings during a cooking process

■ Touch '≡

The following will appear in the display:

- Temperature
- Duration
- Finish at
- Start at

If the temperature in the oven compartment is too high Finish at and Start at are not displayed.

Changing the temperature

- Scroll through the list until Temperature is highlighted.
- Confirm with OK.
- Change the temperature.
- Confirm with OK.

The programme will restart with the new temperature.

You can also permanently reset the recommended temperature to suit your personal cooking practices (See "Settings - Recommended temperatures").

Changing the cooking duration

- Scroll through the list until **Duration** is highlighted.
- Confirm with OK.
- Change the duration.
- Confirm with OK.

The programme will restart with the new duration.

Changing the finish time

- Scroll through the list until **Finish at** is highlighted.
- Confirm with OK.
- Scroll through the list until **Change** is highlighted.
- Confirm with OK.
- Change the duration.
- Confirm with OK.

Start at will be automatically recalculated. The cooking process will finish at the time set.

Deleting a finish time

- Scroll through the list until **Finish at** is highlighted.
- Confirm with OK.
- Scroll through the list until **Delete** is highlighted.
- Confirm with OK.

The cooking finish time is deleted. The programme will start using the duration set.

Changing the oven function

You can change the oven function during operation.

- Select the function you want.

Change function? or Cancel cooking? will appear in the display.

- Scroll through the list until **Yes** is highlighted.
- Confirm with OK.

The new function will appear in the display together with its recommended temperature.

- Change the temperature if necessary.
- Confirm with OK.
- Change the cooking duration if necessary.
- Confirm with OK.

The oven function has been changed.

Cancelling cooking

- Touch ↵.

Cancel cooking? appears in the display.

- Scroll through the list until **Yes** is highlighted.
- Confirm with OK.

Select function will appear in the display. Any cooking durations set are deleted.

Automatic programmes

Your steam oven has a wide range of Automatic programmes to enable you to achieve excellent results with ease. Simply select the appropriate programme for the type of food you are cooking and follow the instructions in the display.

List of food types

Automatic programmes are accessed via **Auto**.

- Gemüse
- Fisch
- Rice
- Hen's eggs
- Fruit
- Shellfish
- Special

Using Automatic programmes

- Select **Auto**.

A list of food types will appear in the display.

- Scroll through the list until the category you want is highlighted.
- Confirm with OK.


The Automatic programmes available for the food type selected will then appear.

- Scroll through the list until the Automatic programme you want to use is highlighted.
- Confirm with OK.


Each step you need to take before starting the Automatic programme will appear in the display.

In some programmes you will be prompted on when to add food to the oven. Follow and confirm these instructions.

Notes on use

- The degree of doneness and browning levels are shown in a bar chart with seven segments. The factory default is always the middle setting. It will be highlighted. To change the setting, move the highlighting to the left or the right.
- The weight entry in the Automatic programmes refers to the weight per piece. For example, you can cook just one piece of salmon weighing 250 g or 10 pieces of salmon weighing 250 g each at the same time.
- The oven interior needs to be at room temperature before starting an Automatic programme.
- When placing food in an already hot oven compartment, be very careful when opening the door. Hot steam can escape. Step back from the steam oven and wait until the steam has dissipated. When putting cooking containers or the condensate tray into the oven or taking them out, take care not to spill the contents. Avoid contact with hot steam, and do not touch the hot oven compartment walls. Danger of burning and scalding!
- For some Automatic programmes the start time can be delayed using **Start at** or **Finish at**.
- To end an Automatic programme early, you do not need to switch the steam oven off completely. Touch .

When **Cancel cooking?** appears, select **Yes**.

- If by the end of an Automatic programme the food is not cooked enough, select **Continue cooking**.
- Automatic programmes can also be saved as **User programmes** via .

User programmes

You can create and save up to 20 of your own programmes.

- You can combine up to 10 cooking stages to describe the cooking process of favourite or frequently used recipes. You can enter individual settings for each cooking stage.
- You can enter the name of the programme for your recipe.

When you next select the programme, it will start automatically.

There are different ways of creating a User programme:

- At the end of an Automatic programme, save it as a User programme.
- After running a programme with a set duration, save it.

Then name the programme.

Creating a User programme

- Select .

The first time you create a User programme **Create programme** will appear in the display.

- Confirm with OK.

If User programmes already exist, the programme names will appear with **Edit programmes** underneath them.

- Scroll through the list until **Edit programmes** is highlighted.

- Confirm with OK.

Create programme will be highlighted.

- Confirm with OK.

You can now specify the settings for cooking stage 1.

Follow the instructions in the display.

- Select and confirm the cooking function, temperature and duration.

Settings for the 1st cooking stage have now been set.

You can add additional cooking stages, e.g., if you would like to continue cooking at a different temperature:

- Select and confirm **Add cooking stage** and proceed as for the 1st cooking stage.

- When all necessary cooking stages have been set, scroll through the list until **Complete programme** is highlighted.

- Confirm with OK.

A summary of your settings will appear in the display.

- Check the settings and confirm with OK.
- Scroll through the list until **Save** is highlighted.
- Confirm with OK.
- Enter the programme name.

The following symbols will appear next to the alphabet:

Symb ol	Meaning
␣	Space
ABC	Alphabet in upper case
abc	Alphabet in lower case
123	Numerals 0 to 9 and hyphen
✓	Confirm the programme name

- Scroll through the list until the character you want is highlighted.
- Confirm with OK.

The letter or number you have selected will appear in the top line of the display.

- Select further characters.

A maximum of 10 characters can be used.

You can delete the characters one at a time with ↵.

- Once you have entered the programme name, scroll through the list until ✓ is highlighted.
- Confirm with OK.

A message will appear in the display confirming that the programme has been saved.

- Confirm with OK.

You can start the saved programme immediately, delay the start or change the cooking stages.

The option **Change cooking stages** is described in "Changing User programmes".

User programmes

Starting a User programme

- Place the food in the oven.

- Select .

The programme names will appear in the display with *Edit programmes* underneath.

- Scroll through the list until the programme you want is highlighted.

- Confirm with OK.

You can start the saved programme immediately, delay the start or change the cooking stages.

- Start now

The programme will start. The steam generator will switch on immediately.

- Start at

You specify the time you want the cooking programme to start.

- Finish at

You specify the time you want cooking to stop.

- Change cooking stages

You can change the specified settings for a cooking stage or add more cooking stages to the programme (see "Changing User programmes").

- Scroll through the list until the function you want is highlighted.

- Confirm with OK.

The programme will start according to the specified start or finish time.

Changing User programmes

Changing cooking stages

Cooking stages in an Automatic programme that you have renamed as a User programme cannot be changed.

- Select .

The programme names will appear in the display with *Edit programmes* underneath.

- Scroll through the list until *Edit programmes* is highlighted.

- Confirm with OK.

- Scroll through the list until *Change programme* is highlighted.

- Confirm with OK.

- Scroll through the list until the programme you want is highlighted.

- Confirm with OK.

Change cooking stages will be highlighted.

- Confirm with OK.

Cooking stage 1 is highlighted. You can change the specified settings for one cooking stage or add cooking stages to the programme.

- Scroll through the list until the cooking stage you want or *Add cooking stage* is highlighted in the display.

- Confirm with OK.

- Change the programme as you wish (see "Creating a User programme") and confirm with OK.

A summary of your settings will appear in the display.

- Check the settings and confirm with OK.

The changes or added cooking steps in your programme will be saved.

- Change the name if necessary (see "Creating a User programme").

Changing the name

- Select .

The programme names will appear in the display with Edit programmes underneath.

- Scroll through the list until Edit programmes is highlighted.
- Confirm with OK.
- Scroll through the list until Change programme is highlighted.
- Confirm with OK.
- Scroll through the list until the programme you want is highlighted.
- Confirm with OK.
- Scroll through the list until Change name is highlighted.
- Confirm with OK.
- Change the name (see "Creating a User programme").
- After entering a new programme name, scroll through the list until ✓ is highlighted.
- Confirm with OK.

A message will appear in the display confirming that the programme has been saved.

- Confirm with OK.

User programmes

Delete User programmes

- Select .

The programme names will appear in the display with **Edit programmes** underneath.

- Scroll through the list until **Edit programmes** is highlighted.
- Confirm with OK.
- Scroll through the list until **Delete programme** is highlighted.
- Confirm with OK.
- Scroll through the list until the programme you want is highlighted.
- Confirm with OK.

Delete ? appears in the display.

- Scroll through the list until **Yes** is highlighted.
- Confirm with OK.

The programme is deleted.

You can delete all User programmes at once (see "Settings - Factory default - User programmes").

The minute minder can be used to time other activities in the kitchen, e.g. boiling eggs.

The minute minder can also be used at the same time as a cooking programme for which the start and finish times have been set, e.g. as a reminder to stir a dish or add seasoning etc.

A maximum minute minder duration of 9 hours, 59 minutes and 55 seconds can be set.

Setting the minute minder

If you want to use the minute minder and Time | Show | Off has been set, you will need to switch the steam oven on before you can set the minute minder. The minute minder can then be seen counting down in the display when the steam oven is switched off.

Example: You want to boil some eggs and set a minute minder duration of 6 minutes and 20 seconds.

■ Touch .

"0:00:00" will appear (h:min:sec).
The hour block will light up.

■ Confirm with OK.

The hours are saved and the minutes block will light up.

■ Touch the arrow sensors repeatedly until "06" appears.

■ Confirm with OK.

The minutes are saved and the seconds block will light up.


■ Touch the arrow sensors repeatedly until "20" appears.


■ Confirm with OK.

The duration counts down in the display when the steam oven is switched off.

If a cooking programme is being run at the same time, the minute minder duration will appear at the bottom of the display.

At the end of the minute minder time

-  will flash in the display,
- the time will count upwards,
- a buzzer or melody will sound (see "Settings - Acoustic information").

■ Touch  to switch off acoustic and optical signals.

Minute minder

Changing the time set for the minute minder

- Touch .

Minute minder appears in the display and Change is highlighted.

- Confirm with OK.
- Set the new minute minder time you require.
- Confirm with OK.

The altered minute minder duration will start to count down immediately.

Cancelling the time set for the minute minder

- Touch .

Minute minder appears in the display and Change is highlighted.

- Scroll through the list until Delete is highlighted.
- Confirm with OK.

The minute minder duration is now cancelled.

This section contains general information. You will find more detailed information about particular foods and how to cook them in the other sections.

The advantages of cooking with steam

Almost all vitamins and minerals are retained as the food is not immersed in water.

Cooking with steam also retains the true taste of the food better than conventional cooking. We therefore recommend seasoning the food after it has been cooked. Food also retains its fresh, original colour.

Suitable containers

Cooking containers

This steam oven is supplied with stainless steel cooking containers. Other containers, in a variety of sizes, both perforated and solid, are available as optional extras (see "Optional accessories"). This enables you to choose the most suitable container for the food you are preparing.

It is best to use perforated containers for steam cooking. The steam can reach the food from all sides and the food is cooked evenly.

Your own containers

You can also use your own containers. However, please note the following:

- Containers must be heat-resistant to 100 °C and able to withstand hot steam. With plastic containers please check with the manufacturer that they are suitable for use in a steam oven.
- Thick-sided containers made from porcelain, china or stoneware, for example, are not very suitable for steam cooking. They do not conduct heat well and as a result cooking durations will be considerably longer than those given in the charts.
- Place the cooking containers on the rack and not on the oven floor.
- Ensure that there is a gap between the upper rim of the container and the top of the cooking compartment to allow sufficient steam into the container.

Condensate tray

When using perforated containers, place the condensate tray on the lowest shelf level to collect any drops of liquid and allow them to be removed easily.

You can also use the condensate tray as a cooking container if necessary.

General notes

Shelf level

You can select any shelf level. You can also cook on several levels at the same time. This will not alter the cooking duration.

When cooking with more than one deep cooking container at the same time, offset them to allow steam to circulate properly. If possible, leave a shelf level between the containers.

Always insert cooking containers and the rack between the rails of the shelf runners so that they cannot tip.

Frozen

The heating-up phase for frozen food is longer than for fresh food. The greater the quantity of frozen food, the longer the heating-up phase.

Temperature

A maximum temperature of 100 °C is reached when steam cooking is taking place. Most types of food will cook at this temperature. Some more delicate types of food, such as soft fruit, must be cooked at lower temperatures as otherwise they will burst. More information is given in the relevant section.

Combination with a food warming drawer

When a warming drawer which is installed below the steam oven is in use, the oven cavity in the steam oven can reach up to 40 °C. If, in this case, you set a temperature of 40 °C, no steam will be produced because the oven cavity is too warm.

Duration

In general, the cooking durations for cooking with steam are the same as for cooking food in a saucepan. More information about any factors which may affect the cooking duration is given in the relevant sections.

The quantity of food does not affect the cooking duration. 1 kg of potatoes will take the same time to cook as 500 g.

The durations given in the charts are guidelines only. We recommend selecting the shorter cooking duration quoted to start with. If food is not cooked sufficiently after the shorter time, it can be put back in the oven compartment and cooked some more.

Cooking with liquid

When cooking with liquid, only fill the cooking container $\frac{2}{3}$ full to prevent the liquid spilling when the cooking container is removed from the oven.

Your own recipes

Food and recipes which are prepared in a pot or a pan can also be cooked in the steam oven. The cooking times in the steam oven will be the same. Please note that food will not be brown or crisp when cooking with steam.

Vegetables

Fresh

Prepare fresh vegetables in the usual way, i.e. wash, clean and cut them up.

Frozen

Frozen vegetables do not need to be defrosted beforehand unless the vegetables have been frozen together in a block.

To cook frozen vegetables, programme the same time as for fresh ones.

Break up the larger, frozen together pieces. Please refer to the cooking times on the packaging.

Cooking containers

Food such as peas or asparagus spears, which have little or no space between them, will take longer to cook because the steam has less space to work in. For an even result, it is best to use a shallow container for these types of food, and only fill it about 3 - 5 cm deep. When cooking large quantities, divide the food between 2 or 3 shallow containers rather than using one deep one.

Different types of vegetables which take the same length of time to cook can be cooked together in one cooking container.

Use solid containers for vegetables which are cooked in liquid, e.g. cabbage.

Shelf level

When cooking vegetables with a distinctive colour (e.g. beetroot) in a perforated container at the same time as cooking other foods in other containers, place the solid tray directly underneath the perforated container to catch any drips and therefore avoid any colour transfer.

Duration

As with conventional methods, the cooking duration when cooking vegetables with steam will depend on the size and how well done you want them. Example:


firm potatoes, cut into quarters

= approx. 15 minutes

firm potatoes, cut in half

= approx. 20 minutes

Settings

 | Vegetables | ... | Steam cooking

or

 | Cook vegetables

or



Temperature: 100 °C

Duration: see chart

Steam cooking

The durations given in the charts for fresh vegetables are guidelines only. We recommend selecting the shorter cooking duration quoted to start with. If vegetables are not cooked sufficiently after the shorter time, they can be put back in the oven compartment and cooked some more.

Vegetables	 [min.]
Artichokes	32–38
Cauliflower, whole	27–28
Cauliflower, florets	8
Green beans	6–8
Broccoli, florets	2–4
Chantenay carrots, whole	7–8
Chantenay carrots, halved	5–6
Chantenay carrots, chopped	4
Chicory, halved	4–5
Chinese cabbage, chopped	3
Peas	2
Fennel, halved	10–12
Fennel, cut into strips	4–5
Curly kale, chopped	23–26
Firm potatoes, peeled whole halved quartered	20–25 15–20 10–15
Fairly firm potatoes, peeled whole halved quartered	23–28 18–23 14–18
Soft potatoes, peeled whole halved quartered	25–30 20–25 15–20
Kohlrabi, cut into batons	6–7

Steam cooking

Vegetables	🕒 [min.]
Pumpkin, diced	4–8
Corn on the cob	10–15
Silverbeet, chopped	2–3
Capsicum, diced/cut into strips	2
New potatoes, firm	20–25
Mushrooms	2
Leek, chopped	2–4
Leek, stalks halved lengthways	4–6
Romanesco, whole	22–25
Romanesco, florets	5–7
Brussels sprouts	10–12
Beetroot, whole	50–60
Red cabbage, chopped	15–20
Black salsify, whole	9–10
Celeriac, cut into batons	6–7
Green asparagus	2–4
White asparagus, whole	5–10
Carrots, chopped	6
Spinach	1–2
Spring cabbage, chopped	10–11
Celery sticks, chopped	2–5
Turnips, chopped	6–7
White cabbage, chopped	12
Savoy cabbage, chopped	10–11
Zucchini, sliced	2–3
Sugar snap peas	2–3

🕒 Duration

Steam cooking

Meat

Fresh

Prepare the meat in the usual way.

Frozen

Meat should be thoroughly defrosted before cooking in the steam oven (see "Special applications - Defrosting").

Preparation

Meat which needs to be seared before being cooked, e.g. stewing steak, should be seared in a pan on the cooktop.

Duration

The cooking duration depends on the thickness and the texture of the meat, and not on the weight. The thicker the piece of meat, the longer the cooking duration. A piece of meat weighing 500 g which is 10 cm thick will take longer to cook than a piece of meat weighing 500 g which is 5 cm thick.

Useful tips

- Use a perforated container to retain the **flavours** when cooking meat. Place a solid container underneath to catch the juices. You can use these to make a gravy or freeze them for later use.
- Boiling chicken, pork rind, meat, ribs and meat bones can be used to make **stock**. Place the meat together with some mixed vegetables in a solid cooking container and add cold water. The longer the cooking duration, the stronger the stock.

Settings



| Cook meat

or




Temperature: 100 °C

Duration: see chart

Steam cooking

The durations given in the chart are guidelines only. We recommend selecting the shorter cooking duration quoted to start with. If meat is not cooked sufficiently after the shorter time, it can be put back in the oven compartment and cooked some more.

Meat	 [min.]
Beef shin, covered with water	110–120
Pork knuckle	135–140
Chicken breast fillet	8–10
Knuckle	105–115
Beef soup bones, covered with water	110–120
Veal for stewing	3–4
Gammon steaks	6–8
Lamb ragout	12–16
Poularde	60–70
Turkey roulade	12–15
Turkey escalope	4–6
Rib of beef, covered with water	130–140
Beef stew	105–115
Boiling chicken, covered with water	80–90
Silverside	110–120

 Duration

Steam cooking


Sausages

Settings



Temperature: 90 °C

Duration: see chart

Sausages	 [min.]
Frankfurters	6–8
Sausages	6–8
White sausages	6–8

 Duration

Fish

Fresh

Prepare fresh fish in the usual way, i.e. clean, gut and fillet.

Frozen

Fish does not need to be fully defrosted before cooking. Defrost so that the surface is sufficiently thawed to take herbs and seasoning. Depending on the thickness of the fish, 2–5 minutes should be enough.

Preparation

Add some lemon or lime juice to fish before cooking. The citric acid helps the flesh stay firm.

It is not necessary to season fish when cooking with steam as this method retains the minerals which give the fish its unique flavour.

Cooking containers

If using a perforated container, grease it first or line it with baking paper.

Shelf level

When cooking fish in a perforated container at the same time as cooking other types of food in other containers, place the container with the fish directly above the tray to catch any liquid and so avoid any transfer of tastes to other food.

Temperature

85 °C – 90 °C

For gently cooking delicate types of fish, such as flounder.

100 °C

For cooking firmer types of fish, e.g. salmon.

Also for cooking fish in sauce or stock.

Duration

The cooking duration depends on the thickness and the texture of the fish, and not on the weight. The thicker the fish, the longer the cooking duration. A 3 cm thick piece of fish weighing 500 g will take longer to cook than a 2 cm thick piece of fish weighing 500 g.

The longer fish cooks, the firmer its flesh will become. Use the cooking durations given in the chart. If you find that the fish is not cooked sufficiently, only cook it for a few minutes more.

When cooking fish in sauce or stock, we recommend that you increase the cooking duration quoted by a few minutes.

Useful tips

- Adding herbs and spices, such as dill, will help bring out the full flavour of the fish.
- Cook large fish in the swimming position. To help maintain the structure of the fish, place a small cup or similar upside down in the cooking container, and arrange the fish bellyside down over the cup.

- You can use any fish scraps, e.g. fish heads, bones, tails etc. to make a **fish stock**. Place the fish scraps together with some mixed vegetables in a solid cooking container and add cold water. Cook at 100 °C for 60 to 90 minutes. The longer the cooking duration, the stronger the stock.
- **Blue fish** is fish which is cooked in water and vinegar. It is important not to damage the skin of the fish. This method is suitable for cooking carp, trout, tench, eel and salmon.

Settings

 | Fish | ... | Steam cooking

or

 | Cook fish

or



Temperature: see chart

Duration: see chart

Steam cooking

The durations given in the chart are guidelines for fresh fish. We recommend selecting the shorter cooking duration quoted to start with. If the fish is not cooked sufficiently after the shorter time, it can be put back in the steam oven and cooked for longer.

Fish	🌡️ [°C]	🕒 [min.]
Eel	100	5–7
Perch fillet	100	3–5
Bream/Snapper fillet	85	3–5
Trout, 250 g	90	8–12
Halibut/Trumpeter fillet	85	4–6
Blue eye trevalla/Ling fillet	100	6
Carp, 1.5 kg	100	18–25
Salmon fillet	100	4–8
Salmon steak	100	8–10
Ocean trout/Rainbow trout	90	8–10
Basa fillet	85	3
Rosefish fillet	100	6–8
Jackass morwong fillet/Terakihi fillet	100	4–6
Flounder fillet	85	4–5
Stargazer/Monkfish fillet	85	6–8
Sole fillet	85	3
Turbot fillet	85	5–8
Tuna fillet	85	4–8
Pikeperch fillet	85	4

🌡️ Temperature / 🕒 Duration

Shellfish

Preparation

Defrost frozen shellfish before cooking with steam.

Peel, remove and discard the intestines, and then wash the shellfish.

Cooking containers

If using a perforated container, grease it first or line it with baking paper.

Duration

The longer shellfish are cooked, the tougher they become. Use the cooking durations given in the chart.

When cooking shellfish in sauce or stock, we recommend that you increase the cooking duration quoted by a few minutes.

Settings



 | Shellfish | ... | Steam cooking

or



Temperature: see chart

Duration: see chart

	 [°C]	 [min.]
Crevettes	90	3
Prawns	90	3
King prawns	90	4
Small shrimps	90	3
Crayfish	95	10–15
Large shrimps	90	3

 Temperature /  Duration

Steam cooking

Mussels

Fresh



Warning - danger of food poisoning!
Only cook mussels which are closed. Do not eat mussels which have not opened after being cooked.

Steep fresh mussels in water for a few hours before cooking to rinse out any sand. Then scrub the mussels thoroughly to clean them.

Frozen

Defrost frozen mussels before cooking.

Duration

The longer mussels are cooked, the harder they become. Use the cooking durations given in the chart.

Settings



Temperature: see chart

Duration: see chart

	🌡️ [°C]	🕒 [min.]
Goose barnacles	100	2
Cockles	100	2
Blue mussels	90	12
Scallops	90	3
Razor clams	100	2–4
Vongole	90	2–4

🌡️ Temperature / 🕒 Duration

Rice

Rice swells when cooked and needs to be cooked in liquid. The proportion of rice to liquid will vary depending on the type of rice.

The rice absorbs all the liquid. Therefore none of the nutrients are lost.

Settings


 | Rice | ... | Steam cooking

or



Temperature: 100 °C

Duration: see chart

	Ratio Rice : Liquid	 [min.]
Basmati rice	1 : 1.5	15
Parboiled rice	1 : 1.5	23–25
Arborio rice	1 : 2.5	30
Milk rice		
Risotto rice		
Brown rice	1 : 1.5	26–29
Wild rice	1 : 1.5	26–29

 Duration

Steam cooking

Pasta / Noodles

Dry pasta and noodles

Dry pasta and noodles swell when they are cooked and need to be cooked in liquid. The liquid must cover the pasta or noodles. Using hot liquid gives better results.

Increase the cooking time stated by the manufacturer by approx. 1/3.

Fresh pasta and noodles

Fresh pasta and noodles, such as you can buy from the supermarket chilled counter, do not need to absorb water. Cook fresh pasta and noodles in a greased, perforated container.


Separate any pieces of pasta or noodles which have stuck together and spread them out in the cooking container.

Settings



Temperature: 100 °C

Duration: see chart

Fresh pasta / noodles	 [min.]
Gnocchi	2
Knöpfli	1
Ravioli	2
Spätzle	1
Tortellini	2
Dry pasta / noodles, covered with water	
Flat noodles / Fettuccine	14
Vermicelli	8

 Duration

European dumplings

Ready-made dumplings in wrappers need to be covered completely with water. Otherwise they will not absorb enough water and will fall apart, even if steeped in water prior to cooking.


Cook fresh dumplings in a greased, perforated container.

Settings



Temperature: 100 °C

Duration: see chart

	 [min.]
Steamed dumplings	30
Yeast dumplings	20
Boil-in-the-bag potato dumplings	20
Boil-in-the-bag bread dumplings	18–20

 Duration

Steam cooking

Grains

Grain swells when cooked and needs to be cooked in liquid. The proportion of grain to liquid will vary depending on the type of grain.


Grain can be cooked whole or cracked.

Settings



Temperature: 100 °C

Duration: see chart

	Ratio Grain : Liquid	 [min.]
Amaranth	1 : 1.5	15–17
Bulgur	1 : 1.5	9
Green spelt, whole	1 : 1	18–20
Green spelt, cracked	1 : 1	7
Oats, whole	1 : 1	18
Oats, cracked	1 : 1	7
Millet	1 : 1.5	10
Polenta	1 : 3	10
Quinoa	1 : 1.5	15
Rye, whole	1 : 1	35
Rye, cracked	1 : 1	10
Wheat, whole	1 : 1	30
Wheat, cracked	1 : 1	8

 Duration

Dried pulses

Soak pulses for at least 10 hours in cold water before cooking. Soaking makes the pulses more digestible and shortens the cooking duration required. Soaked pulses must be covered with liquid during cooking.

Lentils do not need to be soaked before cooking.

With unsoaked pulses a certain ratio of pulses to liquid is required.

Settings



Temperature: 100 °C

Duration: see chart

Soaked	
	🕒 [min.]
Beans	
Kidney beans	55–65
Azuki beans	20–25
Black beans	55–60
Borlotti beans	55–65
Haricot beans	34–36
Peas	
Yellow split peas	40–50
Green peas, shelled	27

🕒 Duration

Steam cooking

Unsoaked		
	Ratio Pulses : Liquid	⌚ [min.]
Beans		
Kidney beans	1 : 3	130–140
Azuki beans	1 : 3	95–105
Black beans	1 : 3	100–120
Borlotti beans	1 : 3	115–135
Haricot beans	1 : 3	80–90
Lentils		
Brown lentils	1 : 2	13–14
Red lentils	1 : 2	7
Peas		
Yellow split peas	1 : 3	110–130
Green peas, shelled	1 : 3	60–70

⌚ Duration


Hen's eggs

Use a perforated container to prepare boiled eggs in the steam oven.

The eggs do not need to be pierced before cooking as they are gradually warmed during the heating-up phase and so do not burst when they are cooked with steam.

When using a solid container for preparing egg dishes, remember to grease it first.

Settings


 | Hen's eggs | ... | Steam cooking

or



Temperature: 100 °C

Duration: see chart

	 [min.]
Small (S) soft medium hard	 3 5 9
Medium (M) soft medium hard	 4 6 10
Large (L) soft medium hard	 5 6–7 12
Extra large (XL) soft medium hard	 6 8 13

 Duration

Steam cooking

Fruit

Cook fruit in a solid container so that none of the juice is lost. If you wish to cook fruit in a perforated container, place a solid container directly underneath it to collect the juice.

Useful tip: You can use the collected juice to prepare a glaze for a fruit flan.

Settings


 | Fruit | ... | Steam cooking

or



Temperature: 100 °C

Duration: see chart

	 [min.]
Apples, cut into pieces	1–3
Pears, cut into pieces	1–3
Cherries	2–4
Mirabelle plums	1–2
Nectarines/Peaches, cut into pieces	1–2
Plums	1–3
Quinces, diced	6–8
Rhubarb, cut into pieces	1–2
Gooseberries	2–3

 Duration

Menu cooking

Before cooking meals with the Menu cooking function, switch off steam reduction (see "Settings - Steam reduction").

Menu cooking involves cooking various foods with different cooking times in order to serve them all together in one meal, e.g. Perch with rice and broccoli. Foods are placed in the steam oven at different times so that they are all ready at the same time.

Shelf level

When cooking fish or food with a distinctive colour (e.g. beetroot) in a perforated container, place the perforated container directly above a solid container to avoid any transfer of flavour or colour to other food and to prevent liquid dripping onto food below it.

Temperature

Whole meals should be cooked at a temperature of 100 °C as this is the temperature required to cook the majority of foods.

Do not cook a whole meal at the lowest temperature when different temperatures are required for different types of food, e.g. 85 °C for seabream and 100 °C for potatoes.

If the recommended cooking temperature for the food is 85 °C for example, try cooking it at 100 °C and testing the result. Some delicate types of fish with a soft structure, e.g. flounder will become very firm when cooked at 100 °C.

Duration

If you increase the recommended temperature, shorten the cooking duration by approx. $\frac{1}{3}$.

Example:

Rice	20 minutes
Rosefish fillet	6 minutes
Broccoli	4 minutes

20 minutes minus 6 minutes = 14 minutes (1st duration: rice)

6 minutes minus 4 minutes = 2 minutes (2nd duration: rosefish fillet)

Remaining time = 4 minutes (3rd duration: broccoli)

Cooking durations	20 min. - rice		
		6 min. - rosefish fillet	
			4 min. - broccoli
Settings	14 min.	2 min.	4 min.

Steam cooking

Procedure

- Place the rice in the oven compartment first.
- Set the first cooking duration: 14 minutes.
- After 14 minutes, place the fish in the steam oven.
- Set the second cooking duration: 2 minutes.
- After 2 minutes, place the broccoli in the steam oven.
- Set the third cooking duration: 4 minutes.

Sous-vide (vacuum) cooking

With this gentle cooking method, food is cooked slowly and at a low, constant temperature in vacuum packaging.

With vacuum cooking, no moisture evaporates during cooking and all nutrients and flavours are retained.

The cooking result has an intensive taste and food is cooked evenly.

Use only fresh food which is in a good condition.

Ensure hygienic conditions and that food has not been out of the refrigerator too long, e.g. during transportation.

Use only heat-stable, boiling-resistant vacuum bags.

Do not cook food in the sales packaging, such as vacuum-packed frozen food as it is possible that the packaging used is not suitable for vacuum cooking.

Do not use the vacuum bag more than once.

Vacuum-seal the food in a chamber system vacuum sealer only.

Sous-vide (vacuum) cooking

Important

For an optimum cooking result:


- Use fewer herbs and spices than for conventional cooking as the influence on the taste of the food is more intensive.
You can also prepare the food unseasoned and add seasoning after cooking.
- The cooking duration is reduced when salt, sugar, and liquids are added.
- The food becomes firmer if acidic foods, such as lemon or vinegar are added.
- Do not use alcohol or garlic as this can cause an unpleasant taste.
- Only use vacuum bags that match the size of the food. If the vacuum bag is too big, too much air may remain inside.
- If you want to cook several pieces of food in one vacuum bag, put them side by side in the bag.
- If you want to cook food in several vacuum bags at once, put the bags side by side on the shelf.
- The cooking durations depend on the thickness of the food.
- With higher temperatures and/or longer cooking durations, a lack of water may occur. Check the display from time to time.
- Keep the door closed during the cooking process. Opening the door extends the cooking process and can change the cooking result.
- Cooking at a lower temperature and for a longer duration can result in increased residual water in the cooking compartment. This does not affect the cooking result.
- The information on temperature and duration from sous-vide recipes cannot always be adopted 1:1. Adjust these settings according to the desired level of doneness.

Useful tips

- To reduce preparation times, you can vacuum food 1–2 days before cooking. Store the vacuumed food in the refrigerator at a maximum of 3 °C. To maintain quality and taste, the food must be cooked after 2 days at the latest.
- Freeze liquids such as marinades before vacuum-sealing to prevent them from escaping from the vacuum bag.
- Fold the edges of the vacuum bag outwards for filling in order to obtain clean, perfect weld seams.
- If you do not want to eat the food directly after cooking, put it in iced water to cool down completely. Then store it at a maximum of 3 °C. In this way, you can maintain quality and taste while extending the life of the food.
Exception: Consume poultry immediately after cooking.
- After cooking, cut the vacuum bag on all sides for easier access to the food.
- Briefly fry meat and firm types of fish (such as salmon) before serving for a roasted aroma.
- Use the brine or marinade of vegetables, fish, or meat to make a sauce.
- Serve the food on pre-warmed plates.

Sous-vide (vacuum) cooking

Procedure

- Rinse the food with cold water and dry it.
- Place the food in a vacuum bag and add spices or liquid if desired.
- Vacuum-seal the food in a chamber system vacuum sealer.
- For optimum cooking results, insert the rack on shelf level 2.
- Place the vacuum-sealed food on the rack (next to each other if there are several bags).
- Insert the condensate tray on the lowest shelf level.
- Select .
- Scroll through the list until Sous-vide is highlighted.
- Confirm with OK.
- Change the recommended temperature if necessary.
- Confirm with OK.
- Set the cooking duration. Any time between 1 minute and 10 hours can be set.
- Confirm with OK.
- Set further settings as necessary (see "Operation - Further functions").

Possible causes for poor results

The vacuum bag has opened:

- The weld seam was not clean or stable enough and came undone.
- The bag was damaged by a sharp bone.

The food has an unpleasant or strange taste:

- Incorrect storage of the food; the food was kept out of the refrigerator for too long.
- The food was contaminated with bacteria before it was vacuum sealed.
- Too much of ingredients such as spices were added.
- The bag or weld seam were not in perfect order.
- The vacuum was insufficient.
- The food was not eaten or chilled immediately after cooking.

Sous-vide (vacuum) cooking

Food	Added in advance		🌡️ [°C]	🕒 [min.]
	Sugar	Salt		
Fish				
Blue eye trevalla/Ling fillet, 2.5 cm thick		x	54	35
Salmon fillet, 3 cm thick		x	52	30
Stargazer/Monkfish fillet		x	62	18
Pikeperch fillet, 2 cm thick		x	55	30
Vegetables				
Cauliflower florets, medium to large		x	85	40
Hokkaido pumpkin, sliced		x	85	15
Kohlrabi, sliced		x	85	30
White asparagus, whole	x	x	85	22–27
Sweet potato, sliced		x	85	18
Fruit				
Pineapple, sliced	x		85	75
Apples, sliced	x		80	20
Baby bananas, whole			62	10
Peaches, halved	x		62	25–30
Rhubarb, cut into pieces			75	13
Plums, halved	x		70	10–12
Other				
Beans, white, soaked at a 1:2 ratio (beans to liquid)		x	90	240
Prawns, peeled and deveined		x	56	19–21
Hen's egg, whole			65–66	60
Scallops, removed from shell			52	25
Shallot, whole	x	x	85	45–60

🌡️ Temperature / 🕒 Duration

Sous-vide (vacuum) cooking

Food	Added in advance		🌡️ [°C]		🕒 [min.]
	Sugar	Salt	Medium*	Well-done*	
Meat					
Duck breast, whole		x	66	72	35
Saddle of lamb (on the bone)			58	62	50
Beef fillet steak, 4 cm thick			56	61	120
Beef rump steak, 2.5 cm thick			56	–	120
Pork fillet, whole		x	63	67	60

🌡️ Temperature / 🕒 Duration

* Degree of doneness

The "Well-done" degree of doneness has a higher core temperature than "Medium," but is not cooked through in the classical sense.

Reheating

Reheat brassica vegetables, e.g. kohlrabi and cauliflower, only in combination with a sauce. If reheated without a sauce, these vegetables can have an unpleasant aftertaste and may develop a grey-brown colour.

Foods with a short cooking time and those which have a different degree of doneness when reheated, e.g. fish, are not suited to being reheated.

Preparation

Immediately after cooking, place the food in ice cold water and leave for approximately one hour. The rapid cooling inhibits continued cooking of the food. This means the ideal degree of doneness of the food remains as it is. Store the food afterwards in the refrigerator at max. 3 °C.

Please note that the quality of food deteriorates the longer it is stored. We recommend storing food in the refrigerator for no longer than five days before reheating it.

Settings



| Sous-vide

Temperature: see chart

Duration: see chart

Sous-vide (vacuum) cooking

Chart for reheating food cooked using the sous-vide function

Food	🌡️ [°C]		🕒 ² [min.]
	medium ¹	well-done ¹	
Meat			
Saddle of lamb (on the bone)	58	62	30
Beef fillet steak, 4 cm thick	56	61	30
Beef rump steak, 2.5 cm thick	56	–	30
Pork fillet, whole	63	67	30
Vegetables			
Cauliflower florets, medium to large ³	85		15
Kohlrabi, sliced ³	85		10
Fruit			
Pineapple, sliced	85		10
Other			
Beans, white, soaked at a 1:2 ratio (beans to liquid)	90		10
Shallots, whole	85		10

🌡️ Temperature / 🕒 Duration

¹ Degree of doneness

The "Well-done" degree of doneness has a higher core temperature than "Medium," but is not cooked through in the classical sense.

² Durations apply for food with an initial temperature of approx. 5 °C.

³ Reheat only in sauce.

Reheat

Use the Sous-vide function to reheat food already cooked using this function (see "Sous-vide - Reheating").

The steam oven is very effective at reheating food gently, without drying it out or cooking it further. The food reheats evenly and does not need to be stirred during the reheating process.

You can reheat individual dishes or plated meals which have been prepared previously (e.g. meat, vegetables and potatoes).

Suitable containers

Small quantities can be reheated on a plate, larger quantities should be placed in a cooking container.

Duration

The number of plates or containers has no bearing on the duration.

The durations listed in the chart relate to an average portion per plate/container. Increase the duration for larger quantities.

Useful tips

- Do not reheat large items, such as a joint of roast meat, whole. Divide it into portions and reheat these as plated meals.
- Compact items, such as stuffed capsicum or roulades, should be cut in half.
- Please note that breaded items, such as schnitzel, will not retain their crispness when they are reheated.

- Reheat sauces separately.
Exceptions: Food that is prepared in sauces, e.g. goulash.

Procedure

- Cover the food with a deep plate, a lid, or with clingfilm that is resistant to temperatures up to 100 °C and to steam.
- Then place the plate on the rack in the oven.

Settings



or



Temperature: 100 °C

Duration: see chart

	[min.]
Side dishes (pasta, rice, etc.)	8–10
Casserole	8–10
Fish fillet	6–8
Meat	8–10
Poultry	8–10
Vegetables	8–10
Soup	8–10
Plated meals	8–10

Duration

Special applications

Defrost

It is much quicker to defrost items in the steam oven than at room temperature.

Temperature

60 °C is the best temperature for defrosting.

Exceptions: 50 °C for minced meat and game.


Before and after defrosting

Remove all packaging before defrosting.

Exceptions: Leave bread, biscuits and cakes in their packaging as otherwise they will absorb moisture and become soft.

Allow defrosted food to stand at room temperature after removing it from the oven. The standing time is necessary to allow the even distribution of heat.

Cooking containers

 **Danger of salmonella poisoning.**
Do not use the liquid from defrosted meat or poultry. Pour it away and wash the container, the sink and your hands.

Use a perforated container with a solid container underneath it when defrosting food which will drip, such as poultry. This way food will not be lying in defrosted liquid.

Foods which don't drip can be defrosted in a solid cooking container.

Useful tips

- Fish does not need to be fully defrosted before cooking. Defrost so that the surface is sufficiently thawed to take herbs and seasoning. Depending on the thickness of the fish, 2–5 minutes should be enough.
- When defrosting food which has frozen together, e.g. berries, chops, fish fillets etc. separate it about half-way through the defrosting time.
- Do not refreeze food once it has thawed.
- Defrost frozen ready meals according to the instructions on the packaging.

Settings



or



Temperature: see chart

Defrosting duration: see chart

Special applications

Food to be defrosted	Quantity	🌡️ [°C]	🕒 [min.]	⌚ [min.]
Dairy products				
Sliced cheese	125 g	60	15	10
Quark	250 g	60	20–25	10–15
Cream	250 g	60	20–25	10–15
Soft cheese	100 g	60	15	10–15
Fruit				
Apple sauce	250 g	60	20–25	10–15
Apple pieces	250 g	60	20–25	10–15
Apricots	500 g	60	25–28	15–20
Strawberries	300 g	60	8–10	10–12
Raspberries / Blackcurrants	300 g	60	8	10–12
Cherries	150 g	60	15	10–15
Peaches	500 g	60	25–28	15–20
Plums	250 g	60	20–25	10–15
Gooseberries	250 g	60	20–22	10–15
Vegetables				
Frozen in a block	300 g	60	20–25	10–15
Fish				
Fish fillets	400 g	60	15	10–15
Trout	500 g	60	15–18	10–15
Lobster	300 g	60	25–30	10–15
Small shrimps	300 g	60	4–6	5
Ready meals,				
Meat, vegetables, sides / Casserole / Soup	480 g	60	20–25	10–15
Meat				
Roast meat slices	125–150 g each	60	8–10	15–20
Mince	250 g	50	15–20	10–15
Mince	500 g	50	20–30	10–15
Stew	500 g	60	30–40	10–15

Special applications

Food to be defrosted	Quantity	🌡️ [°C]	🕒 [min.]	⌚ [min.]
Stew	1000 g	60	50–60	10–15
Liver	250 g	60	20–25	10–15
Saddle of hare	500 g	50	30–40	10–15
Saddle of venison	1000 g	50	40–50	10–15
Schnitzel / Chops / Sausages	800 g	60	25–35	15–20
Poultry				
Chicken	1000 g	60	40	15–20
Chicken thighs	150 g	60	20–25	10–15
Chicken schnitzel	500 g	60	25–30	10–15
Turkey drumsticks	500 g	60	40–45	10–15
Cookies/Muffins				
Puff pastries /Yeast buns	–	60	10–12	10–15
Creamed mixture cakes / biscuits	400 g	60	15	10–15
Bread / Rolls				
Bread rolls	–	60	30	2
Rye bread, sliced	250 g	60	40	15
Whole grain bread, sliced	250 g	60	65	15
White bread, sliced	150 g	60	30	20

🌡️ Temperature / 🕒 Duration / ⌚ Standing time

Bottling

Only use unblemished, fresh produce which is in good condition.

Glass jars

Use clean glass jars and accessories and check them for any defects. Glass jars with twist off lids or glass lids with a rubber seal are suitable.

Make sure that all the glass jars are the same size so that bottling is carried out evenly.

After you have filled the jars with the bottled produce, clean the glass rims with a clean cloth and hot water and then seal the jars.

Fruit

Sort fruit carefully, rinse it briefly but thoroughly and allow it to drain. Take great care when cleaning soft fruit as it is very delicate and squashes easily.

Remove any peel, stalks, cores or stones. Cut up large fruit. For example, cut apples into slices.

If you are bottling fruit with stones (e.g. plums, apricots) without removing the stones, pierce the fruit several times with a fork or wooden skewer as otherwise it will burst.

Vegetables

Rinse, clean and cut up vegetables.

Green vegetables should be blanched before bottling to help them retain their colour (see "Special applications - Blanching").

Fill volume

Fill the glass jars with produce up to a maximum of 3 cm below the rim. Do not pack it down as this will damage the cell walls of the produce. Tap the jar gently onto a cloth to help distribute the contents evenly. Fill the jars with liquid. The produce must be completely covered.

Use a sugar solution for fruit and a salt or vinegar solution for vegetables.

Meat and sausages

Briefly fry or cook the meat before bottling. Use the juices with some added water, or the broth in which the meat was cooked, as the liquid content of the jars. Make sure there is no grease on the rim of the jars.

When bottling sausages, only fill the jars to halfway as the meat will rise during the bottling process.

Useful tips

- Make use of residual heat by leaving the jars in the oven for 30 minutes after it has switched off.
- Then cover the jars with a cloth and allow to cool for approx. 24 hours.

Special applications

Procedure

- Place the rack on the lowest shelf level.
- Place the jars on the rack (all the same size). Ensure that they do not touch one another.

Settings



 | Bottling

or



Temperature: see chart

Bottling duration: see chart

Food	 [°C]	 [min.*]
Berries		
Red / Black currants	80	50
Gooseberries	80	55
Cranberries	80	55
Fruit with stones		
Cherries	85	55
Mirabelle plums	85	55
Plums	85	55
Peaches	85	55
Greengage plums	85	55
Fruit with a core		
Apples	90	50
Apple sauce	90	65
Quinces	90	65
Vegetables		
Beans	100	120
Broad beans	100	120
Gherkins	90	55
Beetroot	100	60

Special applications

Food	🌡️ [°C]	🕒 [min.*]
Meat		
Pre-cooked	90	90
Roasted	90	90

🌡️ Temperature / 🕒 Duration

* The times quoted are for 1.0 litre jars. If using 0.5 litre jars, reduce the duration by about 15 minutes. If using 0.25 litre jars, reduce the duration by about 20 minutes.

Special applications

Extracting juice

This appliance is ideal for extracting juice from soft, firm and hard fruit.

It is best to use overripe fruit as the riper the fruit, the greater the quantity of juice produced. Very ripe fruit will also produce a more intense flavour.

Preparation

Sort and rinse the fruit, and cut out any blemishes.

Remove the stalks from grapes and morello cherries as these are bitter. The stalks do not need to be removed from strawberries, raspberries etc.

Cut larger fruit into chunks approx. 2 cm in size. The harder the fruit, the smaller the pieces should be.

Useful tips

- Try experimenting with mild and tart flavours. For example, mix apples with elderberries.
- Adding sugar will increase the quantity of juice produced and improve the flavour. Sprinkle the fruit with sugar and leave to absorb for a few hours before juicing. For 1 kg of sweet fruit add 50–100 g of sugar, and for 1 kg of tart fruit add 100–150 g of sugar.
- If you wish to bottle the juice rather than consume it straight away, pour it whilst hot into hot, sterilised bottles up to the rim, and then seal immediately with sterilised rubber tops.

Procedure

- Put the prepared fruit (cleaned, washed, chopped etc.) into a perforated cooking container.
- Place a solid container or the condensate tray underneath to catch the juice.

Settings



Temperature: 100 °C

Duration: 40–70 minutes

Making yoghurt

To prepare yoghurt, you will need milk and live culture or yoghurt starter powder, e.g. from a health food store.

Use natural yoghurt with live culture and without additives. Do not use heat-treated yoghurt.

The yoghurt must be fresh (short storage time).

You can use either unchilled long-life milk or fresh milk. Long-life milk can be used without being further treated. Fresh milk must be heated to 90 °C (not boiled) and then allowed to cool down to 35 °C. Using fresh milk will make the yoghurt firmer than if long-life milk was used.

The yoghurt and milk should have the same percentage fat.

Do not move or shake the jars while the yoghurt is fermenting.

After preparing the yoghurt, it must be immediately placed in the refrigerator to cool down.

The firmness, fat content and cultures used in the yoghurt starter all affect the consistency of homemade yoghurt. Not all yoghurts are equally suitable as yoghurt starters.

Possible causes for poor results

Yoghurt is not set:

Incorrect storage of the yoghurt starter, too much time out of the refrigerator, packaging was damaged, milk was insufficiently heated.

Liquid has not been removed:

Jars were moved, the yoghurt cooled down too slowly.

Yoghurt is grainy:

The milk was heated too high, it was not free of imperfections, the milk and yoghurt starter were not stirred evenly.

Useful tip: If you are using yoghurt starter powder, you can prepare the yoghurt from a mixture of milk and cream. For that, mix $\frac{3}{4}$ litre milk with $\frac{1}{4}$ litre cream.

Special applications

Procedure

- Mix 100 g yoghurt with 1 litre of milk or follow the instructions provided by the manufacturer.
- Pour the mixture into glass jars and seal the jars.
- Place the sealed jars in a perforated cooking container. Ensure that they do not touch one another.
- Immediately after the yoghurt has been made, place the jars in the refrigerator, making sure not to shake them unnecessarily.

Settings

 | Special | Make yoghurt

or



Temperature: 40 °C


Duration: 5:00 hours

Proving yeast dough

Procedure

- Prepare the dough according to the recipe.
- Place the covered bowl in a perforated cooking container or on the rack.

Settings

 | Prove yeast dough

Duration: as per recipe instructions

or



Temperature: 40 °C

Duration: as per recipe instructions

Dissolving gelatine

Procedure

- **Gelatine leaves:** Cover the gelatine leaves with cold water and leave to soak for 5 minutes. The gelatine leaves have to be fully covered with water. Remove the gelatine leaves from the bowl and squeeze them out. Empty the bowl. Place the squeezed gelatine leaves back in the bowl.
- **Gelatine powder:** Place the gelatine powder in a bowl and add water according to the instructions on the packaging.
- Cover the bowl and place on the rack.

Settings

 | Special | Dissolve gelatine

or



Temperature: 90 °C

Duration: 1 minute

Melting chocolate

You can use the steam oven for melting any type of chocolate.

Procedure

- Break the chocolate into small pieces. Place chocolate icing in its unopened sachet in a perforated cooking container.
- Place large quantities in a solid container and small quantities in a cup or a bowl.
- Cover the container or the dish with temperature (up to 100 °C) and hot steam resistant clingfilm or a lid.
- Stir large quantities once during cooking.

Settings

 | Special | Melt chocolate

or



Temperature: 65 °C

Duration: 20 minutes

Special applications

Skinning fruit and vegetables

Procedure

- Cut a cross in the top of tomatoes, nectarines etc. This will allow the skin to be removed more easily.
- Place the fruit/vegetables in a perforated cooking container.
- To blanch almonds, it is important to plunge them into cold water as soon as they are taken out of the oven, otherwise the skin cannot be removed.

Settings



Temperature: 100 °C
Duration: see chart

Produce	[min.]
Apricots	1
Almonds	1
Nectarines	1
Capsicum	4
Peaches	1
Tomatoes	1

Duration

Preserving apples

You can treat homegrown apples in the steam oven to increase the length of time for which you can store them. Once treated, the apples will keep for 5 to 6 months when stored in a dry, cool and well-ventilated place. This method is only suitable for apples and not for other types of fruit.

Settings

| Fruit | Apples | Whole | Preserving

or



Temperature: 50 °C
Duration: 5 minutes

Blanching

Blanch fruit and vegetables before freezing them. Blanching helps maintain the quality of the produce when it is frozen.

Blanching vegetables also helps them retain their original colour.

Procedure

- Put the prepared vegetables (cleaned, washed, chopped etc.) into a perforated cooking container and place in the steam oven.
- Afterwards, plunge the vegetables into ice cold water to cool them down quickly. Drain them well.

Settings

 | Blanch

or



Temperature: 100 °C

Duration: 1 minute

Sweating onions

Sweating means cooking the onions in their own juices, with the addition of a little fat if necessary.

Procedure

- Cut the onions up into small pieces and place them in a solid cooking container with a little butter.
- Cover the container or the dish with temperature (up to 100 °C) and hot steam resistant clingfilm or a lid.

Settings

 | Special | Sweat onions

or



Temperature: 100 °C

Duration: 4 minutes

Special applications

Rendering fat

The bacon will not become brown.

Procedure

- Place the bacon (diced or rashers) in a solid cooking container.
- Cover the container with temperature (up to 100 °C) and hot steam resistant clingfilm or a lid.

Settings

 | Special | Render fat

or



Temperature: 100 °C

Duration: 4 minutes

Disinfecting items

The steam oven will disinfect baby bottles and other containers so that at the end of the programme they are as germ free as they would have been if boiled. Check beforehand that all parts, teats etc. are declared by the manufacturer to be heat resistant to 100 °C and also that they can withstand hot steam.

Dismantle, clean and thoroughly rinse baby bottles. Reassemble the bottles only after they have completely dried. This prevents recontamination.

Procedure

- Place the individual parts on the rack or in a perforated cooking container, ensuring that they do not touch one another (on their sides or with the opening facing downwards). This will allow the steam to reach the parts from all sides.
- Place the rack or the cooking container on the lowest shelf level.

Settings

 | Sterilise dishes

Duration: 1 minute to 10 hours

or



Temperature: 100 °C

Duration: 15 minutes

Heating damp towels

Procedure

- Moisten towels and then roll them up.
- Place them beside one another in a perforated cooking container.

Settings

 | Special | Heat damp towels

or



Temperature: 70 °C

Duration: 2 minutes

Decrystallising honey

Procedure

- Loosen the lid and place the jar of honey in a perforated cooking container.
- Stir the honey once during the cooking procedure.

Settings

 | Special | Decrystallise honey

or



Temperature: 60 °C

Duration: 90 minutes (irrespective of the size of jar or the amount of honey in the jar)

Preparing custard royale

Procedure

- Stir 6 eggs into 375 ml milk (do not beat into a foam).
- Season the egg/milk mixture and pour into a solid cooking container greased with butter.

Settings



Temperature: 100 °C

Duration: 4 minutes

Settings

Calling up the "Settings" menu

- Switch the steam oven on.
- Touch '≡.

The list of available settings will appear in the display.

This list is also available under Further programmes  | Settings .

You can check them or change them.

A tick ✓ next to an option shows which setting is active.

Settings cannot be altered while a cooking programme is in progress.







Changing and saving settings

- Touch '≡
- Scroll through the list until the option you want is highlighted.
- Confirm with OK.
- Scroll through the list until the setting you want is highlighted.
Use the ^ and v arrow sensors to change settings with segment bars (e.g. volume).
- Confirm with OK.

The setting is now saved.

- Touch ↶ to return to the previous menu or '≡ to return to function selection.

Settings overview

Menu option	Possible settings
Language 	... / deutsch / english / ... Country
Time	Show On / Off * / Night dimming Clock format 24 h * / 12 h Set
Date	
Lighting	On / On for 15 seconds *
Display brightness	
Acoustic tones	Melodies  Solo tone 
Keypad tone	
Units	Weight g * / lb / lb/oz Temperature °C * / °F
Keeping warm	On / Off *
Steam reduction	On * / Off
Recommended temperatures	
Safety	System lock  On / Off * Sensor lock On / Off *
Water hardness	Soft Medium Hard *
Showroom programme	Demo mode On / Off *
Factory default	Settings User programmes Recommended temperatures



* Factory default

Settings

Language

You can set the language and the country you want.

After selecting and confirming your choice, the language you have selected will appear in the display.



Useful tip: If you have selected the wrong language by mistake, select the  symbol to get back to the Language  menu.

Time



Display

Select how you want the time of day to appear in the display when the steam oven is switched off:

- On

The time of day always appears in the display. You can switch the lighting  on and off or use the minute minder  by touching the relevant sensor.

- Off

The display is switched off to save energy. The steam oven has to be switched on before you can use it. This also applies to using the oven interior lighting  and the minute minder  functions.

- Night dimming

To save energy, the time is only shown in the display between 5:00 and 23:00. The rest of the time it is not visible.

Clock format

You can select the clock format for the time of day:

- 24 h

The time of day is shown in the 24-hour format.

- 12 h

The time of day is shown in the 12-hour format.

Setting

Set the hours and the minutes.


If there is an interruption to the power supply, the current time of day will reappear once power has been restored. The time is stored in memory for about 200 hours.

Date

Set the date.

When the steam oven is switched off, the date will only appear in the display with the settings **Time | Show | On** or **Night dimming** between 5:00 and 23:00.

Lighting

- On
The interior lighting is switched on during the entire cooking period.
- On for 15 seconds
The oven lighting turns off 15 seconds after a programme starts. Touching  switches it on for another 15 seconds.

Display brightness

The display brightness is represented by a bar with seven segments.



- Select **Darker** or **Lighter** to change the brightness of the display.

Acoustic information

Melody

At the end of a process, a melody will sound several times in intervals.

The volume of the melody is represented by a bar with seven segments.



Maximum volume is selected when all segments are filled. If none of the segments is filled, the melody is switched off.

- Select **Quieter** or **Louder** to adjust the volume.

Solo tone

At the end of a process, a continuous tone will sound for a period of time.

The pitch of this tone is represented by a segment bar.

- Select **Lower** or **Higher**, to change the pitch.

Settings

Keypad tone

The keypad tone volume is represented by a bar with seven segments.



Maximum volume is selected when all segments are filled. If none of the segments is filled, the tone is switched off.

- Select **Quieter** or **Louder** to adjust the volume.

Units

Weight

- g

Weight in Automatic programmes is set using grams.

- lb

Weight in Automatic programmes is set using pounds.

- lb/oz

Weight in Automatic programmes is set using pounds and ounces.

Temperature

- °C

The temperature is displayed in degrees Celsius.


- °F

The temperature is displayed in degrees Fahrenheit.

Keeping warm function

Please note that delicate food, especially fish, can continue cooking whilst being kept warm.

– On

The keeping warm function is activated as standard with the Steam cooking  function if a temperature of min. 80 °C is selected. If food is not removed from the oven at the end of a programme, the keeping warm function will automatically start after approx. 5 minutes. Keeping warm will appear in the display and the food will be kept warm for approx. 15 minutes at a temperature of 70 °C. The keeping warm function is cancelled when the door is opened or any sensors are touched.

– Off

The keeping warm function is deactivated.

Steam reduction

– On

If a temperature above approx. 80 °C was used for cooking, shortly before the end of the cooking duration the door of the steam oven will automatically open slightly. This is to prevent a large amount of steam escaping when the door is opened. The door will close again automatically.

– Off

If steam reduction is switched off, the Keeping warm function is also automatically switched off. If steam reduction is switched off, a large amount of steam will escape when the door is opened.

Settings

Recommended temperatures

If you frequently cook with different temperatures, it makes sense to change the recommended temperatures.

Once an option has been selected, the list of functions and special applications will appear together with their recommended temperatures.

- Select the function / special application you want.
- Confirm with OK.

The recommended temperature will appear together with the range within which it can be changed.

- Change the recommended temperature.
- Confirm with OK.

Safety

System lock

The system lock prevents the appliance being switched on by mistake.

The minute minder can still be used when the system lock is active.

The system lock will remain activated even after a power failure.

– On

The system lock is now active. If you want to use the steam oven, press the OK sensor for at least 6 seconds.

– Off

The system lock is not active. You can use the steam oven as normal.

Sensor lock

The sensor lock prevents a cooking process being switched off or changed while it is running. Once activated, the sensors are locked a few seconds after a programme has started.

- On

The sensor lock is active. You must touch OK for at least 6 seconds to use the sensors again. The sensor lock is then deactivated for a short period.

- Off

The sensor lock is not active. All sensors react to touch as normal.

Water hardness

The water hardness level of the steam oven is set to Hard at the factory. For trouble-free operation of the steam oven, and to ensure that it is descaled at the appropriate time, it is important to set the water hardness level for your area. The harder the water, the more often the steam oven must be descaled.

- Soft

< 8.4 °dH, < 1.5 mmol/l

- Medium

8.4 - 14 °dH, 1.5 - 2.5 mmol/l

- Hard

> 14 °dH, > 2.5 mmol/l

Settings

Showroom programme

This function enables the steam oven to be demonstrated in showrooms without heating up. It should not be set for domestic use.

Demo mode

If Demo mode is activated, Demo mode is switched on. The appliance will not heat up **will appear when the steam oven is switched on.**

– On

Touch OK for at least 4 seconds to activate Demo mode.

– Off

Touch OK for at least 4 seconds to deactivate Demo mode. The steam oven can then be used as normal.

Factory default settings

– Settings

Any settings that you have altered will be reset to the factory default setting.

– User programmes

All User programmes will be deleted.

– Recommended temperatures

Recommended temperatures which have been changed will be reset to the factory default settings.

Notes on cleaning and care



Danger of injury!

The steam from a steam cleaning appliance could reach electrical components and cause a short circuit.

Do not use a steam cleaner to clean the steam oven.

Unsuitable cleaning agents can discolour and damage the surfaces of the appliance. Only use a solution of domestic washing-up liquid and warm water applied with a soft sponge or cloth.

All surfaces are susceptible to scratching. Scratches on glass surfaces may cause a breakage.

Remove any cleaning agent residues immediately.

Do not use cleaning agents or washing-up liquids containing aliphatic hydrocarbons (e.g. methane, propane, hexane etc.) as these could cause the seals to swell.

Disconnect the appliance from the electricity supply and allow it to cool down to a safe temperature before cleaning.

- The appliance and accessories should be cleaned and dried thoroughly after each use.
- Leave the appliance door open until the oven interior is completely dry.

If the appliance is not going to be used for a longer period of time, e.g. whilst on holiday, it should be thoroughly cleaned and dried beforehand to prevent the build-up of odours etc. After cleaning, leave the door open.

Cleaning and care

Unsuitable cleaning agents

To avoid damaging the surfaces of your appliance, do not use:

- cleaning agents containing soda, ammonia, acids or chlorides,
- cleaning agents containing descaling agents,
- abrasive cleaning agents, e.g. powder cleaners and cream cleaners,
- solvent-based cleaning agents,
- stainless steel cleaning agents,
- dishwasher cleaner,
- glass cleaning agents,
- cleaning agents for ceramic cooktops,
- hard, abrasive brushes or sponges, e.g. pot scourers, brushes or sponges which have been previously used with abrasive cleaning agents,
- dirt erasers,
- sharp metal tools,
- steel wool or metal scourers,
- stainless steel spiral pads,
- spot cleaning,
- oven cleaner.

Appliance front

Soiling that is left too long might become impossible to remove and could cause external surfaces to alter or discolour.

Remove any soiling from the front of the steam oven immediately.

- Clean the front of the appliance with a solution of warm water and a little washing-up liquid applied with a clean sponge or cloth. You can also use a clean, damp microfibre cloth, such as the Original Miele all purpose microfibre cloth, without any cleaning product.
- Dry the front of the appliance after cleaning with a soft cloth.

Oven compartment

After prolonged use, the **floor heater** can become discoloured by drops of liquid.

- Please remove
 - condensate using a sponge or absorbent cloth,
 - light, greasy soiling with a sponge and a solution of washing-up liquid and hot water.
- After cleaning, wipe the surface with a damp cloth to remove any cleaning agent residues.
- Then dry the oven interior and the inside of the door with a cloth.

The **door seal** is designed to last the lifetime of the appliance. Should it for any reason need replacing, please contact Miele (see the end of these operating instructions).

Automatic door release

Ensure that the door opener does not become soiled with food residues.

- Wipe away soiling **immediately** with a clean sponge and a solution of washing-up liquid and hot water.
- After cleaning, wipe the surface with a damp cloth to remove any cleaning agent residues.

Water container

- Remove and empty the water container after each use.
- Rinse the water container by hand and then dry it to prevent limescale building up.

Cleaning and care

Accessories


All accessories are dishwasher-safe.

Condensate tray, rack and cooking containers

- Wash and dry the condensate tray, rack and cooking containers after each use.
- Any bluish discolouration on the cooking containers can be removed with vinegar. Rinse afterwards with clean water.

Shelf runners

The shelf runners are suitable for cleaning in a dishwasher.

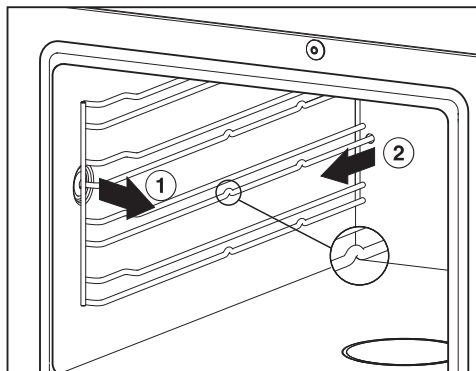

- Pull the shelf runners out first from the side ①, then from the back ② of the steam oven.
- The shelf runners can be cleaned in the dishwasher or by hand with a solution of warm water and a little washing-up liquid applied with a clean sponge.
- Push the shelf runners firmly back in after cleaning. When putting them back in, make sure they are correctly inserted (see illustration).

If the shelf runners are not correctly inserted, there is no anti-tip protection. The temperature sensor could also be damaged when cooking containers are placed in the steam oven.

Descaling

We recommend using Miele descaling tablets for descaling the appliance (see "Optional accessories"). These have been specially developed for Miele appliances to optimise the descaling process. Other descaling agents, which contain other acids besides citric acid and/or other undesirable substances, such as chlorides, for example, could damage the steam oven. Moreover, the descaling effect required could not be guaranteed if the descaling solution was not of the appropriate concentration.

Do not spill descaling agent onto metal surfaces. This can cause marks to appear.


However, should any descaling agent get onto these surfaces, wipe it away immediately.

The steam oven needs to be descaled after a certain number of operating hours. When the steam oven needs to be descaled, a number will appear in the display indicating the number of cooking processes remaining before the appliance locks out. After the last remaining cooking process, the appliance will lock out.


We recommend that you descale the appliance before it locks out.

During the descaling process the water container must be emptied, rinsed out and refilled with fresh water.

The **Finish at** and **Start at** functions are not available while descaling is being carried out.

- Switch the steam oven on and select .
- Scroll through the list until **Descal** is highlighted.
- Confirm with **OK**.

A message will appear in the display:

- Fill the water container with cold fresh tap water up to the level marker  and drop 2 Miele descaling tablets in it.
- Push the water container into the appliance until it connects.
- Confirm with **OK**.

The descaling process will now begin, and the time remaining will count down in the display.

It is only possible to cancel the descaling process during the first 6 minutes. Do not switch the appliance off during the descaling process. If it is switched off before the end of the process, the whole process will have to be started from the beginning again.

During the course of the descaling process, the water container needs to be rinsed and filled with fresh water twice.

- Follow the instructions in the display.
- Confirm with **OK**.

Once the estimated time has elapsed, **Process finished** will appear in the display.

Cleaning and care

After descaling


- Switch the steam oven off.
- Remove, empty and dry the water container.
- Let the oven cavity cool down.
- Then dry the oven compartment.
- Leave the appliance door open until the oven interior is completely dry.

Door


Removing the door

- Prepare a suitable underlay for the door, such as a soft cloth.

Before removing the door, the locking clamps on both hinges have to be released.

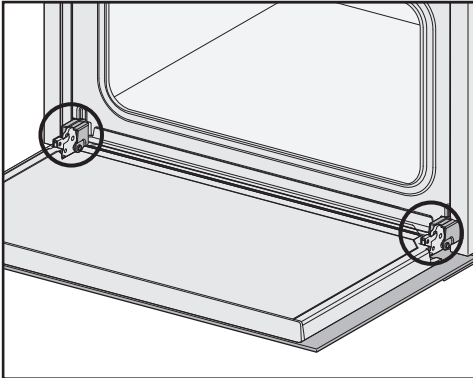

- Open the door fully.

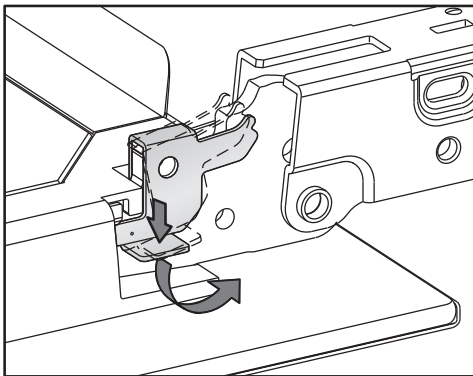

- Release the locking clamps on the hinges by pushing them down. Turn them as far as they will go in an angled position.

 Danger of injury from the hinge guides for the door.

The hinge guides can flip back against the steam oven.

Never attempt to pull the door off the hinge guides from a horizontal position.


- Raise the door up till it rests open.

Risk of damage to the door.

The door handle may break off and the glass may be damaged.

The door should be gripped firmly at the sides and not at the handle when being removed.

Make sure that you lift the door off evenly on both sides.

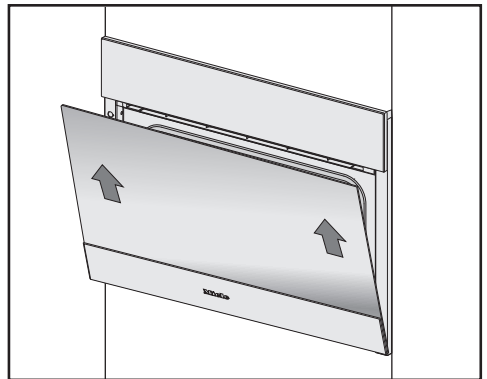


- Hold the door on either side and pull diagonally upwards from the hinge guides.
- Place the door on the previously prepared surface.

Cleaning and care


Refitting the door

Risk of damage to the door.
Make sure that the door goes back on straight.

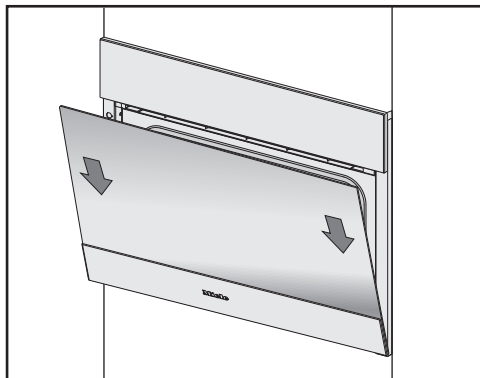


- Hold the door securely at both sides and carefully fit it back onto the hinge guides.

Risk of damage to the door.
If the locking clamps are not locked,
the door could work loose resulting
in damage.
Ensure that the locking clamps are
locked after refitting the door.

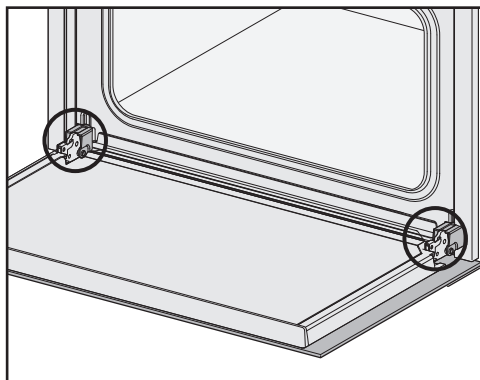

- Open the door fully.

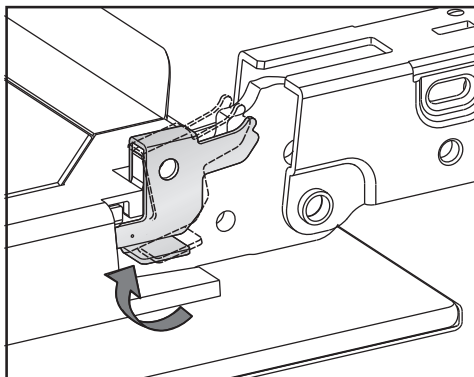


- Turn both locking clamps up as far as they will go into a horizontal position.

Problem solving guide

With the aid of the following guide, minor problems can be easily corrected without contacting Miele. If, after reading this guide, you can't remedy the problem yourself, please call Miele (see back cover for details).

Please note, however, that a call-out charge will be applied to unnecessary service visits where the problem could have been rectified as described in these operating instructions.

 **Danger of injury!** Installation, maintenance and repairs may only be carried out by a suitably qualified and competent person. Repairs and other work by unqualified persons could be dangerous. Miele cannot be held liable for unauthorised work. Do not attempt to open the casing of the steam oven yourself.

Problem	Possible cause and remedy
You cannot switch the appliance on.	The circuit breaker is defective or has tripped. ■ Reset or replace the circuit breaker (see data plate for minimum fuse rating).
	There may be a technical fault. ■ Disconnect the appliance from the mains connection for approx. 1 minute: – switch off at the wall socket and withdraw the plug, or – switch off the mains circuit breaker. ■ Reset the trip switch in the mains fuse box, and switch the appliance back on. If it still will not switch on, contact a qualified electrician or Miele.
The oven does not heat up.	Demo mode has been activated. The steam oven can be operated but does not heat up. ■ You need to deactivate the Demo mode (see "Settings - Showroom programme").
	The oven cavity has been warmed up by a warming drawer in operation underneath it. ■ Open the door and let the oven cool down.
The fan can still be heard after the appliance has been switched off.	The fan is still running. The appliance is fitted with a fan which removes steam from the oven. The fan will continue to run for a while after the appliance has been switched off. It will switch itself off automatically after a while.

Problem solving guide

Problem	Possible cause and remedy
A humming sound can be heard after switching on the appliance, during operation and after switching off the appliance.	This is not a fault. It is made by water being pumped through the system.
After moving house the appliance no longer switches from the heating-up phase to the cooking phase.	Altitude affects the boiling point of water. If you move house, the appliance will need to be reset for the new altitude if this differs from the old one by more than 300 m. <ul style="list-style-type: none"> ■ To adjust the boiling temperature, you need to descale the appliance (see "Cleaning and care - Descaling").
During operation an unusually large amount of steam escapes or steam escapes from parts of the steam oven where it does not usually.	The door is not properly closed. <ul style="list-style-type: none"> ■ Close the door.
	The door seal is not correctly fitted. <ul style="list-style-type: none"> ■ If necessary, press it in all the way round the door to make sure it is fitted evenly.
	The door seal is damaged, e.g. cracked. <ul style="list-style-type: none"> ■ Replace the door seal. This can be ordered from Miele (see the end of this booklet for contact details).
A whistling sound is heard when the appliance is switched on again.	When the door is closed, the pressure has to equalise, which can cause a whistling sound. This is not a fault.
The <small>Start at</small> and <small>Finish at</small> functions have not worked.	The oven compartment temperature is too high, e.g. after a programme has finished. <ul style="list-style-type: none"> ■ Leave the door open to cool down the oven compartment.
	These functions are not available with <small>Descale</small> .
The oven lighting doesn't come on.	The lamp needs to be replaced. <ul style="list-style-type: none"> ■ Call Miele to have the lamp replaced.
F44	Communication fault <ul style="list-style-type: none"> ■ Switch the steam oven off and then back on again after a few minutes. ■ If the same message appears again, call Miele.

Problem solving guide

Problem	Possible cause and remedy
F and other fault codes	Technical fault. ■ Switch the appliance off and call Miele.

Optional accessories

Miele offers a range of useful accessories, as well as cleaning and conditioning products for your appliance.


These products can be ordered from the Miele online shop.

They can also be ordered directly from Miele (see end of this booklet for contact details).

Cooking containers

There is a wide range of perforated and solid cooking containers available in different sizes:

DGGL 1




Perforated cooking container
Gross capacity 1.5 litres / Useable capacity 0.9 litre
325 x 175 x 40 mm (W x D x H)

DGG 2



Solid cooking container
Gross capacity 2.5 litres / Useable capacity 2.0 litres
325 x 175 x 65 mm (W x D x H)

DGG 3




Solid cooking container
Gross capacity 4.0 litres / Useable capacity 3.1 litres
325 x 265 x 65 mm (WxDxH)

DGGL 4




Perforated cooking container
Gross capacity 4.0 litres / Useable capacity 3.1 litres
325 x 265 x 65 mm (WxDxH)

DGGL 5



Perforated cooking container
Gross capacity 2.5 litres / Useable capacity 2.0 litres
325 x 175 x 65 mm (W x D x H)

DGGL 6




Perforated cooking container
Gross capacity 4.0 litres / Useable capacity 2.8 litres
325 x 175 x 100 mm (W x D x H)

DGG 7



Solid cooking container
Gross capacity 4.0 litres / Useable capacity 2.8 litres
325 x 175 x 100 mm (W x D x H)

DGGL 8



Perforated cooking container
Gross capacity 2.0 litres / Useable capacity 1.7 litres
325 x 265 x 40 mm (W x D x H)

DGGL 13



Perforated cooking container
Gross capacity 3.3 litres / Useable capacity 2.0 litres
325 x 350 x 40 mm (W x D x H)


Lid for cooking containers

DGD 1/3



Lid for 325 x 175 mm cooking containers

DGD 1/2



Lid for 325 x 265 mm cooking containers

Optional accessories


Cleaning and care products

Descaling tablets (Qty 6)



For descaling the appliance


Original Miele all purpose microfibre cloth



Removes finger marks and light soiling.

Other accessories

DGG 21



Condensate tray for catching excess moisture, can also be used as a cooking container.

325 x 430 x 40 mm (W x D x H)

Rack




For placing your own cooking containers on.

Multi-purpose casserole dish

Die-cast aluminium casserole dish with non-stick surface and stainless steel lid. Also suitable for use on an extended zone of induction cooktops and in all Miele ovens.


Not suitable for use on gas cooktops.

KMB 5000-S

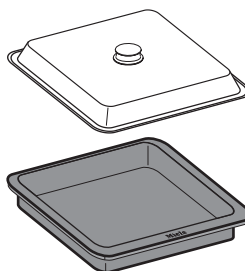

Maximum capacity approx. 2.5 kg
325 x 260 x 60 mm (W x D x H)

Safety instructions for installation


 Incorrect installation can result in personal injury and damage to property.

- ▶ Before connecting the appliance to the mains supply, ensure that the connection data on the data plate (voltage and frequency) match the mains electricity supply. This data must correspond in order to avoid the risk of damage to the appliance. Consult a qualified electrician if in any doubt.
- ▶ Do not connect the appliance to the mains electricity supply by a multi-socket unit or an extension lead. These do not guarantee the required safety of the appliance (e.g. danger of overheating).
- ▶ The socket and on-off switch should be easily accessible after the appliance has been installed.
- ▶ The appliance must be positioned so that you can see the contents of a cooking container placed on the top shelf level. Otherwise you may risk scalding or burning yourself with hot water and food when taking containers out of the oven.


All dimensions in this instruction booklet are given in mm.

Detailed dimensions of oven front

PureLine front

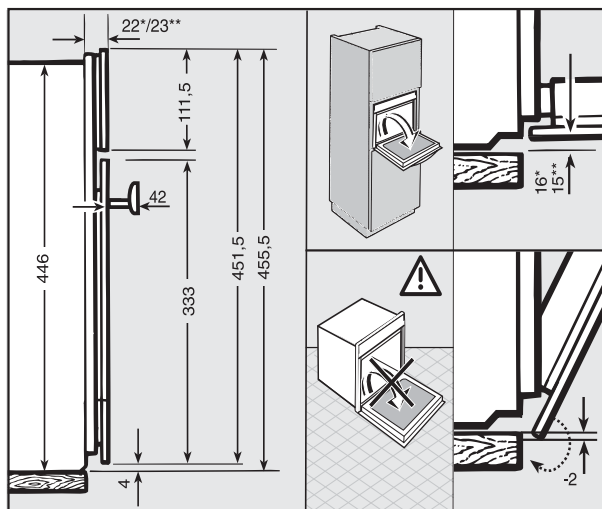


ContourLine front

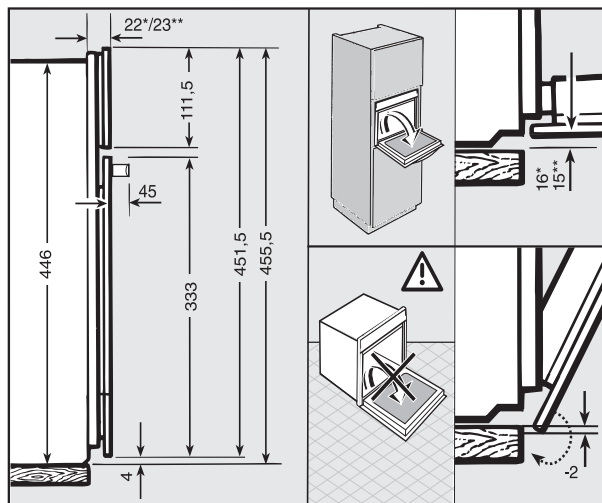

* Glass front / ** Metal front


Installation in a tall unit

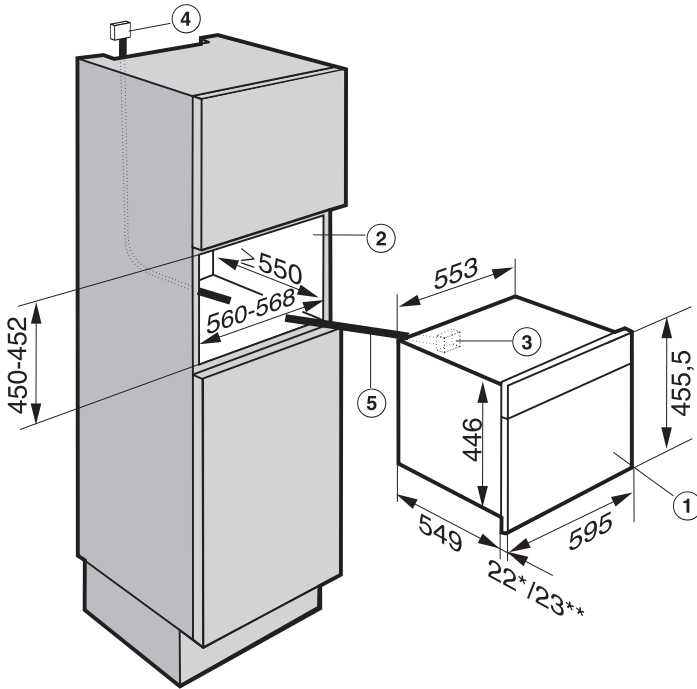

- ① Steam oven
- ② Niche
- ③ Inlet for mains connection cable to the appliance
- ④ Recommended position for electrical socket. Important: Do not position directly behind the appliance.
- ⑤ Mains connection cable, L = 2000 mm

* Glass front / ** Metal front

Installation in a tall unit in combination with an oven

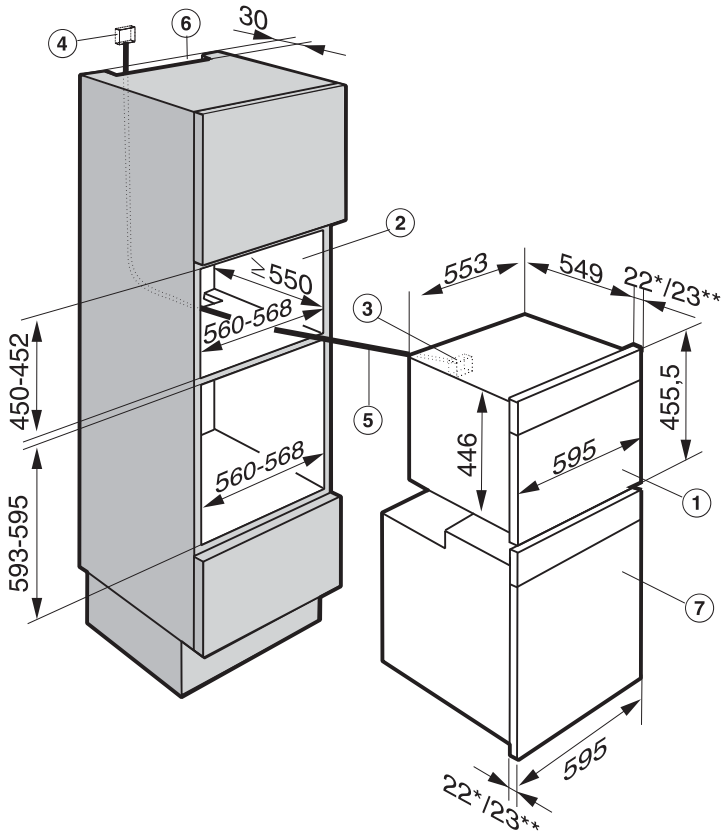

- ① Steam oven
- ② Niche
- ③ Inlet for mains connection cable to the appliance
- ④ Recommended position for electrical socket. Important: Do not position directly behind the appliance.
- ⑤ Mains connection cable, L = 2000 mm
- ⑥ Cut-out for ventilation (only necessary when installing above a pyrolytic oven)
- ⑦ Oven


* Glass front / ** Metal front

Installation

Installing the steam oven

A malfunction can occur if the appliance is not correctly aligned. For correct functioning of the steam generator, please make sure that the appliance is horizontally level. The maximum deviation tolerated is 2°.

- Push the appliance into position in the niche and align it. Make sure that the mains connection cable does not get trapped or damaged when doing so.

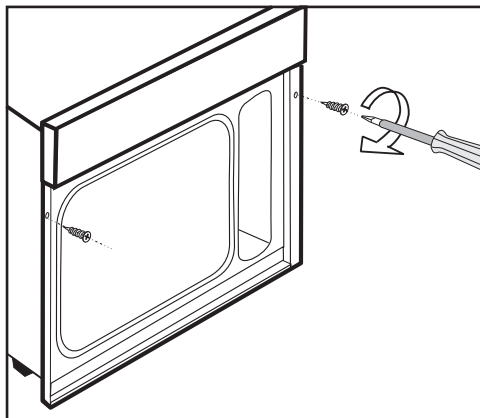

- Secure the appliance left and right using the wood screws supplied (3.5 mm x 25 mm) to the sides of the unit.
- Connect the appliance to the mains electricity supply.
- Check the appliance for correct function in accordance with the operating instructions.

Connection must be made via a switched socket. This will make it easier for service technicians should the appliance need to be repaired. The electrical socket must be easily accessible after installation.



Danger of injury!

Miele cannot be held liable for unauthorised installation, maintenance and repair work as this can be dangerous to users.

Miele cannot be held liable for damage or injury caused by incorrect installation, maintenance or repair work, or by an inadequate or faulty earthing system (e.g. electric shock).

If the plug has been removed or the connection cable is not supplied with a plug, the steam oven must be connected to the mains supply by a suitably qualified electrician.

If the appliance is to be hard-wired, an additional means of disconnection must be provided for all poles. When switched off, there must be an all-pole contact gap of at least 3 mm in the switch (including switch, fuses and relays). Connection data is shown on the data plate. It must match the mains electrical supply.

After installation, ensure that all electrical components are shielded and cannot be accessed by users.

Total power output

See data plate.

Connection

AC 230 V, 50 Hz

The voltage and rated load are given on the data plate. Please ensure these match the household mains supply.

Residual current device

For extra safety, it is advisable to install a residual current device (RCD), with a trip current of 30 mA.

Electrical connection

Replacing the mains connection cable

If the mains cable needs to be replaced, it must be replaced with a special connection cable, type H 05 VV F (pvc insulated), available from Miele, in order to avoid a hazard.

After sales service, data plate, warranty

After sales service

In the event of any faults which you cannot easily remedy, please contact Miele.

See back of this booklet for contact details.

Please quote the model and serial number of your appliance when contacting Miele.

Data plate

Space in which to stick the extra data plate supplied with the appliance. Ensure that the model number is the same as the one on the back of these operating instructions.

Warranty

The manufacturer's warranty for this appliance is 2 years.

For further information, please refer to your warranty booklet.

Miele Australia Pty. Ltd.

ACN 005 635 398

ABN 96 005 635 398

**Miele Experience Centre and
Head Office Melbourne:**1 Gilbert Park Drive
Knoxfield, VIC 3180**Miele Experience Centre South Melbourne:**206-210 Coventry Street
South Melbourne, VIC 3205**Miele Experience Centre and Office Sydney:**3 Skyline Place
Frenchs Forest, NSW 2086**Miele Experience Centre and Office Brisbane:**39 Harvey Street North
Eagle Farm, QLD 4009**Miele Experience Centre Gold Coast:**131 Ferry Road
Southport, QLD 4215**Miele Experience Centre and Office Adelaide:**83-85 Sir Donald Bradman Drive
Hilton, SA 5033**Miele Experience Centre and Office Perth:**205-207 Stirling Highway
Claremont, WA 6010**Miele****Miele New Zealand Limited**

IRD 98 463 631

Head Office:Level 2, 10 College Hill
Freemans Bay, Auckland 1011**Miele Experience Centre
Auckland:**8 College Hill
Freemans Bay, Auckland 1011
Telephone:
0800 464 353 (0800 4 MIELE)
www.miele.co.nz**Miele Global Headquarters
Germany****Miele & Cie. KG**Carl-Miele-Straße 29
33332 Gütersloh
Federal Republic of Germanywww.miele.com.au

DG 6401



en-AU, NZ

M.-Nr. 09 651 670 / 06