

Quick Start Guide



for dishwashers


These short instructions are not a substitute for the operating instructions supplied with the appliance.

Please read the operating instructions supplied with your dishwasher before using it for the first time and take note of the Warning and Safety instructions, as well as the full descriptions on how to use your appliance.

en-AU, NZ

M.-Nr. 09 888 480 / 00

Guide to the appliance

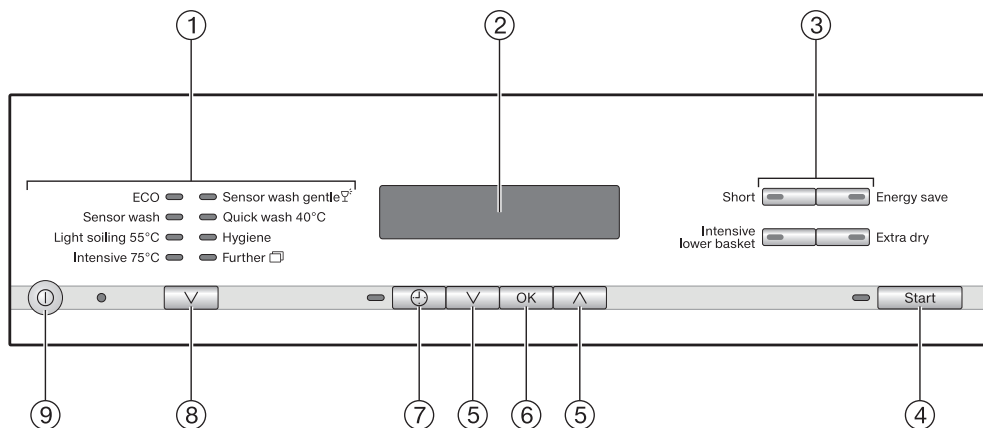

① Programme selection

② Display

③ Option buttons

④ *Start* button with indicator light

⑤ Arrow buttons $\nabla/\wedge$


⑥ *OK* button

⑦  button (FlexiTimer) with indicator light

⑧ Programme selector button ∇

⑨ On/Off button 

Brief instructions

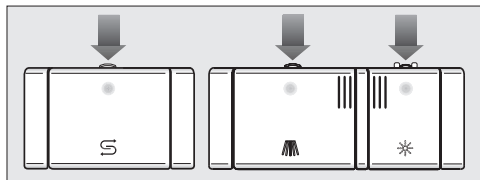

❶ Filling the salt reservoir

- When filling the salt reservoir **only open the door halfway** to ensure that all the salt gets into the reservoir.
- Press the button on the lid of the salt reservoir in the direction of the arrow until the flap springs open.
- Lift up the funnel.



Dishwasher detergent will damage the water softener. Do not fill the salt reservoir with powder or liquid detergent.

- Add dishwasher salt only until the reservoir is full or until water runs out of the opening.
- Clean any excess salt from around the reservoir opening and then close the flap.
- Immediately after filling the salt reservoir, run the *Quick wash* programme with the *Short* programme option selected and without any crockery in the dishwasher to remove any traces of salt from the cabinet.

❷ Adding rinse aid

- Press the button on the lid of the rinse aid reservoir in the direction of the arrow until the flap springs open.
- Add rinse aid only until it is visible in the opening.
- Close the flap firmly. It should click into place.
- Wipe up any spilled rinse aid. This prevents over-foaming occurring during the next programme.

❸ Load the dishwasher

❹ Adding detergent

- Follow the dosage recommended by the manufacturer on the packaging.
- Press the opening catch on the detergent dispenser. The flap will spring open.

The flap is always open at the end of a programme.

- Add the required amount of detergent and close the flap.

5 Switching on the dishwasher

- Close the door.
- Turn on the tap if it is turned off.
- Press the ① button for at least two seconds.

6 Selecting a programme

- Use the programme selector button to select the programme required.

7 Selecting programme options (if required)

You can select and deselect the options using the appropriate buttons and the display.

The option selected will remain active for that particular programme until the setting is changed.

- Press the button for the option you want.

The indicator light for the relevant button will light up.

8 Activating FlexiTimer ⌚ (if required)

- Press the ⌚ button.
- Use the ∨/∧ arrow buttons to set the required function and confirm your selection with the OK button.
- Use the ∨/∧ arrow buttons to set the time and confirm with OK.

9 Starting the programme

- Press the *Start* button.

10 At the end of a programme - Switching off

The programme has finished when  *Finished* appears in the display and the door has opened slightly (if applicable).

The drying fan may continue to run for a few minutes at the end of the programme.

- Open the door fully so that the door catch rail retracts again.
- Switch the dishwasher off with the ① button.

 If you have deactivated the automatic door opening function but would still like to open the door at the end of the programme, then make sure that you open the door fully.

Otherwise steam from the dishwasher could damage the edge of the worktop because the fan is no longer running.

11 Unloading the dishwasher

Dishes tend to break and chip more easily when they are hot. Allow the dishes to cool until they are comfortable enough to handle before unloading them.

Cleaning and care

Checking the filters in the wash cabinet


 This dishwasher must not be used without all the filters in place.

The message **Check filters** will appear in the display after every 50 programme cycles (factory default setting).

- Check the condition of the filters regularly and clean them if necessary.
- Then confirm the message with **OK**.


Cleaning the filters

- Switch the dishwasher off.

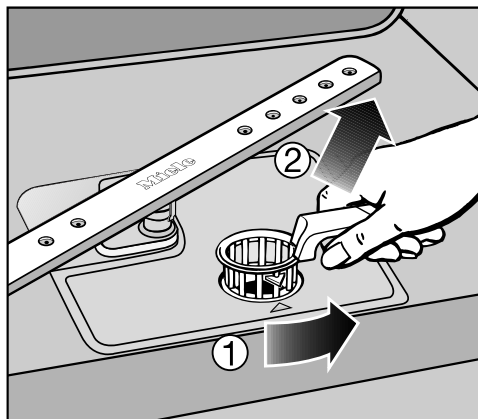

- Turn the handle anti-clockwise to release the filter combination ①.
- Lift the filter combination out of the dishwasher ②. Remove any coarse particles and rinse the filter well under running water. Use a nylon brush if necessary.

 Ensure that coarse soil doesn't get into the circulation system and cause a blockage.

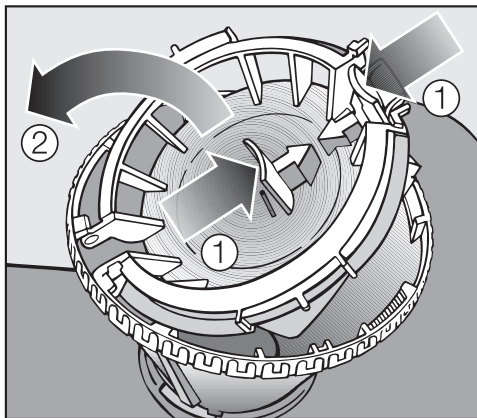

To clean the inside of the filter, the flap must be opened:

- Press catches ① together in the direction of the arrows as shown, and open the filter ②.
- Rinse all the filters under running water.
- Then close the flap so that the catch engages.
- Replace the filter combination so that it lies flat in the base of the wash cabinet.
- Then turn the handle clockwise until both arrows point towards each other. This will lock the filter combination in place.


Cleaning the spray arms

Particles of food can get stuck in the spray arm jets and bearings. The spray arms should therefore be inspected and cleaned regularly (approx. every 4 - 6 months).


- Switch the dishwasher off.

Remove the spray arms as follows:

- Take out the cutlery tray (if your dishwasher is fitted with one).
- Push the **top** spray arm upwards to engage the inner ratchet. Then unscrew the spray arm.

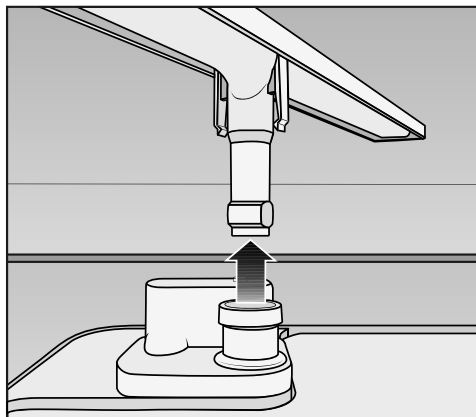

- Pull the **lower** spray arm firmly upwards to remove it.
- Use a pointed object to push food particles into the spray arm jets.
- Rinse thoroughly under running water.
- Refit the spray arms and check that they rotate freely.

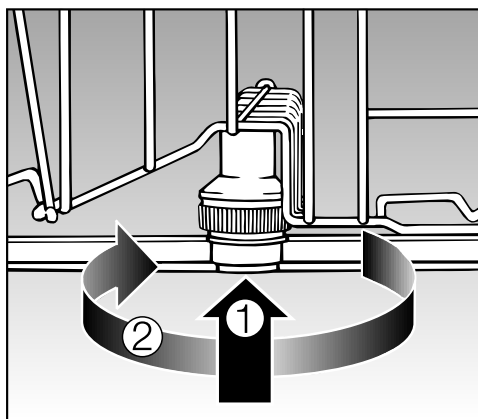

- Push the **middle** spray arm upwards ① to engage the ratchet. Then unscrew the spray arm ②.
- Remove the lower basket.

Programme chart

Crockery	Food deposits	Action required
Mixed, everyday crockery	All fresh to dried-on food deposits	Variable, sensor-controlled programme sequence Shorter duration
Heat-sensitive glasses and plastic	Fresh, easily removed food deposits	This needs a short programme Shorter duration
Mixed crockery		This needs a gentle programme with glass care Shorter duration
Pots, pans, everyday porcelain and cutlery	Fresh food deposits which have begun to dry on	This needs a water and energy saving programme
	Burnt-on, stubborn, dried-on food deposits containing starch or protein ¹⁾	Average programme values Shorter duration
Items such as baby bottles, chopping boards etc, that need to be hygienically clean	Fresh food deposits which have begun to dry on	Maximum cleaning power Shorter duration
		Programme with special parameters for the hygienic cleaning

¹⁾ Food such as potatoes, pasta, rice or stews can leave starchy deposits. Deposits containing protein can be left by food such as fried meat, fish or eggs and bakes.

Programme		Detergent	
		Compartment I ²⁾	Compartment II ²⁾
➡	Sensor wash +short	-	25 ml or 1 tab
➡	Quick wash 40 °C +short	-	20 ml or 1 tab ³⁾
➡	Sensor wash gentle 🍷 +short	-	20 ml or 1 tab
➡	ECO	-	25 ml or 1 tab
➡	Light soiling 55 °C +short	-	25 ml or 1 tab
➡	Intensive 75 °C +short	10 ml	25 ml or 1 tab
➡	Hygiene	-	25 ml or 1 tab

²⁾ see "Detergent"

³⁾ In some cases, tabs may not dissolve completely.