
LeCavist

Instruction Manual

DRAWER REFRIGERATOR

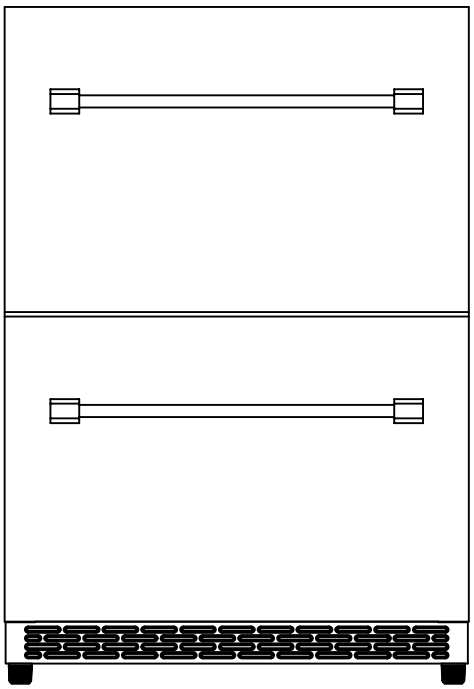

www.lecavist.com

MODEL: LCFDOD152X

CONGRATULATIONS

Congratulations and thank you for choosing LeCavist for the drawer refrigerator.

This appliance complies with all relevant safety requirements in Australia. Inappropriate use can, however, lead to personal injury and damage to property.

In order to operate the unit correctly and safely, please read this instruction manual carefully before installation and use. This user manual covers all instructions related to safety, installation, use and maintenance of the appliance.

For future reference, please store this booklet in a safe place and ensure that all users are familiar with the contents. Pass it on to any future owner of the appliance.

Record Model & Serial Number
Model:.....
Serial Number .....
Register your product at **www.lecavist.com**

⚠ IMPORTANT

Adherence to the directions for use in this manual is extremely important for health and safety. Failure to strictly adhere to the requirements in this manual may result in personal injury, property damage may affect any claim under the LeCavist manufacturer's warranty provided with your product. Products must be used, installed and operated in accordance with this manual. You may not be able to claim on the LeCavist manufacturer's warranty in the event that your product fault is due to failure to adhere to this manual.

Correct Conditions of Use

- The appliance is intended for use in the home and similar environments only. It is not intended for commercial use.
- The appliance is also suitable for outdoor use, or for non-stationary installation.
- This fridge can be used to store food,vegetable and beverage cans.

ⓘ Installation must comply with all applicable standards, regulations and laws. All safety and warning information and the operating and installation instructions must be complied with.

TABLE OF CONTENTS

1. General Information 03
1.1 Appliance information
2. General Safety Instructions 03
2.1 General safety information
2.2 Safety instruction - Installation
2.3 Correction use & Operation 04
2.4 Disassembling and Disposal of the Appliance
2.5 Accessories and Spare parts
3. Installation instructions 04
3.1 Before Using Your Fridge
3.2 Defrosting
3.3 Installation of Your Fridge
3.4 Anti-tip Bracker Installation
3.5 Handle Installation
4. Technical data sheet 06
5. Operating your Fridge 06
5.1 Recommended temperatures for Chilling
5.2 Setting the temperature control
5.3 The controls of your Fridge
6. Care and maintenance 07
6.1 Cleaning
6.2 Power Failure
6.3 Vacation Time
6.4 Transporting your Fridge
7. Troubleshooting guide 07
8. Environmental tips 08
8.1 Disposal considerations
8.2 Disposing of your old appliance
9. Warranty and After sales 08
9.1 Warranty
9.2 After sales service
9.3 Replacement of spare parts

Additional information on products, accessories, warranty, replacement parts and services can be found at **www.lecavist.com**

1. GENERAL INFORMATION

1.1 Appliance Information

- A damaged appliance can be dangerous. If you find the appliance is damaged or marked, you must report it within 7 days if you wish to claim for damage/marks under the manufacturer's warranty. This does not affect your statutory rights. Do not use a damaged appliance.
- The manufacturer's warranty will be void if the appliance is not repaired by a LeCavist approved service technician.
- Faulty components must only be replaced by genuine LeCavist spare parts. The manufacturer can only guarantee the safety of the appliance when LeCavist replacement parts are used.
- If the power cord is damaged, it must only be replaced by a LeCavist authorised service technician or a suitably qualified electrician in order to avoid a hazard.
- LeCavist cannot be held liable for non- compliance with these instructions, due to incorrect or improper use or operation.

2. GENERAL SAFETY INSTRUCTIONS

ⓘ The appliance complies with the stipulated safety requirements in Australia. The user is responsible for appliance cleaning and maintenance as well as its safe use. Improper use can lead to personal injury and damage to property.

2.1 General Safety Instructions

Children and People with Special Needs

⚠ WARNING

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or limited experience and knowledge, unless they have been given supervision or instruction regarding use of the appliance by a person responsible for their safety.

- The appliance is NOT suitable for use by children without supervision.
- Young children should be supervised near the appliance to ensure they do not play with this appliance.
- Children may be able to wrap themselves in packing material or pull it over their heads creating a risk of suffocation. Keep children away from any packing material.

Unauthorised Modifications

Unauthorised modifications can cause the appliance to become unsafe. Do not conduct any modifications to the appliance.

Cleaning & Maintenance

The device must be cleaned regularly. Dirt can lead to damage or the build-up of odours.

- Always clean the appliance exactly as indicated in the operating instructions.
- Always ensure the appliance is switched off before cleaning or replacing parts.
- There is a risk of fire if cleaning is not carried out as described in these operating instructions.
- Make sure no water penetrates inside the device when cleaning. Do not use a steam cleaning appliance to clean this appliance. The steam could reach electrical components and cause a short circuit.
- In areas that may be prone to infestation by cockroaches or other vermin, pay particular attention to keeping the machine and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the machine warranty.

2.2 Safety Instructions - Installation

- In order to avoid any potential hazard, the installation instructions must be followed.
- Observe all regional regulations for the installation of ventilation systems.
- During installation, maintenance and repair work, the appliance must be disconnected from the mains electricity supply. It is only completely isolated from the electricity supply when:
  – the mains circuit breaker is switched off, or
  – it is switched off at the wall socket and the plug is withdrawn from the socket.
- Do not damage the refrigerant circuit.
- After the drawer refrigerator is installed in place, the plug shall be easily accessible to facilitate the removal of the cooler plug in case of any accident.
- Do not pull the mains connection cable but the mains plug to disconnect your appliance from the mains electricity supply.
- Do not connect the appliance to the mains electricity supply by a multi-socket unit or an extension lead.
- Extension leads are a fire hazard and do not guarantee the required safety of the appliance.
- Tampering with electrical connections or components and mechanical parts is highly dangerous to the user and can cause operational faults. Only open the housing as described in the instructions given in "Installation" section of this booklet. Under no circumstances should any other parts of the housing be opened.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- THIS APPLIANCE MUST BE PROPERLY EARTHED. It is most important that this basic safety requirement is present and tested regularly and, where there is any doubt, the household wiring system should be inspected by a qualified electrician.
  LeCavist cannot be held liable for noncompliance with these instructions, due to incorrect or improper use or operation.

2.3 Correction use and Operation

- For safety reasons, this appliance may only be used after it has been installed.
- Reliable and safe operation of this appliance can only be assured if it has been connected to the main electricity supply.
- Before using the appliance, ensure that all packaging materials are removed from the appliance and make sure that the connection data on the data plate [voltage (V) and frequency (Hz)] shown on the appliance corresponds to the voltage and frequency of the power supply in your household. Consult a qualified electrician if in doubt.
- DO NOT store or spray flammable materials in the appliance or near this appliance while it is in operation (e.g. aerosols).
- Prevent water ingress. Never sprinkle or flush the cooler using water, place the cooler in an area exposed to moisture or water sprinkling, or fill the cooler with water, so as to avoid impairment of the electric insulation of the cooler. Furthermore, failing to follow such requirements may lead to electric shock and fire, or other accidents.
- After the appliance is put into operation, never touch its inner surface, especially when your hand is wet; otherwise the skin may stick onto the inner surface to get injured.
- Regularly clean surfaces that can come in contact with food and accessible drainage systems. If the refrigerating appliance is left empty for long periods, switch off, clean, dry, and leave the door open to prevent mould developing within the appliance.
- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Cracks, fissures or fractures in the panels can damage the underlying electronics. Switch off and disconnect the appliance immediately.

⚠ WARNING

The refrigerant isobutane (R600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable. During transportation and installation of the appliance, ensure that none of the components of the refrigerant circuit become damaged.

2.4 Disassembling and Disposal of the Appliance

(see the Environmental Tips section for best practices on disposing of this appliance).

The device must only be disassembled by trained specialists who are familiar with and comply with the standard national regulations and supplementary regulations of the local utility companies.

Work on electrical components must only be conducted by trained electrical personnel.

2.5 Accessories and Spare parts

Incorrect components can lead to personal injury or damage to the appliance. Only use original Lecavist spare parts for repairs.

Modifications, additions or alterations to the appliance can lead to safety risks. If spare parts or accessories from other manufacturers are used, the warranty will be void, and Lecavist cannot accept liability.

Please check **www.lecavist.com** for more information.

3. INSTALLATION INSTRUCTIONS

3.1Before Using Your Fridge

- Remove the exterior and interior packing.
- Before connecting the Fridge to the power source, let it stand upright for approximately 2 hours. This will reduce the possibility of a malfunction in the cooling system caused by handling during transportation.
- Clean the interior surface with lukewarm water using a soft cloth.
- Install the handle on the left side of the door.

3.2 Defrosting:


While running, fridge performs one defrosting cycle every 8 hours which will last about 30 minutes. The defrosting water will be collected in the drip tray before evaporating.
At this process, the temperature display may be higher than the setting temperature.

3.3 Installation of Your Fridge


- This appliance is designed for free standing or built-in (full recessed) installation.
- Place your Fridge on a floor that is strong enough to support it when it is fully loaded. To level your Fridge, adjust the front leveling legs at the bottom of the Fridge.
  Locate the Fridge away from sources of heat (stove, heater, radiator, etc.).Heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the unit not perform properly.
- Avoid placing the unit in damp or moist areas.
- Plug the Fridge into an exclusive, properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified or an authorised products service center.

3. INSTALLATION INSTRUCTIONS

- position the unit to allow free air flow through the front grille.

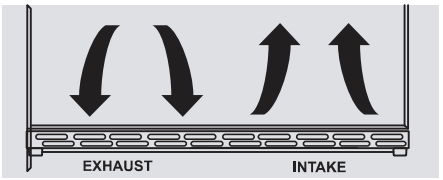

- Be sure to install the Anti-Tip bracket. Follow the instruction provided with the Anti-Tip bracket kit.

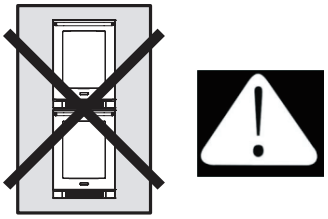

The Anti-Tip kit must be installed on this unit before it is used. Double stacking units may cause serious personal injury.

3.4 Anti-tip Bracket Installation

To reduce the risk of tipping the unit by abnormal usage or improper loading, the appliance must be secured by properly installing the anti-tip device packed with the appliance.

- Take the fixing bracket (2 pcs) and screws (2 pcs)out of the instruction packet.
- Drill holes into the floor according to the dimension show below. This will allow you to fix the brackets to the door.(image 1)
- Push the appliance into its place of installation.(image 2)
  If the unit is not stable,pull out the appliance and repeat the previous step until the unit is stable.

NOTE :iF the unit is relocated,the bracket must be removed and installed in the new location.

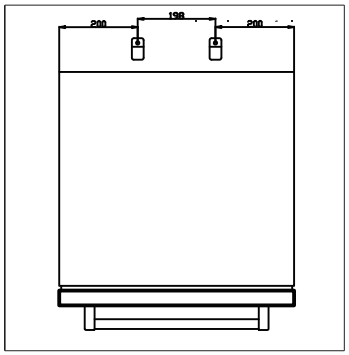


image 1


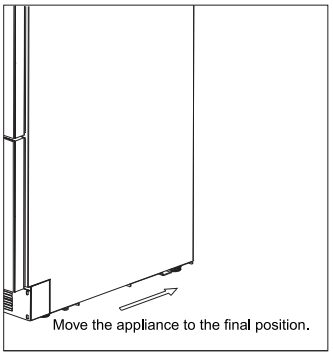


image 2

3.5 Handle Installation

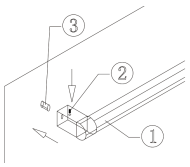

Locate the handle(1) over the pins(3)of the door and tighten the handle by screwing the Allen key grub screes(2).

4. TECHNICAL DATA SHEET

Product model	LCFDOD152X
Voltage/frequency	220-240VAC, 50Hz
Refrigerant/weight	R600a/28g
Effective volume	145 L
Loading capacity	Approx. 120cans
Net weight	47kg
Unit dimension (WxDxH)	598×595×870mm
Packing dimension (WxDxH)	645×665×910mm

5.3 The controls of your drawer refrigerator


The Fridge should be placed in where the ambient temperature is between 16-35°C.If the ambient temperature is above or below this range, the performance of the unit may be affected. For example, placing your unit in extreme cold or hot conditions maycause interior temperatures to fluctuate.

5. OPERATING YOUR FRIDGE

5.1 Recommended temperatures for Chilling

Beverage: 1-10°C (34-50°F)

The displayed temperatures may vary slightly depending on whether the interior light is ON or OFF or based on where the bottles are positioned (upper/middle or lower section.)

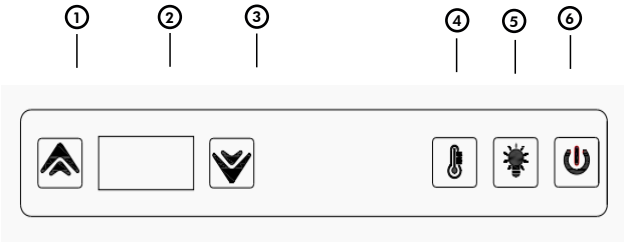

NOTE:

> When you use the appliance for the first time or restart the cooler after having been shut off for a long time, there could be a few degrees variance between the temperature you select and the one indicated on the LED readout. This is normal and it is due to the length of the activation time. Once the drawer fridge is running for a few hours everything will be back to normal.

> If the unit is unplugged, loses power, or is turned off, wait 3 to 5 minutes before restarting.Attempting to restart before this delay has elapsed may prevent the appliance from starting.

1. Up: Press to increase the set temperature by 1℃ or 1℉ .
2. Temperature display window:
   The LED display will show the set temperature when it flashes and will show the interior temperature during normal operation.
3. Down:Press to decrease the set temperature by 1℃ or 1℉ .
4. Set temperature button
   When set the temperature, press this button first, then you can increase or decrease one degree each time by pressing the UP or DOWN button.
   The range of the temperature control is from 1-8C.
   To view the set temperature at any time, press the set button. The set temperature will flash in the display window for 5 seconds.After 5 seconds, it show the interior temperature.
5. light:
   To control the inner light,turn it on/off.
   The light would be on when the drawer has been opened.
   kindly reminder: After you turn it on/off manually,better to turn it OFF before you close the door in case it keeps light ON inside.

   ℉/℃ Selector

   Holding this button for 3 seconds, temperature display setting in Fahrenheit or Celsius degree.
6. Power:Touch it for 3 seconds to turn the appliance on.
   Hold for at least 5 seconds to turn the appliance off.
   The LED readout will show the temperature previously set when the appliance is restarted or reconnected after a power outage.

5.2 SETTING THE TEMPERATURE CONTROL

You can select temperature display setting from Fahrenheit to Celsius degree by holding the Light Selector mark for 3 seconds. Fahrenheit or Celsius degrees indicator will appear in blue color in the temperature display window. You can set the temperature as you desire by touching the set temperature first and the UP or DOWN button.

> The temperature that you desire to set will increase 1°C or 1°F if you touchthe UP mark once, on the contrary the temperature will decrease 1°C or 1°F if you touch the DOWN mark once.

> Temperature range: 1-10 °C

> The temperature inside the unit will be appeared in blue color in the display window.

6. CARE AND MAINTENANCE

6.1 Cleaning

- Turn off the power, unplug the appliance, and remove all items including racks.
- Wash the inside surfaces with a warm water and baking soda solution. The solution should be about 2 tablespoons of baking soda to a quart of water.
- Wash the basket with a mild detergent solution.
- Dry excess water out with a sponge or cloth when cleaning control panels or any electrical parts.
- Wash the outside with warm and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.

6.2 Power Failure

- Most power failures are corrected within a few hours. Minimise opening the door to maintain the temperature. If your power is going to be off for a longer period, take the necessary steps to protect the contents and your appliance.

6.3 Vacation Time

- **Short vacations**: Leave the drawer refrigerator ON during vacations of less than three weeks . If you turn off the drawer refrigerator for extended periods, leave the door slightly open to prevent bad odour from building inside the appliance.

6.4 Transporting your Fridge

If you need to move your drawer refrigerator once the box has been discarded:

- Securely tape down all loose items inside your appliance.
- Turn the adjustable leg up to the base to avoid damage.
- Tape the door shut.
- Be sure the appliance stays secure in the upright position during transportation. Also protect the outside of the appliance with a blanket, or similar item.

7. TROUBLESHOOTING GUIDE

You can solve many common drawer refrigerator problems easily, saving you the cost of a possible service call. Try the suggestions below to see if you can solve the problem before calling the servicer.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
The fridge does not operate.	- Not plugged in / Turned OFF. - Tripped circuit breaker/ Blown fuse	- Turn it On, or re-plug the appliance. - Check circuit breaker and fuse if working.
Temperature is not cold enough.	- Temperature control not set correctly. - The door is opened too often/ or not properly closed. - Damage or loose door seal.	- Reset temperature, wait a few minutes. Environment and weather may require a higher setting. - Check the door for damages. Replace door seal.
Turns On and Off too often.	- Wrong temperature setting. - Large contents added to the fridge. - The door is opened too often/ or not properly closed. - Damage or loose door seal.	- Reset temperature, wait a few minutes. Environment and weather may require a higher setting. - Check the door for damages. Replace door seal.
The light does not work.	- Not plugged in/ Turned OFF. - Tripped circuit breaker/ Blown fuse - The light button is “OFF”.	- Turn it On, or re-plugged the appliance. - Check circuit breaker and fuse if working. - Check and press the light button.
Vibrations.	- The fridge is not level.	- Check and adjust cabinet feet.
Making too much noise.	- As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant. Some noise may come from the flow, which is normal. - Contraction and expansion of the inside walls may cause popping and crackling noises. - The Fridge is not level.	- Check and adjust fridge feet.
The door does not close properly.	- The Fridge is not level. - Door is reversed and/ or not installed correctly. - Dirty door seal.	- Check and adjust fridge feet. Choose an even/flat surface. - Re-install the door. - Replace the door seal. - Position the seal correctly.

8. ENVIRONMENTAL TIPS

Observe all safety and warning information during operation (see the "General Safety Instructions" section).

8.1 Disposal considerations

The transport and protective packaging has been selected from materials which are environmentally friendly for disposal, and can normally be recycled.

Recycling the packaging reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites. Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of babies and young children.
There is a risk if suffocation.






8.2 Disposing of your old appliance

Electrical devices marked with this label may not be disposed of in domestic waste at the end of their service life.

Electrical and electronic appliances often contain valuable materials. They also contain specific materials, compounds and components, which were essential for their correct function and safety. These could be hazardous to human health and to the environment if disposed of with your domestic waste or if handled incorrectly. Please do not, therefore, dispose of your old appliance with your household waste.

Please dispose of those materials by contacting your local authorities and ask for the correct method of disposal. Please ensure that your old appliance poses no risk to children while being stored prior to disposal.

By disposing of this product in accordance with the regulations, you protect the environment and the health of those around you from negative consequences.

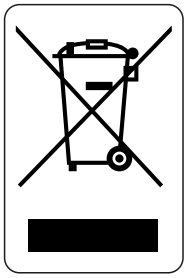

9. WARRANTY & AFTER SALES SERVICE

Observe all safety and warning information during operation (see the "General Safety Instructions" section).

In the event of a fault which you cannot remedy yourself, please contact LeCavist.

9.1 Warranty

The manufacturer's warranty for this appliance is 2 years.

9.2 After sales service

The contact details for LeCavist are given at the beginning and end of these instructions.
When contacting LeCavist, please quote the model and serial number of your appliance. These can be found on the data plate at the back of the drawer fridge.

Record model & serial number

Model:.....
Serial Number:.....

Register your product **www.lecavist.com**

9.3 Replacement of spare parts

Incorrect components can lead to personal injury or damage to the appliance. Use only genuine original Lecavist spare parts.

Modifications, additions or alterations to the appliance can lead to safety risks. If spare parts or accessories from other manufacturers are used, the warranty will be void, and Lecavist cannot accept liability.

Please check **www.lecavist.com** for more information.

LIKE TO KNOW MORE?

For further information on all LeCavist products, or to obtain detailed dimension and installation information, phone or email our Customer Care team or visit our website: **www.lecavist.com**

Operating and installation instructions: Original √ Translation

Osass Australia Pty Ltd.
ACN 644 539 668
ABN 28 644 539 668
Lecavist Contact
hello@lecavist.com
www.lecavist.com

The distribution and duplication of this document, as well as the use and disclosure of its contents are prohibited unless expressly authorised.

These operating and installation instructions have been drawn up with the greatest of care. But it cannot be ruled out that subsequent technical modifications have not yet been incorporated or the relevant content has not yet been adapted. Please accept our apologies in this eventuality. An updated version can be requested from our team. Subject to printing errors and mistakes.

© LeCavist

All rights reserved.
