

## Specifications

It is a requirement of State Plumbing Codes that licensed plumbers carry out all tapware installations. All installations should comply with the relevant requirements of AS/NZS 3500 and local plumbing codes.

### Pressure:

[1] Maximum Hydrostatic Pressure: 1000kpa. This pressure may be exceeded only under test conditions as per AS/NZS 3500.

Where hydrostatic pressure exceeds the maximum stated above, pressure-limiting valves should be installed. [2] Recommended

Maximum Hydrostatic Pressure: 500kpa (AS/NZS 3500)

[3] Recommended Minimum Hydrostatic Pressure: 150kpa

### Temperature:

Maximum Water Temperature: 80° C. For optimum performance, hot and cold inlet water pressure should be equal.

## Care and Maintenance

[1] Product should be inspected for surface damage prior to installation. [2] Cleaning and handling of all finishes must be performed carefully. [3] For all sanitary ware surfaces clean with soapy water or a mild detergent with a soft cloth and rinse with warm water. [4] Never use harsh detergents or abrasive cleaners as these will damage the product. [5] Do not use undue pressure when cleaning. [6] For Matt surfaces such as Cristalplant, Ceramilux and Composite Stone periodical cleaning with an agent containing micro granules (such as JIF) is recommended. [7] For Wood finishes, clean with a damp lint free cloth, making sure to dry immediately after each use with no water left on the surface and in the direction of the grain. [8] Contact with harsh chemicals such as hair dye, hair bleach etc. will result in damage to the finish. [9] For further cleaning and maintenance instructions for more stubborn stains or damage please refer to the product specific care and maintenance information. [10] Damage to finishes arising from improper installation or post installation use or failure to observe the care and cleaning instructions will void all warranty agreements.

## Care and Maintenance

[1] Product should be inspected for surface damage prior to installation. [2] Cleaning and handling of all finishes must be performed carefully. [3] Clean products using a soft cloth with warm soapy water only. [4] Never use harsh detergents or abrasive cleaners as these will damage the product. [5] Water marks and oil residue can be removed from Matt Finishes with an application of a carnauba wax based non-abrasive polish on a microfibre cloth. [6] Contact with harsh chemicals such as hair dye, hair bleach etc will result in damage to the finish. [7] Tapware should never be installed using acetone silicones. [8] Avoid the use of wax based furniture creams as this can result in a build up of deposits which will detract from the appearance. [9] Damage to finishes arising from improper installation or post installation use or failure to observe the above care and cleaning instructions will void all warranty agreements.

## Warranty

Rogerseller tapware, bathroom fittings and sanitary ware are covered by a five (5) year warranty from date of purchase. For full terms and conditions please refer to rogerseller.com.au

### Rogerseller Showrooms —

#### Melbourne

173-177 Barkly Avenue Burnley  
VIC 3121  
P 03 9429 8888

#### Sydney

18 Danks Street  
Waterloo NSW 2017  
P 02 8396 8700

#### Brisbane

74-76 McLachlan Street  
Fortitude Valley QLD 4006 P 07  
3251 4333

### Concept Stores —

#### Southern Innovations

(Fishwick ACT)  
P 02 6143 2666

#### Southern Innovations

(Mitchell ACT)  
P 02 6129 7666

#### Southern Innovations

(Albury NSW)  
P 02 6022 2777

#### Routleys Plumbing Innovations

(Malvern SA)  
P 08 8291 3000

RAM  
TAPWARE



reddot design award  
winner 2017



rogerseller.com.au




# Eccentric Stone by Rogerseller

## Handle

## Installation Instructions

rogerseller

# Eccentric by Rogerseller

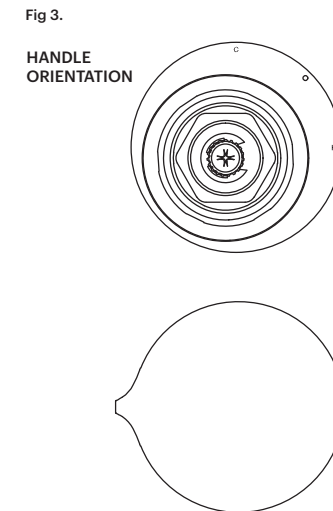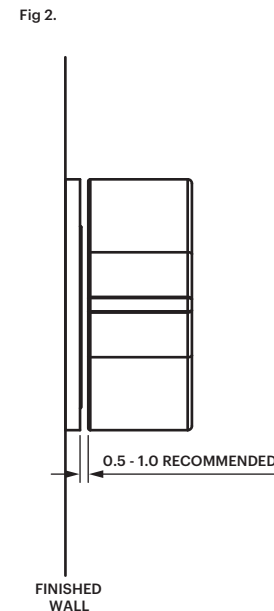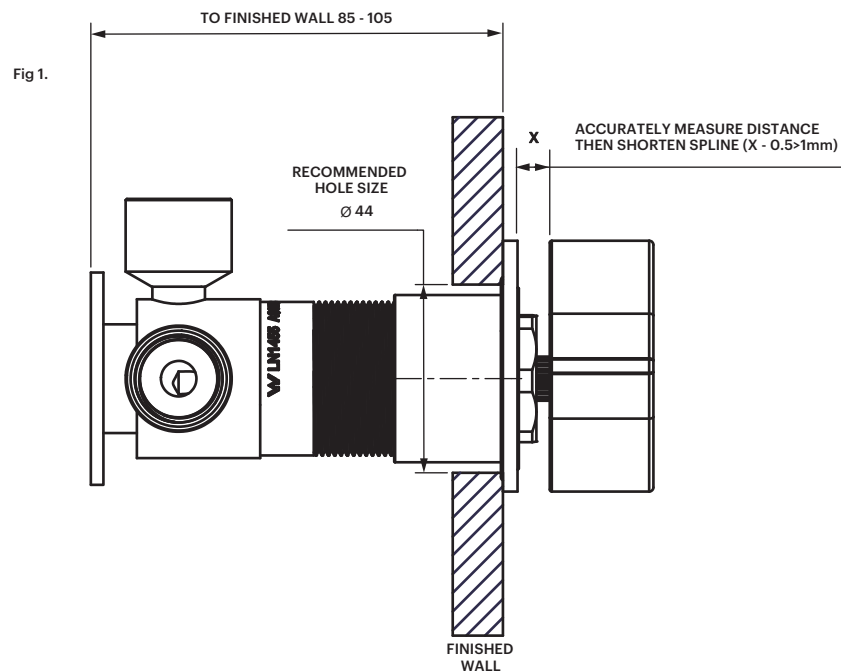

## Eccentric by Rogerseller Progressive Wall Mixer with Stone Handle

**3606006501** — Bianco Carrara/  
Chrome

**3606006601** — Emperador Grey/  
Chrome

5 finishes available

## Stone Handle Fit Off

- To complete fit off, carry out actions in sequential order.

- Place the wall plate with o-ring over the body making sure the "C" & "H" are located correctly as per Fig 3.
- Place flange washer over the flange and screw flange to the body through the wall plate clockwise until wall plate is flush with the finished wall as shown in Fig 1.
- Install the spline extension onto the handle.
- Attached the Stone Handle to the mixer valve stem.
- Accurately measure the distance **X** between the Stone Handle and the backplate. As shown in Fig 1.
- Trimming spline extension- Measure distance **X** minus 0.5-1mm, then cut to suit.
- Locate the handle and push to fit until secure.
- If the handle is not perfectly horizontal, remove the handle and make a mark on both the valve stem and spindle extension. Remove the spline extension and reposition by rotating either one notch, 90 or 180 degrees. Repeat and secure spline extension.  
**Note:** To remove handle simply pull with force.

## Flushing

- Prior to introducing mains supply it is mandatory that lines are flushed.  
Open handle in the mixed position - midway between 'C' & 'H' and ensure aerator is removed from outlet.

## Optional Extras

- For installations with a greater finished wall depth:  
**20mm Extended Body- 3606005200IW**
- For installations with minimal finished wall depth:  
**Horizontal In-Wall Mounting Bracket- 3612000100**

Please leave instructions with the tap or home owner