

Specifications

It is a requirement of State Codes that licensed electrician carry out all electrical installations. All installations should comply with the relevant requirements and local codes.

Care and Maintenance

[1] Product should be inspected for surface damage prior to installation. [2] Cleaning and handling of all finishes must be performed carefully. [3] Clean products using a soft cloth with warm soapy water only. [4] Never use harsh detergents or abrasive cleaners as these will damage the product. [5] Water marks can be removed from Matt Finishes with an application of a carnauba wax based non-abrasive polish on a microfibre cloth. [6] Do not use undue pressure when cleaning and wipe in one direction only. [7] Contact with harsh chemicals such as hair dye, hair bleach etc will result in damage to the finish. [8] Tapware should never be installed using acetone silicones. [9] Avoid the use of wax based furniture creams as this can result in a build up of deposits which will detract from the appearance. [10] Rose Copper: A protective lacquer has been applied to this finish. This is required to maintain the stability of this finish and will be damaged if the above care and cleaning instructions are not followed. [11] Damage to finishes arising from improper installation or post installation use or failure to observe the above care and cleaning instructions will void all warranty agreements.

Warranty

Rogerseller tapware, bathroom fittings and sanitary ware are covered by a five (5) year warranty from date of purchase. For full terms and conditions please refer to rogerseller.com.au

Rogerseller Showrooms —

**Melbourne**  
173-177 Barkly Avenue  
Burnley VIC 3121  
P 03 9429 8888

**Sydney**  
18 Danks Street  
Waterloo NSW 2017  
P 02 8396 8700

**Brisbane**  
74-76 McLachlan Street  
Fortitude Valley QLD 4006  
P 07 3251 4333

Concept Stores —

**Routleys Plumbing  
Innovations (Malvern SA)**  
P 08 8291 3000

rogerseller

rogerseller.com.au

FOLD  
Modular Rails

rogerseller

Installation  
Instructions

# FOLD Heated Rail

## Low Voltage Supply

Install transformer (sold separately) in a ventilated serviceable location. Low voltage wires from the transformer to the rail location (any leg) through the wall surface. Note - do not cut or extend the supplied low voltage wire.

## Double Sided Tape

Apply to back of MDF drilling fixture.

## MDF Drilling Fixture

Locate the square hole of the MDF drilling fixture over the protruding low voltage wires and stick to the wall surface.

## Connector (Part A x2)

## Wall Screws


## Sleeves

## Connector (Part B x2)


## Drill Holes in Wall

Use supplied diamond drill bit and the MDF drilling fixture as a guide, drill pilot holes in the wall surface (depth 10mm).

Using a 8mm spade drill bit, drill holes to suit the supplied wall plugs and screws.

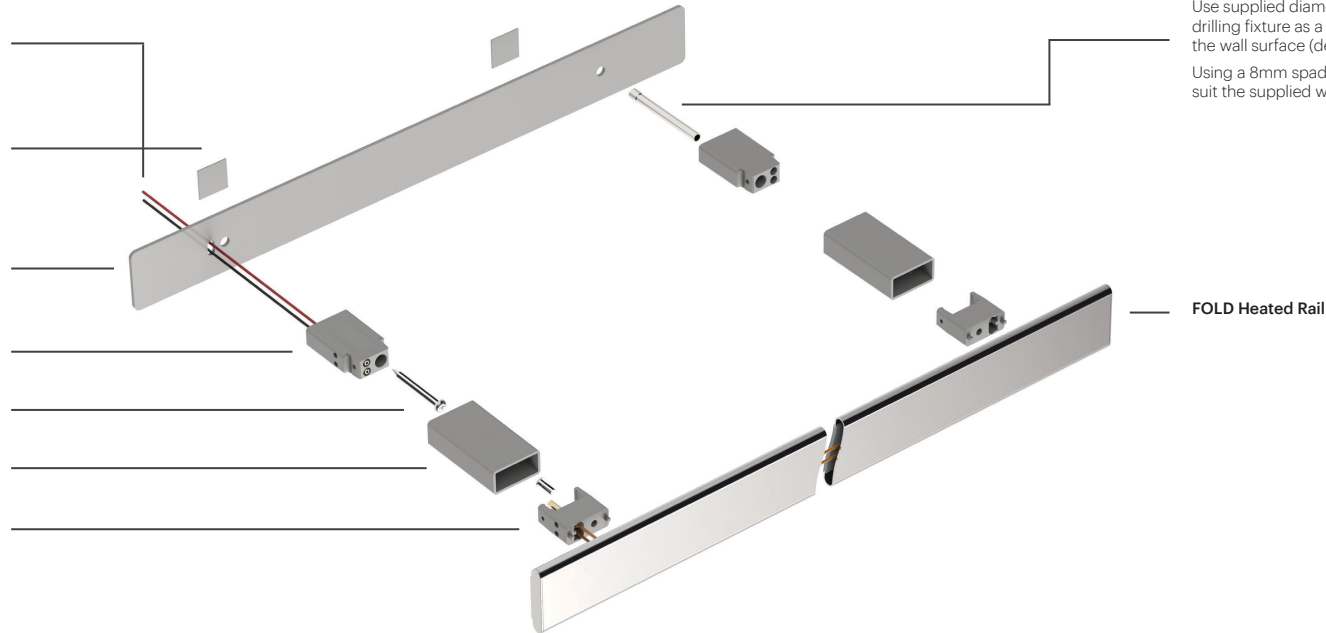

**Fold Single 750 Heated  
Towel Rails x 4 Rails  
3435000704**

 Other finishes available

## Installation

1. This product operates with 12V. The supplied transformer must be installed by a licensed electrician during rough-in, in a position within 2 meters of the closest heated rail.
2. During fit-off, connect the pre-installed electrical wires to the rail adapter, then securely fix the wall adapters to the finished wall using the supplied fixings and template.
3. Attached rail to the wall fixings using the clip-on adapters.
4. Switch on the mains supply and allow 30-60 minutes to allow rail to reach maximum temperature.
5. This is only an installation guide. Rogerseller recommends having the product on-site before commencing rough in.
6. Full installation instructions come with the product or at request.
7. Rogerseller recommends this product is fixed to secure studs.