



# RAINDANCE SELECT

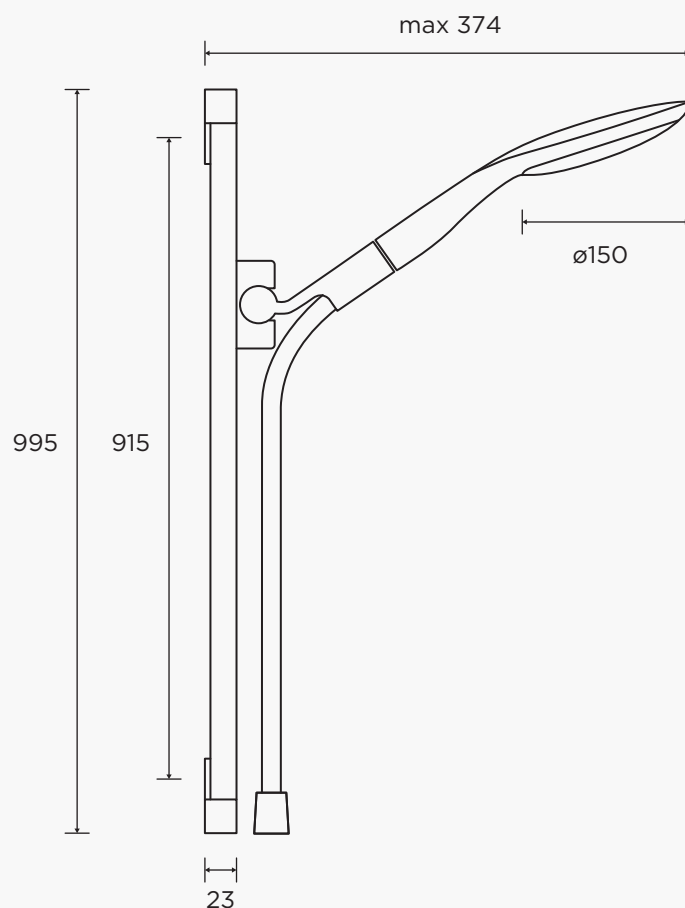

**HANS GROHE**  
**E150 LUXURY**  
**RAIL SHOWER**

[327824]

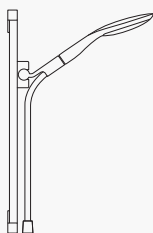

**NOTE**

1. Seal all wall penetrations with a neutral cure silicone.
2. The inlet of the shower hose is connected to a wall elbow installed by the plumber at a suitable height.
3. This is only an installation guide. Rogerseller recommends having the product onsite before commencing rough in.