



BOTTLE TRAPS & WASTES

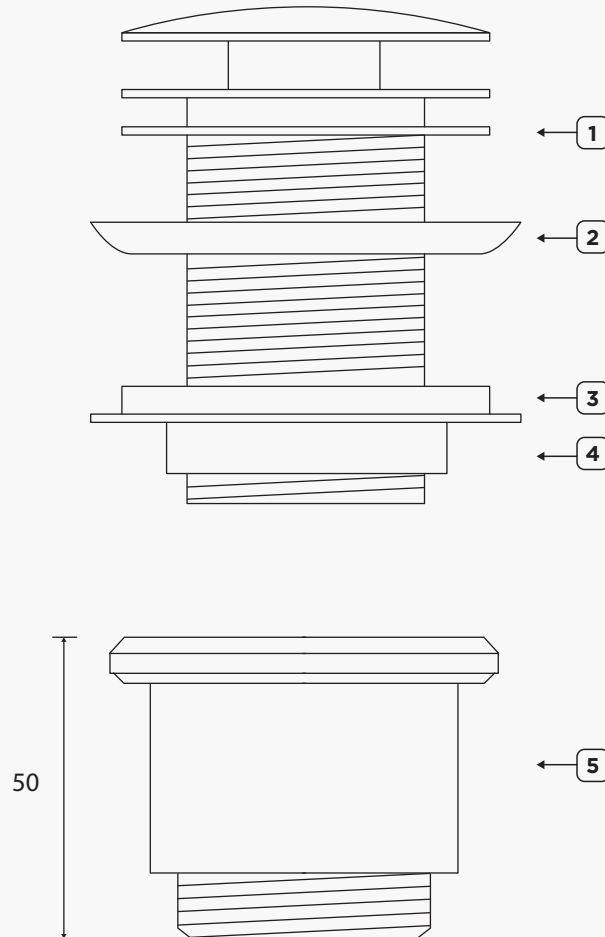

STANDARD UP AND DOWN BASIN WASTE

[115022] Overflow

[115018] No Overflow



KEY

1. Rubber washer 1
2. Rubber washer 2
3. Rubber washer 3
4. Chrome lock nut
5. Chrome 32mm to 40mm trap adaptor

INSTRUCTIONS

1. Remove parts 2, 3, 4 and 5 from the basin waste
2. Insert the waste with part 1 into the basin
3. Re-fit part 2 onto the waste, push it all the way to the underside of the basin. Do the same with part 3
4. If using a 40mm trap with a 40mm trap nut, screw part 5 in place, do not over tighten. Discard part 4
5. If using a 40mm trap with a 32mm trap nut screw part 5 in place, do not over tighten. Discard part 5

NOTE:

Suitable for basins with a 32mm or 40mm waste hole