#### ASSEMBLY INSTRUCTIONS

#### 681 TWENTY-FIVE DINING TABLE BY DE LA ESPADA ATELIER



## PARTS

1x Timber tabletop
2x Tile panels
2x Leg frames

#### HARDWARE

(16x) M8x35 Socket cap screws (16x

(16x) M8 washers



**@** 

(32x) M6x35 Countersunk screws



## YOU WILL NEED

4mm Allen Key 6mm Allen Key The help of a friend

#### NOTES

NOTE 1: Be certain that all assembly is carried out on a flat and stable surface. This will ensure a good final result. Reverse the steps to disassemble the piece.

NOTE 2: Your furniture arrives packed in numerous layers that protect it during transport. It is important that you remove the packaging carefully to avoid damaging your furniture. Refer to our information sheet "Unpacking Your Furniture" for further details.

NOTE 3: Great care is required when assembling our products . Use blankets to soften the assembly surface – hard surfaces such as wood or stone flooring may damage the furniture if in direct contact.

NOTE 4: We advise that assembly and disassembly of De La Espada furniture is undertaken by a minimum of 2 people.

NOTE 5: When screwing in bolts, tighten well, but be sure NOT TO OVERTIGHTEN. This can cause the thread to strip thus resulting in a poor connection.

NOTE 6: All mating parts are numbered. You will ensure the best possible fit if all parts are mated with the corresponding numbered parts. While you work, be sure all connections are flush with no gaps.

<u>E</u>

O

<u>L</u> A

E

<u>s</u> P

A


D

<u>A</u>


### 681 TWENTY-FIVE DINING TABLE

#### INSTRUCTIONS


- 1) ATTACH LEGFRAMES TO TIMBER TABLETOP
- a) Place the timber tabletop face down onto a softened surface on the floor.

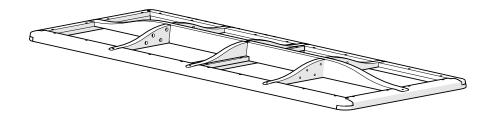

b) Turn each leg frame upside down and place it into position on the underside of the table, checking for number markings.

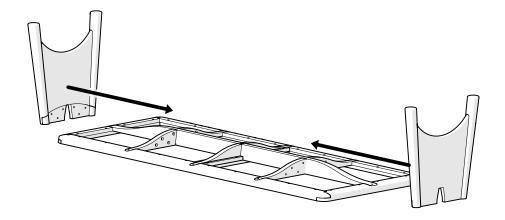

c) Insert the 16x M8x35 Socket Cap Screws with washers into the pre-drilled holes where the tabletop meets the leg frames and tighten loosely with an Allen key.

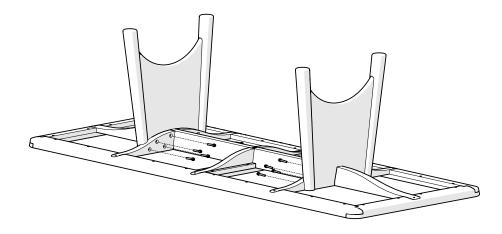

<u>D</u>

E

브

<u>A</u>

E


<u>S</u>

<u>A</u> <u>D</u>


A

681 TWENTY-FIVE DINING TABLE

d) With the help of a partner, flip the table over into an upright position. Please ensure that the table is not rested on the legs while it is being flipped over as this may cause damage to the table.

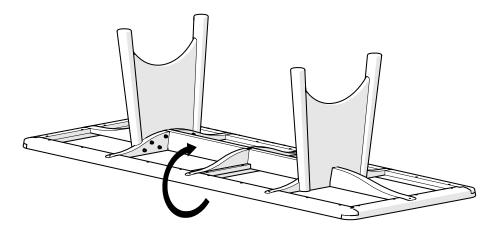

e) Make sure the leg frames are positioned centrally on the table, and align the top of the leg frames flush with the top of the central beam. Once in position, tighten firmly the M8x35 Socket Cap Screws with washers securing the leg frames.

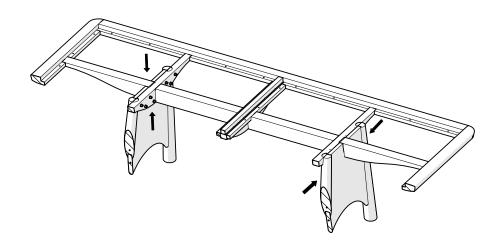

D

E

ഥ

<u>A</u>

E S


<u>P</u>


 $\underline{\mathtt{D}}$ 

A

### 681 TWENTY-FIVE DINING TABLE

- 3) ATTACH TILE PANELS TO TIMBER TABLETOP
- a) Check the number markings on the table structure and on the underside of the tile panels; these indicate the correct placement of the panels. Matching the number markings, carefully and gently place the tile panels into position on the timber tabletop one at a time.

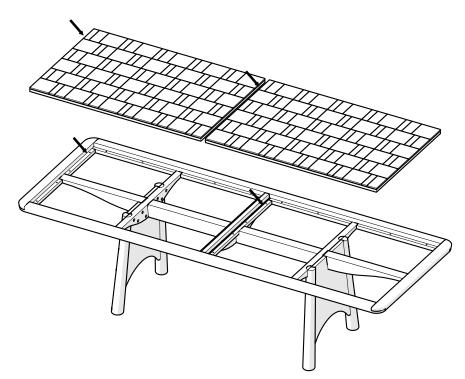

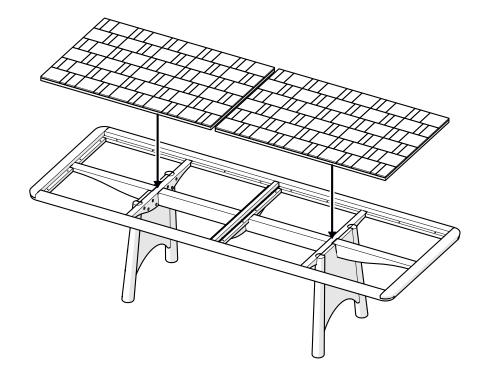

<u>D</u>

E

ഥ

<u>A</u>

E S


<u>P</u>


 $\underline{\mathtt{D}}$ 

A

## 681 TWENTY-FIVE DINING TABLE

b) Locate the pre-drilled holes on the underside of the tabletop, as indicated below, and insert an M6x35 Countersunk screw into each of the 32 holes and into the tile panel. Tighten firmly with an Allen Key.

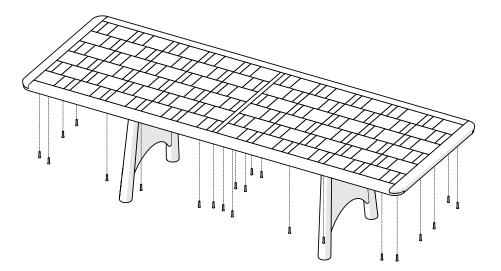

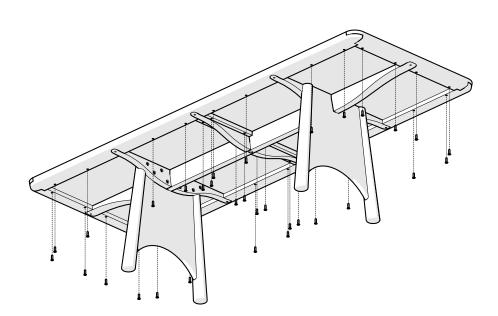

D

 $\mathbf{\underline{E}}$ 

<u>L</u>

<u>A</u>

<u>E</u> <u>S</u>


<u>P</u> <u>A</u>

<u>D</u>

<u>A</u>

681 TWENTY-FIVE DINING TABLE

C) The assembly is now complete and the table is ready for use.

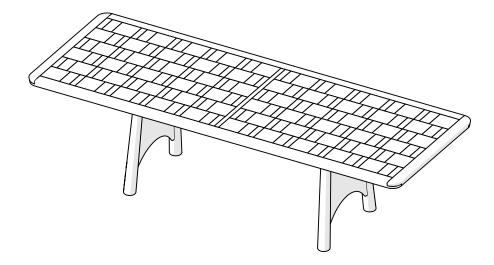

E

ഥ

<u>A</u>

E

<u>s</u> <u>P</u>

<u>A</u> <u>D</u>

<u>A</u>