



CI292102

CA050300:

Flex pan set, 3 pcs.

CA051300:

Teppan Yaki (large)

CA051301:

Teppan Yaki

CA052300:

Griddle Plate

CA055300:

Flex pan large

CA230100:

Magnetic knob, black

Flex induction cooktop 200 series 90 cm

CI292102

- Flexible positioning of cookware is allowing all the chefs to effortlessly use bigger size and rectangular shaped cookware such as Teppan Yaki or griddle pan accessories, providing exceptional adaptability.
 - Professional cooking function for splitting the cooktop into predefined heat areas
 - Flush-Top Frame installation: seamless transition of hob and worktop makes cleaning easier and integrates the hob beautifully
 - Frameless for flush mounting
- Flex function for combining the rectangular cooking areas
- Free positioning of cookware inside combined cooking areas
- Professional cooking function for splitting the cooktop into 3 predefined heat areas
- Frying sensor function for temperature control in pans
- Large cooking zone for pots up to ø 32 cm
- Twist-Pad control with removable magnetic knob
- Easy control of all functions with bicoloured display

Cooking zones

2 flex induction cooking areas 20x23 cm (2200 W, with booster 3700 W), linked together 40x23 cm (3300 W, with booster 3700 W).

1 induction cooking zone ø 21 cm (2200 W, with booster 3700 W), automatically switches to ø 26 cm (2600 W, with booster 3700 W) and to ø 32 cm (3300 W, with booster 3700 W).

Handling

Twist-Pad control with removable magnetic knob.

User friendly control with bicoloured display (white / orange).

Cooking zone and cooking area marking.

Electronic power control in 17 output levels.

Features

Flex function for rectangular cooking areas.

Professional cooking function.

Frying sensor function.

Cooking sensor function (in use with cooking sensor CA 060 300).

Booster function for pots.

Booster function for pans.

Keep warm function.

Stopwatch.

Cooking timer for up to 99 minutes.

Short-term timer.

Options menu.

Power management.

Cooktop-based ventilation control (with suitable hood).

Home network integration for digital services (Home Connect) wireless via WiFi.

The use of the Home Connect functionality depends on the Home Connect services, which are not available in every country. For further information please check: home-connect.com.

Safety

Main switch.

Operation indicator.

Pot detection.

2-stage residual heat indicator.

Child lock.

Safety shut-off.

Planning notes

Operates with magnetic (induction) iron pots and pans only. For an optimal heat distribution, the use of sandwich bottom cookware is recommended.

Installation is possible in worktops made of stone, synthetics or solid wood. Heat resistance and watertight sealing of the cut edges must be observed. Concerning other materials please consult the worktop manufacturer.

The wok pan WP 400 001 cannot be used with this appliance.

Special accessories (order as spare parts):

Part No. 17006018 Frying sensor pan, ø 20 cm

Part No. 17006184 Frying sensor pan, ø 24 cm

Part No. 17006185 Frying sensor pan, ø 28 cm

Part No. 17006019 Frying sensor pan, ø 32 cm

Appliance must be fixed from underneath.

Appliance weight: approx. 25.

Connection


Total connected load 11.1 KW.

Connecting cable 1.50 m without plug.

Power consumption standby/display off 0.5 W.

Power consumption standby/network 2.0 W.


Please check the user manual for how to switch off the WiFi module.

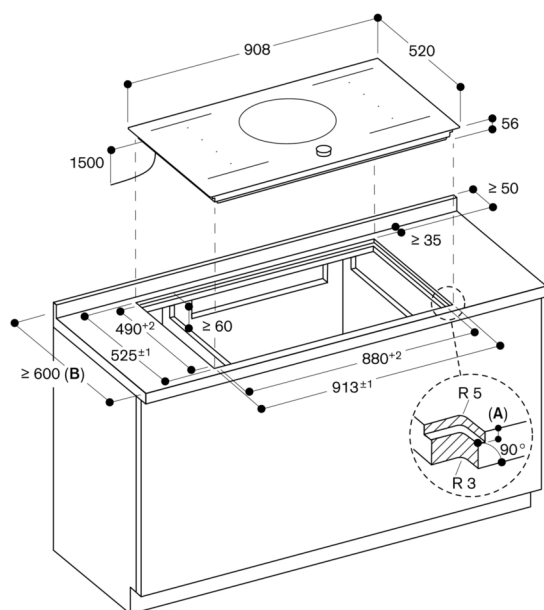

A: $6.5^{+0.5}$


B: Please check the installation manual if the worktop depth is less than 600 mm.

measurements in mm

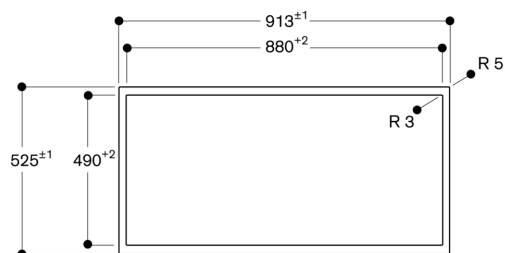

measurements in mm

Cross-section

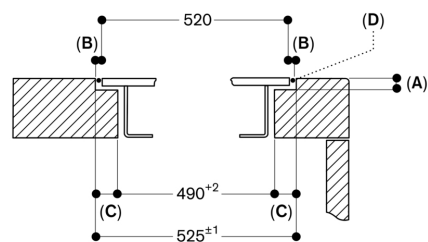

A. $6.5^{+0.5}$


B. 2.5

C: 17.5

D: Fill with silicone

measurements in mm

Longitudinal section

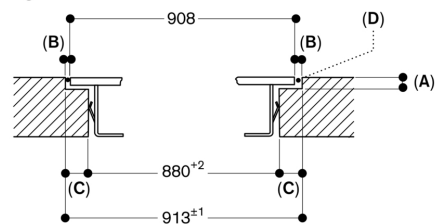

A: $6.5^{+0.5}$

B: 2.5

C: 16.5

D: Fill with silicone

measurements in mm