

# waterlovers®



## **2800 WATER DISTILLER** OPERATION MANUAL

Congratulations on purchasing the 2800 Water Distiller. You can now produce pure water in the comfort of your own home.

The 2800 Water Distiller has been designed for everyday household use but is also ideal for hospital and dental applications where the purest water is required. It's also great for travelling to areas where water may be contaminated.

We hope you enjoy your new Water Distiller. We believe it will bring you improved health benefits and a reliable method of water purification for many years.

**A NEW LIFE OF HEALTH BEGINS**

## Specifications

Model	DW 2800
Operation	Manual refill – Automatic Shutdown

### Materials

Outer Shell	Polycarbonate
Internal Reservoir	304 Grade Stainless Steel
Reservoir Lid Underside	304 Grade Stainless Steel
Internal Condenser Pipe	04 Grade Stainless Steel
Filter Tray	Stainless Steel Filter Tray
Heating Element	High Grade Aluminium (no water contact)
Collection Jug	Borosilicate glass 3 litres
Efficiency	98%
Dimensions of unit	348(L) x 247(W) x 354(H) mm
Net Weight	6.8kg
Distillation Capacity	Approx 3 litres in 210 minutes
Voltage	240V – 50Hz/110V – 60Hz
Watts	2500w Rapid boil ~ 500w - 750w Variable

## Boil-Dry Protection

Our advanced Smart technology prevents burning and over calcification of the reservoir bottom by shutting down before dry point and leaving approximately 5-10ml of water. This helps prolong the life of the reservoir and reduces cleaning frequency and time.

## Energy Saving Technology

The smart technology sensor detects room temperature and conservatively adjusts power requirements between 500-700w thus saving energy.

The machine utilizes our Smart Rapid Boil technology to bring water to boiling point. After this time the power consumption dramatically reduces to a consistent low range of 500-750w for the remaining time.

## Advanced Sensor Protection

There are smart sensors on the machine to prevent possible dangers including one under the reservoir lid that prevents the distiller from starting if the lid is not attached to the reservoir.

We also have a sensor to protect overheating of the condenser in the event if excessive heat from steam due to lack of room ventilation.

Another sensor automatically shuts down the machine if any of the vents (above and side) are accidentally covered to prevent overheating and fire.

# AS EASY AS 1, 2, 3...

1 Remove and fill the reservoir with tap water; once re-connected to the main unit, press the start button and the distiller will begin boiling the water.



2 For approx. 3 hours evaporated steam (pure h2o) travels upwards through the condenser pipe while all contaminants are left behind at the bottom of the reservoir.

3 The purified condensated water passes through the activated carbon filter and starts filling the glass jug.



 **waterlovers™**

PURE WATER  
**99.9%** CHEMICAL &  
BACTERIA FREE


[www.vitality4life.com.au](http://www.vitality4life.com.au)



Food grade 304 Stainless Steel reservoir and cover



Premium quality activated coconut carbon filters

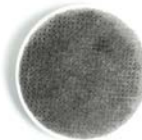

Slide in filter tray with 304 Stainless Steel housing

## Operation


It takes 3.5 hours to purify approximately 3 litres of 99.9% chemical and bacteria free distilled water.

1. Remove the reservoir and fill with water to the maximum line, then slide and connect the reservoir into the main unit.
2. Place glass collection jug into the main unit making sure the opening on top of the lid sits directly below the stainless steel spout under the filter tray.  
Remove the filter tray and check that the activated coconut carbon filter is placed into position.
3. Press the start button once and you will hear a beep and machine will begin to rapid boil the water.
4. Water reaches boiling point and will start to drip into the collection jug, from this point the machine will drop to 500-750w for the remainder of the cycle.
5. A full cycle will be completed after approximately 210 minutes and the machine will automatically shut down leaving 5-10ml of water in the reservoir for easy cleaning.
6. Once finished water can be consumed right away or chilled in the refrigerator.

**NOTE:** Run the distiller through for 1-2 cycles before drinking the distilled water to ensure it is thoroughly clean.

### SIMPLE ONE TOUCH OPERATION

Remove the reservoir and fill with contaminated water to the max line, then slide and connect the reservoir into the main unit. Pres the start button and begin to produce pure distilled water

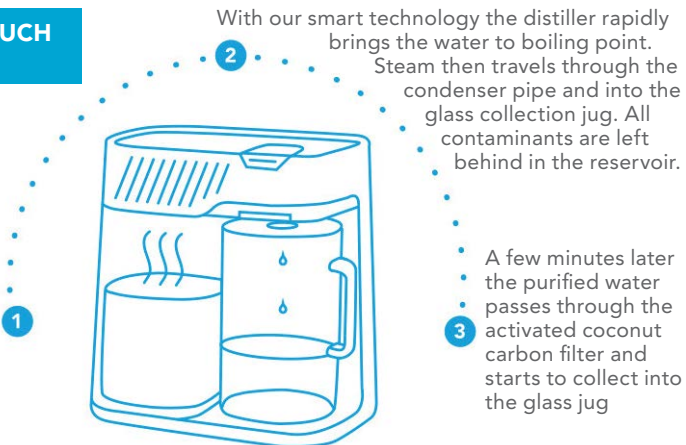

## Cleaning

Rinse and wipe out boiling reservoir after every cycle.

Calcification and scale will slowly build up on the bottom of the reservoir. Usage frequency will determine how fast this occurs. We suggest using Waterlovers Distiller Cleaner every few weeks for a complete clean

## Instruction for a full scale clean

1. Pour hot clean water into the reservoir to cover the scale areas. Sometimes cleaning is only required around the base or you may want to fill to max line for a complete clean.
2. Add 2-4 teaspoons (amount depends on how much water and scale is built up) of distiller cleaner into reservoir and mix until powder dissolves.
3. Let the solution sit for 1-4 hours and pour out water to rinse the inside. You may need to repeat this process if build up has developed thick layers of scale.

## Activated Coconut Carbon Filters

We recommend replacing the filters monthly (or 2-3 weeks in higher usage).



## Safety Instructions

- Do not allow children to operate the unit when switched on or when it is still hot.
- Best to use distiller in a well-ventilated area to reduce moisture in the environment.
- Do not connect multiple electric appliances with a single point to avoid over loading.
- Unplug the main power cable when you are adding water, cleaning or when the machine is not in service.
- Do not soak any part of the distiller in water except the glass jug.
- Do not remove the lid while the water is boiling; only remove it 5-10 minutes after distillation process has been completely to avoid burns and scalding.
- After distilling, position the reservoir lid so that steam is directed away from your body.
- Do not wipe or scratch the Stainless Steel reservoir with abrasive materials to avoid damage. A gently rinse and wipe is sufficient. Use the Distiller Cleaner solution for a thorough clean on the inside.
- Keep unit away from other heat generating appliances.
- If the supply cord is damaged, it must be replaced by the manufacturer or their service agents.
- After distillation, we recommend letting the distilled water cool down before placing into the fridge.
- Leave space (min 30cm) above the unit for adequate airflow.



## Consumption

**Drinking** – Distilled water is great tasting and healthy for you, the more you limit your chemical intake the faster your body will heal itself.

**Baby Formula** – Doctors highly recommend using purified water to make up baby formula; distilled water is most ideal for this.

**Mixing Drinks** – Using distilled water enhances the flavours of your tea, coffee or fresh juices.

**Making Ice** – Tap water produces cloudy ice cubes, with distilled your ice cubes are clean and crystal clear.

**Brewing** – Great for your homemade brews and elixirs.

**Cooking** – Bring out the natural flavours from foods by using distilled water, especially in soups and broths. It is also excellent for fermenting veggies and cooking noodles and pasta.

## Household

**Cleaning** – Mix your cleaning solutions with distilled water for better results and prevent unwanted residue.

**Steam Irons** – Distilled water prevents scale build up normally seen when tap water is used, this affects the appliances life.

**Humidifiers** – Tap water contains minerals that promote bacteria growth which can cause illness if inhaled, distilled water ensures healthy uncontaminated mist is released into the air.

**Evaporative Coolers** – Mineral deposits from tap water can build up inside your cooler over time, using distilled water will prevent this.

**Houseplants** – Enjoy longer blooms and healthier foliage when watering your plants with distilled water, just as nature intended.

## Medical

**Dental** – Used to prevent bacteria and biofilm growth on equipment and operation of autoclaves, which are sensitive to damage from impure water.

**Clinical** – Distilled water is used to clean medical equipment during surgery and to maintain a bacteria free environment

**Homeopathic** – When making homeopathic medicines, distilled water is used to ensure no other elements can alter the effect of the treatment.

**Traditional Medicines** – Distilled water is used when making traditional medicines where sensitivity to chemicals can create imbalance in treatment.

**Detoxification** – Many people support the use of distilled water during a detox cleanse or fasting period, distilled water aids in eliminating toxins and heavy metals.

## Other Applications

**Skin Care** – Those sensitive to allergies would benefit from using distilled water for their cleansing without impurities clogging up their pores.

**Mechanical** – Extend the life of any equipment that requires a water source, minerals found in tap water can be corrosive in many industrial applications.

**Computer cooling systems** – Distilled water's low conductivity leads to reduce risk of electrical damage and your system stays clean and bacteria free.

**Scientific** – Science laboratories only use distilled water when the purest and cleanest water source is required

**Feeding Pets** – your pets will also enjoy the taste of pure water.

# Warranty Card

## WARRANTY PERIOD

1 year motor and parts warranty.

Warranty registration and claims are handled by your local Vitality 4 Life Support Centre, details on the back cover.

**Do not return the product to the store.**

## LOGGING A WARRANTY CLAIM

Should you experience any issues with your product, please follow these steps to lodge a warranty claim:

1. Contact your local Vitality 4 Life Service Centre with the following details:
  - Your warranty details including name, email and phone number
  - Product name and model number
  - Product serial number, found on the rating label of the product
  - Explanation of how the damage occurred
  - Photos of the damage or issue is highly beneficial to expediting your claim
  - Vitality 4 Life will assess your claim and respond within 24-48 hours.
2. In the event the product is required to be sent to the Service Centre, the customer is liable for all packing, freight and insurance costs for transit of the product to Vitality 4 Life. Subject to the applicable consumer laws in your jurisdiction.

3. If the product, or one of its parts, qualifies for replacement or service within the 30-Day period after date of purchase, Vitality 4 Life will arrange the shipping at no cost to you.
4. Any product sent to a Vitality 4 Life Service Centre must include a Return Authorization Form. Failure to include this form may result in the product being rejected from our warehouse or a delayed service time.
5. Vitality 4 Life will contact you with a quote prior to undertaking any service work outside of the warranty coverage.
6. Typical turn-around times to address warranty claims can be between 10-14 business days, plus shipping, depending on location and type of damage or warranty claim.

## TERMS OF PRODUCT WARRANTY COVERAGE

Vitality 4 Life provides the Product Warranty coverage as further described below and limited to the terms and conditions hereof:

1. If the Airfree Blender exhibits a defect while in normal domestic use, within the warranty period; we will, at our option, either repair or replace the Nova Blender or defective part free of charge. The product must be delivered by insured mail, in proper packaging to your Service Centre as indicated on the back of the manual as a condition to any warranty service obligation.

**Please register your warranty online at [warranty.vitality4life.com](http://warranty.vitality4life.com) within 30 days of purchase.**

1. In the event that the warranty period for a product has expired, or if a product does not qualify for warranty service, repair or replacement, consumers may still buy replacement parts or have products repaired by one of Vitality 4 Life's Service Centres. Please contact Vitality 4 Life for further information.
2. Do not send the product back to the Service Centre without a Return Authorization Form.
3. In no event shall our liability exceed the retail value of the product. We make no warranty with respect to parts, from a source other than Vitality 4 Life.
4. In the event that warranty parts or products are provided, the customer must cover the related shipping costs to receive goods.
5. All exchanged or substitute parts and products replaced under warranty service will become the property of Vitality 4 Life. Repaired or replaced products or parts thereof will be warranted by Vitality 4 Life for the balance of the original warranty period.
6. (Australia only) Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

## **WARRANTY DOES NOT COVER**

1. Damage, accidental or otherwise, to the Product, not caused by direct defect in factory workmanship or materials.
2. Damage due to abuse, mishandling, alteration, misuse, commercial service, tampering, accident, failure to follow care, operating and handling provisions indicated in the instructions.
3. Damage caused by parts or service not authorized or performed by Vitality 4 Life.
4. 'Normal' wear and tear that naturally and inevitably occurs as a result of normal use or aging.
5. Some states do not allow the exclusion or limitation of incidental or consequential damages. Therefore, the above limitations may not apply to you in the case of damage in shipment. If your product was damaged in shipment: Immediately report this type of damage to the parcel carrier and have them file an inspection report to contact the distributor from whom you purchased the New Name Blender for further instructions.
6. You have rights and benefits under the consumer laws in your jurisdiction. Without detracting from these rights or benefits, Vitality 4 Life excludes all liability in respect of this product for any other loss which is not reasonably foreseeable from a failure of this product, which may include liability for negligence, loss of expenditure associated with the product and loss of enjoyment.

## **VITALITY 4 LIFE SUPPORT & SERVICE CENTRES**

### **Vitality 4 Life – Australia & New Zealand**

Email: [support@vitality4life.com](mailto:support@vitality4life.com)

Website: [www.vitality4life.com.au](http://www.vitality4life.com.au)

### **Vitality 4 Life – United Kingdom**

Email: [support@vitality4life.co.uk](mailto:support@vitality4life.co.uk)

Website: [www.vitality4life.co.uk](http://www.vitality4life.co.uk)

### **Vitality 4 Life - United States**

Email: [support@vitality4life.com](mailto:support@vitality4life.com)

Website: [www.vitality4life.com](http://www.vitality4life.com)

### **Vitality 4 Life – France**

Email: [support@vitality4life.fr](mailto:support@vitality4life.fr)

Website: [www.vitality4life.fr](http://www.vitality4life.fr)

### **Vitality 4 Life – Deutschland**

Email: [support@vitality4life.de](mailto:support@vitality4life.de)

Website: [www.vitality4life.de](http://www.vitality4life.de)

### **Vitality 4 Life – Italiano**

Email: [servizioclienti@vitality4life.it](mailto:servizioclienti@vitality4life.it)

Website: [www.vitality4life.it](http://www.vitality4life.it)

### **Vitality 4 Life – España**

Email: [atencioncliente@vitality4life.es](mailto:atencioncliente@vitality4life.es)

Website: [www.vitality4life.es](http://www.vitality4life.es)

### **Vitality 4 Life – Netherlands**

Email: [info@vitality4life.co.nl](mailto:info@vitality4life.co.nl)

Website: [www.vitality4life.co.nl](http://www.vitality4life.co.nl)

