

Operating and installation instructions

Rangehood



To prevent the risk of accidents or damage to the appliance, it is **essential** to read these instructions before it is installed and used for the first time.

Contents

Warning and Safety instructions	4
Caring for the environment	13
Description of the functions	14
Con@ctivity 2.0 function	15
Guide to the appliance	16
Operation (automatic mode)	18
Cooking with Con@ctivity 2.0 (Automatic mode)	18
Leaving automatic mode temporarily	20
Returning to automatic mode	20
Operation (manual mode)	21
Cooking without Con@ctivity 2.0 (manual mode)	21
Switching the fan on	21
Selecting a power setting	21
Selecting the run-on time	21
Switching the fan off	21
Switching the cooktop lighting on/off	21
Power management	22
Safety switch-off	22
Operation (automatic and manual modes)	23
Glass feature lighting: switching on/off and dimming it	23
Operating hours counter	23
Altering the operating hours counter for the grease filter	23
Activating and altering the operating hours counter for the NoSmell active charcoal filter	24
Reading the filter operating hours counter	25
Energy saving tips	26
Cleaning and care	27
Housing	27
Grease filter and edge extraction panel	28
NoSmell active charcoal filter	31
Resetting the operating hours counter for the charcoal filter	31
Disposing of the charcoal filter	32
Reactivatable charcoal filter	32
Installation	33
Before installation	33
Installation instructions	33

Assembly parts.....	34
Appliance dimensions	36
Safety distance (S)	37
Installation recommendations	38
Drilling diagram for wall mounting.....	38
Connection for air extraction	39
Condensate trap.....	40
Silencer.....	40
Electrical connection	41
Activating Con@ctivity 2.0	42
Installing the Con@ctivity 2.0 dongle	42
Activating Con@ctivity 2.0.....	42
Activating the rangehood	42
Activating the cooktop	43
Activation failed.....	43
Deactivating Con@ctivity 2.0.....	43
After sales service and warranty	44
Position of the data plate	44
Warranty: Other countries	44
Technical data.....	45

Warning and Safety instructions

This appliance complies with all relevant local and national safety requirements. Inappropriate use can, however, lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the appliance, please read these instructions carefully before using it for the first time. They contain important notes on the safety, installation, use and maintenance of the appliance. Miele cannot be held liable for non-compliance with these instructions.

Keep these instructions in a safe place and ensure that all users are familiar with the contents. Pass them on to any future owner of the appliance.

Correct application

► This rangehood is designed for domestic use and for use in similar environments by guests in hotel or motel rooms, bed & breakfasts and other typical living quarters. This does not include common/shared facilities or commercial facilities within hotels, motels or bed & breakfasts.

► The appliance is not suitable for outdoor use.

► It must only be used to extract vapours and remove odours from cooking.

Any other usage is at the owner's risk. Miele cannot be held liable for damage resulting from incorrect or improper use or operation.

► Where a recirculation rangehood is fitted above a gas cooktop, please ensure that there is an adequate supply of fresh air into the room in which it is installed. Please seek the advice of a qualified gas fitter if necessary.

Warning and Safety instructions

► This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning its use by a person responsible for their safety, and are able to recognise the dangers of misuse.

Safety with children

► Young children must not be allowed to use this appliance.

► Older children may only use the appliance when its operation has been clearly explained to them and they are able to use it safely, recognising the dangers of misuse.

► Cleaning work may only be carried out by older children under the supervision of an adult.

► Children should be supervised near the appliance. Ensure that they do not play with the appliance.

► The cooktop lighting is very intense.

Ensure, in particular, that babies/small children do not look directly at the light.

► Danger of suffocation! Children may be able to wrap themselves in packing material or pull it over their head with the risk of suffocation. Keep children away from any packing material.

Warning and Safety instructions

Technical safety

- ▶ Repairs and other work by unqualified persons could be dangerous. Installation, maintenance work and repairs to electrical appliances must only be carried out by a Miele approved service technician.
- ▶ A damaged appliance can be dangerous. Check it for visible signs of damage. Do not use a damaged appliance.
- ▶ The electrical safety of this appliance can only be guaranteed when continuity is complete between it and an effective earthing system. It is most important that this basic safety requirement is present and tested regularly and, where there is any doubt, the household wiring system should be inspected by a qualified electrician.
- ▶ Reliable and safe operation of this rangehood can only be assured if it has been connected to the mains electricity supply.
- ▶ The connection data (voltage and frequency) on the data plate of the rangehood must match the mains electricity supply in order to avoid the risk of damage to the rangehood.
Compare this before connecting the appliance to the mains electricity. If in doubt, consult a qualified electrician.
- ▶ Do not connect the appliance to the mains electricity supply by a multi-socket unit or an extension lead. Extension leads are a fire hazard and do not guarantee the required safety of the appliance.
- ▶ For safety reasons, this appliance may only be used after it has been built in.
- ▶ This rangehood must not be installed and operated in mobile installations (e.g. on a ship).

Warning and Safety instructions

► Tampering with electrical connections or components and mechanical parts is highly dangerous to the user and can cause operational faults.

Only open the housing as described in the instructions given in the installation sheet and in the "Cleaning and care" section of this booklet. Under no circumstances should any other parts of the housing be opened.

► The manufacturer's warranty will be invalidated if the appliance is not repaired by a Miele approved service technician.

► Faulty components must only be replaced by genuine Miele spare parts. The manufacturer can only guarantee the safety of the appliance when Miele replacement parts are used.


► If the mains connection cable is damaged, it must only be replaced by a Miele authorised service technician or suitably qualified electrician in order to avoid a hazard.

► During installation, maintenance and repair work, the appliance must be disconnected from the mains electricity supply. It is only completely isolated from the electricity supply when:

- the mains circuit breaker is switched off, or
- it is switched off at the wall socket and the plug is withdrawn from the socket. Do not pull the mains connection cable but the mains plug to disconnect your appliance from the mains electricity supply.

Warning and Safety instructions

Using at the same time as another heating appliance that depends on the air from the room

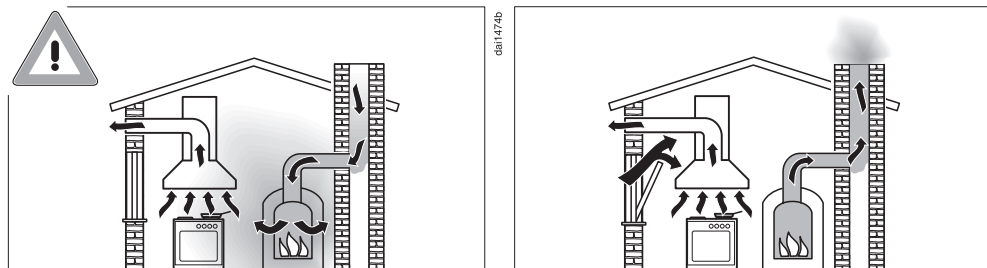

Danger of toxic fumes!

Great care should be taken when using the rangehood in the same room or the same area of the house as another heating appliance that depends on the air from the room.

Such heating appliances draw in air from the room and duct exhaust gases out through a chimney or extraction ducting. They include gas, oil, wood and coal-fired boilers and heaters, continuous flow or other water heaters, gas cooktops and ovens.

The rangehood draws in air from the kitchen and from neighbouring rooms. This applies to the following modes of operation:

- extraction mode,
- extraction mode with an external motor,
- recirculation mode with a recirculation box installed outside the room.

If there is insufficient air, an underpressure will occur. The heating appliance may be starved of oxygen. This impairs combustion. Harmful gases could be drawn from the chimney or extraction ducting back into the room, with potentially fatal consequences. Risk of death!

Warning and Safety instructions

In order to ensure safe operation and to prevent gases given off by a heating appliance from being drawn back into the room, when the range hood and the heater are both operated simultaneously, an underpressure in the room of 0.04 mbar (4 Pa) is the maximum permissible.

Sufficient ventilation can be maintained by air inlets which cannot be blocked, e.g. in windows, doors and outside wall vents. The diameter of the inlet openings must enable sufficient ventilation. A ventilation brick alone is not generally sufficient to ensure safe ventilation.

The overall ventilation condition of the dwelling must be taken into account. If in any doubt, the advice of a competent builder, or for gas, a qualified gas fitter should be sought.

If the rangehood is being operated in recirculation mode, whereby the air is redirected into the room in which it is installed, the above restrictions do not apply.

Warning and Safety instructions

Correct use

- ▶ Never use an open flame beneath the rangehood. To avoid the danger of fire, do not flambé or grill over an open flame. When switched on, the rangehood could draw flames into the filter. Fat deposits could ignite, presenting a fire hazard.
- ▶ The rangehood can become damaged when exposed to excessive heat.
 - When using the rangehood over a gas cooktop, ensure that any burners in use are always covered by a pan. Switch the cooking zone off when a pan is removed, even for a short time.
 - Select a pan which is suitable for the size of the burner.
 - Regulate the flame so that it does not burn up the sides of the pan.
 - Avoid overheating the pan (e.g. when cooking with a wok).
- ▶ Always switch the rangehood on when a cooking zone is in use, otherwise condensation may collect in the rangehood, which could cause corrosion.
- ▶ Overheated oil and fat can ignite, causing fire damage to the rangehood.

When cooking with oil or fat, chip pans and deep fat fryers etc., do not leave the pans unattended. Similarly, never leave an open grill unattended when grilling.

Warning and Safety instructions

- ▶ Do not use the rangehood without the filters in place. This way you will avoid the risk of grease and dirt getting into the appliance and hindering its smooth operation.
- ▶ There is a risk of fire if cleaning is not carried out as described in these operating instructions.
- ▶ The rangehood can get very hot during cooking due to heat rising from the cooktop.
Do not touch the housing or the grease filters until the rangehood has cooled down.

Correct installation

- ▶ Refer to the cooktop manufacturer's instructions as to whether a rangehood may be operated above the cooktop.
- ▶ Safety regulations prohibit the fitting of a rangehood over solid fuel stoves.
- ▶ An insufficient safety distance between the stovetop and the rangehood can result in damage to the rangehood.
The minimum safety distances between the top of the stovetop and the bottom of the rangehood given in the "Installation" section of this booklet must be observed, unless the stovetop manufacturer states that a greater safety distance is required.
If more than one cooking appliance is fitted beneath the rangehood, and they have different minimum safety distances to the rangehood, select the greater distance.
- ▶ The distances given in "Installation" must be observed when fitting the rangehood.

Warning and Safety instructions

- ▶ All ducting, pipework and fittings must be of non-flammable material. These can be obtained from builders' merchants.
- ▶ The appliance must not be connected to a chimney or vent flue which is in current use for exhausting fumes from appliances burning gas or other fuels. Neither should it be connected to ducting which ventilates rooms with fireplaces.
- ▶ If exhaust air is to be extracted into a chimney or ventilation duct no longer used for other purposes, seek professional advice.

Cleaning and care

- ▶ Do not use a steam cleaning appliance to clean this appliance. The steam could reach electrical components and cause a short circuit.
- ▶ You could injure yourself on the open vapour canopy. Only open it when necessary.
- ▶ In areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the machine and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the machine warranty.

Accessories

- ▶ Use only genuine original Miele spare parts. If spare parts or accessories from other manufacturers are used, the warranty will be invalidated, and Miele cannot accept liability.

Disposal of the packing material

The transport and protective packaging has been selected from materials which are environmentally friendly for disposal, and can normally be recycled.

Recycling the packaging reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites. Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation.

Disposing of your old appliance

Electrical and electronic appliances often contain valuable materials. They also contain specific materials, compounds and components, which were essential for their correct function and safety. These could be hazardous to human health and to the environment if disposed of with your domestic waste or if handled incorrectly. Please do not, therefore, dispose of your old appliance with your household waste.




Please dispose of it at your local community waste collection / recycling centre for electrical and electronic appliances. You are also responsible for deleting any personal data that may be stored on the appliance prior to disposal. Please ensure that your old appliance poses no risk to children while being stored prior to disposal.

Description of the functions

Depending on the model of the rangehood, the following options are available:

Air extraction mode

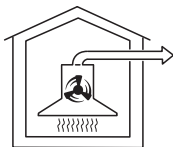

da00494a

The air is drawn in and cleaned by the grease filter and directed outside.

Non-return flap

The non-return flap is designed to prevent the exchange of room and outside air taking place.

The flap is closed when the rangehood is switched off.

When the rangehood is switched on, the non-return flap opens for the cooking vapours to be blown directly outside.

If the on-site ventilation system does not have a non-return flap, the non-return flap supplied must be fitted.

Recirculation mode

(can only be operated with a charcoal filter, available as an optional accessory: see "Technical Data")




da00494b

The air is drawn in and cleaned first by the grease filter and then by a charcoal filter. The cleaned air is then recirculated back into the kitchen.

Con@ctivity 2.0 function

Automatic control

The rangehood has a communication facility which enables the automatic operation of the rangehood depending on the operational state of a Miele electric cooktop.

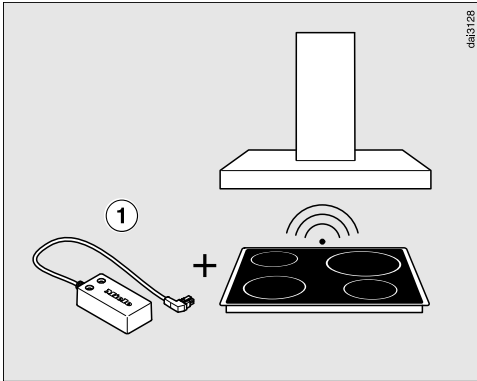

For communication to take place, the cooktop must be fitted with an appropriate Con@ctivity 2.0 dongle ①.

Please consult the installation instructions for the Con@ctivity 2.0 dongle to see if connection to your cooktop is possible.


In order to be able to use the Con@ctivity 2.0 function, radio contact between the cooktop and the rangehood must be established (see "Activating Con@ctivity 2.0").

The cooktop transmits information about its operational status via a radio signal to the rangehood.

- When the cooktop is switched on, the cooktop lighting on the rangehood comes on independently and, then after a short time, the fan also comes on.
- During cooking the rangehood automatically sets the power level according to the number of cooking zones in operation and their power levels.
- After switching the cooktop off, the fan and the cooktop lighting will switch off automatically after a specified period of time.

See "Operation" for detailed information about this function.

Guide to the appliance

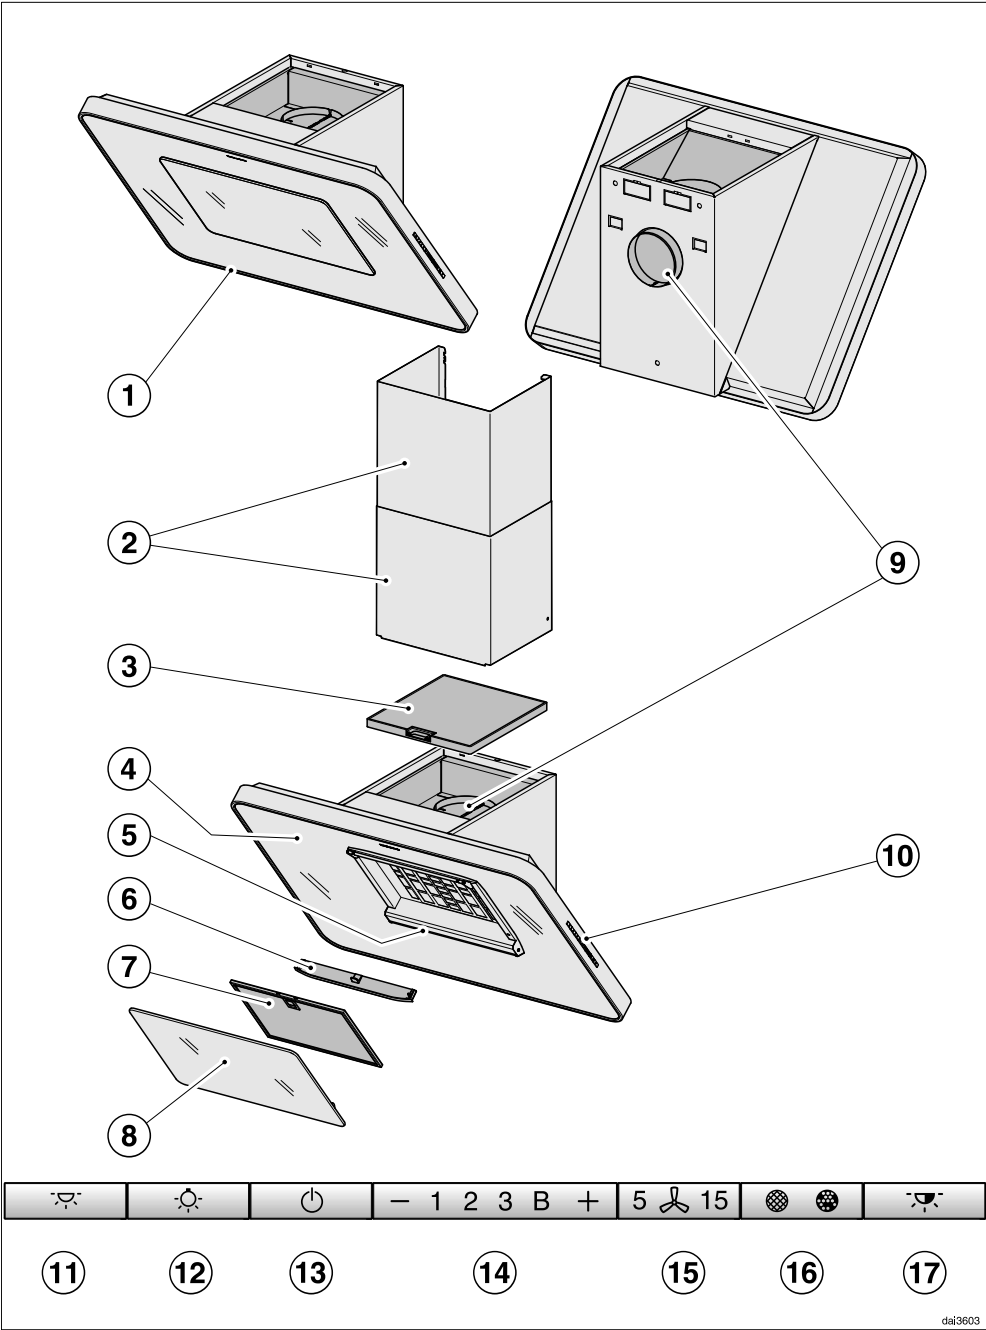

- ① Canopy
- ② DADC 6000 tower
Available as an optional accessory for concealing extraction ducting to the ceiling.
- ③ NoSmell active charcoal filter
Optional accessory for recirculation mode
- ④ Glass feature lighting (dimmable)
- ⑤ Cooktop lighting
- ⑥ Moisture collection tray
- ⑦ Grease filter
- ⑧ Edge extraction panel
- ⑨ Exhaust connection
Extraction ducting can be directed through the back of the rangehood or upwards to the ceiling (...EXT models only).
- ⑩ Controls
 - ⑪ On/Off control for the glass feature lighting
 - ⑫ On/Off touch control for the cooktop lighting
 - ⑬ On/Off touch control for the fan
 - ⑭ Touch controls to select the fan power setting
 - ⑮ Touch control for the run-on option
 - ⑯ Operating hours control
 - ⑰ Dimmer control for the glass feature lighting

Operation (automatic mode)

If Con@ctivity 2.0 is activated, the rangehood always operates in automatic mode (see "Activating Con@ctivity 2.0").

To operate the rangehood manually, see "Cooking without Con@ctivity 2.0 (manual mode)".

Cooking with Con@ctivity 2.0 (Automatic mode)

- Switch a cooking zone on at the power setting you want.


The cooktop lighting will come on.

After a few seconds the fan will come on, first at power setting **2**, then it will switch immediately to power setting **1**.

The rangehood selects the power setting automatically during cooking.

This is determined by the total output of the cooktop, i.e. the number of cooking zones in operation and the power settings selected.

- If you select a higher power setting or are using several cooking zones, the rangehood will switch to a higher power setting.
- When you reduce the power setting or the number of cooking zones on the cooktop, the rangehood power setting will also be reduced.

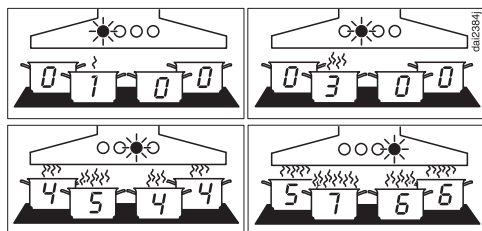

Examples for power levels **1** to **4**

Reaction time

The rangehood reacts with a slight delay because altering the power setting on the cooktop does not immediately result in a reduction or increase in cooking vapours.

Because the cooktop transmits the information to the rangehood at intervals, this can also cause delays.

The reaction can vary from a few seconds to a few minutes.

Cooking process

- If, for example, you switch on a cooking zone at the highest power setting to heat a pan for frying and reduce the power level after approx. 60 to 90 seconds*, a cooking process is recognised (*60 seconds to 5 minutes for a HiLight cooktop).

The rangehood switches itself on and when the cooktop power level has been reduced, the rangehood switches to power setting 3 and remains at that level for approx. 5 minutes.

After that the rangehood power setting is determined automatically by the Con@ctivity function.

- You can select another power setting manually before then.

Switching off

- Switch off all cooking zones.

The rangehood fan will reduce its power level over the next few minutes and will eventually switch itself off.

This helps to neutralise any lingering vapours and odours in the air.


- From the Booster setting the fan switches immediately to setting 3.
- If the fan is operating at setting 3, it will switch to setting 2 after approx. 1 minute.
- From setting 2, the fan switches to setting 1 after 2 minutes.
- After 2 minutes at setting 1, the fan switches itself off.
- After another 30 seconds, the cooktop lighting switches off.

The cooking process is then finished.

Operation (automatic mode)

Leaving automatic mode temporarily

To leave automatic mode temporarily during cooking:

- Manually select a different power setting, or
- Manually switch the rangehood off, or
- Activate the run-on option  on the rangehood. The fan will switch off after the selected time and the lighting remains switched on.

The rangehood functions can now be operated manually (see "Cooking without Con@ctivity 2.0 (manual mode)").

Returning to automatic mode

The rangehood returns to automatic mode:

- if the rangehood has not been used for approx. 5 minutes after selecting a power setting manually, or
- if the manually selected power setting corresponds to the automatic one again, or
- if the rangehood fan and the cooktop have been switched off for at least 30 seconds.
Automatic mode will resume next time the cooktop is switched on.
- If you wish to operate the rangehood manually for a complete cooking process, switch on the rangehood fan **before** switching on the cooktop. If the rangehood and the cooktop have been switched off for at least 30 seconds after cooking, automatic mode will resume the next time the cooktop is switched on.


Cooking without Con@ctivity 2.0 (manual mode)

The rangehood can be operated manually if:

- The Con@ctivity 2.0 function is not activated.
- You have temporarily switched off the Con@ctivity 2.0 function (see "Leaving automatic mode temporarily").

Switching the fan on

- Press the On/Off touch control .

The fan will switch on at setting **2**. The  symbol and **2** will light up in the power setting display.

Selecting a power setting

For light to heavy cooking vapours and odours, select from power settings **1** to **3**.

For short periods of cooking food with intensive vapours and a strong aroma, e.g. when searing meat, select Booster setting **B**.

- For a lower power setting, press the "-" control, or "+" for a higher level.




Reducing power down from the Booster setting

If Power management is activated (default setting), the fan automatically switches back to level **3** after 5 minutes.


Selecting the run-on time

It is advisable to run the fan for a few minutes after cooking has finished. This helps to neutralise any lingering vapours and odours in the air.

The run-on function allows the fan to continue to run for a pre-determined time before switching itself off automatically.

- After cooking has finished, press the run-on control  while the fan is still running:
 - Once: the fan will switch itself off after 5 minutes (**5** lights up).
 - Twice: the fan will switch itself off after 15 minutes (**15** lights up).
 - If you touch the run-on control  again, the fan will remain switched on ( will go out).

Switching the fan off


- Press the On/Off touch control  to switch the fan off.

The  symbol will go out.

Switching the cooktop lighting on/off

The cooktop lighting can be switched on and off independently of the fan.

- To do this, press .

The  symbol will light up when the cooktop lighting is switched on.

Operation (manual mode)

Power management




The rangehood features a Power management system to help save energy. The fan power setting is reduced and the lighting is switched off automatically.

- If the Booster setting has been selected, the fan will automatically switch to setting 3 after 5 minutes.
- From settings 3, 2 or 1 the power will be reduced by one setting after 2 hours and then in 30-minute stages until the fan finally switches off.
- The cooktop lighting will switch off automatically after 12 hours.

Switching Power management on/off

You can deactivate Power management.

This can, however, result in increased electricity consumption.

- Switch off the fan and the lighting.
- Press the run-on control **5**  **15** for approx. 10 seconds, until the **1** lights up.
- Then press in turn,
 - the lighting control ,
 - then the "-" touch control, and
 - the lighting control  again.

If Power management is switched on, the **1** and **B** indicators will light up constantly.

If it is switched off, **1** and **B** will flash.

- Press "-" to switch Power management off.

The **1** and **B** indicators will flash.

- To switch it on, press "+".

The **1** and **B** indicators will light up constantly.



- Confirm the setting by pressing the run-on control **5**  **15**.

All the indicator lights will go out.

If you don't confirm your selection within 4 minutes, the rangehood will automatically revert to the previous setting.

Safety switch-off


If Power management has been deactivated, the rangehood will switch itself off automatically after 12 hours if it has been left on (fan and cooktop lighting).

- To switch it back on press the On/Off  control or the lighting control .


Operation (automatic and manual modes)




Glass feature lighting: switching on/off and dimming it

The glass feature lighting can be switched on and off and dimmed independently of the fan.

- To switch it on, press the  glass feature lighting control.



The lighting will come on at the previously used brightness level.

The  control is used for dimming the glass feature lighting.

- With the lighting switched on, press and hold the  control. The brightness will gradually dim until you release the control.
- Press and hold in the lighting control  again to increase the brightness to the level required and then release it.
- Press the  control to switch the glass feature lighting off.

Operating hours counter

The rangehood registers the length of time it has been operated.






When the grease filter symbol  or the charcoal filter symbol  lights up, the operating hours counters are signalling that the filters need to be cleaned or replaced. Further information about cleaning and replacing the filters and resetting the operating hours counters can be found under "Cleaning and care".


Altering the operating hours counter for the grease filter

You can set the operating hours counter for the grease filter to suit the type of cooking you do.

It is set at the factory for 30 hours.

- Select a shorter time of 20 hours if you fry a lot.
- If you only cook occasionally, we recommend that you still select a short time because grease which has built up gradually over a long period of time will harden on the filter and make cleaning more difficult.
- If you use very little fat for cooking, select a longer time (40-50 hours).


- Press the On/Off touch control  to switch the fan off.
- Press the run-on control  **5**  **15** and the operating hours counter   at the same time.

The grease filter symbol  and one of the fan power setting indicators will flash.

Operation (automatic and manual modes)

Fan power setting indicators **1** to **B** show the time set:

1	20 hours
2	30 hours
3	40 hours
B	50 hours

- Press the "-" symbol for a shorter operating time, or the "+" symbol to select a longer operating time.
- Confirm the selection by pressing the operating hours control .



All the indicator lights will go out.


If you don't confirm your selection within 4 minutes, the rangehood will automatically revert to the previous setting.

Activating and altering the operating hours counter for the NoSmell active charcoal filter

The charcoal filter is needed for recirculation mode.


The operating hours counter for the charcoal filter needs to be activated once and the operating hours counter needs to be set to suit the kind of cooking you do:

- Press the On/Off touch control  to switch the fan off.
- Press the "+" symbol and the operating hours control  at the same time.

The charcoal filter symbol  and one of the fan power settings will flash.

Fan power setting indicators **1** to **B** show the time set:

1	120 hours
2	180 hours
3	240 hours
B	Deactivated

- Press the "-" symbol for a shorter operating time, or the "+" symbol to select a longer operating time.
- Confirm the selection by pressing the operating hours control .






All the indicator lights will go out.

If you don't confirm your selection within 4 minutes, the rangehood will automatically revert to the previous setting.

Operation (automatic and manual modes)

Reading the filter operating hours counter

You can check the percentage of time set already used before the filter needs replacing.

- Switch the fan on with the On/Off control .
- Press and hold the operating hours control  :
- Once, to read the grease filter operating hours. The grease filter symbol  lights up.
- Twice, to read the charcoal filter operating hours. The charcoal filter symbol  lights up.

One or more of the fan power setting indicators will flash.

The number of flashing indicators shows the percentage of the operating time which has already been used up.


1	25 %
1 and 2	50 %
1 to 3	75 %
1 to B	100 %

The number of operating hours used remains in the memory even when the appliance is switched off or there is a power cut.

Energy saving tips

This rangehood operates very efficiently and economically. The following will help you to save even more energy when using it:

- Ensure that there is sufficient ventilation in the kitchen when cooking. In extraction mode, if there is insufficient air flow the rangehood cannot operate efficiently and this causes increased operating noise levels.
- Always cook with the lowest possible setting. This produces fewer cooking vapours, so you can use a lower rangehood power level and therefore benefit from reduced energy consumption.
- Clean or change the filters at regular intervals. Heavily soiled filters reduce performance, increase the risk of fire and are unhygienic.
- Use the Con@ctivity function. The rangehood will switch on and off automatically at the optimum power level for the cooking you are doing, which ensures low energy consumption.
- If you are operating the rangehood manually, please note the following:
 - Check the power level selected on the rangehood. A low power level is usually sufficient. Only use the Booster setting when necessary.
 - When a large volume of cooking vapours are being produced, switch to a high power level in good time. This is more efficient than operating the rangehood for longer to try to capture cooking vapours which have already been distributed throughout the kitchen.
 - Make sure that you switch the rangehood off after use. If cooking vapours and odours still need to be removed from the kitchen air after cooking, use the run-on function. The fan will switch off automatically after the selected run-on time.

 Before proceeding with any maintenance or cleaning task, the rangehood must be disconnected from the power supply (see "Warning and Safety instructions").

Housing

General

The surfaces and controls are susceptible to scratches and abrasion.

Please observe the following cleaning instructions.

- All external surfaces and controls can be cleaned using warm water with a small amount of washing-up liquid applied with a well wrung-out soft sponge or cloth.

Do not use too much water when cleaning the controls.

Water could penetrate into the electronics and cause damage.

- After cleaning, wipe the surfaces dry using a soft cloth.

Do not use:

- cleaning agents containing soda, acids, chlorides or solvents,
- abrasive cleaning agents, e.g. powder cleaners or cream cleaners and abrasive sponges, as well as pot scourers or sponges which have been used previously with abrasive cleaning agents. These will damage the surface material.

Important for appliances with lacquered housing

- Observe the general notes on cleaning earlier in this section.

Minor scratches on the surface are inevitable when cleaning the housing. Depending on the lighting in the kitchen, this may negatively affect the appliance's appearance.


Important for appliances with glass surfaces

- Glass surfaces can be cleaned using a proprietary non-abrasive cleaning agent designed specifically for use on glass.

Cleaning and care


Grease filter and edge extraction panel

The edge extraction panel and the reusable metal grease filter in the appliance remove solid particles (grease, dust, etc.) from the kitchen vapours, preventing soiling of the rangehood.

 An oversaturated filter is a fire hazard.

Grease filter cleaning intervals

Grease which has collected in the rangehood hardens over time and makes cleaning more difficult. It is therefore recommended that the edge extraction panel and the grease filter should be cleaned regularly (at least every 3–4 weeks) to avoid a build-up of grease.


The operating hours counter will remind you to clean the edge extraction panel and the grease filter regularly via the grease filter symbol  lighting up.

- You can set the operating hours counter to suit the type of cooking you do (see "Operation").


Removing the panel and grease filter

The panel and grease filter can fall out when you are handling them. This can result in damage to the filters, panels and the cooktop below.

Make sure you hold the panel and the grease filters securely at all times when handling them.

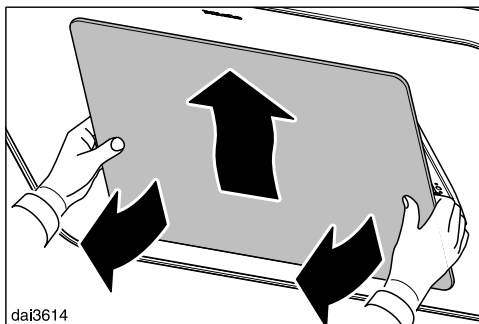


- Pull the panel out of the holder at the bottom, press it back a little at the top, then unhook it and carefully lift it out.

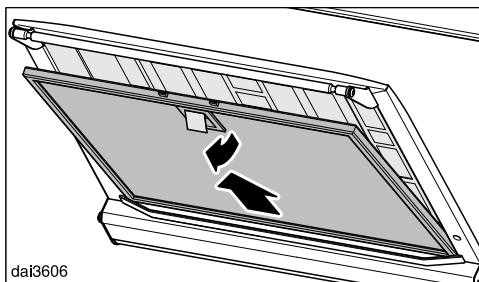

- Release the locking clip on the grease filter, allow it to swing out towards you slightly, then unhook it and take it out.

Removing the moisture collection tray

Condensate collects in the moisture collection tray underneath the grease filter. This tray can be removed for cleaning.

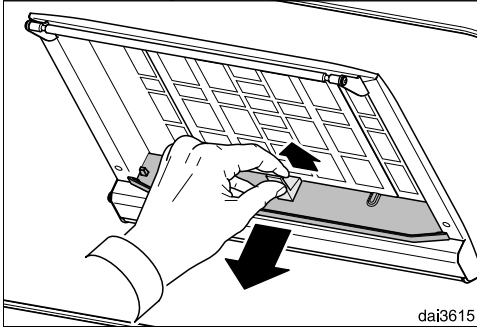

- After taking the grease filter out, hold the tray in the middle and pull it slightly upwards and then carefully pull it out towards you.
- Pour any condensate away.

Cleaning the panel(s) by hand

- Follow the instructions under "Housing".

Cleaning the grease filter and the moisture collection tray by hand

- Clean the grease filter and the drip tray with a soft nylon brush in a mild solution of warm water and a little washing-up liquid. Do not use undiluted washing-up liquid.

Unsuitable cleaning agents

Unsuitable cleaning agents can cause damage to the surface of the filters if used regularly.

Do not use:

- cleaning agents containing descaling agents,
- powder cleaners or cream cleaners,
- aggressive all-purpose cleaning agents or spray cleaners for grease,
- oven sprays.

Cleaning the grease filter and the moisture collection tray in a dishwasher


- Place the grease filter and the moisture collection tray upright or slightly inclined in the lower basket, ensuring the spray arm is not obstructed.
- Use a proprietary household dishwasher detergent.
- Select a dishwasher programme with a wash temperature between 50 °C and 65 °C.

Depending on the cleaning agent used, cleaning the grease filter in a dishwasher can cause permanent discolouration to the internal surfaces of the filter. However, this will not affect the functioning of the filter in any way.


Cleaning and care

After cleaning

- After cleaning, leave the grease filter to dry on an absorbent surface before refitting it.
- When removing the panel and the grease filter for cleaning, also clean off any residues of oil or fat from the now accessible housing to prevent the risk of these catching fire.
- Refit the moisture collection tray.
- Refit the grease filter, making sure that the locking clip is facing down towards the cooktop.

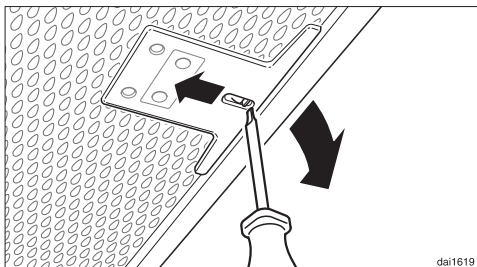


- If a grease filter is inadvertently refitted upside down, insert a small screwdriver blade into the slit to disengage the clip.

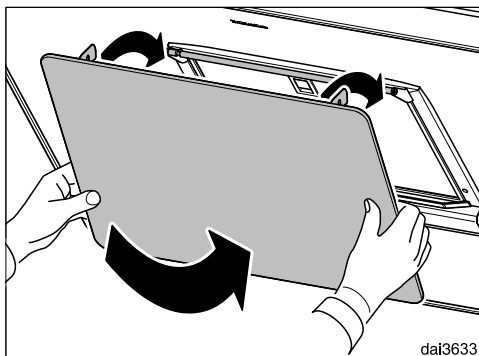

- Hook the panel in at the top and then push it into position at the bottom.


Resetting the grease filter operating hours counter

After cleaning, the operating hours counter needs to be reset.

- While the fan is switched on, press the operating hours control  for approx. 3 seconds until only **1** is flashing.

The grease filter symbol  goes out.

If you want to clean the grease filter before the operating hours counter has reached its maximum:


- Press the operating hours control  for approx. 6 seconds until only **1** is flashing.

NoSmell active charcoal filter

If the rangehood is connected for recirculation, it must be fitted with a charcoal filter in addition to the grease filter. This is designed to absorb cooking odours. It is fitted in the top of the rangehood.

Fitting and replacing the charcoal filter


- Unwrap the charcoal filter from its packaging.

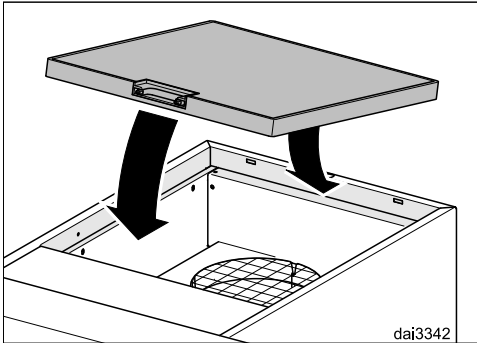

- Fit the charcoal filter into the holder in the top of the rangehood.
- When fitting for the first time, activate the operating hours counter (see "Operation").

When to change the NoSmell active charcoal filter



- Replace the charcoal filter when it no longer absorbs kitchen odours effectively.
It should be replaced at least every 6 months.

The charcoal filter operating hours counter  will light up to remind you to change the charcoal filter regularly.


- The charcoal filter operating hours counter needs to be activated before using for the first time (see "Operation").

Resetting the operating hours counter for the charcoal filter

After changing the charcoal filter, the operating hours counter needs to be reset.

- To do this, with the fan switched on, press the operating hours control  twice, then press it again and hold it for approx. 3 seconds until only the **1** is flashing. The charcoal filter symbol  will go out.

If you replace the charcoal filter **before** the operating hours counter has reached its maximum:

- Press the operating hours control  twice and hold it for approx. 6 seconds until only the **1** is flashing.

Cleaning and care

Disposing of the charcoal filter

- The used charcoal filter can be disposed of with the normal household waste.

Reactivatable charcoal filter


A reactivatable charcoal filter is available for this rangehood. By reactivating it in an oven, it can be reused several times.

- It is supplied with its own installation and usage instructions which must be observed.

Charcoal filters are available to order via the Miele Webshop (see end of this booklet for contact details) or directly from Miele.

The charcoal filters are listed under "Technical data" at the back of this booklet.

Before installation


 Before installation, it is important to read the information given on the following pages as well as the "Warning and Safety instructions" at the beginning of this booklet.

Installation instructions

See enclosed installation sheet for instructions on how to install this appliance.


Installation

Assembly parts

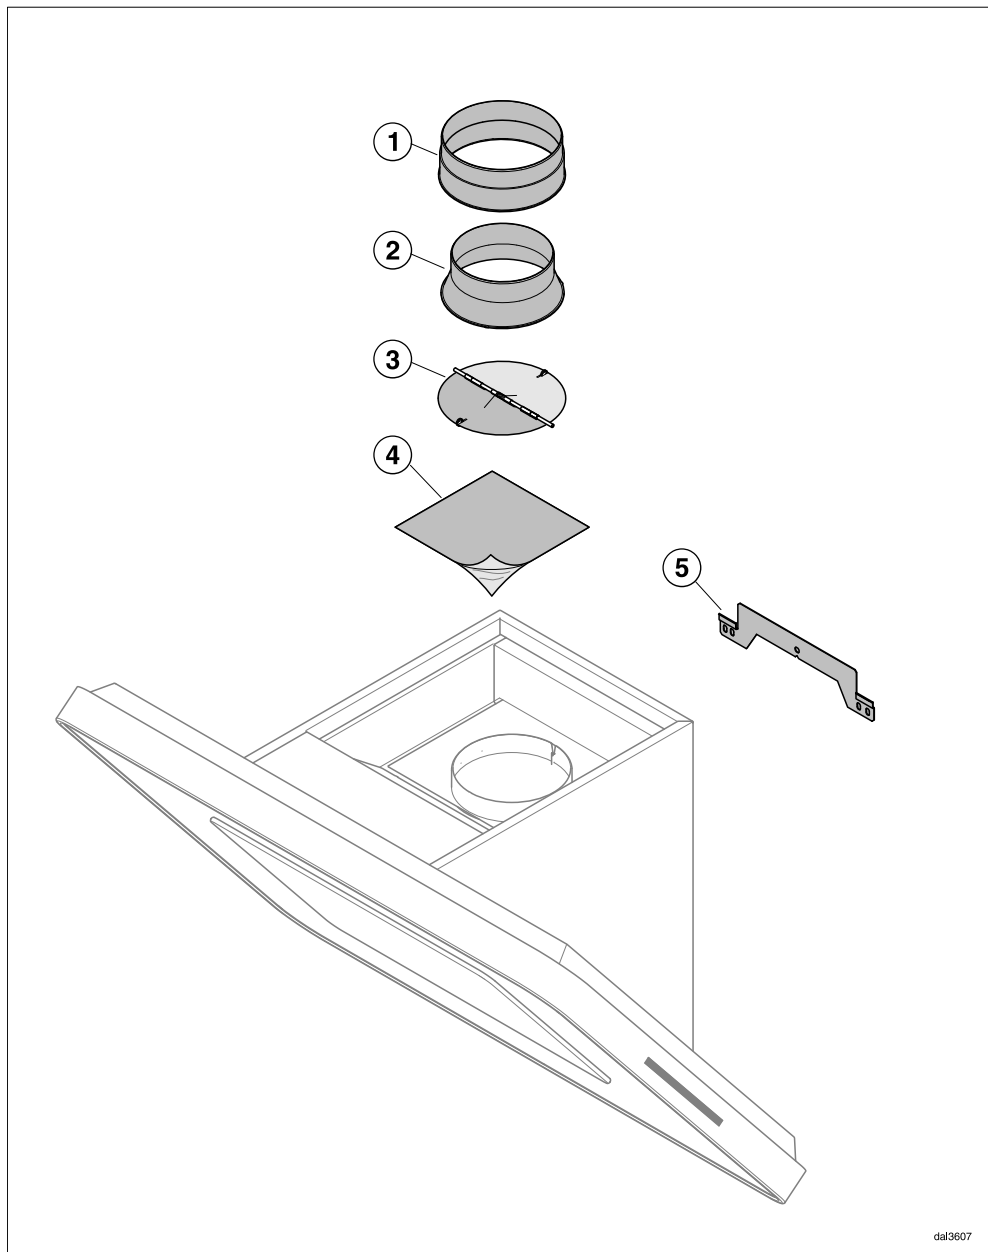

dal3607


- ① **1 exhaust connection**
for exhaust ducting Ø 150 mm.
- ② **1 reducing collar**
for exhaust ducting Ø 125 mm.
- ③ **1 non-return flap**
for installation in the exhaust connection on the motor unit (not for recirculation mode). The non-return flap may already be fitted depending on model.
- ④ **Cover foil**
for use when changing extraction ducting direction.
- ⑤ **Wall bracket**
for securing the rangehood to the wall.



5x60-00000001-001

**5 screws 5 x 60 mm and
5 plugs 8 x 50 mm
3 washers 6.4 mm**
for securing the wall bracket.

The screws and plugs are designed for use in solid walls only. For other types of wall construction, alternative fixings will be required. Make sure the wall is able to take the weight of the rangehood.

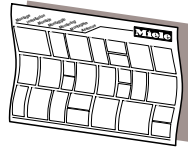


011111-00000001-001

Installation instructions

Installation

Appliance dimensions

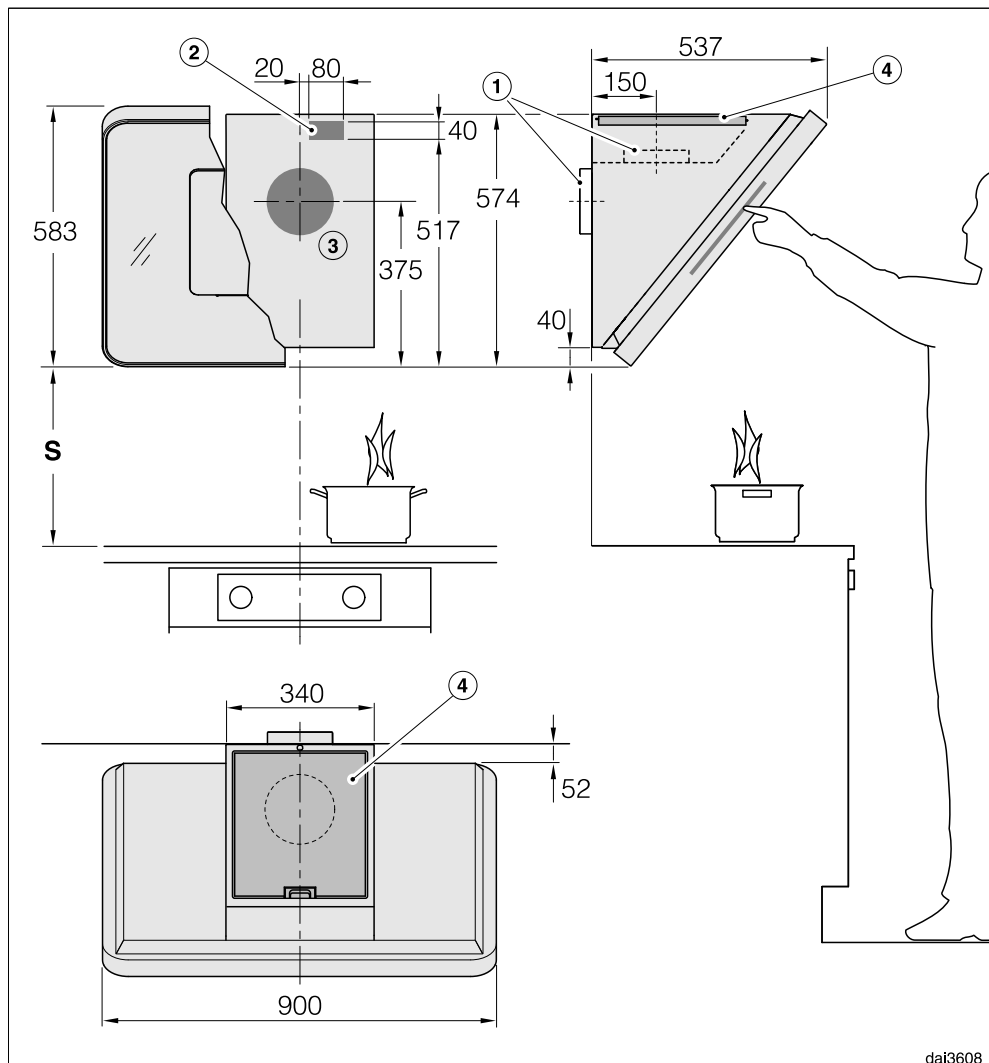

dai3608

The drawing is not to scale.

- ① Extraction ducting upwards or to the rear.
- ② Cut-out for rangehoods with hard-wired connection rather than a plug.
- ③ Ø 200 mm cut-out ensures sufficient space through the wall for the extraction ducting to flex.

- ④ Ventilation outlet for recirculation mode. A gap of at least 300 mm must be maintained between the top of the rangehood and the ceiling or any furniture above it.

Connection for air extraction Ø 150 mm, or Ø 125 mm with reducing collar.

Please observe installation positions for the socket and for the ducting outlet shown on the relevant drawings when using the DADC 6000 tower.

Safety distance (S)

The minimum distances between the highest part of a cooktop (including trivets, dials - depending on model) and the bottom of the rangehood are as follows, unless a greater distance is specified by the manufacturer of your cooking appliance. See also "Warning and Safety instructions".

Cooking appliance	Minimum distance S
Electric cooktop	450 mm
Electric grill, deep fat fryer (electric)	650 mm
Multi-burner gas cooktop with maximum 45.4 MJ/h total output, with no burner having a greater output than 16.2 MJ/h.	650 mm
Multi-burner gas cooktop with total output greater than 45.4 MJ/h, but with a maximum of 77.8 MJ/h, with no burner having a greater output than 17.3 MJ/h.	760 mm
Multi-burner gas cooktop with total output greater than 77.8 MJ/h, with a single burner having a greater output than 17.3 MJ/h.	Not possible
Single burner gas cooktop with a maximum output of 21.6 MJ/h.	650 mm
Single burner gas cooktop with an output greater than 21.6 MJ/h, but with a maximum of 29.2 MJ/h.	760 mm
Single burner gas cooktop with an output greater than 29.2 MJ/h.	Not possible


Installation

Installation recommendations

- Account should also be taken of the height of the person who will be using the rangehood most often. They should have sufficient space to work comfortably at the cooktop, and be able to reach the rangehood controls with ease.
- If positioned too high, extraction will be inefficient.
- To achieve optimum vapour extraction, the rangehood must be positioned centrally over the cooktop, not to the side.
- The cooktop should be no wider than the rangehood and, if possible, it should be narrower, especially for safety distances greater than 750 mm.
- The installation area must be easily accessible. The rangehood should be easily accessible and easy to dismantle in the event that service is required. This should be taken into consideration when planning the position of cupboards, shelves, ceilings or features in the vicinity of the rangehood.

Drilling diagram for wall mounting

- Please follow the directions given in the installation instructions supplied for drilling.

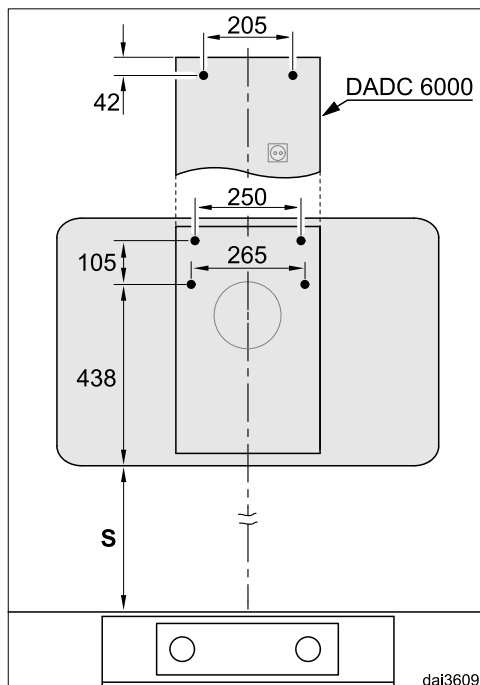

- For pre-installation of a back wall where the holes have to be pre-drilled, please refer to the drilling distances in the drawing above (screws \varnothing 5 mm).

Connection for air extraction

⚠ Before installation, it is important to read the information given on the following pages as well as the "Appliance dimensions" and the "Warning and Safety instructions" at the beginning of this booklet. This is particularly crucial when using the rangehood at the same time as a heating appliance that relies on oxygen from the same room, which could result in the build-up of toxic fumes.

The rangehood should be installed according to local and national building regulations. Seek approval from the building inspector where necessary.


Only use smooth pipes or flexible hoses made from non-flammable materials for the extraction ducting.

To achieve the greatest possible air extraction with the lowest noise level, please note the following:

- The diameter of the exhaust ducting should not be less than 150 mm.
- If flat ducting is being used, the cross-sectional area must not be smaller than the cross-sectional area of the exhaust connection.
- The exhaust ducting should be as short and straight as possible.
- Only use wide radius bends.
- The exhaust ducting must not be kinked or compressed.
- Ensure that all connections are strong and airtight.

Remember that any constriction of the airflow will reduce extraction performance and increase operating noise.


- If the exhaust is ducted through an outside wall, a telescopic wall vent or a roof vent (available as an optional accessory) is recommended.

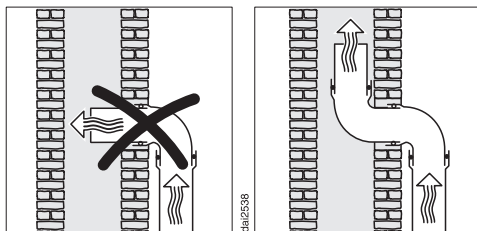

- If the exhaust air is to be ducted into a vent flue, the ducting must be directed in the flow direction of the flue.
- When ducting is horizontal, it must be laid to slope away at at least 1 cm per metre. This is to ensure that condensate cannot drain back into the rangehood.
- If the exhaust ducting is to run through rooms, ceiling space etc. where there may be great variations in temperature between the different areas, the problem of condensation will need to be addressed. The exhaust ducting will need to be suitably insulated.

Connection for air extraction

Condensate trap

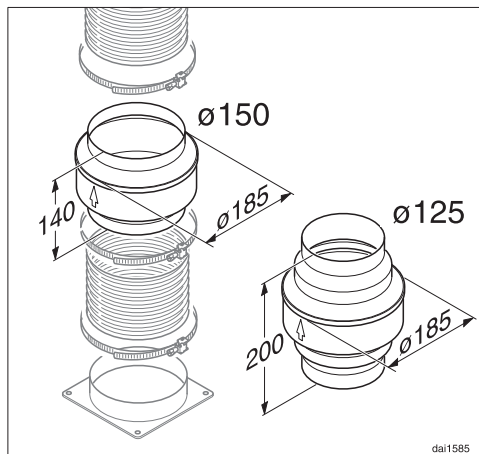

In addition to insulating the exhaust ducting, we recommend that a suitable condensate trap is also installed to collect and evaporate any condensate which may occur.


Condensate traps are available for 125 mm or 150 mm ducting.

A condensate trap can only be fitted in extraction ducting which is directed upwards out of the rangehood.

- When installing a condensate trap, ensure that it is positioned vertically and, if possible, directly above the exhaust socket.


The arrow on the housing indicates the direction of airflow.

Silencer

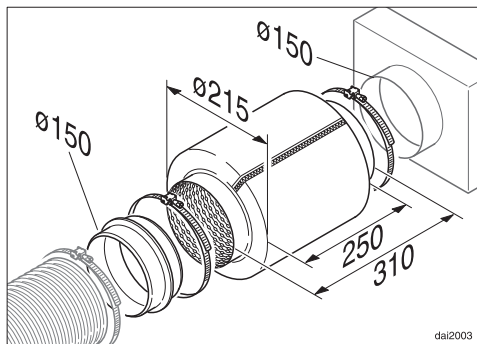

To achieve even further reductions in noise levels, a special silencer (optional accessory) can be fitted in the ducting system.

Air extraction mode

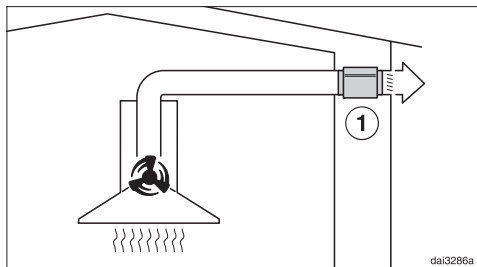

The silencer not only reduces noise from the motor outside the house, but also sounds from outside (e.g. traffic noise). For this reason, the silencer must be positioned as close as possible to the ducting exit ①.

Installation, repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work. All electrical work must be undertaken by a suitably qualified and competent person in strict accordance with current national and local safety and building code regulations.

Ensure power is not supplied to the appliance until after installation or repair work has been carried out.

in the switch.

This includes the switch, fuses and relays.

The connection data is given on the data plate (See "After sales service"). Ensure that this data matches the household mains supply.

This rangehood must only be connected to a properly installed electrical circuit (AC 230V, 50Hz). The electrical installation must comply with national and local safety and building code regulations.

For extra safety, it is advisable to protect the appliance with a suitable residual current device (RCD) with a trip current of 30 mA.

It is advisable to connect this appliance via a suitable isolator which complies with national and local safety regulations to make it easy to disconnect for servicing purposes. The socket and switch must be easily accessible after the appliance has been installed.

Alternatively it can be hard-wired.

If the mains socket and switch are not accessible after the appliance has been installed, or if it is hard-wired, an additional means of disconnection must be provided for all poles. There must be an all-pole contact gap of at least 3 mm

Activating Con@ctivity 2.0

Installing the Con@ctivity 2.0 dongle

In order for the Con@ctivity 2.0 function to be used, the cooktop must be fitted with the Con@ctivity dongle.

- Please read the instructions for the Con@ctivity 2.0 dongle before installation.

Activating Con@ctivity 2.0



In order to use the Con@ctivity 2.0 function, radio contact between the cooktop and the rangehood must be activated.

Both appliances must be installed and operational.

Wireless connection must be activated on the rangehood and the cooktop at the same time. Activation on the rangehood is described below.

Activation on the cooktop is described in the relevant Operating instructions. Please refer to the Operating instructions before starting. Activate the rangehood first, then the cooktop.

Activating the rangehood

- The cooktop and rangehood must be switched off.
- Press the run-on option control **5**  **15** for approx. 10 seconds until the indicator for the power setting **1** lights up.
- Then press in turn,
 - the "—" control,
 - then the "+" control,
 - then the lighting control .

The rangehood is now in signing on/off mode.

If a wireless connection has not yet been established, **2** and **3** will flash at the same time.


If a wireless connection has already been established, **2** and **3** will light up constantly (Con@ctivity 2.0 is already activated or a remote control is signed on).

- To activate Con@ctivity 2.0, press "+".

The search for a signal will start.

- Meanwhile, start the activation of the cooktop.

Activating the cooktop

- While the rangehood is searching for the radio connection, start activating the cooktop.
More information about this can be found in the Operating instructions for the cooktop.
- When the cooktop registers that connection has been established, confirm activation on the rangehood with the run-on option control **5**  **15**. All indicators will go out.
- Confirm the activation on the cooktop.

The Con@ctivity 2.0 function can now be used.

If you do not confirm your selection within 4 minutes, activation will not take place.

You only need to carry out the activation procedure once. If the appliances are disconnected from the electricity supply, during a power cut for example, they will still remain activated.

Activation failed

- If connection cannot be established despite activating the Con@ctivity function on the rangehood and cooktop, the function must be deactivated on both appliances and then the procedure repeated.

Deactivating Con@ctivity 2.0

- Deactivation on the rangehood is carried out in the same way as activation, by selecting the "—" control instead of "+".
- To deactivate the cooktop, please refer to the Operating instructions supplied with it.

Please bear in mind that disabling the signal will also disable any remote control function and this will have to be activated again.

After sales service and warranty

In the event of a fault which you cannot remedy yourself, please contact Miele.

The contact details for Miele are given at the back of these instructions.

When contacting Miele, please quote the model and serial number of your appliance.

These can be found on the data plate.

Position of the data plate

The data plate is visible after removing the grease filter.

Warranty: AU, NZ

The manufacturer's warranty for this appliance is 2 years.

For further information, please refer to your warranty booklet.

Warranty: Other countries

For information on the appliance warranty specific to your country please contact Miele. See end of this booklet for contact details.

Technical data

Fan motor	295 W
Cooktop lighting	9.7 W
Glass feature lighting	12.8 W
Total rated load	317.5 W
Voltage, frequency	AC 230 V, 50 Hz
Fuse rating	10 A
Mains connection cable length	1.5 m
Weight	
DA 6996 W	28 kg

Optional accessory for recirculation mode

Charcoal filter DKF 25-1 or DKF 25-R (reactivatable).

**Miele Australia Pty. Ltd.**

ACN 005 635 398
ABN 96 005 635 398

Miele Experience Centre and
Head Office Melbourne:
1 Gilbert Park Drive
Knoxfield, VIC 3180



www.miele.com.au

Miele New Zealand Limited

IRD 98 463 631

Head Office:

Level 2, 10 College Hill
Freemans Bay, Auckland 1011

Telephone:

0800 464 353 (0800 4 MIELE)
www.miele.co.nz

Miele (Hong Kong) Limited

41/F - 4101, Manhattan Place
23 Wang Tai Road
Kowloon Bay
Hong Kong
Tel.: (852) 2610 1025
Fax: (852) 3579 1404
E-mail: customerservices@miele.com.hk
Website: www.miele.hk

Malaysia

Miele Sdn Bhd
Suite 12-2, Level 12
Menara Sapura Kencana Petroleum
Solaris Dutamas No. 1, Jalan Dutamas 1
50480 Kuala Lumpur, Malaysia
Phone: +603-6209-0288
Fax: +603-6205-3768

Singapore

Miele Pte. Ltd.
163 Penang Road
04 - 03 Winsland House II
Singapore 238463
Tel.: +65-67351191
Fax: +65-67351161
E-mail: info@miele.com.sg
Internet: www.miele.sg

**Miele Global Headquarters
Germany****Miele & Cie. KG**

Carl-Miele-Straße 29
33332 Gütersloh
Federal Republic of Germany

DA 6996 W



en-AU, NZ

M.-Nr. 10 559 930 / 03